TRANSMISSION AND WHEEL TOOLS



BWTSP



BWTSP16



BWTSP7

 
AUTO SPECIFIC SOCKETS

- Twist socket sets
- For unfastening damaged nuts and screws and especially for locking wheel nuts
- The special rounded profile of the inner side enables the socket to get a strong grip to unfasten any damaged bolt
- BWTSP16: 16 pcs
 - □ 3/8": 8, 10, 11, 12, 13, 14, 16, 17, 18, 19 mm
 - □ 1/2": 21, 22, 24, 27 mm
 - □ Adaptor: 1/2" female to 3/8" male
 - Puncher
- BWTSP7: 7 pcs
 - □ 1/2": 22, 24, 27, 32 mm
 - □ 3/4": 36, 41 mm
 - Puncher
- Not suitable for machine operation

	731415		\$ mm	kg
BWTSP16	0170296	1	50x245x120	1.75
BWTSP7	0170302	1	62x230x120	1

BZWTB





TORSION BARS

- Impact torsion bars, 1"
- For controlling the torque applied to wheels and other parts
- For quickly reaching the desired torque
- Always use a torque wrench after using a torsion bar

	731415		Omm	L mm	D1 mm	D2 mm	MAX	Ф	g
BZWTB0132450	0165674	1	32	300	51.5	54	450	K560F-7	1540
BZWTB0132600	0165681	1	32	300	51.5	54	600	K560F-7	1576
BZWTB0133600	0165698	1	33	300	52.8	54	600	K560F-7	1607

