


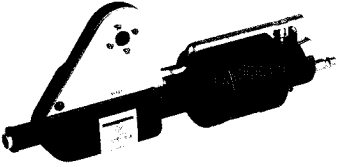

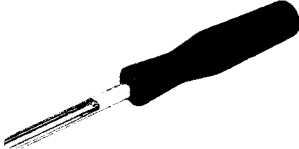
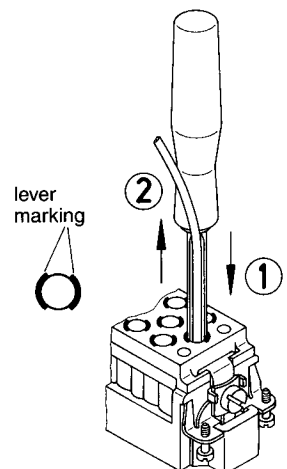


| Identification | Part No. | Drawing | Dimensions in mm |
|---|---|--|--|
| BUCHANAN- crimping tool | 09 99 000 0001 | Wire gauge 1.5 - 4 mm ² |  |
| Locator | 09 99 000 0308 | | |
| Crimping tool depth adjustment gauge | 09 99 000 0008 09 99 000 0006 | Wire gauge 1.5 + 2.5 mm ² ø 1.80 4 mm ² ø 2.00 | |
| | | |  order separately |
| HARTING- crimping tool | FR 09 99 000 0303 ✓ | Wire gauge 4 - 6 mm ² |  |
| Locator as spare part | 09 99 000 0304 ✓ | Locator is supplied with the tool | |
| HARTING- pneumatic crimping tool | 09 99 000 0307 | |  |
| Crimping tool depth adjustment gauge | 09 99 000 0008 09 99 000 0006 09 99 000 0009 | Wire gauge 1.5 + 2.5 mm ² ø 1.80 4 mm ² ø 2.00 6 mm ² ø 2.40 | |
| Locator | 09 99 000 0308 | | |
| | | | |
| Table fixing and foot switch for pneumatic crimping tool | 09 99 000 0309 | |  |
| Removal tool for crimp contacts | 09 99 000 0305 ✓ | |  |
| Removal tool | | | |

A removal tool is necessary to remove the contacts.

For each „C“ contact cavity, the location of the internal locking levers are marked on the wiring side with two black arcs. The sides of the tool must be first properly aligned thus edges of the tool catch both levers simultaneously and then inserted until a stop is noticeable ①.

Once it has been inserted, the tool **must not** be turned. The wire together with the tool can then be pulled out from the wiring side of the insert ②.



Stock items in bold type