

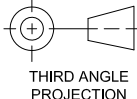

NOTES:

1. OPERATION

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH0-8J

		METRIC  THIRD ANGLE PROJECTION		DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS OTHERWISE SPECIFIED 1 PL +/- REF. 2 PL +/- REF. ANGLE +/-		 JKL COMPONENTS CORPORATION				
		DRAWN BY L. WENGSTROM		APPV'D BY L.R.		DATE 3/5/13		TITLE NO SOLDER 8mm FLEX TO FLEX TAPE CONNECTOR		
RELEASE & CANCEL PL-1301-04		3/5/13		SIZE A		FSCM NO. 55335		DRAWING NO. ZFS-CH0-8J		
REV. NO.	DESCRIPTION/ECO NUMBER	APPV'D DATE	- CAD DRAWING - MANUAL REVISIONS NOT PERMITTED			SCALE NONE	RELEASED DATE 3/5/13	REVISION DATE	REV. NO.	SHEET 1 OF 1