

PROPER USE GUIDELINES

Cumulative Trauma Disorders can result from the prolonged use of manually powered hand tools. Hand tools are intended for occasional use and low volume applications. A wide selection of powered application equipment for extended-use, production operations is available.

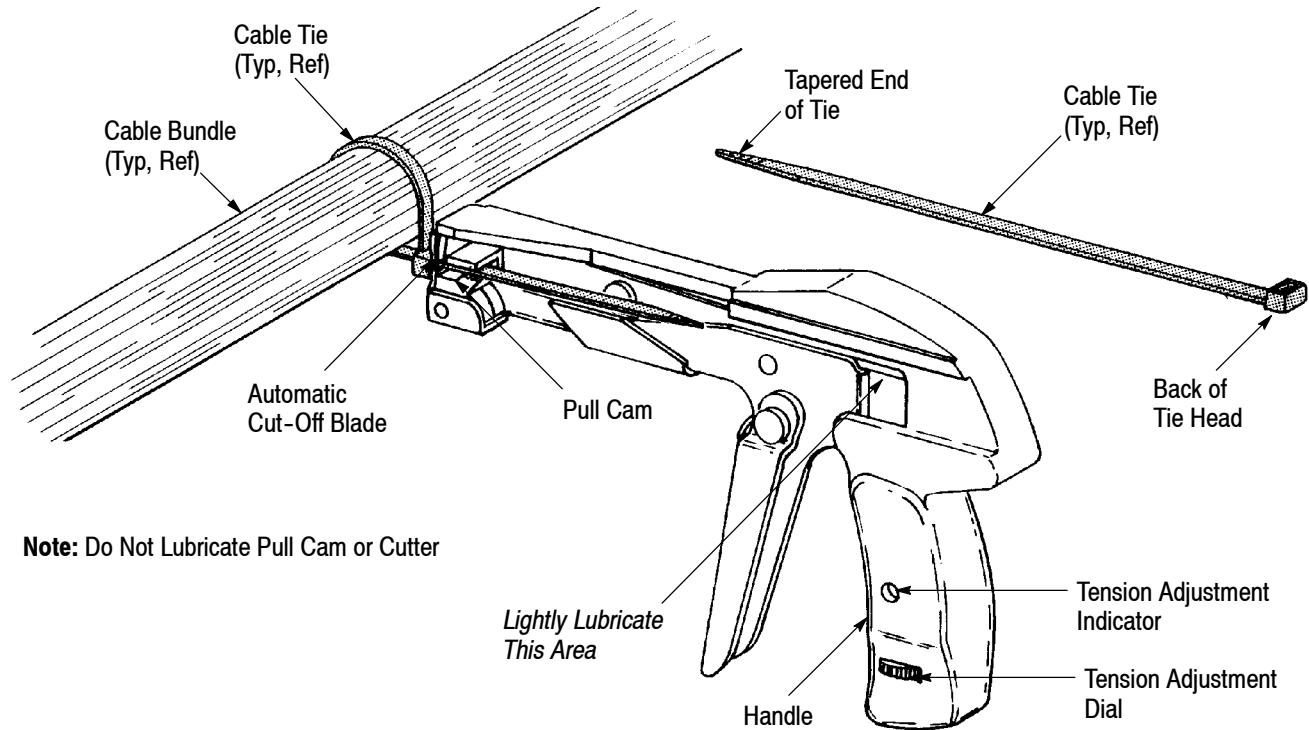


Figure 1

1. INTRODUCTION

Cable Tie Installation Tool 734587-1 shown in Figure 1 is used to apply the cable ties listed in Figure 2. Read these instructions thoroughly before installing cable ties.

NOTE All numerical values in this instruction sheet are in metric units [with U.S. customary units in brackets]. Dimensions are in millimeters [and inches]. Figures are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 6, REVISION SUMMARY.

2. DESCRIPTION

This tool features an incremental tension adjustment indicator, a tension adjustment dial, and an automatic cut-off blade.

The tension adjustment dial regulates the amount of tension applied to the cable tie before the tie is cut. The adjustment is made by turning the tension

adjustment dial until the adjustment indicator displays the desired setting.

NOTE The higher numerical settings indicate a greater tension placed on the cable tie.

3. APPLICATION PROCEDURE

1. Determine the diameter of the cable bundle, and select the proper cable tie from Figure 2.
2. Turn the tension adjustment dial to the desired setting.
3. Loop the cable tie around the cable bundle and insert the tapered end of the tie through the back of the tie head. Refer to Figure 1.
4. Pull the cable tie through until snug.
5. Insert the cable tie into the tool gripper slot and squeeze the handle completely. The tool will tighten the tie and automatically cut the excess once the pre-set tension is reached.

CABLE BUNDLE DIAMETER		CABLE TIE			TOOL TENSION SETTING RANGE	
MINIMUM	MAXIMUM	LENGTH	PART NUMBER	TENSILE VALUE (lb)		
1.5 [.06]	19.1 [.75]	108.0 [4.25]	603230	18	0-1	
			603231			
		101.6 [4.00]	604771			
			608701			
	31.8 [1.25]	203.2 [8.00]	608687	30	1-2	
		152.4 [6.00]	603227			
	50.8 [2.00]	158.8 [6.25]	608687	40		
	76.2 [3.00]	215.9 [8.50]	604476			
	76.2 [3.00]	292.1 [11.50]	608688	50	2-3	
	19.1 [.75]●	209.6 [8.25]	608698			
	35.1 [1.38]	165.1 [6.50]	608692			
	38.1 [1.50]●	304.8 [12.00]	608699			
	44.5 [1.75]	203.2 [8.00]	608702			
			608704			
			608789			
	50.8 [2.00]	393.7 [15.50]	608700			
	76.2 [3.00]	298.5 [11.75]	604751			
	101.6 [4.00]	381.0 [15.00]	608703			
			393.7 [15.50]			604774
			406.4 [16.00]			608695
412.8 [16.25]			608696			

● Using two cable bundles, each of this diameter.

Figure 2

If the tension on the cable tie is not as originally desired, re-adjust the tool as required.



Exercise care when adjusting the tension. DO NOT turn the adjustment past the zero setting; otherwise, damage to the tool may result.

4. MAINTENANCE AND INSPECTION

The tool should be inspected immediately upon arrival in your facility, and at regularly scheduled intervals, to ensure that the tool has not been damaged.

Lubricate the tool as indicated in Figure 1.

5. REPLACEMENT AND REPAIR

Spare parts kits are available for this tool:

- Service Kit 523153-7 (consists of the cutting blade and three internal springs)
- Spring Kit 3-519529-9 (consists of the cable tension spring and its mount)

If the tool becomes damaged, it must be replaced. Additional tools can be purchased through your Representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605 or write to:

CUSTOMER SERVICE (038-035)
 TYCO ELECTRONICS CORPORATION
 PO BOX 3608
 HARRISBURG PA 17105-3608

6. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated instruction sheet to corporate requirements
- Corrected call-outs in Figure 1