

## FX3U-4AD-PT-ADP

## ユーザズマニュアル

マニュアル番号	JY997D14701
副番	L
作成日付	2015年4月

このたびは、三菱マイクロシーケンサ用FX3U-4AD-PT-ADP形白金測温抵抗体温  
度センサ入力アナログ特殊アダプタをお買い上げいただき、誠にありがとうございました。

本マニュアルは、本製品の各部名称、外形寸法、取付け、および仕様について述べた  
ものです。本製品の取り扱いや操作などにつきましてはご使用の前に、本マニ  
ュアルおよび関連製品マニュアルをお読みいただき、機器の知識や安全の情報、注意  
事項のすべてについて習熟してからご使用ください。

また、製品に付属しているマニュアルが必要なときに取り出して読めるように大切に  
保管すると共に、必ず最終ユーザまでお届け頂きますようお願いいたします。  
商標について  
本マニュアルに記載してある会社名、製品名は、それぞれの会社の登録商標または  
商標です。

この印刷物は2015年4月発行です。なお、お断りなしに仕様を変更することがあり  
ますのでご了承ください。

© 2004 Mitsubishi Electric Corporation

## 安全上のご注意 (ご使用の前に必ずお読みください)

このマニュアルでは、安全に関する注意事項のランクを **⚠警告** **⚠注意**として区  
分してあります。

<b>⚠警告</b>	取り扱いを誤ったばい、危険な状況が起こりえて、死亡 または重傷を受ける可能性が想定されるばあい。
<b>⚠注意</b>	取り扱いを誤ったばい、危険な状況が起こりえて、中程 度の傷や軽傷を受ける可能性が想定されるばあい、および 物的損害だけの発生が想定されるばあい。

なお、**⚠注意**に記載した事項でも、状況によっては重大な結果に結びつく可能性  
があります。いずれも重要な内容を記載していますので必ず守ってください。

## 関連マニュアルとマニュアルの入手方法

関連マニュアル		
マニュアル名称	マニュアル番号	内容
FX3S・FX3G・FX3GC・FX3U・FX3UC シリーズ ユーザズマニュアル [アナログ制御編] [別冊]	JY997D15201 形名コード: 09R617	FX3S・FX3G・FX3GC・FX3U・FX3UCシ リーズの アナログ制御の仕様、プロ グラム方法に関する説明
FX3S・FX3G・FX3GC・FX3U・FX3UC シリーズ プログラミングマニュアル [基本・応用命令解説編] [別冊]	JY997D11701 形名コード: 09R514	基本命令解説・応用命令解説・各種 デバイスの解説など、シーケン スのプログラミングに関する説明
FX3Sシリーズ ユーザズマニュアル [ハードウェア編] [別冊]	JY997D48501 形名コード: 09R534	FX3Sシリーズシーケンサ本体の 入出力仕様、配線、取付けや保守 などの ハードウェアに関する詳細説明
FX3Gシリーズ ユーザズマニュアル [ハードウェア編] [別冊]	JY997D31201 形名コード: 09R520	FX3Gシリーズシーケンサ本体の 入出力仕様、配線、取付けや保守 などの ハードウェアに関する詳細説明
FX3GCシリーズ ユーザズマニュアル [ハードウェア編] [別冊]	JY997D45301 形名コード: 09R532	FX3GCシリーズシーケンサ本体の 入出力仕様、配線、取付けや保守 などの ハードウェアに関する詳細説明
FX3Uシリーズ ユーザズマニュアル [ハードウェア編] [別冊]	JY997D16101 形名コード: 09R515	FX3Uシリーズシーケンサ本体の 入出力仕様、配線、取付けや保守 などの ハードウェアに関する詳細説明
FX3UCシリーズ ユーザズマニュアル [ハードウェア編] [別冊]	JY997D11601 形名コード: 09R513	FX3UCシリーズシーケンサ本体の 入出力仕様、配線、取付けや保守 などの ハードウェアに関する詳細説明

マニュアルの入手方法  
マニュアルの入手方法には、下記の方法があります。

- 1) 製本マニュアル(印刷物)の入手  
本製品のご購入店へお問合せください。
- 2) 電子データ(PDFファイル)の入手  
三菱電機FAサイトから最新マニュアルをダウンロードできます。ホームページ  
アドレスは巻末を参照ください。

## 対応規格

FX3U-4AD-PT-ADPは、2005年6月生産品からEC指令(EMC指令)、UL規格(UL, cUL)  
に対応しています。詳細については、下記マニュアルを参照してください。

- FX3Sシリーズハードウェアマニュアル(マニュアル番号: JY997D48301)
- FX3Gシリーズハードウェアマニュアル(マニュアル番号: JY997D46001)
- FX3GCシリーズハードウェアマニュアル(マニュアル番号: JY997D45101)
- FX3Uシリーズハードウェアマニュアル(マニュアル番号: JY997D16001)
- FX3UC(D, DS, DSS)シリーズハードウェアマニュアル(マニュアル番号: JY997D28501)
- FX3UC-32MT-LT-2/ハードウェアマニュアル(マニュアル番号: JY997D30201)

基本ユニットの規格対応については、FXシリーズ総合カタログをご参照頂きますが、  
別途弊社までお問い合わせください。

## 注意

- 本製品は一般工業環境下でご使用ください。
- EU域内販売責任者は下記のとおりです。  
EU域内販売責任者: Mitsubishi Electric Europe B.V.  
住所: Gothaer Str. 8, 40880 Ratingen, Germany

## EMC指令に適合するための注意

アナログ特殊アダプタは、ヨーロッパ規格に準拠・適合しています。ただし、計測や制  
御において、精度を要求するばあいは、次の内容を実施されることをおすすめします。  
アナログ製品は、ノイズに敏感な製品のため、取扱い方法に注意してください。セン  
サまたはアクチュエータの専用ケーブルを接続するばあいは、それらの機器メーカ  
の接続に関する要求に従ってください。

弊社は、シールド線を使用することを推奨します。それ以外のEMC対策が実施され  
ないばあいでもノイズ環境において誘導誤差が、±10%以内で使用できます。  
さらに、次のEMC対策を実施すると、本マニュアル記載の精度範囲程度に誘導誤差  
を軽減する効果があります。

- アナログケーブルは影響を受けやすいので、主回路線や高圧電線、負荷線との近  
接や束線は行わないでください。ノイズやサージ誘導の影響を受けやすくなり  
ます。できるだけアナログケーブルごとに分離してください。
- ケーブルは、シールド線を使用してください。シールド線のシールドを接地す  
るばあい、ケーブルの片側のみ接地してください。
- アナログ値(AD変換後の値)をプログラムで使用するばあいは、平均値データ  
を使用してください。EMCによる誘導誤差が制御に与える影響を軽減すること  
ができます。シーケンサプログラム、またはアナログ特殊アダプタの機能を使用  
することで平均値データを得ることができます。

## 1. 製品概要


FX3U-4AD-PT-ADP形白金測温抵抗体温温度センサ入力アナログ特殊アダプタ (以下  
PT-ADPと略称)は、白金測温抵抗体(Pt100 3線式)温度センサを接続し、温度を4ch測  
定するための特殊アダプタです。

## 1.1 同梱品の確認

下記製品および付属品が同梱されているか確認してください。

製品本体	FX3U-4AD-PT-ADP形白金測温抵抗体温温度センサ入力アナログ特殊アダプタ
付属品	ユーザズマニュアル(本書)

## 1.2 各部名称と外形寸法・端子配列

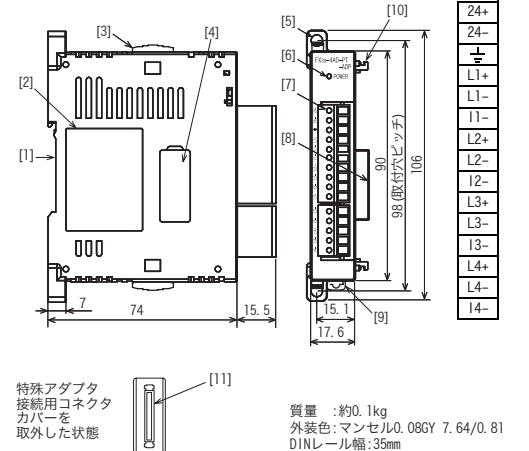

特殊アダプタ  
接続用コネクタ  
カバーを  
取外した状態

- [1] DINレール取付け用溝(DINレール: DIN46277)
- [2] ネームプレート
- [3] 特殊アダプタ連結用フック:  
本特殊アダプタの左側に特殊アダプタを連結するばあいには使用します。
- [4] 特殊アダプタ接続用コネクタカバー:  
本特殊アダプタの左側に特殊アダプタを接続するばあいは、カバーをはずします。
- [5] 直接取付け用穴(2-φ4.5, 取付けネジ: M4ネジ):  
FX3GC・FX3UCシーケンサと接続時は、使用しません。
- [6] POWER LED(緑色):  
端子台「24+」、「24-」にDC24V電源が正常に供給されているとき点灯します。
- [7] 端子台(ヨーロッパ式):  
白金測温抵抗体(Pt100 3線式)およびDC24V電源を配線
- [8] 特殊アダプタ接続用コネクタ:  
本特殊アダプタを基本ユニットまたは特殊アダプタに接続するときに使用します。
- [9] DINレール取付け用フック
- [10] 特殊アダプタ連結用ツメ
- [11] 特殊アダプタ接続用コネクタ:  
本特殊アダプタの左側に通信特殊アダプタまたはアナログ特殊アダプタを接続  
するときに使用します。

## 2. 取付け

取付け/取外しの詳細は、使用する各シーケンサのユーザズマニュアル[ハードウェ  
ア編]を参照してください。

## 取付け上の注意 ⚠警告

- 取付け、配線作業などを行うときは、必ず電源を外部に全相共遮断してから  
行ってください。感電、製品損傷の恐れがあります。

## 取付け上の注意 ⚠注意

- シーケンサ本体マニュアルに記載の一般仕様の環境で使用してください。  
ほこり、油煙、導電性ダスト、腐食性ガス(潮風、Cl<sub>2</sub>、H<sub>2</sub>S、SO<sub>2</sub>、NO<sub>2</sub>など)、可燃性  
ガスのある場所、高温、結露、風雨にさらされる場所、振動、衝撃がある場所で使用  
しないでください。  
感電、火災、誤動作、製品の損傷あるいは劣化の原因となることがあります。
- ネジ穴加工や配線工事を行うときに、切粉や電線屑を本製品やシーケンサなどの  
通風窓へ落とし込まないでください。  
火災、故障、誤動作の原因となります。
- 製品の導電部には直接触らないでください。  
誤動作、故障の原因となります。
- 特殊アダプタは所定のコネクタに確実に装着してください。  
接触不良により誤動作の原因となることがあります。

## 2.1 シーケンサとの接続方法

シーケンサへの取付け方法を説明します。説明は、FX3Uシーケンサを例にしています。  
その他のシーケンサについては、接続する各シーケンサのユーザズマニュアル  
[ハードウェア編]を参照してください。

## 手順

- 1) 電源をOFFにします。  
基本ユニット、特殊アダプタに接続しているケーブルをすべて取りはずします。  
DINレールまたは直接(ネジ)取付けした基本ユニット、特殊アダプタを取り  
はずします。
- 2) 基本ユニットに機能拡張ボードを取付けてください。  
機能拡張ボードの取付けについては、下記マニュアルを参照してください。  
→FX3Uシリーズユーザズマニュアル [ハードウェア編]
- 3) 機能拡張ボードの特殊アダプタ接続用コ  
ネクタカバー (右図A)をはずします。  
特殊アダプタに追加接続するばあいは、  
機能拡張ボードを特殊アダプタに読み替  
えてください。
- 4) 基本ユニットの特殊アダプタ連結用フック  
(右図B)をスライドします。  
特殊アダプタに追加接続するばあいは、  
基本ユニットを特殊アダプタに読み替  
えてください。(以下の手順も同様に読み替  
えてください。)

- 5) 基本ユニット  
に特殊アダ  
プタ(右図C)を右  
図のように接  
続します。
- 6) 基本ユニット  
の特殊アダ  
プタ連結用フック  
(右図B)をス  
ライドさせ、特  
殊アダプタ(右  
図C)を固定し  
ます。

## 接続上の注意

高速入出力特殊アダプタとそれ以外の特殊アダプタを組み合わせて使用  
するばあい、使用するすべての高速入出力特殊アダプタを取り付けた後に  
それ以外の特殊アダプタを接続してください。  
高速入出力特殊アダプタは、高速入出力特殊アダプタ以外の特殊アダプタ  
の左側に接続することはできません。

### 3. 配線

#### 配線上の注意



#### 警告

- 取付け、配線作業を行うときは、必ず電源を外部にて全相共遮断してから行ってください。  
感電、製品損傷の恐れがあります。

#### 配線上の注意



#### 注意

- ネジ加工や配線工事を行うときに、切粉や電線屑を本製品やシーケンサなどの通風窓へ落し込まないでください。  
火災、故障、誤動作の原因となります。
- ノイズの影響により、シーケンサが誤動作する原因になることがあるので、次の項目を必ず守ってください。
  - 電源線やアナログ入出力線は、主回路線や高圧電線、負荷線との近接や束線を行わないでください。  
ノイズやサージ誘導の影響を受けやすくなります。  
100mm以上離して布線するようにしてください。
  - アナログ入出力線のシールドは、必ず信号受取り側で一点接地を行ってください。また、強電系とは共通接地しないでください。
- ヨーロッパ式端子台タイプへの配線は、次の注意事項に従い適切に行ってください。感電、故障、短絡、断線、誤動作、製品損傷の恐れがあります。
  - 電線の端末処理方法は、マニュアルに記載した寸法に従ってください。
  - 締付トルクは、マニュアルに記載したトルクに従ってください。
  - より線の端末は、“ヒゲ線”が出ないようによじってください。
  - 電線の端末は、ハンダメッキしないでください。
  - 規定サイズ以外の電線や規定本数を超える電線を接続しないでください。
  - 端子台や電線接続部分には、外力が直接加わらないように、電線を固定してください。
- 端子台タイプへの配線は、次の注意事項に従い適切に行ってください。感電、故障、短絡、断線、誤動作、製品損傷の恐れがあります。
  - 電線の端末処理方法は、シーケンサ本体マニュアルに記載した寸法に従ってください。
  - 締付トルクは、シーケンサ本体マニュアルに記載したトルクに従ってください。

### 3.1 使用ケーブルと端子締付トルク

#### 3.1.1 ヨーロッパ式端子台

- 電線サイズ
  - 電源ケーブルは、導体サイズがAWG22-20のものを使用してください。
  - 白金測温抵抗体の配線は、Pt100に付属のものまたはツイストシールド線を使用してください。

#### 2) 適合電線


形式	電線サイズ
電線1本	0.3~0.5mm <sup>2</sup> (AWG22~20)
電線2本	0.3mm <sup>2</sup> (AWG22) ×2本

- 端末処理  
より線は被覆を剥ぎ芯線をそのまま接続し、単線は被覆を剥ぎそのまま接続してください。  
または、絶縁スリーブ付棒端子を使用し接続してください。  
<参考例>

メーカー	形名	圧着工具
フエニクス・コンタクト株式会社	AI 0.5-8WH	CRIMPOFOX 6※1 (またはCRIMPOFOX 6T-F※2)

※1 旧形名 CRIMPOFOX ZA 3

※2 旧形名 CRIMPOFOX UD 6

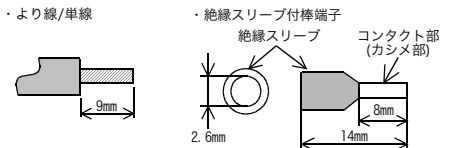

絶縁スリーブ付棒端子を使用するばいは、電線のシースの厚みによって、入れにくくなるので、外形図を参考に電線サイズを選定してください。  
端子の締付トルクは0.22~0.25N・mとしてください。規定以上のトルクで端子ネジを締め付けないでください。故障、誤動作の原因になります。

### 3.2 電源配線

電源配線については、下記マニュアルを参照してください。  
→FX3S・FX3G・FX3GC・FX3U・FX3UCシリーズ  
ユーザーズマニュアル[アナログ制御編]


### 3.3 白金測温抵抗体の配線

→端子配列は、本マニュアルの1.2節を参照

#### 白金測温抵抗体の配線上の注意

- 白金測温抵抗体のタイプ  
白金測温抵抗体は、Pt100 3線式のタイプを使用してください。  
これにより配線部での電圧降下を打消しあって、精度のよい測定が行えるようになります。
- 他の動力線や誘導ノイズ(商用電流など)の影響を受けやすい場所から、離して配線してください。

#### 白金測温抵抗体の配線例

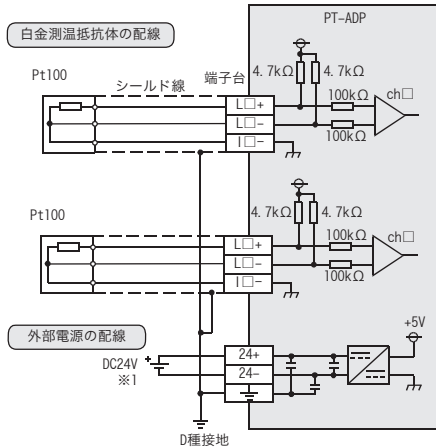


L+, L-, I-, chの□には、ch番号が入ります。

※1 FX3S・FX3G・FX3Uシーケンサのサービス電源(DC24V)を用いることもできます。

### 3.4 接地

接地は下記の項目を実施してください。

- 接地はD種接地を実施してください。(接地抵抗: 100Ω以下)
- 接地はできるだけ、専用接地としてください。  
専用接地がとれないときは、下図の“共用接地”としてください。  
詳細は、接続する各シーケンサのユーザーズマニュアル[ハードウェア編]を参照してください。



- 接地線はAWG 20~22(0.3~0.5 mm<sup>2</sup>)の太さのものを使用してください。
- 接地点はできるだけこのシーケンサの近くとし、接地線の距離を短くしてください。

### 4. 仕様

#### 立上げ・保守時の注意



- 分解、改造はしないでください。  
故障、誤動作、火災の原因となります。があります。
- 修理については、三菱電機システムサービス株式会社にお問い合わせください。
- 本品を落下させたり、強い衝撃を与えないでください。  
破損の原因になります。

#### 廃棄時の注意



- 製品を廃棄するときは、産業廃棄物として扱ってください。

#### 輸送・保管上の注意



- 本品は精密機器なので輸送の間あらゆる衝撃をさけてください。  
本品の故障の原因になります。
- 輸送後、本品の動作確認を行ってください。

### 4.1 対応シーケンサ

機種名	対応状況
FX3Sシーケンサ	Ver. 1.00~(初品から)
FX3Gシーケンサ	Ver. 1.00~(初品から)
FX3GCシーケンサ	Ver. 1.40~(初品から)
FX3Uシーケンサ	Ver. 2.20~(初品から)
FX3UCシーケンサ	Ver. 1.30~(SER No. 48**** 2004年8月生産品以降)

バージョン番号は、D8001/D8101をモニタし、下3桁の値で知ることができます。

### 4.2 一般仕様


下記以外の一般仕様は、接続するシーケンサと同じです。  
接続するシーケンサの一般仕様については、使用する各シーケンサのユーザーズマニュアル[ハードウェア編]を参照してください。

項目	仕様
耐電圧	AC500V 1分間
絶縁抵抗	DC500Vメガーにて5MΩ以上

### 4.3 電源仕様

項目	仕様
A/D変換回路 駆動電源	DC24V +20% -15% 50mA/DC24V 端子台にDC24V電源を接続し供給してください。
インタフェース 駆動電源	DC5V 15mA 基本ユニットのDC5V電源から内部給電します。

### 4.4 性能仕様

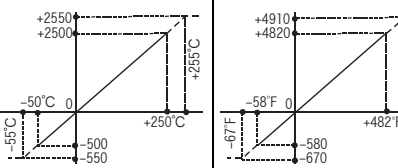項目	仕様	
	摂氏(°C)	華氏(°F)
入力信号	白金測温抵抗体3線式 Pt100 JIS C 1604-1997	
定格温度範囲	-50°C～+250°C	-58°F～+482°F
デジタル出力	-500～+2500	-580～+4820
分解能	0.1°C	0.18°F
総合精度	周囲温度25°C±5°C：フルスケールに対して±0.5% 周囲温度0～55°C：フルスケールに対して±1.0%	
A/D変換時間	● FX3U/FX3UCシーケンサ：200μs（データの更新は毎演算周期） ● FX3S/FX3G/FX3GCシーケンサ：250μs（データの更新は毎演算周期）	
入力特性		
絶縁方式	● アナログ入力部とシーケンサ間はホトカブラにより絶縁 ● 駆動電源とアナログ入力部間はDC/DCコンバータにより絶縁 ● 各ch（チャンネル）間是非絶縁	
入出力 占有点数	0点（シーケンサの最大入出力点数とは関係ありません。）	

本書によって、工業所有権その他の権利の実施に対する保証、または実施権を許諾するものではありません。  
また本書の掲載内容の使用により起因する工業所有権上の諸問題については、当社は一切その責任を負うことができません。

保証について  
当社の責に帰すことができない事由から生じた損害、当社製品の故障に起因するお客様での機会損失、逸失利益、当社の予見の有無を問わず特別の事情から生じた損害、二次損害、事故補償、当社製品以外への損傷およびその他の業務に対する保証については、当社は責任を負いかねます。

#### 安全にお使いいただくために

- この製品は一般工業を対象とした汎用品として製作されたもので、人命にかかわるような状況下で使用される機器あるいはシステムに用いられることを目的として設計、製造されたものではありません。
- この製品を原子力用、電力用、航空宇宙用、医療用、乗用移動体用の機器あるいはシステムなどの特殊用途への適用をご検討の際には、当社の営業窓口までご相談ください。
- この製品は厳重な品質体制の下に製造しておりますが、この製品の故障により重大な故障または損失の発生が予測される設備への適用に際しては、バックアップやフェールセーフ機能をシステムの設置してください。

### インターネットによる情報サービス「三菱電機FAサイト」

三菱電機FAサイト <http://www.MitsubishiElectric.co.jp/fa>  
三菱電機FAサイトでは、製品や事例などの技術情報に加え、トレーニングスクール情報や各種お問い合わせ窓口をご提供いたします。また、メンバー登録いただくマニュアルやCADデータ等のダウンロード、eラーニングなどの各種サービスをご利用いただけます。

### 三菱電機FA機器電話技術相談

●電話技術相談窓口		※1 春季・夏季・年末年始の休日を除く
対象機種	電話番号	受付時間※1
MELSEC IQ-F/FX GOT-F900	052-725-2271	月曜～金曜 土曜・日曜・祝日
		9:00～19:00(金曜は17:00まで) 9:00～17:00

### 三菱電機株式会社

〒100-8310 東京都千代田区丸の内2-7-3(東京ビル)



JY997D14701L

Side A

MITSUBISHI ELECTRIC

三菱マイクローシーケンサ

MELSEC-F

Japanese

English

FX3U-4AD-PT-ADP

ユーザーズマニュアル

マニュアル番号	JY997D14701
副番	L
作成日付	2015年4月

このたびは、三菱マイクローシーケンサ用FX3U-4AD-PT-ADP形白金測温抵抗体温度センサ入力アナログ特殊アダプタをお買い上げいただき、誠にありがとうございます。

本マニュアルは、本製品の各部名称、外形寸法、取付け、および仕様について述べたものです。本製品の取り扱いや操作などにつきましてはご使用の前に、本マニュアルおよび関連製品マニュアルをお読みいただき、機器の知識や安全の情報、注意事項のすべてについて習熟してからご使用ください。

また、製品に付属しているマニュアルは必要ときに取り出して読めるように大切に保管すると共に、必ず最終ユーザーまでお届け頂きますようお願いいたします。

商標について  
本マニュアルに記載してある会社名、製品名は、それぞれの会社の登録商標または商標です。

この印刷物は2015年4月発行です。なお、お断りなしに仕様を変更することがありますのでご了承ください。

© 2004 Mitsubishi Electric Corporation

安全上のご注意

(ご使用の前に必ずお読みください)

このマニュアルでは、安全に関する注意事項のランクを △警告 △注意 として区分してあります。

<div>△警告</div>	取り扱いを誤ったばあいには、危険な状況が起こりえて、死亡または重傷を受ける可能性が想定されるばあい。
<div>△注意</div>	取り扱いを誤ったばあいには、危険な状況が起こりえて、中程度の傷害や軽傷を受ける可能性が想定されるばあい、および物的損害だけの発生が想定されるばあい。

なお、△注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。いずれも重要な内容を記載していますので必ず守ってください。

関連マニュアルとマニュアルの入手方法		
関連マニュアル		
マニュアル名称	マニュアル番号	内容
FX3s・FX3c・FX3gc・FX3u・FX3UCシリーズ ユーザーズマニュアル [アナログ制御編]	JY997D15201 [別冊] 形名コード: 09R617	FX3s・FX3c・FX3gc・FX3u・FX3UCシリーズのアナログ制御の仕様、プログラミング方法に関する説明
FX3s・FX3c・FX3gc・FX3u・FX3UCシリーズ プログラミングマニュアル [基本・応用命令解説編]	JY997D11701 [別冊] 形名コード: 09R514	基本命令解説・応用命令解説・各種デバイスの解説など、シーケンスのプログラミングに関する説明
FX3sシリーズ ユーザーズマニュアル [ハードウェア編]	JY997D48501 [別冊] 形名コード: 09R534	FX3sシリーズシーケンサ本体の入出力仕様、配線、取付けや保守などのハードウェアに関する詳細説明
FX3cシリーズ ユーザーズマニュアル [ハードウェア編]	JY997D31201 [別冊] 形名コード: 09R520	FX3cシリーズシーケンサ本体の入出力仕様、配線、取付けや保守などのハードウェアに関する詳細説明
FX3gcシリーズ ユーザーズマニュアル [ハードウェア編]	JY997D45301 [別冊] 形名コード: 09R532	FX3gcシリーズシーケンサ本体の入出力仕様、配線、取付けや保守などのハードウェアに関する詳細説明
FX3uシリーズ ユーザーズマニュアル [ハードウェア編]	JY997D16101 [別冊] 形名コード: 09R515	FX3uシリーズシーケンサ本体の入出力仕様、配線、取付けや保守などのハードウェアに関する詳細説明
FX3UCシリーズ ユーザーズマニュアル [ハードウェア編]	JY997D11601 [別冊] 形名コード: 09R513	FX3UCシリーズシーケンサ本体の入出力仕様、配線、取付けや保守などのハードウェアに関する詳細説明

3. 配線	
配線上の注意	
<div>△警告</div>	取付け、配線作業を行うときは、必ず電源を外部にて全相共遮断してから行ってください。 感電、製品損傷の恐れがあります。
配線上の注意	
<div>△注意</div>	<ul style="list-style-type: none"><li>ネジ穴加工や配線工事を行うときに、切粉や電線屑を本製品やシーケンサなどの通風窓へ落とし込まないでください。 火災、故障、誤動作の原因となります。</li><li>ノイズの影響により、シーケンサが誤動作する原因になることがあるので、次の項目を必ず守ってください。<ol style="list-style-type: none"><li>電源線やアナログ入出力線は、主回路線や高圧電線、負荷線との近接や束線を行わないでください。 ノイズやサージ誘導の影響を受けやすくなります。 100mm以上離して布線するようにしてください。</li><li>アナログ入出力線のシールドは、必ず信号受取り側で一点接地を行ってください。また、強電系とは共通接地しないでください。</li></ol></li><li>ヨーロッパ式端子台タイプへの配線は、次の注意事項に従い適切に行ってください。感電、故障、短絡、断線、誤動作、製品損傷の恐れがあります。<ul style="list-style-type: none"><li>電線の端処理寸法は、マニュアルに記載した寸法に従ってください。</li><li>締付トルクは、マニュアルに記載したトルクに従ってください。</li><li>より線の端末は、“ヒゲ線”が出ないようにしてください。</li><li>電線の端末は、ハンダメッキしないでください。</li><li>規定サイズ以外の電線や規定本数を超える電線を接続しないでください。</li><li>端子台や電線接続部分には、外力が直接加わらないように、電線を固定してください。</li></ul></li><li>端子台タイプへの配線は、次の注意事項に従い適切に行ってください。感電、故障、短絡、断線、誤動作、製品損傷の恐れがあります。<ul style="list-style-type: none"><li>電線の端処理寸法は、シーケンサ本体マニュアルに記載した寸法に従ってください。</li><li>締付トルクは、シーケンサ本体マニュアルに記載したトルクに従ってください。</li></ul></li></ul>

### 3.1 使用ケーブルと端子締付トルク

#### 3.1.1 ヨーロッパ式端子台

##### 1) 電線サイズ

- 電源ケーブルは、導体サイズがAWG22-20のものを使用してください。
- 白金測温抵抗体の配線は、Pt100に付属のものまたはツイストシールド線を使用してください。

##### 2) 適合電線

形式	電線サイズ
電線1本	0.3～0.5mm <sup>2</sup> (AWG22～20)
電線2本	0.3mm <sup>2</sup> (AWG22) × 2本

##### 3) 端処理

より線は被覆を剥ぎ芯線をよりのまま接続し、単線は被覆を剥ぎそのまま接続してください。

または、絶縁スリーブ付端子を使用し接続してください。

<参考例>

※1 旧形名 CRIMPFOX ZA 3  
※2 旧形名 CRIMPFOX UD 6

・より線/単線

・絶縁スリーブ付端子

絶縁スリーブ

コンタクト部  
(カシメ部)

絶縁スリーブ付端子を使用するばあいは、電線のシースの厚みによって、入れにくくなるので、外形図を参考に電線サイズを選定してください。  
端子の締付トルクは0.22～0.25N・mとしてください。規定以上のトルクで端子ネジを締め付けないでください。故障、誤動作の原因になります。

3.2 電源配線  
電源配線については、下記マニュアルを参照してください。  
→FX3s・FX3c・FX3gc・FX3u・FX3UCシリーズ  
ユーザーズマニュアル[アナログ制御編]

マニュアルの入手方法  
マニュアルの入手方法には、下記の方法があります。

- 製本マニュアル(印刷物)の入手  
本製品のご購入店へお問合せください。
- 電子データ(PDFファイル)の入手  
三菱電機FAサイトから最新マニュアルをダウンロードできます。ホームページアドレスは巻末を参照ください。

対応規格

FX3U-4AD-PT-ADPは、2005年6月生産品からEC指令(EMC指令)、UL規格(UL cUL)に対応しています。詳細については、下記マニュアルを参照してください。

→FX3sシリーズハードウェアマニュアル(マニュアル番号: JY997D48301)  
→FX3gcシリーズハードウェアマニュアル(マニュアル番号: JY997D46001)  
→FX3gcシリーズハードウェアマニュアル(マニュアル番号: JY997D45101)  
→FX3uシリーズハードウェアマニュアル(マニュアル番号: JY997D16001)  
→FX3UC(D, DS, DSS)シリーズハードウェアマニュアル(マニュアル番号: JY997D28501)  
→FX3UC-32MT-LT-2ハードウェアマニュアル(マニュアル番号: JY997D30201)

基本ユニットの規格対応については、FXシリーズ総合カタログをご参照頂きますが、別途弊社までお問い合わせください。

- 注意
- 本製品は一般工業環境下でご使用ください。
  - EU域内販売責任者は下記のとおりです。  
EU域内販売責任者: Mitsubishi Electric Europe B.V.  
Gothaer Str. 8, 40880 Ratingen, Germany  
住所:

EMC指令に適合するための注意

アナログ特殊アダプタは、ヨーロッパ規格に準拠・適合しています。ただし、計測や制御において、精度を要求するばあいは、次の内容を実施されることをおすすめします。アナログ製品は、ノイズに敏感な製品のため、取扱い方法に注意してください。センサまたはアクチュエータの専用ケーブルを接続するばあいは、それらの機器メーカの接続に関する要求に従ってください。

弊社は、シールド線を使用することを推奨します。それ以外のEMC対策が実施されないばあいでもノイズ環境において誘導誤差が、±10%以内で使用できます。さらに、次のEMC対策を実施すると、本マニュアル記載の精度範囲程度に誘導誤差を軽減する効果があります。

- アナログケーブルは影響を受けやすいので、主回路線や高圧電線、負荷線との近接や束線は行わないでください。ノイズやサージ誘導の影響を受けやすくなります。できるだけアナログケーブルごとに分離してください。
- ケーブルは、シールド線を使用してください。シールド線のシールドを接地するばあい、ケーブルの片側のみ接地してください。
- アナログ値(AD変換後の値)をプログラムで使用するばあいは、平均値データを使用してください。EMCによる誘導誤差が制御に与える影響を軽減することができます。シーケンスプログラム、またはアナログ特殊アダプタの機能を使用することで平均値データを得ることができます。

1. 製品概要	
FX3U-4AD-PT-ADP形白金測温抵抗体温度センサ入力アナログ特殊アダプタ(以下PT-ADPと略称)は、白金測温抵抗体(Pt100 3線式)温度センサを接続し、温度を4ch測定するための特殊アダプタです。	
1.1 同梱品の確認	
下記製品および付属品が同梱されているか確認してください。	
製品本体	FX3U-4AD-PT-ADP形白金測温抵抗体温度センサ入力アナログ特殊アダプタ
付属品	ユーザーズマニュアル(本書)


2. 外形寸法	
外形寸法は、単位:mm(寸)で表します。寸法は、最大値・最小値を示します。寸法は、外形寸法に準拠します。	
2.1 各部名称と外形寸法・端子配列	
2.1.1 各部名称と外形寸法	
2.1.2 端子配列	

3.3 白金測温抵抗体の配線

→端子配列は、本マニュアルの1.2節を参照

白金測温抵抗体の配線上の注意

- 白金測温抵抗体のタイプ  
白金測温抵抗体は、Pt100 3線式のタイプを使用してください。  
これにより配線部での電圧降下を打消しあって、精度のよい測定が行えるようになります。
- 他の動力線や誘導ノイズ(商用電流など)の影響を受けやすい場所から、離して配線してください。

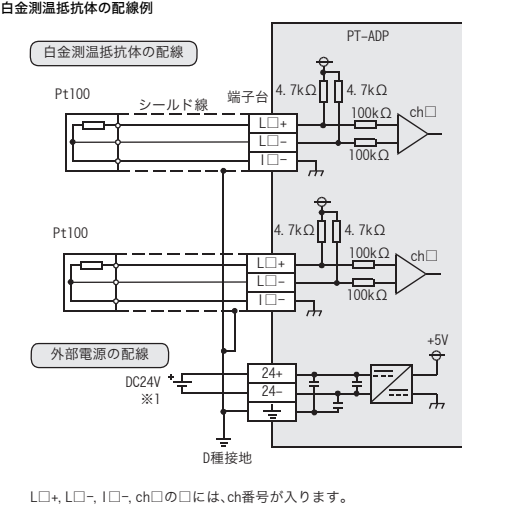

L□+, L□-, I□-, ch□の□には、ch番号が入ります。

※1 FX3s・FX3c・FX3uシーケンサのサービス電源(DC24V)を用いることもできます。

3.4 接地  
接地は下記の項目を実施してください。(接地抵抗: 100Ω以下)

- 接地はD種接地を実施してください。(接地抵抗: 100Ω以下)
- 接地はできるだけ、専用接地としてください。  
専用接地がとれないときは、下図の“共用接地”としてください。  
詳細は、接続する各シーケンサのユーザーズマニュアル[ハードウェア編]を参照してください。

- 接地線はAWG 20～22(0.3～0.5 mm<sup>2</sup>)の太さのものを使用してください。
- 接地点はできるだけこのシーケンサの近くとし、接地線の距離を短くしてください。

4. 仕様

立上げ・保守時の注意

△注意


- 分解、改造はしないでください。  
故障、誤動作、火災の原因となることがあります。
  - 修理については、三菱電機システムサービス株式会社にお問い合わせください。
- 本品を落下させたり、強い衝撃を与えないでください。  
破損の原因になります。

廃棄時の注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

輸送・保管上の注意

- 本品は精密機器なので輸送の間あらゆる衝撃をさけてください。  
本品の故障の原因になります。
- 輸送後、本品の動作確認を行ってください。

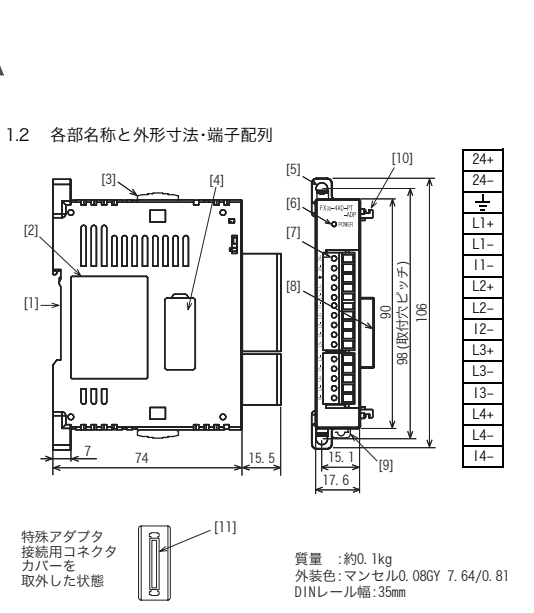

- DINレール取付け用溝(DINレール: DIN46277)
- ネームプレート
- 特殊アダプタ連結用フック:  
本特殊アダプタの左側に特殊アダプタを接続するばあいには使用します。
- 特殊アダプタ接続用コネクタカバー:  
本特殊アダプタの左側に特殊アダプタを接続するばあいは、カバーをはずします。
- 直接取付け用穴(2-φ4.5、取付けネジ: M4ネジ):  
FX3gc・FX3ucシーケンサと接続時は、使用しません。
- POWER LED(緑色):  
端子台「24+」、「24-」にDC24V電源が正常に供給されているとき点灯します。
- 端子台(ヨーロッパ式):  
白金測温抵抗体(Pt100 3線式)およびDC24V電源を配線
- 特殊アダプタ接続用コネクタ:  
本特殊アダプタを基本ユニットまたは特殊アダプタに接続するときには使用します。
- DINレール取付け用フック
- 特殊アダプタ連結用ツメ
- 特殊アダプタ接続用コネクタ:  
本特殊アダプタの左側に通信特殊アダプタまたはアナログ特殊アダプタを接続するときには使用します。

2. 取付け

取付け/取外しの詳細は、使用する各シーケンサのユーザーズマニュアル[ハードウェア編]を参照してください。

取付け上の注意	
<div>△警告</div> <ul style="list-style-type: none"><li>取付け、配線作業などを行うときは、必ず電源を外部にて全相共遮断してから行ってください。感電、製品損傷の恐れがあります。</li></ul>	
取付け上の注意	
<div>△注意</div> <ul style="list-style-type: none"><li>シーケンサ本体マニュアルに記載の一般仕様の環境で使用してください。 ほこり、油煙、導電性ダスト、腐食性ガス(潮風、Cl<sub>2</sub>、H<sub>2</sub>S、SO<sub>2</sub>、NO<sub>2</sub>など)、可燃性ガスのある場所、高温、結露、風雨にさらされる場所、振動、衝撃がある場所で使用しないでください。 感電、火災、誤動作、製品の損傷あるいは劣化の原因となることがあります。</li><li>ネジ穴加工や配線工事を行うときに、切粉や電線屑を本製品やシーケンサなどの通風窓へ落とし込まないでください。 火災、故障、誤動作の原因となります。</li><li>製品の導電部には直接触らないでください。 誤動作、故障の原因となります。</li><li>特殊アダプタは所定のコネクタに確実に装着してください。 接触不良により誤動作の原因となることがあります。</li></ul>	

機種名	対応状況
FX3sシーケンサ	Ver. 1.00～(初品から)
FX3cシーケンサ	Ver. 1.00～(初品から)
FX3gcシーケンサ	Ver. 1.40～(初品から)
FX3uシーケンサ	Ver. 2.20～(初品から)
FX3ucシーケンサ	Ver. 1.30～(SER No. 48**** 2004年8月生産品以降)

バージョン番号は、D8001/D8101をモニタし、下3桁の値で知ることができます。

4.2 一般仕様  
下記以外の一般仕様は、接続するシーケンサと同じです。  
接続するシーケンサの一般仕様については、使用する各シーケンサのユーザーズマニュアル[ハードウェア編]を参照してください。

項目	仕様
耐電圧	AC500V 1分間
絶縁抵抗	DC500Vメーガーにて5MΩ以上

### 4.3 電源仕様

項目	仕様
A/D変換回路 駆動電源	DC24V +20% -15% 50mA/DC24V 端子台にDC24V電源を接続し供給してください。
インタフェース 駆動電源	DC5V 15mA 基本ユニットのDC5V電源から内部給電します。

4.4 性能仕様	
項目	仕様
	摂氏(℃) 華氏(℉)
入力信号	白金測温抵抗体3線式 Pt100 JIS C 1604-1997
定格温度範囲	-50℃～+250℃ -58℉～+482℉
デジタル出力	-500～+2500 -580～+4820
分解能	0.1℃ 0.18℉
総合精度	周囲温度25℃±5℃: フルスケールに対して±0.5% 周囲温度0～55℃: フルスケールに対して±1.0%
A/D変換時間	● FX3u/FX3cシーケンサ: 200μs(データの更新は毎演算周期) ● FX3s/FX3gc/FX3ucシーケンサ: 250μs(データの更新は毎演算周期)
入力特性	
絶縁方式	● アナログ入力部とシーケンサ間はホトカブラにより絶縁 ● 駆動電源とアナログ入力部間はDC/DCコンバータにより絶縁 ● 各ch(チャンネル)間是非絶縁
入出力 占有点数	0点(シーケンサの最大入出力点数とは関係ありません。)

2.1 シーケンサとの接続方法  
シーケンサへの取付け方法を説明します。説明は、FX3uシーケンサを例にしています。その他のシーケンサについては、接続する各シーケンサのユーザーズマニュアル[ハードウェア編]を参照してください。

- 手順
- 電源をOFFにします。  
基本ユニット、特殊アダプタに接続しているケーブルをすべて取りはずします。  
DINレールまたは直接(ネジ)取付けした基本ユニット、特殊アダプタを取りはずします。
  - 基本ユニットに機能拡張ボードを取付けてください。  
→FX3uシリーズユーザーズマニュアル [ハードウェア編]
  - 機能拡張ボードの特殊アダプタ接続用コネクタカバー(右図A)をはずします。  
特殊アダプタに追加接続するばあいは、機能拡張ボードを特殊アダプタに読み替えてください。
  - 基本ユニットの特殊アダプタ連結用フック(右図B)をスライドします。  
特殊アダプタに追加接続するばあいは、基本ユニットを特殊アダプタに読み替えてください。(以下の手順も同様に読み替えてください。)
  - 基本ユニットに特殊アダプタ(右図C)を右図のように接続します。
  - 基本ユニットの特殊アダプタ連結用フック(右図B)をスライドさせ、特殊アダプタ(右図C)を固定します。

接続上の注意

高速入出力特殊アダプタとそれ以外の特殊アダプタを組み合わせて使用するばあい、使用するすべての高速入出力特殊アダプタを取り付けた後にそれ以外の特殊アダプタを接続してください。

高速入出力特殊アダプタは、高速入出力特殊アダプタ以外の特殊アダプタの左側に接続することはできません。



## FX3U-4AD-PT-ADP

## USER'S MANUAL

**FX3U**

Manual Number	JY997D14701
Revision	L
Date	April 2015

This manual describes the part names, dimensions, mounting, and specifications of the product. Before use, read this manual and the manuals of all relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions. Store this manual in a safe place so that it can be taken out and read whenever necessary. Always forward it to the end user.

## Registration:

The company and product names described in this manual are registered trademarks or the trademarks of their respective companies.

Effective April 2015

Specifications are subject to change without notice.

© 2005 Mitsubishi Electric Corporation

## Safety Precaution (Read these precautions before use.)

This manual classifies the safety precautions into two categories:

⚠ WARNING and ⚠ CAUTION.

	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on the circumstances, procedures indicated by ⚠ CAUTION may also cause severe injury.

It is important to follow all precautions for personal safety.

## Associated Manuals

Manual name	Manual No.	Description
FX3S/FX3G/FX3GC/FX3U/ FX3UC Series User's Manual - Analog Control Edition	JY997D16701 MODEL CODE: 09R619	Describes specifications for analog control and programming method for FX3S/FX3G/FX3GC/FX3U/FX3UC Series PLC.
FX3S/FX3G/FX3GC/FX3U/ FX3UC Series Programming Manual - Basic & Applied Instruction Edition	JY997D16601 MODEL CODE: 09R517	Describes PLC programming for basic/applied instructions and devices.
FX3S Series User's Manual - Hardware Edition	JY997D48601 MODEL CODE: 09R535	Explains FX3S Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3G Series User's Manual - Hardware Edition	JY997D31301 MODEL CODE: 09R521	Explains FX3G Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3GC Series User's Manual - Hardware Edition	JY997D45401 MODEL CODE: 09R533	Explains FX3GC Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3U Series User's Manual - Hardware Edition	JY997D16501 MODEL CODE: 09R516	Explains FX3U Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3UC Series User's Manual - Hardware Edition	JY997D28701 MODEL CODE: 09R519	Explains FX3UC Series PLC specifications for I/O, wiring, installation, and maintenance.

## How to obtain manuals

For product manuals or documents, consult with the Mitsubishi Electric dealer from who you purchased your product.

## Applicable standards

FX3U-4AD-PT-ADP units made in June, 2005 or later comply with the EC Directive (EMC Directive) and UL standards (UL, cUL). Further information can be found in the following manual.

- FX3s Series Hardware Manual (Manual No. JY997D48301)
- FX3G Series Hardware Manual (Manual No. JY997D46001)
- FX3GC Series Hardware Manual (Manual No. JY997D45201)
- FX3u Series Hardware Manual (Manual No. JY997D18801)

- FX3uc (D, DS, DSS) Series Hardware Manual (Manual No. JY997D28601)
- FX3uc-32MT-LT-2 Hardware Manual (Manual No. JY997D31601)

Regarding the standards that relate to the main unit, please refer to either the FX series product catalog or consult with your nearest Mitsubishi product provider.

## Attention

- This product is designed for use in industrial applications.

## Note

- Authorized Representative in the European Community:  
Mitsubishi Electric Europe B.V.  
Gothaer Str. 8, 40880 Ratingen, Germany

## Caution for EC Directive

The analog special adapters have been found to be compliant to the European standards in the aforesaid manual and directive. However, for the very best performance from what are in fact delicate measuring and controlled output device Mitsubishi Electric would like to make the following points;

As analog devices are sensitive by nature, their use should be considered carefully. For users of proprietary cables (integral with sensors or actuators), these users should follow those manufacturers installation requirements.

Mitsubishi Electric recommend that shielded cables should be used. If NO other EMC protection is provided, then users may experience temporary loss or accuracy between ±10 % in very heavy industrial areas.

However, Mitsubishi Electric suggest that if adequate EMC precautions are followed for the users complete control system, users should expect accuracy as specified in this manual.

- Sensitive analog cable should not be laid in the same trunking or cable conduit as high voltage cabling. Where possible users should run analog cables separately.
- Good cable shielding should be used. When terminating the shield at Earth - ensure that no earth loops are accidentally created.
- When reading analog values, EMC accuracy can be improved out by averaging the readings. This can be achieved either through functions on the analog special adapters or through a users program.

## 1. Outline


FX3U-4AD-PT-ADP (hereinafter called PT-ADP) is an analog special adapter for measuring temperature via four channels (three-wire sensors) of a connected Pt100 platinum resistance thermometer.

## 1.1 Incorporated Items

Verify that the following product and items are included in the package:

Product	FX3U-4AD-PT-ADP Pt100 temperature sensor input special adapter
Accessories	User's manual (This manual)

## 1.2 External Dimensions, Part Names, and Terminal Layout

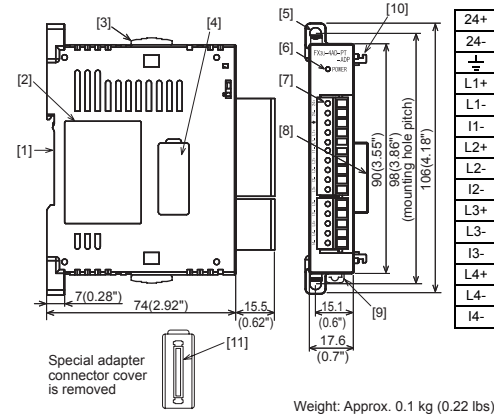

Weight: Approx. 0.1 kg (0.22 lbs)

- [1] DIN rail mounting groove (DIN rail: DIN46277)
- [2] Name plate
- [3] Special adapter slide lock:  
Used to connect additional special adapters onto the left side of this special adapter.
- [4] Special adapter connector cover:  
Remove this cover to connect additional special adapters to the left side.
- [5] Direct mounting hole: 2 holes of  $\phi 4.5$  (0.18") (mounting screw: M4 screw)  
Not used when connecting to FX3GC/FX3UC Series PLC.
- [6] POWER LED (green):  
Lit while 24 V DC power is supplied properly to terminals '24+' and '24-'.
- [7] Terminal block (European type):  
Connect platinum resistance thermometer (Pt100 three-wire type) and 24 V DC power supply
- [8] Special adapter connector:  
Used to connect this special adapter to PLC main unit or special adapter.
- [9] DIN rail mounting hook
- [10] Special adapter fixing hook
- [11] Special adapter connector:  
Used to connect communication or analog special adapters to the left side of the PT-ADP.

## 2. Installation

For installation/uninstallation details, refer to the respective PLC User's manual Hardware Edition.

INSTALLATION PRECAUTIONS	⚠ WARNING
<ul style="list-style-type: none"><li>• Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.</li></ul>	
INSTALLATION PRECAUTIONS	⚠ CAUTION
<ul style="list-style-type: none"><li>• Use the product within the generic environment specifications described in PLC main unit manual (Hardware Edition). Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl<sub>2</sub>, H<sub>2</sub>S, SO<sub>2</sub>, or NO<sub>2</sub>), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind. If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.</li><li>• When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.</li><li>• Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions.</li><li>• Connect special adapter securely to their designated connectors. Loose connections may cause malfunctions.</li></ul>	


## 2.1 Connection to the PLC

This section describes the connection method to the PLC (FX3U Series PLC is used for the following example).

For installation method to other PLCs, refer to the respective PLC User's manual Hardware Edition.

## Procedure

- 1) Turn off the power.  
Disconnect all the cables connected to the PLC main unit and special adapter, and demount the main unit and special adapter mounted on DIN rail or mounted directly using screws.
- 2) Install an expansion board to the main unit.  
For the expansion board installation procedure, refer to the following manual:  
→ FX3u Series User's Manual - Hardware Edition
- 3) Remove the special adapter connector cover on the expansion board (fig.A).  
When connecting this product to another special adapter, please replace the 'expansion board' in the above description with a 'special adapter' and perform the procedure as indicated.
- 4) Slide the special adapter slide lock (fig.B) of the main unit.  
When connecting this product to another special adapter, please replace the 'main unit' in the above description with a 'special adapter' and perform the procedure as indicated. (Please replace the following procedures similarly.)

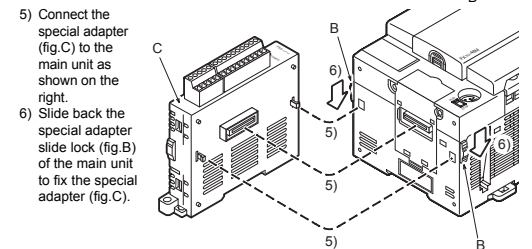

## Connection precautions

Connect all the high-speed I/O special adapters before connecting other special adapters when they are used in combination.  
***Do not connect a high-speed I/O special adapter on the left side of any special adapters other than other high-speed I/O special adapters.***



### 3. Wiring

WIRING PRECAUTIONS
<div><div><div><div><div><div></div></div></div><div><div><div><span></span></div></div></div><div><div><div><span></span></div></div></div></div></div><div><b>WARNING</b></div></div> <ul style="list-style-type: none"><li>Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.</li></ul>

WIRING PRECAUTIONS
<div><div><div><div><div><div></div></div></div><div><div><div><span></span></div></div></div><div><div><div><span></span></div></div></div></div></div><div><b>CAUTION</b></div></div> <ul style="list-style-type: none"><li>When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.</li><li>Make sure to observe the following precautions in order to prevent malfunctions under the influence of noise:<ol style="list-style-type: none"><li>Do not bundle the power line or shield of the analog input/output cable together with or lay it close to the main circuit, high-voltage line, or load line. Otherwise, noise disturbance and/or surge induction are likely to take place. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit, high-voltage line, or load line.</li><li>Ground the shield of the analog input/output cable at one point on the signal receiving side. However, do not use common grounding with heavy electrical systems.</li></ol></li><li>Make sure to properly wire to the terminal block (European type) in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.<ul style="list-style-type: none"><li>The disposal size of the cable end should follow the dimensions described in the manual.</li><li>Tightening torque should follow the specifications in the manual.</li><li>Twist the end of strand wire and make sure that there are no loose wires.</li><li>Do not solder-plate the electric wire ends.</li><li>Do not connect more than the specified number of wires or electric wires of unspecified size.</li><li>Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.</li></ul></li><li>Make sure to properly wire the terminal block in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.<ul style="list-style-type: none"><li>The disposal size of the cable end should follow the dimensions described in the manual of the PLC main unit.</li><li>Tightening torque should follow the specifications in the manual of the PLC main unit.</li></ul></li></ul>

#### 3.1 Applicable cable and terminal tightening torque

##### 3.1.1 Terminal block (European type)


1) Wire size	
- The power supply wire should use 22-20 AWG wire.	
- Wiring to a Pt100 platinum resistance thermometer should be used the cable of it or a twisted shielded cable.	
2) Applicable cable	
Type	Wire size
Single-wire	0.3 mm <sup>2</sup> to 0.5 mm <sup>2</sup> (AWG22 to 20)
2-wire	2 pieces of 0.3 mm <sup>2</sup> (AWG22)

- 3) Termination of cable end  
Strip the coating of strand wire and twist the cable core before connecting it, or strip the coating of single wire before connecting it.  
An alternative connection is to use a ferrule with insulating sleeve.  
<Reference>

Manufacturer	Model	Caulking tool
Phoenix Contact Co., Ltd.	AI 0.5-8WH	CRIMPFOX 6 <sup>*1</sup> (or CRIMPFOX 6T-F <sup>*2</sup> )

<sup>\*1</sup> Old model name: CRIMPFOX ZA 3

<sup>\*2</sup> Old model name: CRIMPFOX UD 6

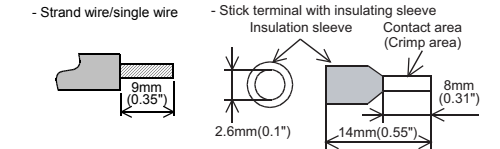

When using a stick terminal with insulating sleeve, choose a wire with proper cable sheath referring to the above outside dimensions, or otherwise, the wire cannot be inserted easily.  
The tightening torque must be 0.22 to 0.25 N·m. Do not tighten terminal screws exceeding the specified torque. Failure to do so may cause equipment failures or malfunctions.

#### 3.2 Power Supply Wiring

For the power supply wiring, refer to the following manual.  
→ FX3S/FX3G/FX3GC/FX3U/FX3UC Series User's Manual - Analog Control Edition


#### 3.3 Selection of platinum resistance thermometer sensors

→ For the terminal configuration, refer to Section 1.2

##### Precautions on platinum resistance thermometer wiring

- Type of platinum resistance thermometer  
Select Pt100 3-wire platinum resistance thermometer sensors.  
This thermometer will not be affected by voltage drop in the cable connection area, and will ensure accurate measurement.
- Separate the cable of the platinum resistance thermometer sensors from the other motive power cables or areas easily affected by inductive noise (of the commercial power, etc.).

##### Example of platinum resistance thermometer wiring

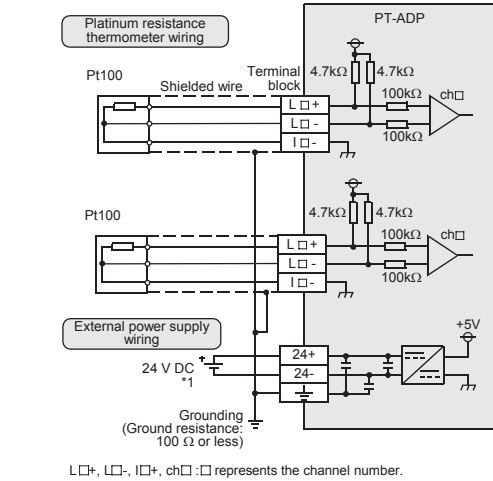


<sup>\*1</sup> 24 V DC service power supply of the FX3S/FX3G/FX3U Series PLC can also be used.

#### 3.4 Grounding

Grounding should be performed as stated below.

- The grounding resistance should be 100 Ω or less.
- Independent grounding should be performed for best results.  
When independent grounding is not performed, perform "shared grounding" of the following figure.  
For details, refer to the respective PLC User's manual Hardware Edition.



- The grounding wire size should be AWG 22-20 (0.3-0.5 mm<sup>2</sup>).
- The grounding point should be close to the PLC, and all grounding wire should be as short as possible.

### 4. Specifications

STARTUP AND MAINTENANCE PRECAUTIONS
<div><div><div><div><div><div></div></div></div><div><div><div><span></span></div></div></div><div><div><div><span></span></div></div></div></div></div><div><b>CAUTION</b></div></div> <ul style="list-style-type: none"><li>Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions. * For repair, contact your local Mitsubishi Electric representative.</li><li>Do not drop the product or exert strong impact to it. Doing so may cause damage.</li></ul>

DISPOSAL PRECAUTIONS
<div><div><div><div><div><div></div></div></div><div><div><div><span></span></div></div></div><div><div><div><span></span></div></div></div></div></div><div><b>CAUTION</b></div></div> <ul style="list-style-type: none"><li>Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device.</li></ul>

TRANSPORTATION AND STORAGE PRECAUTIONS
<div><div><div><div><div><div></div></div></div><div><div><div><span></span></div></div></div><div><div><div><span></span></div></div></div></div></div><div><b>CAUTION</b></div></div> <ul style="list-style-type: none"><li>The product is a precision instrument. During transportation, avoid any impacts. Failure to do so may cause failures in the product. After transportation, verify the operations of the product.</li></ul>

#### 4.1 Applicable PLC

Model name	Applicability
FX3S Series PLC	Ver. 1.00 or later (from first production)
FX3G Series PLC	Ver. 1.00 or later (from first production)
FX3GC Series PLC	Ver. 1.40 or later (from first production)
FX3U Series PLC	Ver. 2.20 or later (from first production)
FX3UC Series PLC	Ver. 1.30 or later (from the production manufactured in August, 2004 with SER No. 48****)

The version number can be checked by monitoring D8001/D8101 as the last three digits indicate it.

#### 4.2 General Specifications

Items other than the following are equivalent to the those of the PLC main unit.  
For general specifications, refer to the respective PLC User's manual Hardware Edition.

Item	Specification
Dielectric withstand voltage	500 V AC for one minute
Insulation resistance	5 MΩ or more by 500 V DC megger

#### 4.3 Power Supply Specifications

Item	Specification
A/D conversion circuit driving power	24 V DC +20 %/-15 %, 50 mA for 24 V DC Connect a 24 V DC power supply to the terminal block.
Interface driving power	5 V DC, 15 mA 5 V DC power is supplied from the internal power supply of main unit.

#### 4.4 Performance Specifications

Item	Description	
	Centigrade (°C)	Fahrenheit (°F)
Input signal	3-wire platinum resistance thermometer sensor Pt100 JIS C 1604-1997	
Rated temperature range	-50 °C to +250 °C	-58 °F to +482 °F
Digital output	-500 to +2500	-580 to +4820
Resolution	0.1 °C	0.18 °F
Total accuracy	±0.5 % for full scale (when ambient temperature is 25 °C±5 °C) ±1.0 % for full scale (when ambient temperature is in the range of 0 to 55 °C)	
A/D conversion time	<ul style="list-style-type: none"><li>FX3U/FX3UC Series PLC: 200 μs (The data will be updated at every scan time of the PLC.)</li><li>FX3S/FX3G/FX3GC Series PLC: 250 μs (The data will be updated at every scan time of the PLC.)</li></ul>	
Input characteristics		
Insulation method	<ul style="list-style-type: none"><li>The photocoupler is adopted to insulate the analog input area from the PLC.</li><li>The DC/DC converter is adopted to insulate the power supply line from the analog input area.</li><li>Channels are not insulated from each other.</li></ul>	
Occupied points	0 point (This number is not related to the maximum number of input/output points of the PLC.)	

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

#### Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; opportunity loss or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

<div><div><div><div><div><div></div></div></div><div><div><div><span></span></div></div></div><div><div><div><span></span></div></div></div></div></div><div><b>For safe use</b></div></div>
<ul style="list-style-type: none"><li>This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.</li><li>Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.</li><li>This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.</li></ul>

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN



PROGRAMMABLE CONTROLLERS  
MELSEC-F

## FX3U-4AD-PT-ADP

## USER'S MANUAL

**FX3U**

Manual Number	JY997D14701
Revision	L
Date	April 2015

This manual describes the part names, dimensions, mounting, and specifications of the product. Before use, read this manual and the manuals of all relevant products fully to acquire proficiency in handling and operating the product. Make sure to learn all the product information, safety information, and precautions. Store this manual in a safe place so that it can be taken out and read whenever necessary. Always forward it to the end user.  
Registration:  
The company and product names described in this manual are registered trademarks or the trademarks of their respective companies.

Effective April 2015  
Specifications are subject to change without notice.  
© 2005 Mitsubishi Electric Corporation

### Safety Precaution (Read these precautions before use.)

This manual classifies the safety precautions into two categories:

**WARNING** and **CAUTION**.

<b>WARNING</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
<b>CAUTION</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on the circumstances, procedures indicated by **CAUTION** may also cause severe injury.  
It is important to follow all precautions for personal safety.

### Associated Manuals

Manual name	Manual No.	Description
FX3S/FX3G/FX3GC/FX3U/ FX3UC Series User's Manual - Analog Control Edition	JY997D16701 MODEL CODE: 09R619	Describes specifications for analog control and programming method for FX3S/FX3G/FX3GC/FX3U/ FX3UC Series PLC.
FX3S/FX3G/FX3GC/FX3U/ FX3UC Series Programming Manual - Basic & Applied Instruction Edition	JY997D16601 MODEL CODE: 09R517	Describes PLC programming for basic/applied instructions and devices.
FX3S Series User's Manual - Hardware Edition	JY997D48601 MODEL CODE: 09R535	Explains FX3S Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3G Series User's Manual - Hardware Edition	JY997D31301 MODEL CODE: 09R521	Explains FX3G Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3GC Series User's Manual - Hardware Edition	JY997D45401 MODEL CODE: 09R533	Explains FX3GC Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3U Series User's Manual - Hardware Edition	JY997D16501 MODEL CODE: 09R516	Explains FX3U Series PLC specifications for I/O, wiring, installation, and maintenance.
FX3UC Series User's Manual - Hardware Edition	JY997D28701 MODEL CODE: 09R519	Explains FX3UC Series PLC specifications for I/O, wiring, installation, and maintenance.

**How to obtain manuals**  
For product manuals or documents, consult with the Mitsubishi Electric dealer from who you purchased your product.

### 3. Wiring

WIRING PRECAUTIONS	<b>WARNING</b>
<ul style="list-style-type: none"> <li>Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.</li> </ul>	

WIRING PRECAUTIONS	<b>CAUTION</b>
<ul style="list-style-type: none"> <li>When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.</li> <li>Make sure to observe the following precautions in order to prevent malfunctions under the influence of noise:                             <ol style="list-style-type: none"> <li>Do not bundle the power line or shield of the analog input/output cable together with or lay it close to the main circuit, high-voltage line, or load line. Otherwise, noise disturbance and/or surge induction are likely to take place. As a guideline, lay the control line at least 100mm (3.94") or more away from the main circuit, high-voltage line, or load line.</li> <li>Ground the shield of the analog input/output cable at one point on the signal receiving side. However, do not use common grounding with heavy electrical systems.</li> </ol> </li> <li>Make sure to properly wire to the terminal block (European type) in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.                             <ul style="list-style-type: none"> <li>The disposal size of the cable end should follow the dimensions described in the manual.</li> <li>Tightening torque should follow the specifications in the manual.</li> <li>Twist the end of strand wire and make sure that there are no loose wires.</li> <li>Do not solder-plate the electric wire ends.</li> <li>Do not connect more than the specified number of wires or electric wires of unspecified size.</li> <li>Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.</li> </ul> </li> <li>Make sure to properly wire the terminal block in accordance with the following precautions. Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.                             <ul style="list-style-type: none"> <li>The disposal size of the cable end should follow the dimensions described in the manual of the PLC main unit.</li> <li>Tightening torque should follow the specifications in the manual of the PLC main unit.</li> </ul> </li> </ul>	

### 3.1 Applicable cable and terminal tightening torque

#### 3.1.1 Terminal block (European type)

- Wire size
  - The power supply wire should use 22-20 AWG wire.
  - Wiring to a Pt100 platinum resistance thermometer should be used the cable of it or a twisted shielded cable.
- Applicable cable


Type	Wire size
Single-wire	0.3 mm <sup>2</sup> to 0.5 mm <sup>2</sup> (AWG22 to 20)
2-wire	2 pieces of 0.3 mm <sup>2</sup> (AWG22)

- Termination of cable end  
Strip the coating of strand wire and twist the cable core before connecting it, or strip the coating of single wire before connecting it.  
An alternative connection is to use a ferrule with insulating sleeve.  
<Reference>

Manufacturer	Model	Caulking tool
Phoenix Contact Co., Ltd.	AI 0.5-8WH	CRIMPFOX 6 <sup>1</sup> (or CRIMPFOX 6T-F <sup>2</sup> )

- <sup>\*1</sup> Old model name: CRIMPFOX ZA 3  
<sup>\*2</sup> Old model name: CRIMPFOX UD 6

- Strand wire/single wire
- Stick terminal with insulating sleeve



When using a stick terminal with insulating sleeve, choose a wire with proper cable sheath referring to the above outside dimensions, or otherwise, the wire cannot be inserted easily.  
The tightening torque must be 0.22 to 0.25 N·m. Do not tighten terminal screws exceeding the specified torque. Failure to do so may cause equipment failures or malfunctions.

### Applicable standards

FX3U-4AD-PT-ADP units made in June, 2005 or later comply with the EC Directive (EMC Directive) and UL standards (UL, cUL). Further information can be found in the following manual.

- FX3s Series Hardware Manual (Manual No. JY997D48301)
- FX3G Series Hardware Manual (Manual No. JY997D46001)
- FX3GC Series Hardware Manual (Manual No. JY997D45201)
- FX3U Series Hardware Manual (Manual No. JY997D18801)
- FX3uc (D, DS, DSS) Series Hardware Manual (Manual No. JY997D28601)
- FX3uc-32MT-LT-2 Hardware Manual (Manual No. JY997D31601)

Regarding the standards that relate to the main unit, please refer to either the FX series product catalog or consult with your nearest Mitsubishi product provider.

#### Attention

- This product is designed for use in industrial applications.

#### Note

- Authorized Representative in the European Community:  
Mitsubishi Electric Europe B.V.  
Gothaer Str. 8, 40880 Ratingen, Germany

#### Caution for EC Directive

The analog special adapters have been found to be compliant to the European standards in the aforesaid manual and directive. However, for the very best performance from what are in fact delicate measuring and controlled output device Mitsubishi Electric would like to make the following points:  
As analog devices are sensitive by nature, their use should be considered carefully. For users of proprietary cables (integral with sensors or actuators), these users should follow those manufacturers installation requirements.  
Mitsubishi Electric recommend that shielded cables should be used. If NO other EMC protection is provided, then users may experience temporary loss or accuracy between ±10 % in very heavy industrial areas.  
However, Mitsubishi Electric suggest that if adequate EMC precautions are followed for the users complete control system, users should expect accuracy as specified in this manual.

- Sensitive analog cable should not be laid in the same trunking or cable conduit as high voltage cabling. Where possible users should run analog cables separately.
- Good cable shielding should be used. When terminating the shield at Earth - ensure that no earth loops are accidentally created.
- When reading analog values, EMC accuracy can be improved out by averaging the readings. This can be achieved either through functions on the analog special adapters or through a users program.

### 1. Outline


FX3U-4AD-PT-ADP (hereinafter called PT-ADP) is an analog special adapter for measuring temperature via four channels (three-wire sensors) of a connected Pt100 platinum resistance thermometer.

#### 1.1 Incorporated items

Verify that the following product and items are included in the package:

Product	FX3U-4AD-PT-ADP Pt100 temperature sensor input special adapter
Accessories	User's manual (This manual)

### 1.2 External Dimensions, Part Names, and Terminal Layout

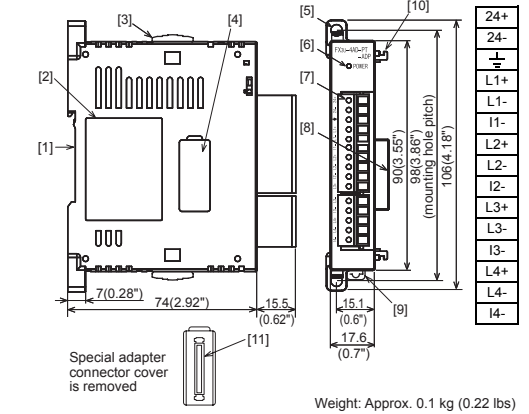

- DIN rail mounting groove (DIN rail: DIN46277)
- Name plate
- Special adapter slide lock:  
Used to connect additional special adapters onto the left side of this special adapter.
- Special adapter connector cover:  
Remove this cover to connect additional special adapters to the left side.
- Direct mounting hole:2 holes of  $\phi 4.5$  (0.18") (mounting screw: M4 screw)  
Not used when connecting to FX3GC/FX3UC Series PLC.
- POWER LED (green):  
Lit while 24 V DC power is supplied properly to terminals '24+' and '24-'.
- Terminal block (European type):  
Connect platinum resistance thermometer (Pt100 three-wire type) and 24 V DC power supply
- Special adapter connector:  
Used to connect this special adapter to PLC main unit or special adapter.
- DIN rail mounting hook
- Special adapter fixing hook
- Special adapter connector:  
Used to connect communication or analog special adapters to the left side of the PT-ADP.

### 2. Installation

For installation/uninstallation details, refer to the respective PLC User's manual Hardware Edition.

INSTALLATION PRECAUTIONS	<b>WARNING</b>
<ul style="list-style-type: none"> <li>Make sure to cut off all phases of the power supply externally before attempting installation or wiring work. Failure to do so may cause electric shock or damage to the product.</li> </ul>	

INSTALLATION PRECAUTIONS	<b>CAUTION</b>
<ul style="list-style-type: none"> <li>Use the product within the generic environment specifications described in PLC main unit manual (Hardware Edition). Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl<sub>2</sub>, H<sub>2</sub>S, SO<sub>2</sub>, or NO<sub>2</sub>), flammable gas, vibration or impacts, or expose it to high temperature, condensation, or rain and wind. If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.</li> <li>When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits. Failure to do so may cause fire, equipment failures or malfunctions.</li> <li>Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions.</li> <li>Connect special adapter securely to their designated connectors. Loose connections may cause malfunctions.</li> </ul>	

DISPOSAL PRECAUTIONS	<b>CAUTION</b>
<ul style="list-style-type: none"> <li>Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device.</li> </ul>	

STARTUP AND MAINTENANCE PRECAUTIONS	<b>CAUTION</b>
<ul style="list-style-type: none"> <li>Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions. * For repair, contact your local Mitsubishi Electric representative.</li> <li>Do not drop the product or exert strong impact to it. Doing so may cause damage.</li> </ul>	

TRANSPORTATION AND STORAGE PRECAUTIONS	<b>CAUTION</b>
<ul style="list-style-type: none"> <li>The product is a precision instrument. During transportation, avoid any impacts. Failure to do so may cause failures in the product. After transportation, verify the operations of the product.</li> </ul>	

Model name	Applicability
FX3S Series PLC	Ver. 1.00 or later (from first production)
FX3G Series PLC	Ver. 1.00 or later (from first production)
FX3GC Series PLC	Ver. 1.40 or later (from first production)
FX3U Series PLC	Ver. 2.20 or later (from first production)
FX3UC Series PLC	Ver. 1.30 or later (from the production manufactured in August, 2004 with SER No. 48****)

The version number can be checked by monitoring D8001/D8101 as the last three digits indicate it.

### 4.2 General Specifications

Items other than the following are equivalent to the those of the PLC main unit.  
For general specifications, refer to the respective PLC User's manual Hardware Edition.

Item	Specification	
<b>Dielectric withstand voltage</b>	500 V AC for one minute	Between all terminals and ground terminal of PLC main unit
<b>Insulation resistance</b>	5 MΩ or more by 500 V DC megger	

### 4.3 Power Supply Specifications

Item	Specification
<b>A/D conversion circuit driving power</b>	24 V DC +20 %-/-15 %, 50 mA for 24 V DC Connect a 24 V DC power supply to the terminal block.
<b>Interface driving power</b>	5 V DC, 15 mA 5 V DC power is supplied from the internal power supply of main unit.

### 2.1 Connection to the PLC

This section describes the connection method to the PLC (FX3U Series PLC is used for the following example).  
For installation method to other PLCs, refer to the respective PLC User's manual Hardware Edition.

#### Procedure

- Turn off the power.  
Disconnect all the cables connected to the PLC main unit and special adapter, and demount the main unit and special adapter mounted on DIN rail or mounted directly using screws.
- Install an expansion board to the main unit.  
For the expansion board installation procedure, refer to the following manual:  
→ FX3u Series User's Manual - Hardware Edition
- Remove the special adapter connector cover on the expansion board (fig.A).  
When connecting this product to another special adapter, please replace the 'expansion board' in the above description with a 'special adapter' and perform the procedure as indicated.
- Slide the special adapter slide lock (fig.B) of the main unit.  
When connecting this product to another special adapter, please replace the 'main unit' in the above description with a 'special adapter' and perform the procedure as indicated. (Please replace the following procedures similarly.)

- Connect the special adapter (fig.C) to the main unit as shown on the right.
- Slide back the special adapter slide lock (fig.B) of the main unit to fix the special adapter (fig.C).

#### Connection precautions

Connect all the high-speed I/O special adapters before connecting other special adapters when they are used in combination.  
*Do not connect a high-speed I/O special adapter on the left side of any special adapters other than other high-speed I/O special adapters.*

### 4.4 Performance Specifications

Item	Description	
	Centigrade (°C)	Fahrenheit (°F)
<b>Input signal</b>	3-wire platinum resistance thermometer sensor Pt100 JIS C 1604-1997	
<b>Rated temperature range</b>	-50 °C to +250 °C	-58 °F to +482 °F
<b>Digital output</b>	-500 to +2500	-580 to +4820
<b>Resolution</b>	0.1 °C	0.18 °F
<b>Total accuracy</b>	±0.5 % for full scale (when ambient temperature is 25 °C±5 °C) ±1.0 % for full scale (when ambient temperature is in the range of 0 to 55 °C)	
<b>A/D conversion time</b>	<ul style="list-style-type: none"> <li>FX3U/FX3UC Series PLC: 200 μs (The data will be updated at every scan time of the PLC.)</li> <li>FX3S/FX3G/FX3GC Series PLC: 250 μs (The data will be updated at every scan time of the PLC.)</li> </ul>	
<b>Input characteristics</b>		
<b>Insulation method</b>	<ul style="list-style-type: none"> <li>The photocoupler is adopted to insulate the analog input area from the PLC.</li> <li>The DC/DC converter is adopted to insulate the power supply line from the analog input area.</li> <li>Channels are not insulated from each other.</li> </ul>	
<b>Occupied points</b>	0 point (This number is not related to the maximum number of input/output points of the PLC.)	

Item	Specification	
<b>Dielectric withstand voltage</b>	500 V AC for one minute	Between all terminals and ground terminal of PLC main unit
<b>Insulation resistance</b>	5 MΩ or more by 500 V DC megger	

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

**Warranty**  
Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; opportunity loss or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

<b>For safe use</b>
<ul style="list-style-type: none"> <li>This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.</li> <li>Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.</li> <li>This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.</li> </ul>

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN