



CABLE MOUNTING INSTRUCTIONS

■ CM-08-3 for Straight Clamp Type Connectors (3)




1. Preparation of Cable

- (1) Slide nut and washer onto cable
- (2) Strip cable to recommended dimensions shown in catalogue

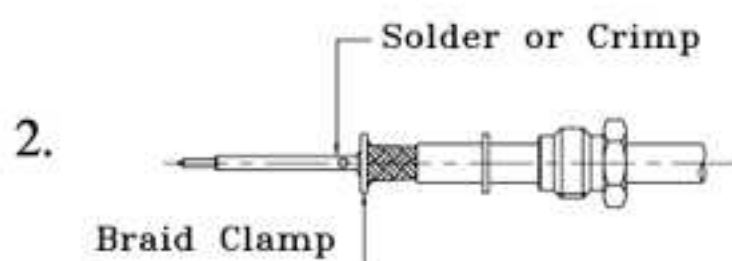


2. Soldering Center Contact to Cable Center Conductor

- (1) Insert cable center conductor into center contact until cable dielectric rest against center contact
- (2) Crimp (or Solder) center contact to cable center conductor

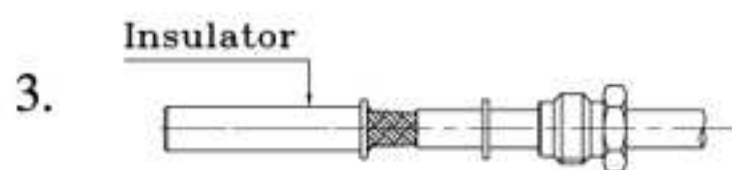

3. Inserting Insulator onto Center Contact

- (1) Flare slightly end of cable braid to facilitate insertion of braid clamp
- (2) Slide braid clamp onto cable until edge of braid clamp seat against cable jacket with all braid wires on outside of braid clamp
- (3) Insert insulator onto center contact



4. Final Assembly

- (1) Insert cable assembly and hardware into connector body
- (2) Screw and tighten nut on