

Solder Tag/Insulating Bushes

Solder tags and insulating bushes are available for many panel mounted items which need to be isolated from the panel itself. It is important to note that the available mounting thread of the connector is effectively reduced when a bush is used, or conversely, that the panel must be thinner to allow for the thickness of the bush. The part number allows for the specification of these accessories with bulkhead sockets in particular by using the digits which would otherwise be used for the cable group number of a cable entry style of connector.


Part Number variants:

- M—001 X99: with solder tag only.
- M—002 X99: with solder tag and insulating bushes for pip'.
- M—003 X99: with insulating bushes only.
- M—004 X99: with solder tag and alternative insulating bushes.
- M—005 X99: with alternative insulating bushes only.

(see below for specific style of bushes and tags.

M = bulkhead socket)

Solder tags

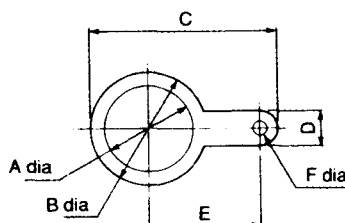

	A	B	C	D	E	F
ST101502	12.95	19.05	22.23	3.18	11.10	1.02
ST101503	9.91	12.95	21.16	3.96	12.70	1.60


All measurements are in millimeters unless otherwise specified.

M/A-COM, Inc.


North America: Tel. (800) 366-2266 ■ Asia/Pacific: Tel. +81(03) 3226-1671 ■ Europe: Tel. +44 (1344) 869 595
Fax (800) 618-8883 Fax +81(03) 3226-1451 Fax +44 (1344) 300 020

Solder Tag/Insulating Bushes

Insulating bushes

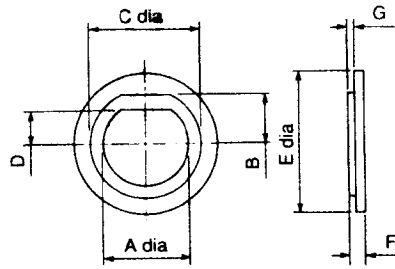

	A	B	C	D	E	F	G
ST100903	12.78	7.39	16.79	5.61	20.00	1.73	0.64
ST108363	9.70	5.56	12.50	3.94	16.00	2.11	0.61

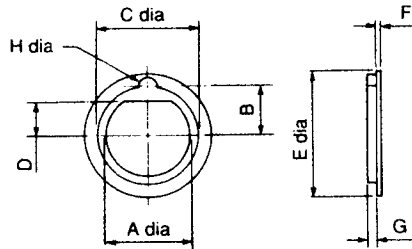

	A	B	C	D	E	F	G	H
ST100539	9.53	5.72	11.43	3.99	14.29	0.38	1.02	2.38
ST103842	12.75	7.93	16.26	5.59	19.05	0.38	1.02	2.38

All measurements are in millimeters unless otherwise specified.

M/A-COM, Inc.

North America: Tel. (800) 366-2266
Fax (800) 618-8883

■ Asia/Pacific: Tel. +81(03) 3226-1671
Fax +81(03) 3226-1451

■ Europe: Tel. +44 (1344) 869 595
Fax +44 (1344) 300 020