

## ■ Standard couplers and Swiftclip / Swiftgrip


Couplers are required for joining together MRF straight lengths  
 MRFC standard couplers are supplied in pairs. MRFC 50 standard coupler is supplied singly

2 x Swiftclips are required for each coupling and are used with tray widths up to and including 300 mm. For 450 mm to 900 mm tray, use Swiftgrip (2 per coupling)


1 x Swiftclip is required for 50 mm tray and MRFC 50 couplers

Swiftclip and Swiftgrip are supplied in packs of 10

## ■ Installation using Swiftclip - 50 mm to 300 mm wide tray

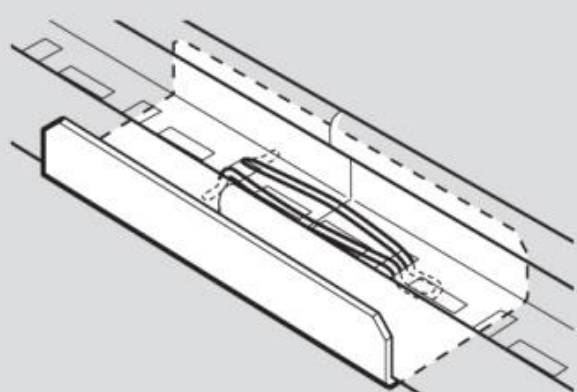

For 50 mm wide MRF tray  
 Cat. No. MRFC 50 **F** and Swiftclip

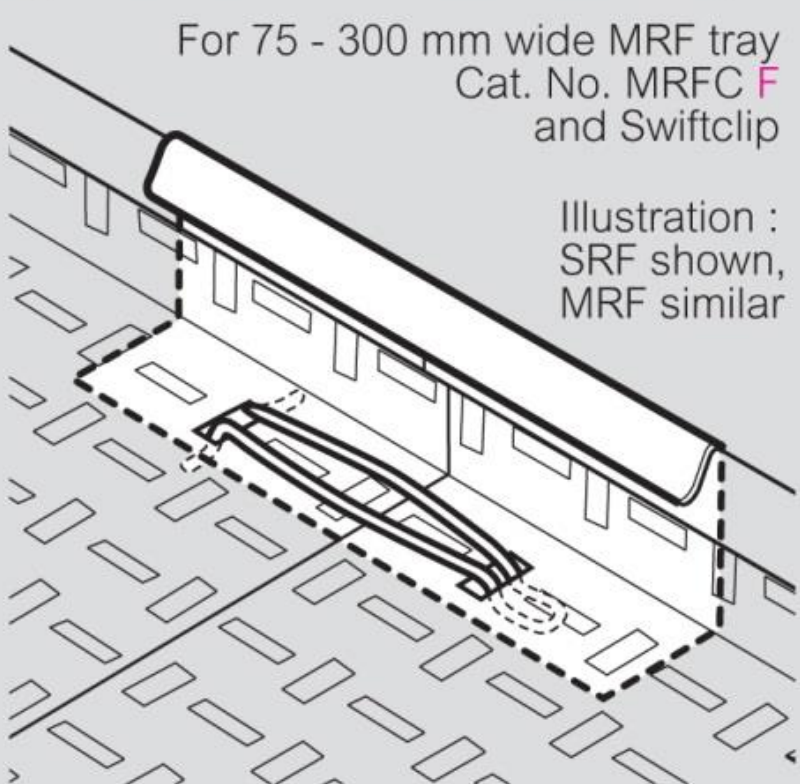

For 75 - 300 mm wide MRF tray  
 Cat. No. MRFC **F** and Swiftclip


Illustration :  
 SRF shown,  
 MRF similar

Standard couplers	Tray range
Cat. Nos. MRFC 50 <b>F</b> <sup>1</sup>	MRF
MRFC <b>F</b> <sup>2</sup>	MRF


Swiftclip	Finish
Cat. Nos. SCLPG	PG
SCLG	G

1 : MRFC 50 for 50 mm wide tray only  
 2 : MRFC for 75-900 mm wide tray only


## ■ Assembly using Swiftclip

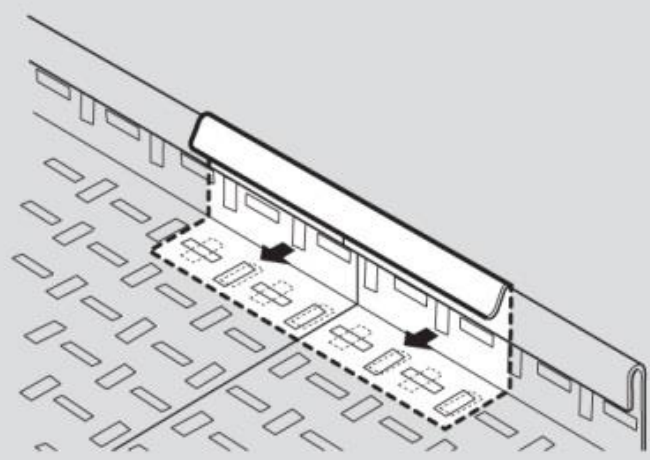


**1. Locate coupler across underside of tray joint**

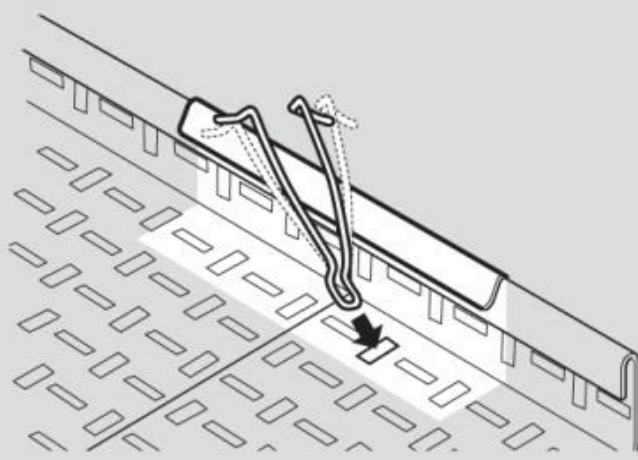

**2. Insert joggled head of clip where tray and coupler align**

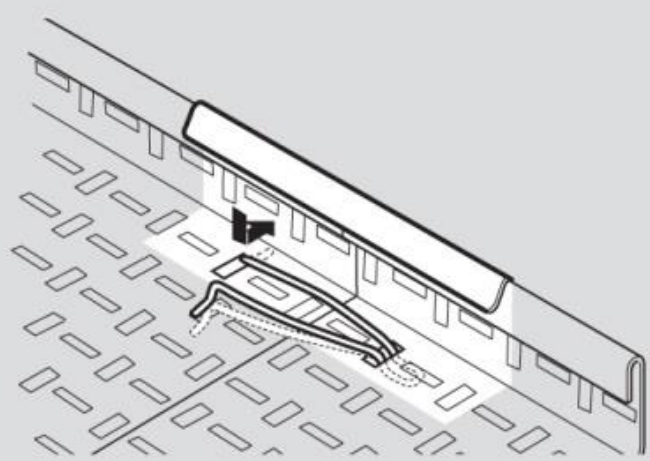

**3. Clip leg nearest tray wall into slot on other tray bed**

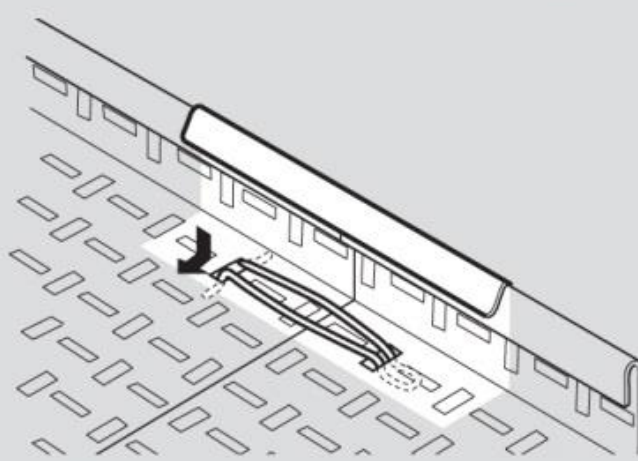

**4. The second leg is pushed towards the wall of the tray and pushed home into the same slot**

Repeat process on the other side of the tray, fitting the clip in the opposite direction

Ensure:

1. Head and feet of clip are clamping through tray and coupler
2. Clip should span across the joint