





15mm Self Cutting Tap – Fitting Instructions


- 1) Unscrew tap and open clamp.

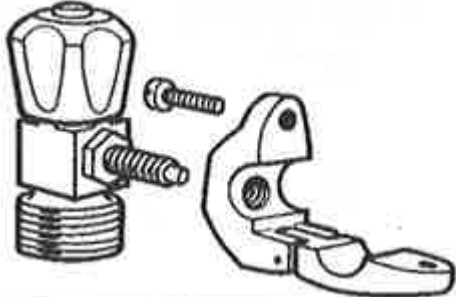


- 2) Fit the clamp around a clean section of 15mm copper pipe in required position and **ensure clamp washer is correctly located.**

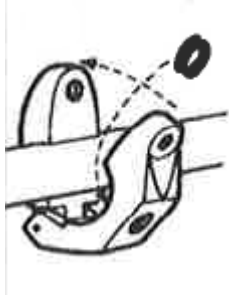

- 3) Engage screw and tighten until clamp is secure. **DO NOT OVER TIGHTEN.**

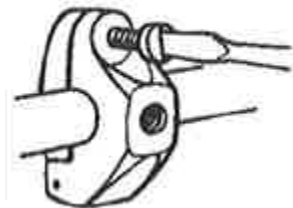


- 4) Ensure tap is in 'off' position. Insert tap body into the clamp taking care not to cross the thread.

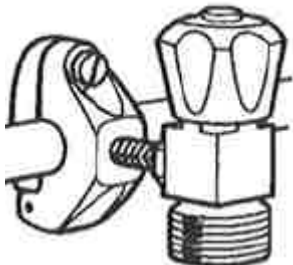


- 5) Turn clockwise until pipe is penetrated. Set tap to required position.



6) Tighten hexagonal nut towards the pipe to secure tap in position.

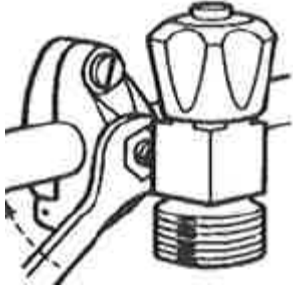

7) The tap is now ready for use. Connect hose to $\frac{3}{4}$ " BSP thread on tap and turn on. Check for leaks.

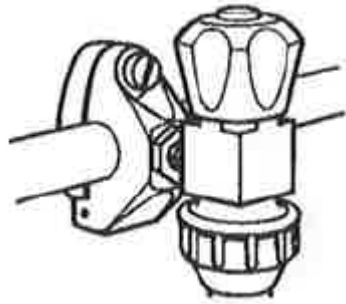

IF YOU ARE UNSURE OF ANYTHING CONSULT A COMPETENT PLUMBER