

BT ADSL MF50

CONTENTS
1 ADSL
Broadband
Microfilter


DO NOT

- Place in a wet location.
- Remove plastic casing or disassemble the product.
- Use liquid, aerosol or abrasive cleaners. Clean with a damp cloth.

NOTE
Additional microfilters will be required for all phone extensions in the home or office (maximum of four).

A microfilter separates the voice and DSL signals enabling you to use your telephone and DSL modem at the same time.

Before installing an ADSL modem, fit a microfilter to every telephone socket on your activated ADSL line that has equipment connected (e.g. phones, fax, answering machines, etc).

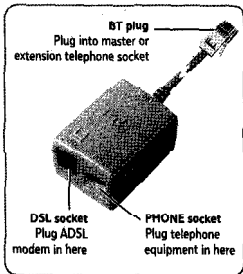

INSTALLATION

- ① Insert the BT plug on the microfilter into your telephone wall socket.
- ② Insert your telephone cable into the phone socket of the microfilter.
- ③ If this is the most convenient socket to your computer, connect your modem to the microfilter DSL socket with a modem cable (not supplied).

ITEM
BT ADSL MF50

ITEM CODE
004924

MADE IN
TAIWAN



5 016351 511961 >