




CABLE MOUNTING INSTRUCTIONS

■ CM-07 for Straight Clamp Type Connectors (1)

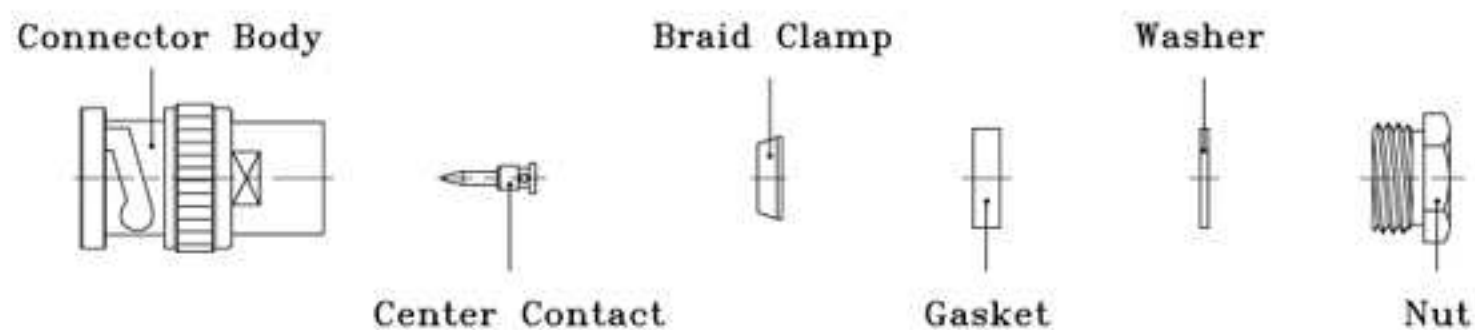


1. Preparation of Cable

- (1) Slide nut, washer and gasket onto cable
- (2) Strip cable to recommended dimensions shown in catalogue

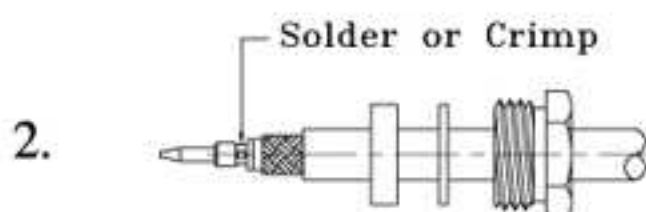

2. Soldering Center Contact to Cable Center Conductor

- (1) Insert cable center conductor into center contact until cable dielectric rest against center contact
- (2) Solder (or Crimp) center contact to cable center conductor

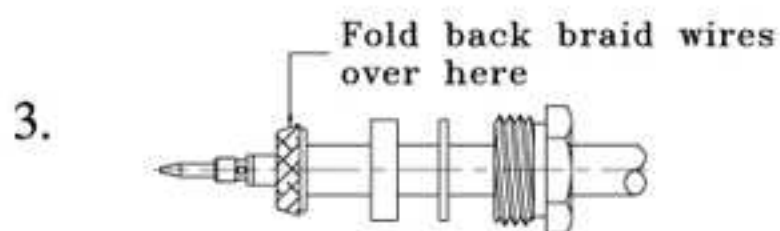

3. Installing Braid Clamp

- (1) Slide braid clamp until seat against cable jacket
- (2) Fold back braid wires to cover on outside of braid clamp



4. Final Assembly

- (1) Insert cable assembly and hardware into connector body
- (2) Screw and tighten nut on