




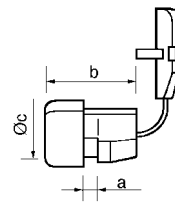

Round bore ($\varnothing A$)
For torsional protection of strain relief grommets, an oblong bore (B) is required.



type	article number	pack	wire diameter in mm		dimensions in mm					
			PVC insulation	rubber insulation	$\varnothing A$	B	a	b	$\varnothing c$	
round cables										
RS 136-1750										
DM 4	0131 0001 010	100	$\varnothing 5$ à 6,5	$\varnothing 5$ à 7	13,0	11,5	2,5	12,0	14	
RS 136-1766										
DM 6	0131 0002 010	100	$\varnothing 6,6$ à 8	$\varnothing 7,1$ à 9	16,0	14,0	3,0	17,0	18	
flat cables										
RS 136-1794										
DM 4P	0131 0020 010	100	3 x 7,6	3,8 x 7,1	13,0	11,5	2,8	10,5	14	

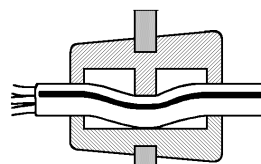

principle of cable clamping