

NOTES:

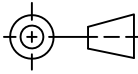

1. OPERATION

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

3. WILL WORK WITH 10mm OR 12mm WIDE FLEX RIBBON.

JKL PART NO.: ZFS-CH0-12J

			METRIC  THIRD ANGLE PROJECTION		DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS OTHERWISE SPECIFIED 1 PL +/- REF. 2 PL +/- REF. ANGLE +/-		 JKL COMPONENTS CORPORATION				
					TITLE NO SOLDER 12mm FLEX TO FLEX TAPE CONNECTOR						
A	ADD NOTE 3	10/8/13	DRAWN BY	APPV'D BY	DATE	SIZE	FSCM NO.	DRAWING NO.			
	RELEASE & CANCEL PL-1206-01	3/5/13	L. WENGSTROM	L.R.	10/8/13	A	55335	ZFS-CH0-12J			
REV. NO.	DESCRIPTION/ECO NUMBER	APPV'D DATE	- CAD DRAWING - MANUAL REVISIONS NOT PERMITTED			SCALE	RELEASED DATE	REVISION DATE	REV. NO.	SHEET	
						NONE	3/5/13	10/8/13	A	1 OF 1	