

Cover  
MS6/9-SV-C-MK/MH

FESTO

Festo SE & Co. KG

Rüter Straße 82  
73734 Esslingen  
Germany  
+49 711 347-0  
www.festo.com

1. Further applicable documents

All available documents for the product → [www.festo.com/pk](http://www.festo.com/pk)

2. Safety


- Switch off compressed air before mounting work.
- Switch off power supply before starting the mounting work.

3. Intended use


Tamper protection on the soft-start/quick exhaust valve (→ Table).

Tamper protection			
Valve	MS6-SV-C	MS9-SV-C	
Cover	MS6-SV-C-MK	MS9-SV-C-MK	MS9-SV-C-MH
Manual override (A) on the valve	✓	✓	✓
Flow control screw (B)	✓	✓	–
Adjusting screw (C) pressure switching point	✓	✓	–
Manual override (D) on the pilot valve	✓	✓	✓


4. Scope of delivery

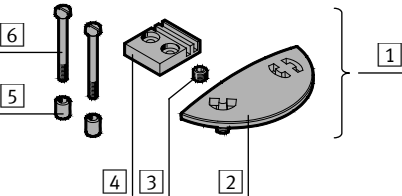

1 Cover MS6-SV-C-MK (1x)  
Comprises:  
2 Cap (1x)  
3 Threaded pin (1x)  
4 Blanking plate (1x)  
5 Sleeve (2x)  
6 Screw (2x)

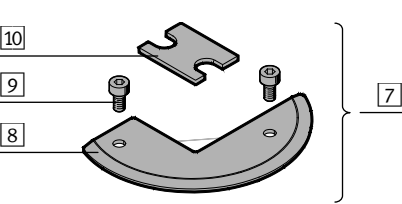


7 Cover MS9-SV-C-MK (1x)  
Comprises:  
8 Cover sheet (1x)  
9 Screw (2x)  
10 Protective foil (1x)

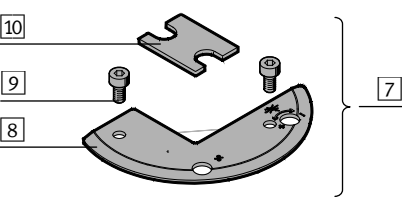

7 Cover MS9-SV-C-MH (1x)  
Comprises:  
8 Cover sheet (1x)  
9 Screw (2x)  
10 Protective foil (1x)

5. Mounting

5a. Cover MS6-SV-C-MK 1

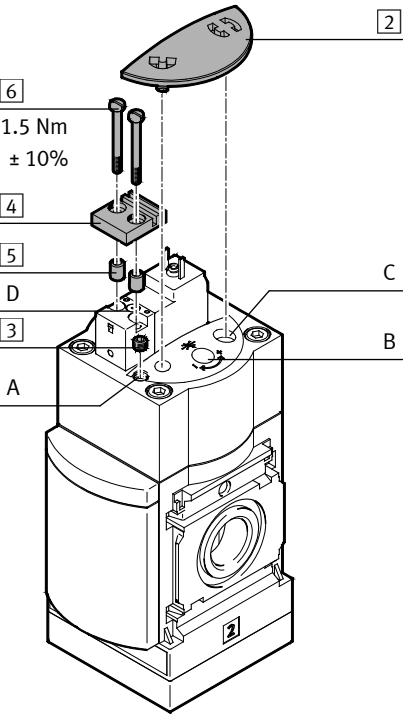


- If the threaded pin 3 is not mounted at the factory:
- Screw the threaded pin 3 into the hole of the manual override (A) tapping until flush. If you screw it in again, use the threads already present.
  - Position cap 2 over the designated drill holes. Press the cap 2 until it engages in place.

- If the manual override (D) is present.
- Place sleeve 5 into the depressions of the pilot valve.
  - Position the drill holes in the blanking plate 4 over the sleeves 5.
  - Tighten screws 6.

→ Note

Dismantling of the cap 2 is only possible by destroying the snap-in hooks.

5b. Cover MS9-SV-C-MK 7 and MS9-SV-C-MH 7

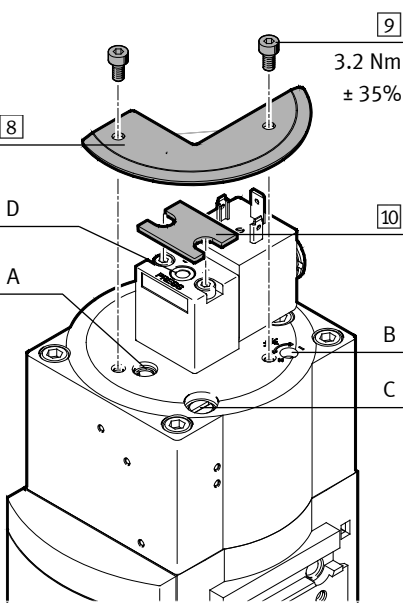

- Place the cover sheet 8 onto the designated threads.
- Tighten screws 9.
- Affix protective foil 10 (→ Chapter 6).


6. Mounting in the case of pilot control with manual override (D)

- Clean the corresponding surface on the manual override (D).

→ Note

All non-abrasive cleaning agents are permissible, such as:

- Soap suds (max. +50 °C)
- Petroleum ether

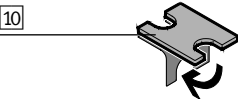

- Remove adhesive film from the protective foil 10.
- Affix the protective foil 10 onto the manual override (D) corresponding to the cut-outs.