




## Instruction Leaflet

# Hinge Set for IP66 Sealed Enclosures

RS stock no. 220-507

1. Screw the lid onto the base securely.
2. Position drilling template onto box as shown below and drill four 4mm holes.

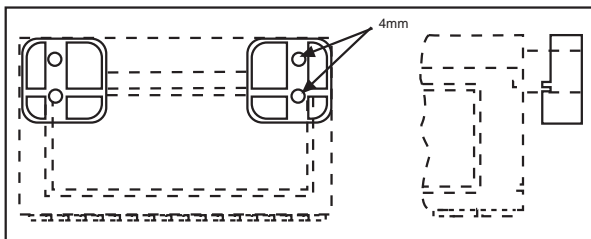

3. Remove the cover screws on the hinge side and place the tow plugs provided in the screw holes.
4. Fix the hinge pieces with the enclosed screws and snap the hinge pieces together.

The information provided in **RS** technical literature is believed to be accurate and reliable; however, RS Components assumes no responsibility for inaccuracies or omissions, or for the use of this information, and all use of such information shall be entirely at the user's own risk.

No responsibility is assumed by RS Components for any infringements of patents or other rights of third parties which may result from its use.

Specifications shown in RS Components technical literature are subject to change without notice.

