




Extractor Tool for 1.5mm MX150 and MX150L Terminals Instruction Sheet Order No. 63813-1500

SEALED RECEPTACLE ASSEMBLY-SERVICEABILITY

1. Return TPA to pre-lock position
 - || Use Standard Screwdriver to return TPA to pre-lock.



2. Release terminal from connector assembly.
 - || Insert and drive forward (0.9 to 1.0mm)

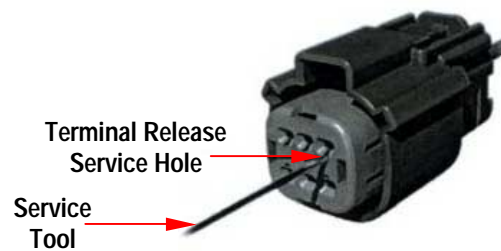

SEALED BLADE ASSEMBLY-SERVICEABILITY

1. Return TPA to pre-lock position
 - || Use Standard Needle Nose Pliers to return TPA to pre-lock.
 - || Listen for loud audible "click".

2. Release terminal from connector assembly.
 - || Insert and drive forward (0.9 to 1.0mm)

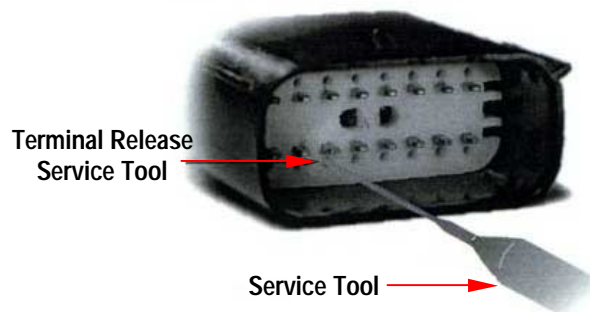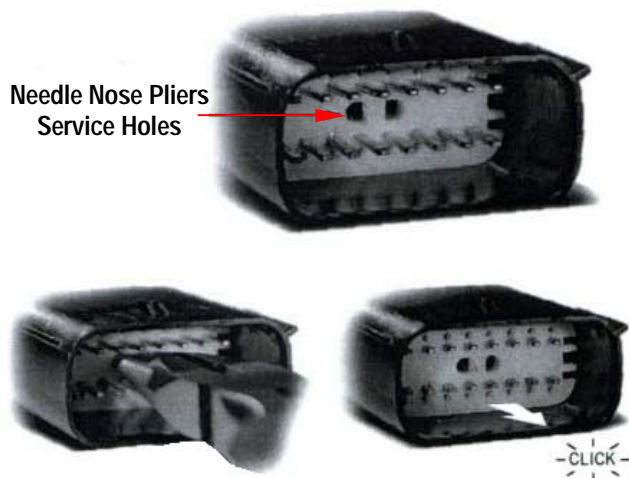


TERMINAL INSTALLATION

Terminal Orientation Feature



Terminal orientation at matte seal grommet

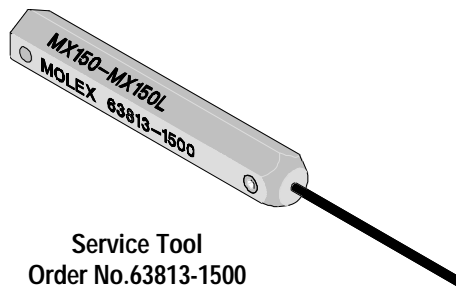

Molex Application Tooling Group
1150 E. Diehl Road
Naperville, IL 60563
Tel: (630) 969-4550
Fax: (630) 505-0049

Visit our Web site at <http://www.molex.com>




Extractor Tool for 1.5mm MX150 and MX150L Terminals Instruction Sheet Order No. 63813-1500

SEALED RECEPTACLE ASSEMBLY - SERVICEABILITY

- 1) Return TPA to pre-lock position
 - Use Standard Screw Driver to return TPA to pre-Lock
 - Listen for loud audible click




- 2) Release terminal from connector assembly
 - Insert & drive forward (0.9 to 1mm) diameter service tool (or optional paper clip) to release terminal.
 - Pull terminal from rear of connector

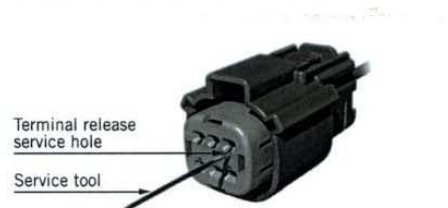


SEALED BLADE ASSEMBLY - SERVICEABILITY

- 1) Return TPA to pre-lock position
 - Use Standard Needle Nose Pliers to return TPA to pre-Lock
 - Listen for loud audible click

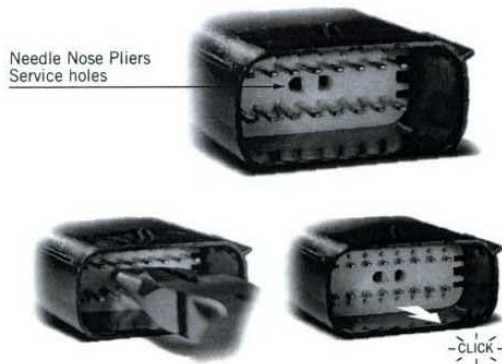

- 2) Release terminal from connector assembly
 - Insert & drive forward (0.9 to 1mm) diameter service tool (or optional paper clip) to release terminal.
 - Pull terminal from rear of connector

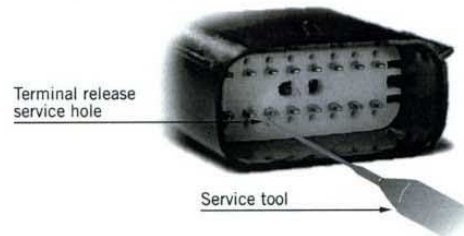

TERMINAL INSTALLATION

Terminal Orientation Feature

