



Temp-Hum 12 click

Hover to zoom



TEMP&HUM 12 CLICK

PID: MIKROE-3436

Weight: 23 g

Temp&Hum 12 click is a smart environmental temperature and humidity sensor Click board™, packed with features which allow easy and simple integration into any design that requires accurate and reliable humidity and temperature measurements. The capacitive-based sensor includes new integrated digital features and a heating element to dissipate condensation and moisture. This translates to a prolonged life of the Click board™ itself.

Temp&Hum 12 click is a perfect solution for a wide range of applications that depend on accurate temperature and humidity readings. With its low power consumption and programmable interrupt requests capability, it is also a perfect choice for various temperature and relative humidity based IoT applications, smart thermostats and smart home assistants.

Quantity

 Add to Cart

Looking for customized version of this product?




If you have other questions about this product contact us here.

TABLE OF CONTENTS

1. How does it work?
2. Specifications
3. Pinout diagram
4. Temp&Hum 12 Click electrical specifications
5. Onboard settings and indicators
6. Software support
7. mikroSDK
8. Downloads

HOW DOES IT WORK?

The sensor IC used on the Temp&Hum 12 click is the [HDC2080](#), a Low Power Humidity and Temperature Digital Sensor from [Texas Instruments](#). This sensor is factory calibrated to 2% relative humidity and 0.2°C temperature accuracy. It has an integrated heating element that is used to evaporate condensation, protecting the sensor that way. This heating element can be simply activated by setting a bit in the appropriate register. In the case when the heater is powered on, the typical current consumption is about 90mA.

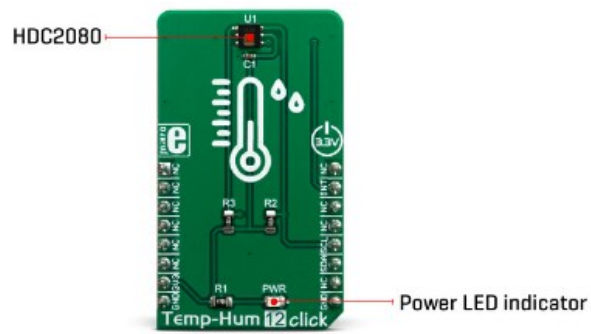

Internally, two sensors are connected to the two separated ADC sections, which can be set to sample measurements with the resolution of 9, 11 or 14 bits, based on the measurement time. The OTP memory holds the calibration coefficients that are applied to the measured value and the results are stored on the output registers, in the MSB/LSB format. These values are then used in formulas found in the HDC2080 datasheet so that the final temperature or relative humidity data can be calculated. It is also possible to correct the offsets with custom values.

HDC2080 IC uses the I2C protocol to communicate with the host MCU. Its I2C bus pins are routed to the mikroBUS™ I2C pins and are pulled to a HIGH logic level by the onboard resistors. The final I2C address of this IC is already determined by setting ADDR pin to GND (LOW logic level for 0).

Temp&Hum I2 click supports programmable temperature and humidity thresholds in the HDC2080 allow the device to send a hardware interrupt to wake up the microcontroller when necessary. In addition, the power consumption of the HDC2080 is significantly reduced, which helps to minimize self-heating and improve measurement accuracy. More information about these registers can be found in the HDC2080 datasheet.

HDC2080 IC itself is a very low power consuming device and it can work in two modes: sleep and active (measurement) mode. The device enters the sleep mode as soon as possible, to save power which makes the HDC2080 suitable in battery-powered or energy-harvesting applications. In these applications, the HDC2080 spends most of the time in sleep mode that has a typical current consumption of 50 nA. While in the active mode, measurement can be either automatic with predefined output data rate (ODR) or on-demand. In the automatic mode, the measurement is triggered in predefined time segments, while on-demand measurement happens whenever the I2C command is sent. As soon as the single measurement is finished, the device falls back to a sleep mode.


The provided click board™ library contains simple and easy to use functions, which simplify configuring and reading of the measurement data. These functions are demonstrated in the included example application and can be used as a reference for custom projects. These functions can be used in mikroC, mikroBasic and mikroPascal compilers for all MCU architectures, supported by MikroElektronika.

SPECIFICATIONS

Type	Temperature / Humidity
Applications	An ideal solution for development of various applications, including battery operated weather stations, thermostats and humidistats, microenvironment centers, respiratory therapy applications, air conditioners, HVAC systems, and other similar applications.
On-board modules	HDC2080, a relative humidity and temperature sensor with I ² C Interface, by Texas Instruments.
Key Features	High accuracy, good linearity, proven reliability, long-term stability, excellent repeatability, programmable interrupt thresholds, a low power consumption, etc.
Interface	I2C
Input Voltage	3.3V
Click board size	M (42.9 x 25.4 mm)

PINOUT DIAGRAM

This table shows how the pinout on **Temp&Hum 12 click** corresponds to the pinout on the mikroBUS™ socket (the latter shown in the two middle columns).

Notes	Pin					Pin	Notes
	NC	1	AN	PWM	16	NC	
	NC	2	RST	INT	15	INT	Interrupt output
	NC	3	CS	RX	14	NC	
	NC	4	SCK	TX	13	NC	
	NC	5	MISO	SCL	12	SCL	I2C Clock
	NC	6	MOSI	SDA	11	SDA	I2C Data
Power Supply	3.3V	7	3.3V	5V	10	NC	
Ground	GND	8	GND	GND	9	GND	Ground

TEMP&HUM 12 CLICK ELECTRICAL SPECIFICATIONS

Description	Min	Typ	Max	Unit
Temperature Accuracy	-	+/-0.2	+/-0.4	°C
Humidity Accuracy	-	+/-2	+/-3	% RH

Operating temperature	-40	-	85	°C
Relative Humidity Operating Range	0	-	100	% RH
I2C clock frequency	10	-	400	kHz

ONBOARD SETTINGS AND INDICATORS

Label	Name	Default	Description
LD1	PWR	-	PWR indication LED

SOFTWARE SUPPORT

We provide a library for the **Temp&Hum 12 click** on our [LibStock](#) page, as well as a demo application (example), developed using MikroElektronika [compilers](#). The demo can run on all the main MikroElektronika [development boards](#).

Library Description

The library initializes and defines the I2C bus driver and drivers that offer a choice for writing data in register and read data form register. The library includes function for read Temperature and Relative Humidity data and function for read device ID and Manufactures ID. The user also has the function for configuration chip for measurement and read Interrupt (INT pin) state.

Key functions:

- `float temphum12_getTemperature(uint8_t tempIn)` - Temperature data
- `float temphum12_getHumidity()` - Relative Humidity data

Examples description

The application is composed of the three sections :

- System Initialization - Initialization I2C module and sets INT pin as INPUT.
- Application Initialization - Initializes driver init, test communication and configuration device for measurement.
- Application Task - Reads Temperature and Humidity data and this data logs to the USBUART every 1 sec.

```
void applicationTask()
{
    float Temperature;
    float Humidity;
    char demoText[ 50 ] = {0};

    Temperature = temphum12_getTemperature(_TEMPHUM12_TEMP_IN_CELSIUS);

    FloatToStr(Temperature, demoText);
    mikrobus_logWrite(" Temperature : ", _LOG_TEXT);
    mikrobus_logWrite(demoText, _LOG_LINE);
    Delay_1sec();

    Humidity = temphum12_getHumidity();

    FloatToStr(Humidity, demoText);
    mikrobus_logWrite(" Humidity : ", _LOG_TEXT);
    mikrobus_logWrite(demoText, _LOG_LINE);

    mikrobus_logWrite("-----", _LOG_LINE);
    Delay_1sec();
}
```

The full application code, and ready to use projects can be found on our [LibStock](#) page.

Other mikroE Libraries used in the example:

- [I2C](#)
- [UART](#)
- [Conversions](#)

Additional notes and informations











Depending on the development board you are using, you may need [USB UART click](#), [USB UART 2 click](#) or [RS232 click](#) to connect to your PC, for development systems with no UART to USB interface available on the board. The terminal available in all MikroElektronika [compilers](#), or any other terminal application of your choice, can be used to read the message.

MIKROSDK

This click board is supported with [mikroSDK](#) - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant click board demo applications, mikroSDK should be downloaded from the [LibStock](#) and installed for the compiler you are using.

For more information about mikroSDK, visit the [official page](#).

DOWNLOADS

-  [mikroBUSTM Standard specification](#) 
-  [LibStock: mikroSDK](#) 
-  [Click board catalog](#)
-  [Temp&Hum 12 click Libstock](#) 
-  [Temp&Hum 12 click 2D and 3D files](#)
-  [Temp&Hum 12 click schematic](#)
-  [HDC2080 Datasheet](#)

YOU MIGHT ALSO NEED

PRODUCTS IN THE SAME CATEGORY

SUBSCRIBE TO



JOIN US

Careers Make a Click Internship

COMPANY	TOOLCHAINS	RESOURCES
About us	PIC	mikroBUS™
Contact	dsPIC	mikroSDK
Leadership	PIC32	Hexiwear™
PressKit	ARM	Libstock™
Distributors	AVR	eBooks
Timeline	FT90X	Outlet

This website uses cookies to ensure you have the best experience on our website. [Learn more.](#) ⓧ