


Datamate

Female Crimp

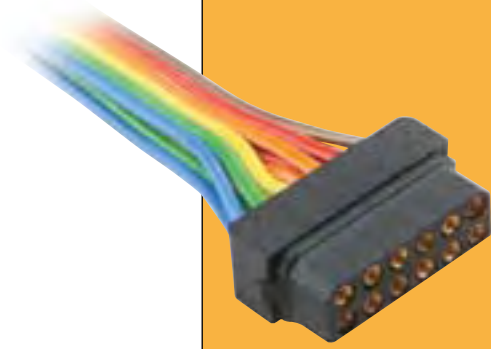

- ❖ Part numbers are for housings and the equivalent number of contacts.
- ❖ Contacts are rear insertable.
- ❖ For British Standard versions see page 8.
- ❖ Back potting, hoods & cable assembly service available – contact datamate@harwin.com.

SINGLE ROW		CALCULATION		DOUBLE ROW		CALCULATION	
		A	$B + 5.15$			A	$B + 5.15$
		B	$(\text{Total No. of contacts} - 1) \times 2$			B	$\text{Total No. of contacts} - 2$
CRIMP CONTACTS				TOOLS			
<p>Large Bore (22 AWG):</p>				<p>Recommended Crimp Tool – M22520/2-01 Positioner – T5747 Contact Insertion/Removal Tool – Z80-280 See pages 61 to 62 ❖ Instruction sheets available at www.harwin.com/Downloads/Instructions</p>			
<p>Small Bore (24-28 AWG):</p>				<p>WIRE STRIPPING DETAILS</p>			

HOW TO ORDER

M80 - XXX XX 05

SERIES CODE

FINISH	
05	Gold

TYPE			
011	Large Bore Contact	889	Large Bore, Double Row
013	Small Bore Contact	898	Small Bore, Single Row
888	Small Bore, Double Row	899	Large Bore, Single Row

TOTAL NO. OF CONTACTS	
Single Row	02 to 07, 17
Double Row	04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34
Contacts	00

www.harwin.com

All dimensions in mm.

