DATASHEET

FFP MASKS

PROTECTION AGAINST DUST, MIST & FUMES



Smart Series - Smart masks

FFP1 NR D

2380 non valved

2385 with Ventex®-valve

FFP2 NR D

2480 non valved

2485 with Ventex®-valve

FFP3 NR D

2500 non valved

(a) 2505 with Ventex®-valve

CHARACTERISTICS



ActivForm®

Automatically fits to the face. No manual adjustments by the user are necessary.



DuraMesh

Masks have a strong and durable structure.



Ventex®-valve

Starts to open even at low exhalation pressure and significantly reduces moisture and heat inside the mask.



Nose seal

The flexible nose seal improves fit and provides optimum wearing comfort.



Adjustable Strap

Makes it easier to take the mask on and off and to adjust to different head/neck dimensions.



Clin

Easy on & off; mask can be worn around the neck during breaks.



Dolomite clogging test

Masks have passed the Dolomite clogging test. Better breathing resistance for longer.



100% PVC-FREE

All Moldex products and packaging are completely free from PVC.

NR (non reusable) = Single use.

Comfortable and durable throughout the whole shift

CERTIFICATION

The Moldex Smart FFP-masks meet the requirements of EN149:2001 + A1:2009. The products are CE-marked in accordance with the requirements of EU regulation (EU)2016/425. The IFA (0121) in St. Augustin (Germany) is responsible for type examination (Module B) and monitoring of production (Module D). The products are manufactured in an ISO 9001 certified plant.

MATERIALS

Filter Layer, Inner Shell, DuraMesh®: Polypropylene,

Ethylene-vinyl acetate (EVA)

Nose Seal, Clip: Polyethylene

Ventex®-valve: Natural Rubber

Head Strap: Polyester, Lycra

WEIGHT

2380: 18 g 2385: 18 g 2480: 18 g 2485: 17 g

2500: 17 g 2505: 24 g

AREAS OF USE

Level	WEL	Hazard type Examples
FFP1	4 x	FINE DUSTS, FUMES, WATER AND OIL BASED MISTS/ AEROSOLS
		Non-toxic dusts, cellulose, coal dust, limestone, pollen, sugar
FFP2	12 x	HAZARDOUS FINE DUSTS, WATER AND OIL BASED MISTS/ AEROSOLS, BIOLOGICAL AGENTS OF RISK GROUP 2
		As FFP1 but at higher concentrations, plus toxic dusts, aluminum oxide, bauxite, borax, brick dust, cement, gypsum, calcium oxide, concrete dust, granite, chromates, mould, wood dust (softwood), zinc oxide fume
FFP3	50 x	HARMFUL AND CARCINOGENIC DUSTS, WATER AND OIL BASED MISTS/ AEROSOLS, BIOLOGICAL AGENTS OF RISK GROUP 2 AND 3, CMR-SUBSTANCES
		As FFP2 but at higher concentrations, plus carcinogenic substances, ceramic fibres, brake dust, chromates, lead dust and fume, cobalt, nickel, wood dust (hardwood), micro organisms, radioactive and biochemical active aerosols, enzymes, viruses

(WEL = Workplace Exposure Limit)



DATASHEET

FFP MASKS

PROTECTION AGAINST DUST, MIST & FUMES



TESTING ACCORDING TO EN 149:2001 + A1:2009

Total inward leakage

Ten test subjects perform a variety of exercises. During the exercises the amount of test aerosol that penetrates the filter, face seal and valve are sampled. The total inward leakage of 8 out of 10 test subjects shall not exceed the following levels:

Category	FFP1	FFP2	FFP3
max. total inward leakage	22 %	8 %	2 %

The filter penetration after loading the filter with 120 mg paraffin oil according to DIN EN 149:2001 + A1:2009 shall not exceed the following levels:

Category	FFP1	FFP2	FFP3
max. Filter penetration	20 %	6 %	1 %

Flammability

4 respirators are passed through a 800°C (+/-50°C) flame with a speed of 6 cm/s. After passing through the flame the respirator has to self-extinguish.

Breathing Resistance

The breathing resistance produced by the filter of the respirator is tested at an airflow of 30 l/min and 95 l/min.

Category	max. breathing resistance according to EN 149		
	30 l / min	95 l / min	
FFP1	0,6 mbar	2,1 mbar	
FFP2	0,7 mbar	2,4 mbar	
FFP3	1,0 mbar	3,0 mbar	

INSTRUCTIONS FOR USE

- · The user has to be trained and instructed in wearing the mask.
- · FFP Masks do not protect against gases and vapours.
- \cdot The oxygen concentration of the ambient atmosphere should be at 19,5 % Volume.
- These respirators may not be used if the concentration type, and properties of contaminants in the ambient atmosphere are unknown or at dangerous levels.
- Respirators should be disposed if damaged, if the breathing resistance becomes high due to clogging, or at the end of a shift.
- · Never tamper with, alter or modify the respirator.

INSTRUCTIONS FOR FITTING




1. Pull strap to form a large loop.



4. Adjust strap by pulling loop on strap.



Place respirator on chin and pull loop over head tight to the neck.

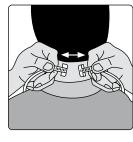

5. During breaks unclip strap.



3. Pull upper strap and place on back of head.



Let mask hang around your neck.

INFO

For help on selection and training please contact us. We offer a wide range of training packages and support material.

MOLDEX NORDIC Kapplöpningsgatan 14 S-252 30 HELSINGBORG SWEDEN Tel.: +46 (0) 42 - 495 38 40 Fax: +46 (0) 42 - 32 67 82 sales@se.moldex-europe.com www.moldex-europe.com

