


Digital Round Screen
Vision Aid
Model: 5F-9091

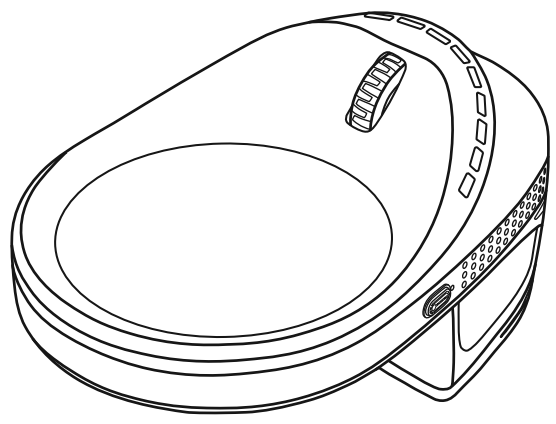

User Manual

Please read the instructions carefully and keep it for future reference.

Cautions

Declaration:
Please contact us if any accessories are missing. Designs and specifications are subject to change without notice. Product names, service names, etc. described in this manual are registered trademarks of the respective companies.

Warning:



1. Keep out of reach of children.
2. Do not use or store this product or accessories in hot environments such as summer cars, heaters or cooking appliances, or in direct sunlight.
3. Do not use in dusty places.
4. Do not use in damaged condition.
5. Do not use thinner or other organic solvents to clean the product.
6. Do not store the microscope in a place where there is a risk of falling, as this may cause the internal lens to deflect or damage other components, as well as other irreparable damage.

Reminder:

Do not disassemble or modify this product, and do not use it for other purposes. If you find any other abnormalities, please stop using and contact your dealer.

- ① **Note: The floor plans used in this manual are for reference only, please refer to the actual product.**

Product Description

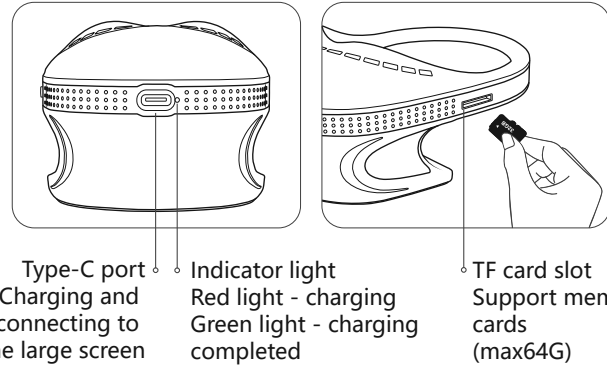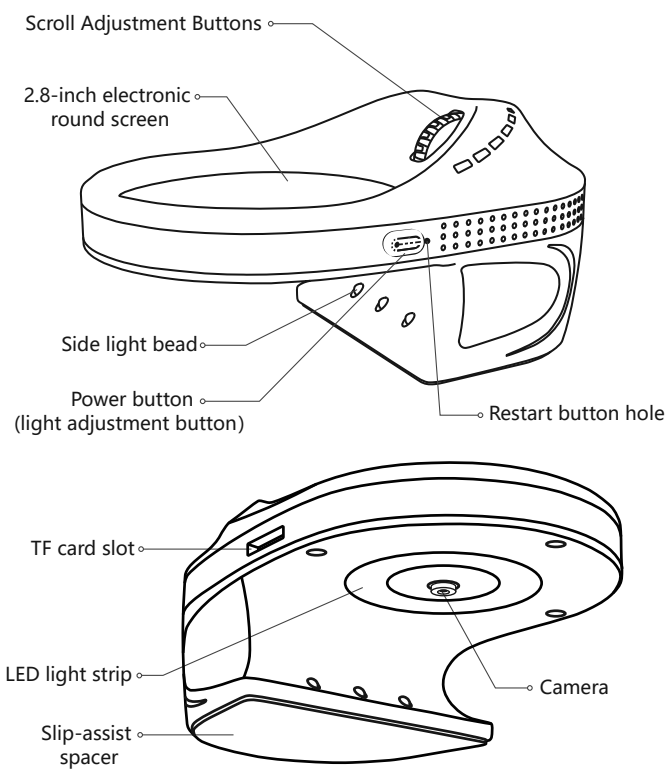


- Type-C port
Charging and connecting to the large screen
- Indicator light
Red light - charging
Green light - charging completed
- TF card slot
Support memory cards (max 64G)
- Fully compatible with multiple devices, supporting chargers, power banks, and computers for charging visual aids.
- Please do not charge it for more than 12 hours to avoid affecting the battery life.

Note: During the charging process, if the outer shell of the microscope has slight heating, it is a normal phenomenon, please use it with confidence.

Notes on use

1. The device will automatically power off after 10 minutes of inactivity.
2. If the device freezes, use the provided SIM ejector tool to restart it. The reset button is located to the right of the power button.

How to use

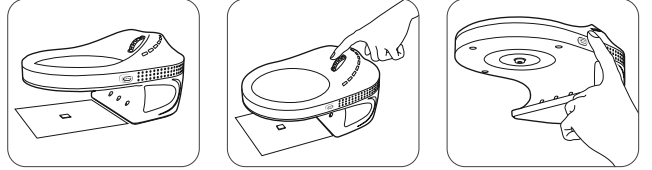


1. Please place the device on a stable surface, press the side power button to turn it on, and place the object to be observed directly below the lens.
2. Slide the equipment pulley button to cycle through lighting modes: Forward white light - UV purple light - Side white light - Off. Click the pulley to take pictures, long press to record videos.
3. Single press the power button to cycle through lighting modes: Forward white light - UV purple light - Side white light - Off. Long press the power button in any light mode to adjust the light intensity to record videos.

Cleaning:
Regular cleaning of the screen and device case is necessary to keep the device clean and working properly. If the screen becomes dirty, wipe it gently with a soft cloth.

How to connect a large screen


1. Use the provided charging cable. Insert the C-end into the device's charging port and the A-end into the computer.
2. When the screen shows "PC Camera", on behalf of the successful connection, at this time the device can not carry out any operation, you need to operate on the computer.
3. Open the computer comes with a camera function after the device can automatically enter the real-time screen, at this time in the big screen can also take pictures and video, save the path can be customized in the computer.

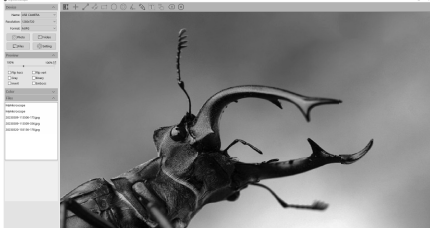

Take photos and videos


Note: Before using the device, please insert the TF card into the device to ensure better storage of photos and video files. (*Support maximum expansion card 64G)

Photo Mode

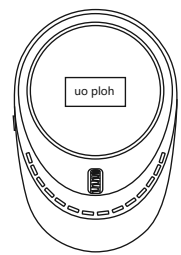


Click the wheel button to enter the image lock mode at this time the image will be fixed, at this time you can hold the device to share, click the wheel button again, the image screen is unlocked and automatically saved to the TF card at the same time.

Video Mode

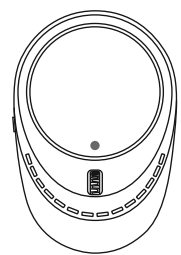

Long press the wheel button to enter the video mode, at this time there will be a red dot flashing on the screen to indicate that the video is in progress, the video is saved to the memory card by default, click the wheel again to exit the video mode.

Date setting

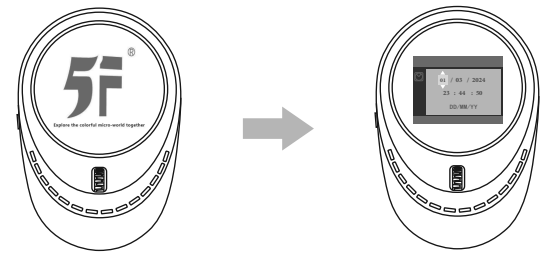

After long press the power button to start up, when the "5F" screen appears, long press the power button again to enter the date setting mode, then click the pulley button to change the date.

Product Parameters

Screen material	Super TFT
Body material	ABS/Silica gel
Product size	130*87*64mm
Screen size	2.8inch
Product color	Black
Battery life	About 3.5h (Continuous lighting screen)
Charging time	About 2.5h
Light source	White LED*7/UV LED*4
Input	Type-C/ DC5V <2A
Product weight	About 300g

Usage Environment Description

