
REV. A

1425HME - SERIES

ASSEMBLY INSTRUCTIONS FOR 1425HME - CASTERS

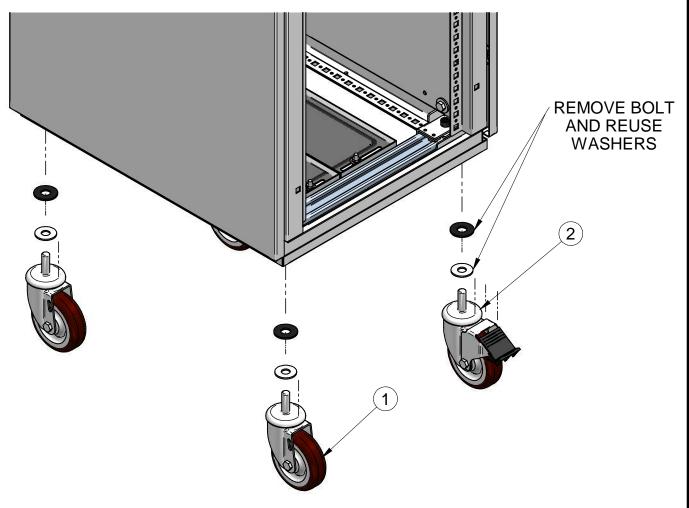

INSTRUCTIONS

- A) Raise HME off the ground and remove bolts holding the bottom panel on. Keep the rubber and steel washers and reuse.
- B) Install washers on to casters and thread casters into the bottom of the HME. Use the 7/16 hex head on the inside of the caster to tighten down to the HME.

ITEM	DESCRIPTION	QTY
1	4" Swivel Caster w/ 1/2-13 Stem	2
2	4" Locking Swivel Caster w/ 1/2-13 Stem	2







