




Data Sheet

ENGLISH

Temprite Indicator (Cold Chain)

RS Part Number 906-4606

Temperature Range: 2 to 8°C

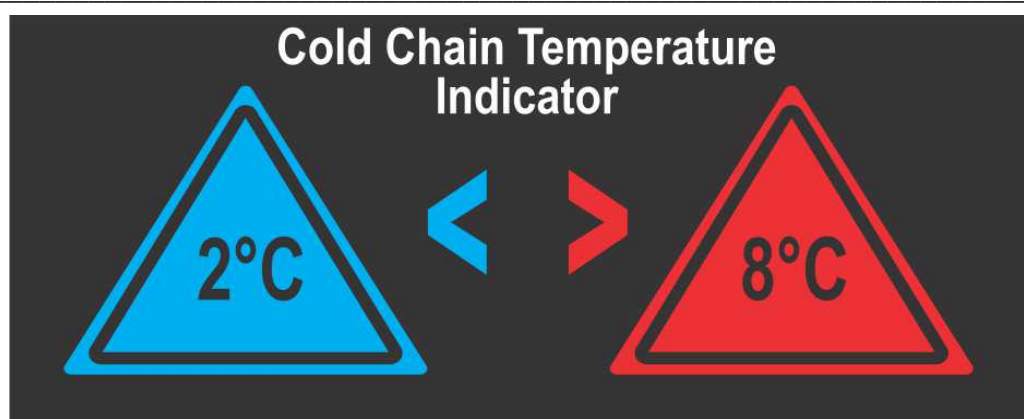

Application Data: Apply temperature indicating label to clean dry surface surface/wall inside the coldest part of the cold storage unit and easily visible when cold storage unit door is opened. Leave for at least two hours before checking temperature.

A Blue Triangle indicates that the temperature is below 2°C.
Blue and Red Triangles indicates that the temperature is between 2°C and 8°C.
Red Triangle indicates that the temperature is above 8°C.

Function: Display of current temperature / warning of incorrect ambient conditions

Use: Used to warn when temperature of fridges containing sensitive medical products such as vaccines are outside of ideal storage conditions

Physical Properties:

Surface:	100 micron clear polyester
Size:	40 mm high and 96 mm wide
Temperature Ratings:	2 and 8°C
Active Material:	Non Toxic Microencapsulated Single Colour Liquid Crystal Esters
Adhesive	Modified acrylic adhesive suitable for adhesion to most surfaces
Packaging:	The finished product is supplied in packs of 10 pieces
Accuracy:	+/-1°C
Shelf Life:	12 months from invoice date when stored in normal room conditions (i.e. between 18 and 21°C & 40 to 60% relative humidity)
Storage:	Store in a cool, dry, dark location. Avoid exposure to UV light (including direct sunlight) and extreme temperatures (below – 5 above 40°C)