

3 Port Air Operated Valve Series VGA342



How to Order

VGA342- **04** **A**

Port size

04	1/2
06	3/4
10	1


Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Passage

A	Normally closed (N.C.)
B	Normally open (N.O.)

JIS Symbol

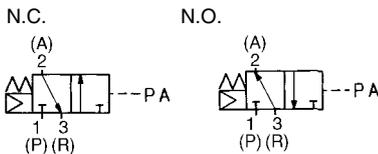


Precautions

Be sure to read this before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

Caution

1. Change of fluid passage

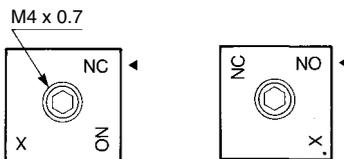

N.C.

N.O.

Please note that the pressure in the valve should be exhausted when changing the fluid passage.

Loosen the hexagon socket head cap screw M4 x 0.7. Rotate the NC/NO switching plate and align the desired passage symbol NO/NC with the ◀ mark on the adapter plate. However, the X symbol is not applicable. For piping, refer to the table below. Screw tightening torque M4: 1.4 N·m

Piping

Fluid passage	Port	P	A	R
N.C.		Inlet side	Outlet side	EXH side (2 port: Plug)
N.O.		EXH side (2 port: Plug)	Outlet side	Inlet side

Take sufficient precautions and confirm safety when changing the flow path and restarting after the changes.

2. Other

M5 size hole at the left side of the adapter plate is a breathing port for spool valve. Do not plug or tighten it.

Specifications

Operating type	Air operated type
Type of actuation	N.C./N.O. (Changeable)
Return mechanism	Air + Spring
Fluid	Air
Operating pressure range	0.2 to 0.9 MPa
Pilot pressure	Same as operating pressure
Ambient temperature and operating fluid temperature	-10 to 50°C (No freezing. Refer to page 5.)
Lubrication	Not required (Use turbine oil Class 1 ISO VG32, if lubricated.)
Impact/Vibration resistance <small>Note)</small>	150/50 m/s ²



Note) Impact resistance: No malfunction from test using drop impact tester, to axis and right angle directions of main valve, each one time when pilot signal ON and OFF. (Value in the initial stage)


Vibration resistance: No malfunction occurs on the test with one sweep from 45 to 1000 Hz, to axis and right angle directions of main valve each time when pilot signal ON and OFF. (Value in the initial stage)

Flow Characteristics

Port size	Flow characteristics											
	1→2(P→A)			2→3(A→R)			2→1(A→P)			3→2(R→A)		
	C (dm ³ /(s·bar))	b	Cv	C (dm ³ /(s·bar))	b	Cv	C (dm ³ /(s·bar))	b	Cv	C (dm ³ /(s·bar))	b	Cv
1/2	26	0.38	7.0	27	0.37	7.4	27	0.36	7.3	25	0.37	6.8
3/4	38	0.30	9.8	38	0.32	9.8	40	0.22	9.8	40	0.20	9.6

Port size	Effective area (mm ²)	
	1→2(P→A)	2→3(A→R)
1	210	235


Dimensions

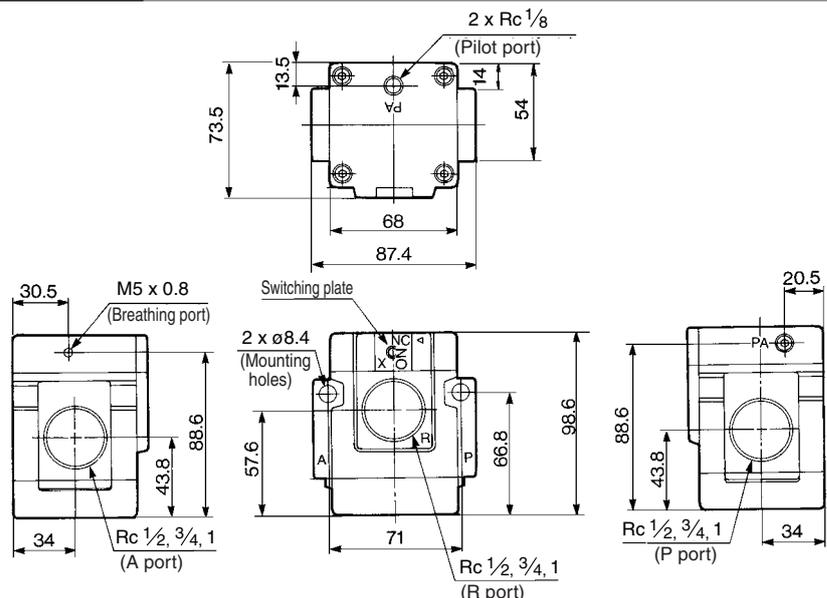



External Pilot, Air Operated Valve


How to Order

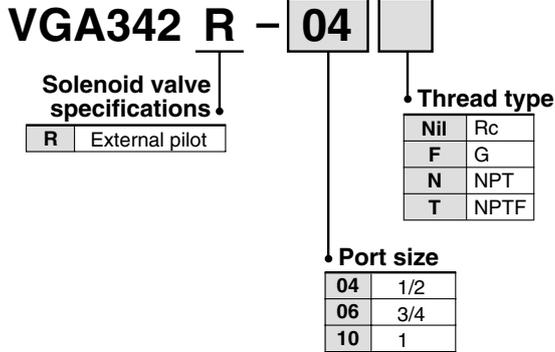


Specifications

Valve type	External pilot, air operated valve	
Type of actuation	Universal porting type	
Fluid	Air	
Operating pressure range	Main pressure	-101.2 kPa to 0.9 MPa
	Pilot pressure	Equivalent to main pressure (Min. 0.2 MPa or more)
	External pilot	Equivalent to pilot pressure
Ambient and fluid temperature	-10 to 50°C (No freezing. Refer to page 5.)	
Weight	1.2 kg	

JIS Symbol

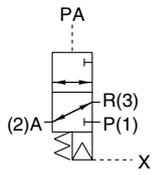

Dimensions

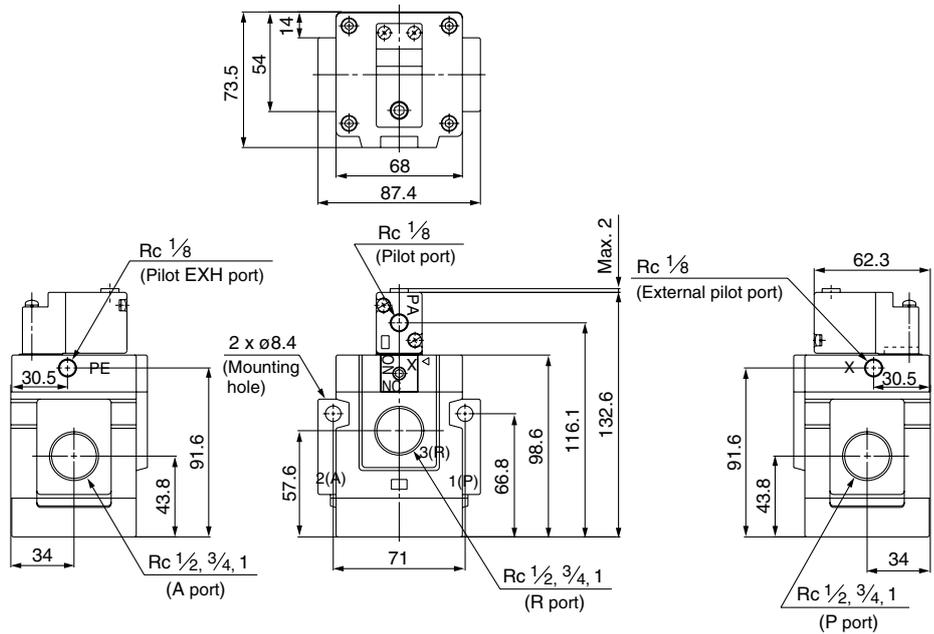

SYA

SYJA

VZA

VFA

VFRA

V□A