

Technical Datasheet

Product Management News

EasyDoor™: Multifunctional antimicrobial handle



Description

EasyDoor™ is a multifunctional handle containing an antimicrobial additive.


It is a Personal Protective Equipment (PPE) that protects both the user and people around by limiting hand transmission of bacteria, viruses, fungi, ...

This handle accessory is a perfect complement to the barrier gestures put in place today:



Applications

EasyDoor™ allows contactless opening of any type of door

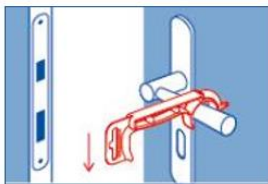


Use in vertical thrust



Leveraged use

EasyDoor™ allows contactless pressure on keys, buttons and switches (lift buttons, switches, payment terminals, keypads, badge readers, ...)

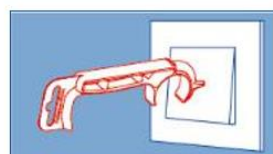

Technical Datasheet

Product Management News

Contactless holding of the trolley handle



Contactless and painless bag transport



Clip for keys, badges, ...



Properties

| Properties | Values |
|------------|--|
| Material | PP glass-fiber reinforced (20%) with an antimicrobial additive |
| Dimensions | 141 x 44 mm |
| Weight | 15 grams |

Antimicrobial action incorporated into the formulation




An antimicrobial additive has been incorporated into the formulation of the plastic used to manufacture EasyDoor™.

This antimicrobial additive makes surfaces inhospitable to pathogenic micro-organisms and inhibits the growth of bacteria and moulds.

This silver-based additive has antibacterial and antifungal properties:
99% bacteria removed in 2 hours

This additive has shown good performance on the respiratory H1N1 virus: 99% virus removed in 2 hours

Dimensions and design

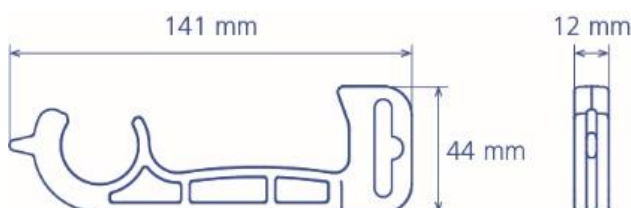

Technical Datasheet

Product Management News




Tip suitable for keypad buttons, remove controls, payment terminals, ...



Quick-release clip to hang up to the belt and Euroslot for shelf placement



Standing heel

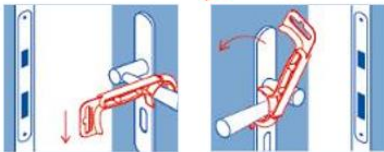

Multifunctional hook suitable for all types of door handles, shopping carts, ...
Picture 1 : Use in vertical thrust
Picture 2 : Leveraged use



Specific gripping area to conform with the hand of the user

Recommendations



To carry EasyDoor™

Hang up EasyDoor™ to the belt thanks to the euroslot with a badge holder (to avoid contacts with personal objects in pockets)



To clean EasyDoor™

Clean EasyDoor™ regularly with a suitable disinfectant:

- Hydroalcoholic gel/spray
- Disinfectant (chemical or wipe)
- Dishwasher

Don't touch anything, EasyDoor™ does it for you!