

WiFi Indoor Air Quality Monitor



Your data, anytime, anywhere

- Monitors Indoor Air Quality (IAQ)
- Measures:
 - Particulate Matter
 - Temperature
 - Humidity
 - VOC's
 - Pressure
- Automatically uploads data to the EasyLog Cloud
- Coloured status ring shows IAO level
- Sounder and instant notifications when IAO is poor
- Detects VOCs from paints, lacquers, paint strippers, cleaning products, furnishings, glues, adhesives and alcohol
- Control device and view data anywhere with the EasyLog Cloud or App
- Power supply included
- Internal back-up battery if power interrupted



The EL-WEM continually monitors Indoor Air Ouality, with a coloured status ring to display the IAQ level at a glance. It also automatically uploads data to the EasyLog Cloud, allowing your complete set of data measurements to be viewed,

analysed and downloaded from any

internet-enabled device.

The IAO level is rated in five levels from Excellent to Inadequate, and if it reaches either of the two lowest levels the status ring turns red. Using the EasyLog

> Cloud, you can set emails and SMS messages to notify you as soon as this happens. You can also activate an audible alert sounder, and set a daily Do Not Disturb period if you wish.

The EL-WEM is simple to set up, with a single button press and the EasyLog Cloud App.

A power supply is included and the unit also has an internal back-up battery, allowing it to continue operating in low power mode if mains power is temporarily lost.



The status ring indicates the current IAQ level at a glance







Your data, anytime, anywhere


What Contributes to Indoor Air Quality?

Air quality is a key contributor to feeling comfortable, and staying healthy, at work and in the home. The EL-WEM uses a silent fan to sample the air around it, the internal sensors measuring five important factors.



Particulate Matter (PM)

Tiny particles that hang in the air include pollen, dust, mould spores and soot from engines and fires. In high concentrations these can cause allergic reactions and health problems. The EL-WEM measures two types: PM10 and the extremely small PM2.5.

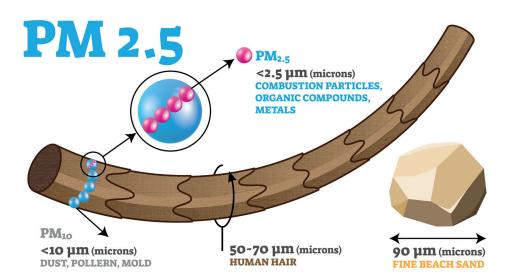

Temperature

Our bodies immediately sense if we are too hot or too cold, but temperature changes can also cause physical reactions that affect our susceptibility to viruses and other airborne diseases. Poor temperatures can also accelerate the growth of mould and bacteria on indoor surfaces.

Humidity

The amount of moisture in the air can affect how well our bodies can maintain a comfortable internal temperature. Low levels can lead to irritated skin and eyes, and high humidity can stimulate mould growth.

Volatile Organic Compounds (VOC's)

VOC's are gases and chemicals in the air that can have health effects. Many common chemicals and materials emit VOCs, sometimes over long periods of time. These include paint and varnishes, cleaning products and air fresheners, plastics, fabrics and many more.

Air Pressure

High atmospheric pressure can exacerbate joint pain and contribute to headaches and migraines. It can also have an effect on blood pressure and blood sugar levels.

How Can I Improve Indoor Air Quality?

The easiest and most important way is to open windows to allow fresh air in, and also to encourage air circulation by opening any internal doors. Also use fans and ventilators where available, and keep rooms clean and free of dust and pet hair. Remove sources of pollutants such as chemicals and cleaning products, and make sure all sources of combustion emissions (such as boilers and cookers) are clean and well maintained. Air conditioning systems and dehumidifiers can help keep both the temperature and humidity within comfortable







Your data, anytime, anywhere

IAQ RATING INDEX

Indoor Air Quality is scored out of 20, by adding together scores out of 5 for four measured parameters. The total score determines the IAQ rating, on five levels, from Excellent down to Inadequate. The status ring colour on your EL-WEM matches the IAQ rating.

IAQ Rating	Excellent	Good	Fair	Poor	Inadequate
IAQ Score	≥ 18 points	≥ 16 points	≥ 12 points	≥ 8 points	< 8 points

The IAQ score is calculated as follows:

	Temperature °C	Humidity % RH	VOC Index	PM10 µg/m³
5 points	18 « T « 21	40 « RH « 60	VOC < 50	PM < 33
4 points	17 « T < 18 21 < T « 22	30 ≤ RH < 40 60 < RH ≤ 70	51 « VOC < 100	33 « PM < 58
3 points	16 « T < 17 22 < T « 23	20 « RH < 30 70 < RH « 80	101 ≤ VOC < 150	58 « PM < 75
2 points	15 « T < 16 23 < T « 24	10 « RH < 20 80 < RH « 90	151 « VOC < 200	75 « PM < 91
1 point	T < 15 T > 24	RH < 10 RH > 90	VOC ≽ 201	PM ≽ 91

- Example: Temperature 10°C (1 point), Humidity 9% (1 point), VOC 220 (1 point), PM10 96 (1 point) = 4 points total, IAQ rating is Inadequate.
- You can find a copy of this table, including Temperature in °F, by clicking the ?? help icon next to the measurement readings in the EasyLog Cloud.

CONNECTING TO THE CLOUD

Plug in the power supply, then press the central button to turn the device on.

(2)

Download and login to the EasyLog Cloud App on your mobile device. Select "Setup Device" and follow the onscreen instructions to add your EL-WEM.

You can now view the EL-WEM's data and change settings either in the EasyLog Cloud App or by visiting your account at: www.easylogcloud.com







Your data, anytime, anywhere

EasyLog Cloud Your Data: Anytime. Anywhere.



Easily access your most important data, anywhere



Automatic emails alerts and SMS





EL-WEM

Connect data loggers from multiple sites in one account



Remotely manage all of your data logger devices



Graph, review and analyse your data



Audits are easy with our event log system



Secure Cloud storage



Configurable user profiles

EasyLog Cloud App

Available for Android and Apple devices, the EasyLog Cloud app enables you to monitor and manage your wireless sensors on the go.







Access your vital data from any internetenabled computer, tablet or mobile device with EasyLog Cloud. From single locations to worldwide operations, the system is perfectly scalable and can run through your existing wireless networks.

Critical events are notified to specific users in seconds via an alarm system that's easily tailored to your exact requirements.

Data is accessible 24/7 and powerful online tools make it simpler than ever to view, compare and analyse readings. An audit trail is automatically created that includes both system and data events.

Starter and Professional accounts are available, always flexible and with no locked-in contracts.





INCLUDED IN THE BOX







PSU Power supply



3 x ADAPTORS




CABLE Power cable

ALSO IN THE RANGE



EL-WEM+

DIMENSIONS

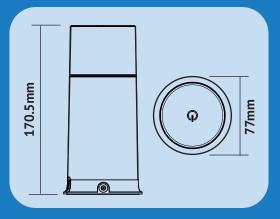

Visit lascarelectronics.com/data-loggers to see our full range of data loggers and measuring devices

SPECIFICATIONS







			N. Carlotte	
PATE	11611	lata	Matter	
	UI GU	LC LC	Matter	

Measured Categories PM2.5, PM10

Temperature

-20 to +60°C Measurement Range

Measurement Accuracy ±0.6°C at 15°C

Humidity

0 to 95%RH Measurement Range

±3% Measurement Accuracy

Volatile Organic Compounds (VOC)

Biogenic VOC Accuracy ±5%

Pressure

Measurement Range 300 to 1100mbar

Measurement Accuracy ±0.6mbar

Dimensions

Height x Diameter 170.5 x 77mm



