APPLICATION SPECIFICATION



MX150 System Sealed Product Line

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355		_		1 of 76
D5	08/12/2021	MX150 A	MX150 Application Guide		
DOCUMENT	ΓNUMBER:	CREATED / REVISED BY:	ED BY: CHECKED BY: APPROVED		/ED BY:
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

APPLICATION SPECIFICATION



Table of Contents

- Section 1: Product Introduction
- Section 2: Product Summary
- Section 3: Connector Assembly
- Section 4: Connector Mating
- Section 5: Service Instructions
- Section 6: Electrical Continuity Checking
- Section 7: Crimping
- Section 8: Hybrid Connector
- Section 9: Troubleshooting Guide
- Section 10: Packaging

AS-33472-100

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				0 (70
D5	08/12/2021	MX150 Ap	oplication Gui	de	2 of 76
DOCUMENT NUMBER: CREATED / RI			CHECKED BY:	1	ED BY:

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Mike Vanslambrouck

Elvis Song

APPLICATION SPECIFICATION

Section 1: Product Introduction MX150 System

This instructions manual contains supplemental information pertaining to the Molex 1.50 mm sealed Product Line. Additional information, keyway and knockout patterns can be found on the sales drawings.

SD-33471-**** (multiple documents) SD-33472-**** (multiple documents) SD-33481-**** (multiple documents) SD-33482-**** (multiple documents) SD-160008-**** (multiple documents) SD-160011-**** (multiple documents) SD-34986-**** (multiple documents) SD-34985-**** (multiple documents)

AS-33472-100

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D.E.	EC No: 673355				
D5	08/12/2021	MX150 A	oplication Gui	de	3 of 76
DOCUMENT NUMBER		CREATED / REVISED BY:	CHECKED BY:	ΔPPRO\	'ED BY:

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Mike Vanslambrouck

Elvis Song

APPLICATION SPECIFICATION



Section 1: Product Introduction MX150 System

Features and Benefits:

- Pre-assembled connector housings, seals and TPA components
- Simple crimp, poke and plug application
- Integral Terminal Position Assurance (TPA)
- Integral two-way, mat and interface seals designed and tested to IP 67 and SAE USCAR-2, Rev 3 standards
- Easy terminal extraction and insertion
- Compatible with a wide range of UL (22 to 14 AWG), SAE Automotive (22 to 14) and ISO (0.35 to 1.5mm²) style wires
- Integral locking latch with secondary connector position assurance (CPA) option
- Applied cost savings
- No need to crimp individual wire seals
- Locks terminals into housings and prevents terminals from backing out
- More than just waterproof, a true sealed connector system tested under submersed conditions
- Quick, low cost field repairs
- Supports a wide range of power and signal applications
- Assures positive mating of connector and prevents accidental disengagement during high vibration and severe shock application

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
DE	EC No: 673355				4 of 76	
D5	08/12/2021	MX150 A	MX150 Application Guide			
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
AS-33472-100		Jone Zheng	g Elvis Song Mike Vanslambro		ambrouck	
			ΤΕΜΡΙ ΔΤΕ ΕΙΙ ΕΝΔΜΕ	APPLICATION SPEC	CISIZE AI(V 1) DOC	

$\widehat{\text{molex}}^{\circ}$

APPLICATION SPECIFICATION

Section 1: Product Introduction MX150 System

MX150 Applications:


- Passenger Automobiles (Exclusively for MX150 family)
- Off Highway Construction Equipment
- Agriculture Equipment
- Trucks, Busses and RVs
- Commercial and Recreational Marine Equipment
- Material Handling Equipment
- Lawn and Garden Equipment
- Outdoor Lighting
- Industrial Control

This User Manual can be found at www.molex.com/ind/mx150.html
To order, please contact your Molex Sales Representative or check www.molex.com

	TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC				
AS-33472-100		Jone Zheng	neng Elvis Song Mike Vanslambrouc		ambrouck
DOCUMEN ^T	T NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
D5	08/12/2021	MX150 Ap	oplication Gui	de	5 of 76
DC	EC No: 673355				5 . 7 0
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.

APPLICATION SPECIFICATION

Section 2: Product Summary A. Connector Assemblies

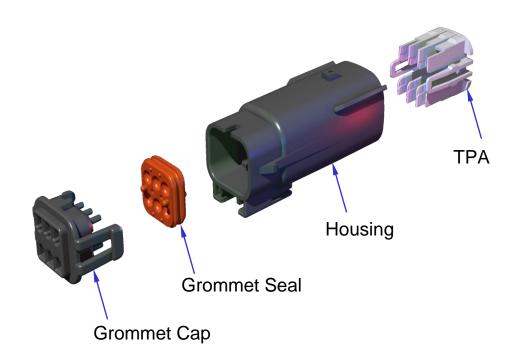


6 Way 2X3 Blade Connector

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				
D5	08/12/2021	MX150 A	oplication Gui	de	6 of 76
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck
TEMPLATE FUENAME, APPLICATION SPECIFIE AVVAILABLE					

APPLICATION SPECIFICATION

Section 2: Product Summary B. Connector Assemblies (continued)

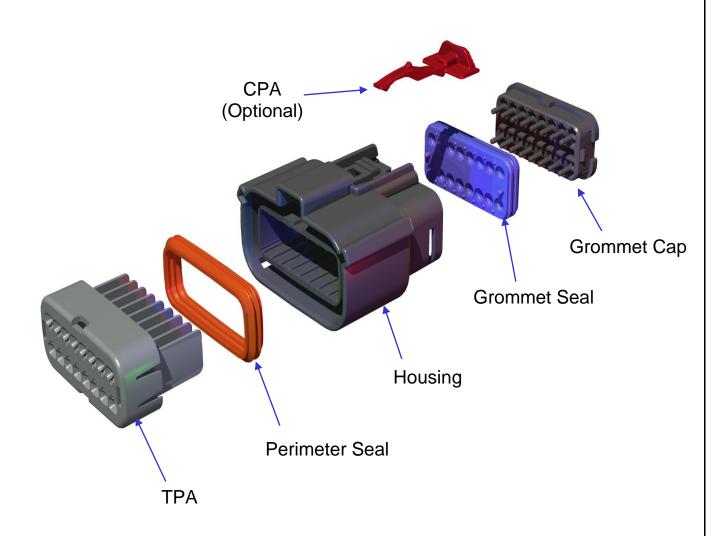


16 Way 2X8 Standard Receptacle Connector

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
55	EC No: 673355				
D5	08/12/2021	MX150 A _l	oplication Gui	de	7 of 76
DOCUMENT	ΓNUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck
			TEMPLATE EU ENAME	ADDITION SDEC	COIZE AVV ALDOC

APPLICATION SPECIFICATION

Section 2: Product Summary C. Connector Assemblies (continued)

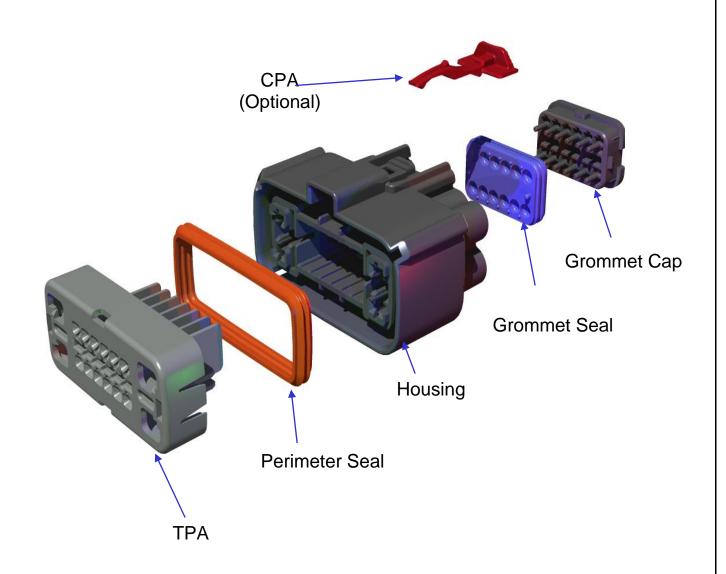


16 Way Hybrid Receptacle Connector

AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck		
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	<u>ED BY:</u>		
D5	08/12/2021	MX150 Ap	MX150 Application Guide				
DE	EC No: 673355		_		8 of 76		
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.		

APPLICATION SPECIFICATION

Section 2: Product Summary C. Connector Assemblies (continued)

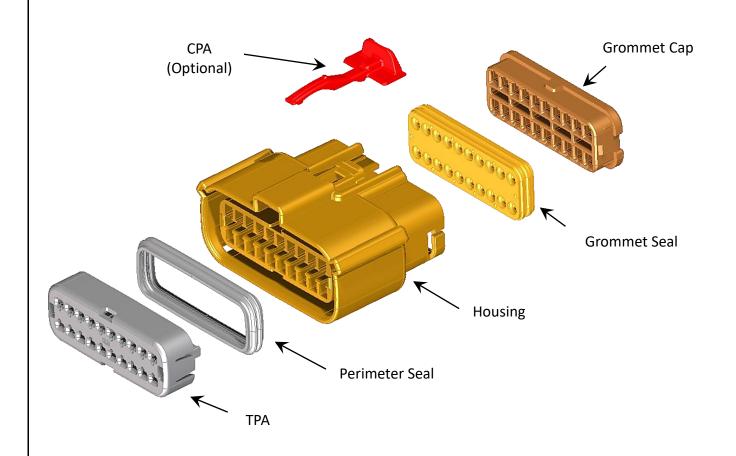


20 Way 2X10 Receptacle Connector

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.		
DE	EC No: 673355				9 of 76		
D5	08/12/2021	MX150 A _l	MX150 Application Guide				
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:		
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	lambrouck		
TEMPLATE FILENAME: APPLICATION SPECISIZE AVV. 1) DOC							

APPLICATION SPECIFICATION

Section 2: Product Summary C. Connector Assemblies (continued)

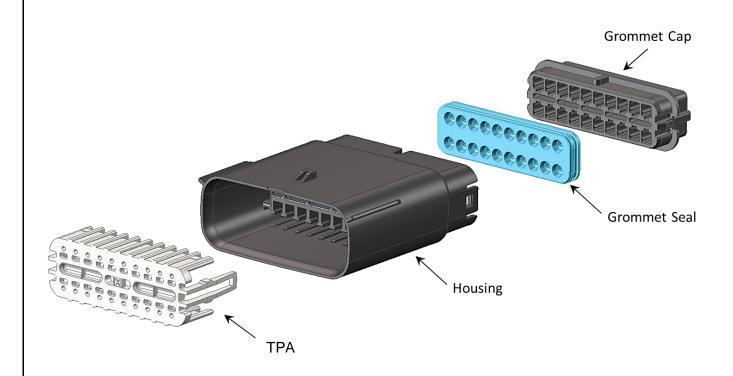

20 Way 2X10 Blade Connector

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
DE	EC No: 673355				10 of 76	
D5	08/12/2021	MX150 Aբ	MX150 Application Guide			
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
AS-33472-100		Jone Zheng Elvis Song Mike Vanslambrou		ambrouck		
TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC						

APPLICATION SPECIFICATION

Section 2: Product Summary D. Receptacle/Blade Terminal

Orientation Feature

Terminal Features

Base Material - Copper Alloy Plating Options - Tin, Gold, Silver Wire Sizes: 14,16,18,20,22 AWG

1.5, 1.0, 0.8, 0.75, 0.5, 0.35 mm²


Refer to Section 7 for crimping details.





Receptacle Terminal

Orientation Feature

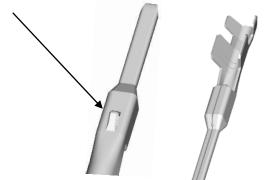

Blade Terminal

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
DE	EC No: 673355		
D5		MY150 Application Guido	11 of 76

MX150 Application Guide 08/12/2021 DOCUMENT NUMBER: CREATED / REVISED BY: CHECKED BY: APPROVED BY: AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck


TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

APPLICATION SPECIFICATION

Section 2: Product Summary E. Product Identification

- All parts are laser etched with:
 - 1. Molex Part Number
 - 2. Date Code (YYDDD)
 - YY = Last Digit of Year
 - DDD = Day of Year

Note – Presence of laser marking for MX 150 16 way Hybrid depends on the manufacturing place.

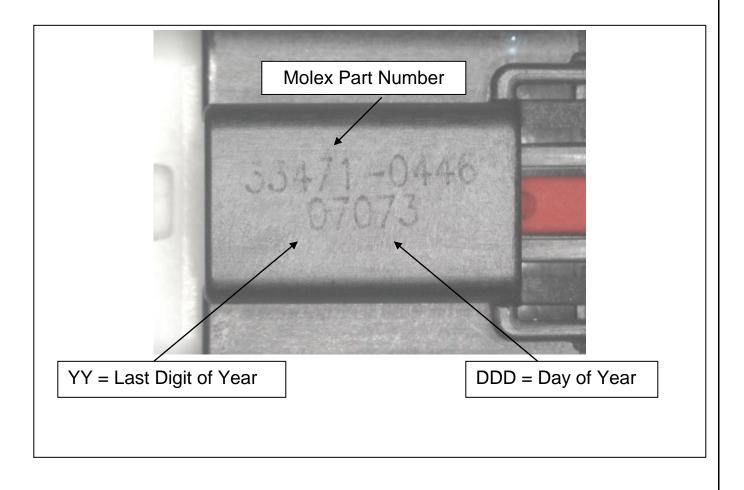

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
DE	EC No: 673355				12 of 76	
D5	08/12/2021	MX150 A _l	MX150 Application Guide			
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	<u>APPRO\</u>	/ED BY:	
AS-33472-100		Jone Zheng Elvis Song Mike Vanslambrou		ambrouck		
TEMPLATE FILENAMÉ: APPLICATION_SPEC[SIZE_A](V.1).DOC						


APPLICATION SPECIFICATION

Section 3: Connector Assembly A. "As Shipped" connector positions

TPA's shown in "As Shipped" condition.

The TPA should remain in the pre-lock position until all circuits are loaded. TPA movement distance from pre-lock to final lock = 5.0 mm in both Blade and Receptacle connectors.

The TPA should never be removed from the connector!

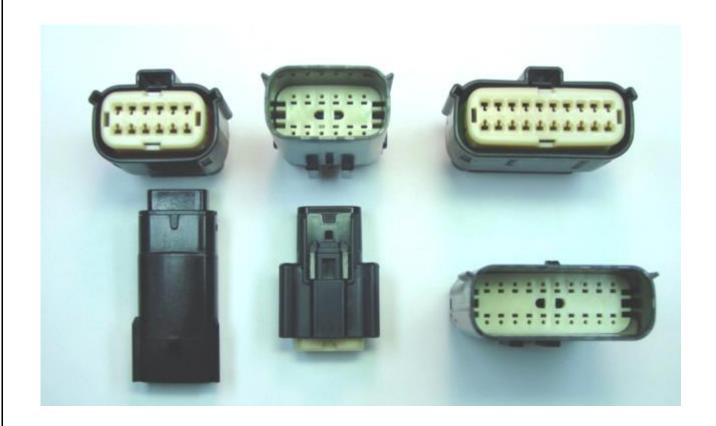

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC					
AS-33472-100		Jone Zheng	Elvis Song Mike Vanslambrouch		ambrouck
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	<u>APPRO</u> V	/ED BY:
D5	08/12/2021	MX150 Application Guide			13 of 76
DE	EC No: 673355				40 (70
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.

APPLICATION SPECIFICATION

TPA's shown in pre-lock

CPA is shown in "as shipped" pre-lock condition:




CPA's shown in pre-lock



CPA's shown in final-lock

If CPA gets moved from pre-lock to final lock position during shipping, pull CPA to bring it back to the pre-lock position.

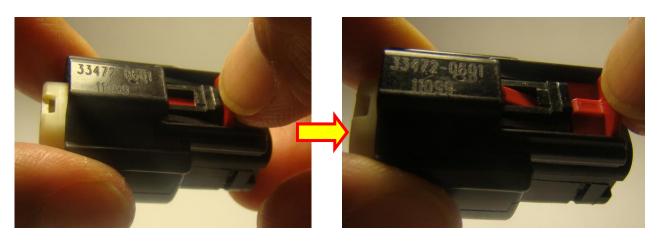

TITLE: **REVISION:** ECR/ECN INFORMATION: SHEET No. EC No: 673355 **D5 14** of **76**

MX150 Application Guide DOCUMENT NUMBER: CREATED / REVISED BY: **CHECKED BY:** APPROVED BY: AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck

08/12/2021

APPLICATION SPECIFICATION

Section 3: Connector Assembly B. TPA in Pre-lock and Lock

TPA shown in "Pre-lock" position.(Fig.10-a) TPA shown in "lock" position. (Fig 10-b)

The TPA should never be removed from the connector!

Fig. 10-a

Pre-lock


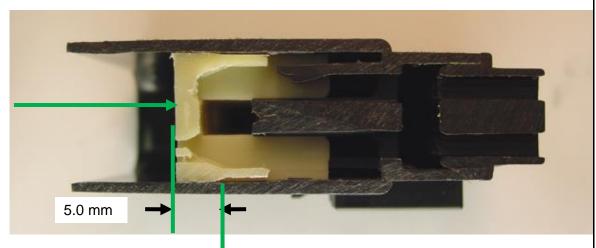


Fig. 10-b

Lock

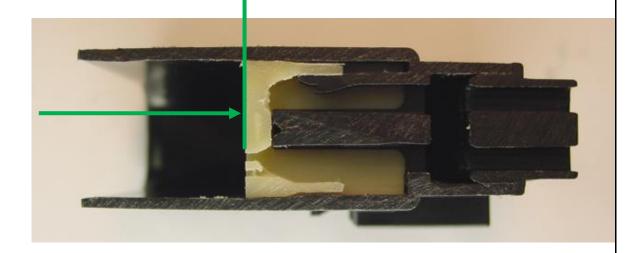

Cross section of TPA in pre-lock / lock

AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck	
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
D5	08/12/2021	MX150 A _l	MX150 Application Guide			
DE	EC No: 673355		_		15 of 76	
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	


APPLICATION SPECIFICATION

Section 3: Connector Assembly C. Seal Plug Installation - Receptacle

With TPA still in pre-lock position, orient seal plug to rear of connector. Align the orientation feature and insert through appropriate circuit opening. If resistance is encountered, retract the plug, and adjust the angle of insertion. Continue inserting the plug until it stops and locks up on the lock finger with an audible click.

Seal plug 34345-4001 can be used with the Gen 1 and Gen 2 Receptacle connectors.

Caution: Once fully seated, the seal plug is not a serviceable item.

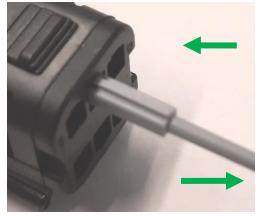



Orientation Feature





Elvis Song

Molex Part Number 34345-4001

Seal plug cannot be used in shorting bar circuits!

REVISION: ECR/ECN INFORMATION: TITLE: SHEET No. EC No: 673355 **D5** MX150 Application Guide **16** of **76** 08/12/2021 DOCUMENT NUMBER: CREATED / REVISED BY: CHECKED BY: APPROVED BY: AS-33472-100

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC


Mike Vanslambrouck

APPLICATION SPECIFICATION


Section 3: Connector Assembly C. Seal Plug Installation continued - Receptacle



YES! **CORRECT!**

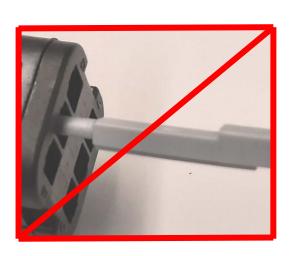

Backwards

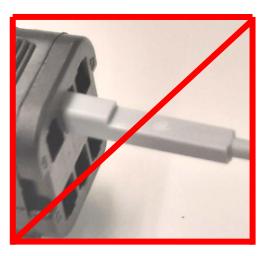

180° out of alignment!



REVISION: TITLE: SHEET No. ECR/ECN INFORMATION: EC No: 673355

D5 MX150 Application Guide 08/12/2021

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

17 of 76

DOCUMENT NUMBER: CREATED / REVISED BY: **CHECKED BY:** APPROVED BY: AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck

APPLICATION SPECIFICATION



Section 3: Connector Assembly C. Seal Plug Installation continued - Receptacle

Molex Does Not Recommend Trimming the Receptacle Cavity Plugs



Molex does not recommend trimming the receptacle cavity plug. However, the Cavity plugs can be trimmed flush to avoid wire chafing and avoid cavity plug dislocation / push through. The decision to trim is the discretion of the harness supplier. Cavity plugs must be installed and trimmed before wires are installed.

Never trim cavity plugs with wires installed!



The side cutters used to cut the plugs should be sharp

AS-33472-100



Elvis Song

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355				18 of 76
DS	08/12/2021	MX150	Application Gu	ide	100170
DOCUMENT NUMBER:		CREATED / REVISED B	Y: CHECKED BY:	APPRO\	/ED BY:

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Mike Vanslambrouck


APPLICATION SPECIFICATION

Section 3: Connector Assembly C. Seal Plug Installation - Blade (Gen 1 Series 33481 & 33482)

With TPA still in pre-lock position, orient seal plug to rear of connector. Align the orientation feature and insert through appropriate circuit opening. If resistance is encountered, retract the plug, and adjust the angle of insertion. Continue inserting the plug until it stops and locks up on the lock finger with an audible click.

Seal plug 34345-0001 can only be used with the Gen 1 Blade connectors.

Caution: Once fully seated, the seal plug is not a serviceable item.

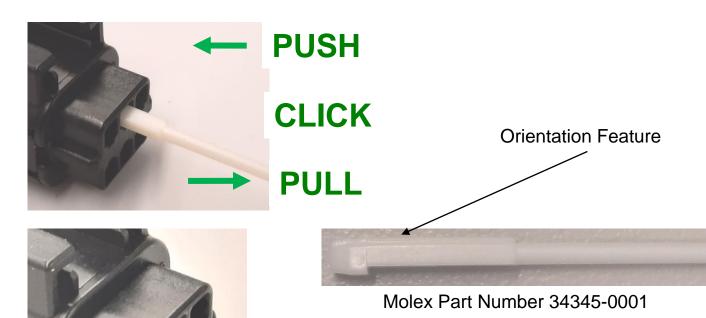

Seal plug cannot be used in shorting bar circuits!

TEMPLATE FILENAME: APPLICATION SPECISIZE A)(V.1).DOC					
AS-33472-100		Jone Zheng	Elvis Song	Mike Vanslambrouck	
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	<u>/ED BY:</u>
D5	MX150 Application Gui		de	19 of 76	
D.E.	EC No: 673355				400
REVISION:	ECR/ECN INFORMATION:	<u> </u>			SHEET No.


APPLICATION SPECIFICATION

Section 3: Connector Assembly C. Seal Plug Installation - Blade (Gen 2 Series 160011 & 160012)

With TPA still in pre-lock position, orient seal plug to rear of connector. Align the orientation feature and insert through appropriate circuit opening. If resistance is encountered, retract the plug, and adjust the angle of insertion. Continue inserting the plug until it stops and locks up on the lock finger with an audible click.

Seal plug 34345-0003 can only be used with the Gen 2 Blade connectors.

Caution: Once fully seated, the seal plug is not a serviceable item.

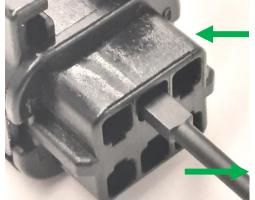

PUSH CLICK

Orientation Feature





Molex Part Number 34345-0003


Seal plug cannot be used in shorting bar circuits!

REVISION: ECR/ECN INFORMATION: TITLE: SHEET No. EC No: 673355 **D5** MX150 Application Guide **20** of **76** 08/12/2021 CREATED / REVISED BY: DOCUMENT NUMBER: CHECKED BY: APPROVED BY: AS-33472-100 Jone Zheng Elvis Song Mike Vanslambrouck TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC


APPLICATION SPECIFICATION

Section 3: Connector Assembly C. Seal Plug Installation continued – Blade


This is for both Gen 1 and Gen 2 connectors

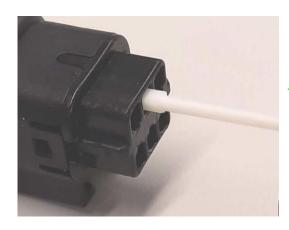

YES! CORRECT!

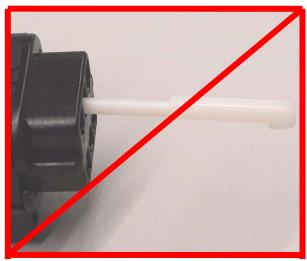

Backwards

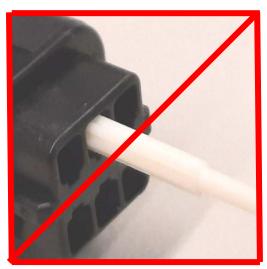

90° out of alignment!

NO! WRONG!

REVISION: ECR/ECN INFORMATION: TITLE:

SHEET No.

Provided: SHEET No.

SHEET No.

SHEET No.

21 of 76

MX150 Application Guide

DOCUMENT NUMBER: CREATED / REVISED BY: CHECKED BY:

ENT NUMBER: CREATED / REVISED BY: CHECKED BY: APPROVED BY:

AS-33472-100 Jone Zheng Elvis Song Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 3: Connector Assembly C. Seal Plug Installation continued – Blade

This is for both Gen 1 and Gen 2 connectors



Blade Cavity plugs can be trimmed flush to avoid wire chafing and avoid cavity plug dislocation/push through, the decision to trim is the discretion of the harness supplier Cavity plugs must be installed, and trimmed before wires are installed.

Never trim cavity plugs with wires installed!



DEVICION. FOR/ECN INFORMATION. TITLE.



TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Caution: Once fully seated, the seal plug is not a serviceable item.

REVISION:	ECR/ECN INFORMATION:	IIILE:			SHEET NO.
D.E.	EC No: 673355				
D5	08/12/2021	MX150 Ap	22 of 76		
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	<u>APPRO\</u>	/ED BY:
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck


APPLICATION SPECIFICATION

Section 3: Connector Assembly C. Seal Plug Installation continued

2.8 cavity plug step by step installation is shown in the illustrations below. The cavity plug must be fully installed with all 3 seal glands engaged in the seal cavity. Never use a screwdriver or an object with sharp edge to push in the plug as it will damage seal. If a tool will be used to seat the plug, only use a rounded

blunt end to push in the plug.

For seal plug information see Product Specification PS-33476-000

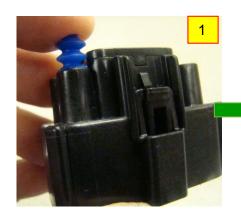





Receptacle Connector







Blade Connector

REVISION:

ECR/ECN INFORMATION:

TITLE:

SHEET No.

D5

EC No: 673355

08/12/2021

MX150 Application Guide

23 of **76**

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:
Elvis Song

APPROVED BY:
Mike Vanslambrouck

APPLICATION SPECIFICATION

WRONG







The cavity plug must be fully installed with all 3 seal glands engaged in the seal cavity



CORRECT





Never use a screwdriver or an object with sharp edge to push in the plug as it will damage seal If a tool will be used to seat the plug, only use a rounded blunt end to push in the plug

REVISION: ECR/ECN INFORMATION:

EC No: **673355**

08/12/2021

TITLE:

MX150 Application Guide

SHEET No.

24 of **76**

DOCUMENT NUMBER:

D5

AS-33472-100

CREATED / REVISED BY:

Jone Zheng


CHECKED BY: Elvis Song APPROVED BY:
Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 3: Connector Assembly D. Terminal Installation


With TPA still in pre-lock position, orient terminal to rear of connector. For the receptacle terminal, grip the wire no less than 20 mm from the terminal insulation crimp, align the orientation feature, and insert through appropriate circuit opening. For the blade terminal, grip the wire no less than 25 mm from the terminal insulation crimp, align the orientation feature, and insert through appropriate circuit opening. If resistance is encountered, retract the terminal and adjust the angle of insertion. Continue inserting the terminal until it stops and locks up on the lock finger with an audible click.

MX150 Receptacle Installation

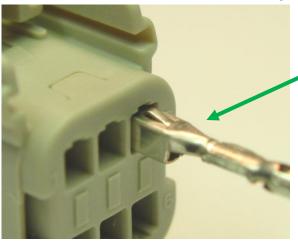

Correct Orientation

90° Mis-orientation

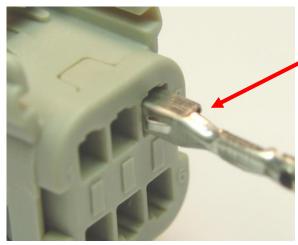

 REVISION:
 ECR/ECN INFORMATION:
 TITLE:
 SHEET No.

 EC No: 673355
 673355
 SHEET No.

D5 MX150 Application Guide

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:

APPROVED BY:

Blvis Song

Mike Vanslambrouck


TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC


25 of **76**


APPLICATION SPECIFICATION

Dual Row MX150 Blade Installation

Do not install the blade terminal away from the grommet cap orientation feature

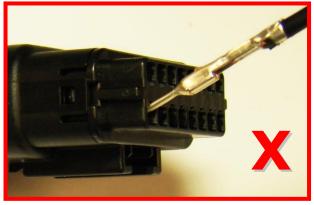


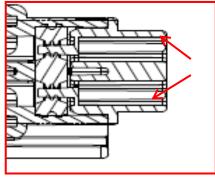

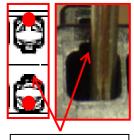


Orientation Feature

Install blade terminal straight or slightly angled towards the grommet cap orientation feature

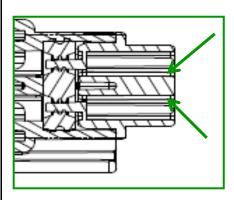

EC No: 673355

DOCUMENT NUMBER:

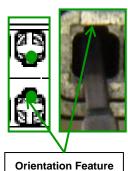



CHECKED BY:

TITLE: **REVISION:** ECR/ECN INFORMATION: SHEET No.

D5 MX150 Application Guide 08/12/2021 CREATED / REVISED BY:

APPROVED BY:

26 of **76**


AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck


APPLICATION SPECIFICATION

Single Row MX150 Blade Installation

Do not install the blade terminal away from the grommet cap orientation feature




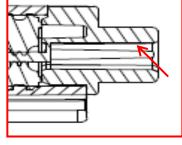

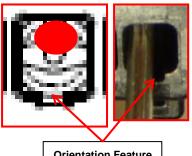


Orientation Feature

Install blade terminal straight or slightly angled towards the grommet cap orientation feature

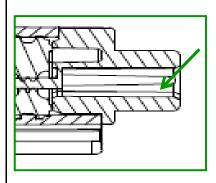

EC No: 673355

D5

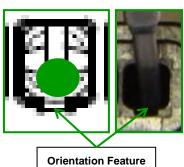



TITLE: **REVISION:** ECR/ECN INFORMATION: SHEET No.

MX150 Application Guide 08/12/2021

DOCUMENT NUMBER: CREATED / REVISED BY: **CHECKED BY:** APPROVED BY: AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC


27 of **76**


APPLICATION SPECIFICATION

Hybrid MX150 Blade Installation


Do not install the blade terminal away from the grommet cap orientation feature




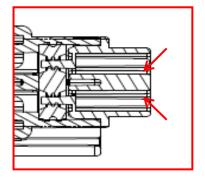

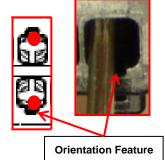

Install blade terminal straight or slightly angled towards the grommet cap orientation feature

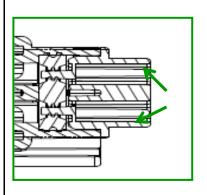

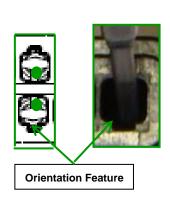



Warning: Hold the wire at least 25mm away from crimp location while installing terminals to avoid terminal rotation during installation. Installation should be completed in one push, click pull operation.


TITLE: **REVISION:** ECR/ECN INFORMATION: SHEET No. EC No: 673355

D5 MX150 Application Guide 08/12/2021

28 of **76**

DOCUMENT NUMBER: CREATED / REVISED BY: **CHECKED BY:** APPROVED BY: AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck

APPLICATION SPECIFICATION

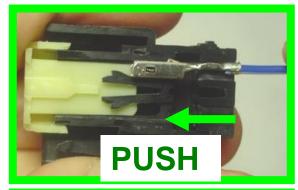





With TPA still in pre-lock position, orient terminal to rear of connector. Align the orientation feature and insert through appropriate circuit opening. If resistance is encountered, retract the terminal and adjust the angle of insertion. Continue inserting the terminal until it stops and locks up on the lock finger with an audible click. Once the audible click is heard, stop inserting the terminal.

<u>Follow Push, Click, Pull method of</u> terminal installation.



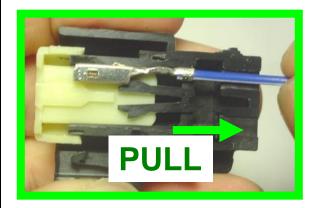

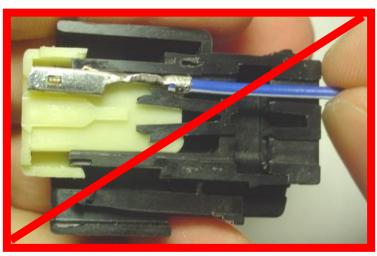

WRONG!!

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
D.E.	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	29 of 76

 DOCUMENT NUMBER:
 CREATED / REVISED BY:
 CHECKED BY:
 APPROVED BY:

 AS-33472-100
 Jone Zheng
 Elvis Song
 Mike Vanslambrouck

APPLICATION SPECIFICATION



Section 3: Connector Assembly E. Seating the TPA Receptacle side

With the Receptacle terminals fully installed, the TPA can be seated into its final lock position by applying an even force to both ends until it comes to a stop, with an audible click. TPA movement distance from pre-lock to final lock is 5.0 mm. *The TPA should never be fully removed!*





REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	30 of 76

 DOCUMENT NUMBER:
 CREATED / REVISED BY:
 CHECKED BY:
 APPROVED BY:

 AS-33472-100
 Jone Zheng
 Elvis Song
 Mike Vanslambrouck


APPLICATION SPECIFICATION



Section 3: Connector Assembly F. Seating the TPA Blade side

A modified process can be used for the Blade terminal. Using a pair on needle nose pliers, apply even pressure to the TPA. If the TPA resists it may be detecting a partially installed terminal. Pull the TPA back into its pre-lock position and make sure all terminals are fully installed. Upon completion, the TPA can be seated. TPA movement distance from pre-lock to final lock is 5.0mm.

The TPA should never be fully removed!

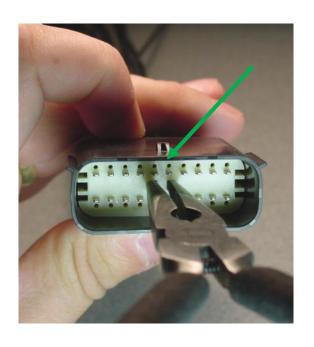



REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
D5	EC No: 673355	14 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	 31 of 76


DOCUMENT NUMBER:
AS-33472-100CREATED / REVISED BY:
Jone ZhengCHECKED BY:
Elvis SongAPPROVED BY:
Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 3: Connector Assembly G. Harness taping recommendations

Industry standard for harness taping: Molex recommends tape should be a minimum of 30mm from the back of connector housing.

TPA must be seated before any tape is applied to the harness! Tape must not contact the back of connector housing!

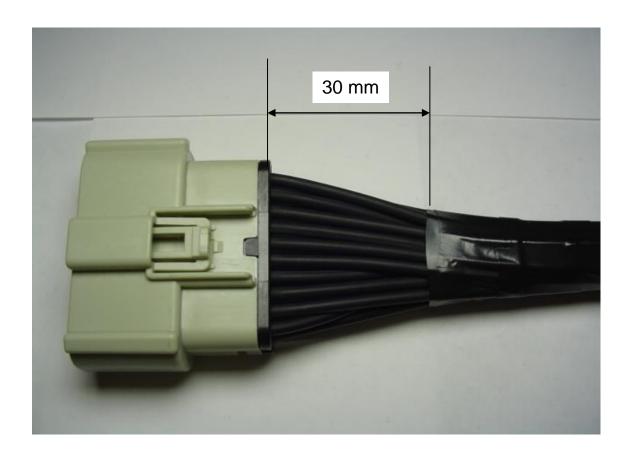

AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
D5	08/12/2021	MX150 Ap	oplication Gui	de	32 of 76
DE	EC No: 673355				20 (70
REVISION:	ECR/ECN INFORMATION:	<u>TITLE:</u>			SHEET No.

APPLICATION SPECIFICATION

Industry standard for harness routing: Molex recommends gradual bends in wire harnesses.

Sharp 90-degree bends in the harness should be avoided! Excessive force, or severe bending of the wire harness may damage the harness.



WRONG!

TO PREVENT DAMAGE TO THE CONNECTOR ASSEMBLY ANY ASSEMBLY FIXTURE OR TEST FIXTURE THAT INTERFACES WITH THE INTERIOR OF THE CONNECTOR MUST COMPLY WITH EITHER THE USCAR INTERFACE OR THE MOLEX DEFINED INTERFACE. SEE MOLEX DRAWING FOR INTERFACE DEFINITION


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355 08/12/2021	MX150 At	oplication Gui	de	33 of 76
DOCUMENT			APPRO\	 <u>/ED BY:</u>	
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck

APPLICATION SPECIFICATION

Section 4: Connector Mating A. Connector mating


Note and align connector keying features, from connector to connector. Begin mating procedure by sliding the two connectors together, press firmly until you hear an audible click from the primary latch.



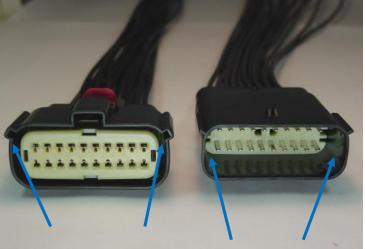


Keying features

Keying Features

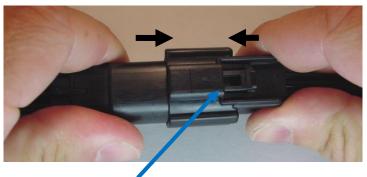



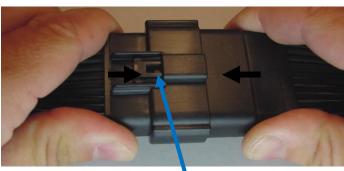

Primary Latch

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
DE	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	34 of 76

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng


CHECKED BY:
Elvis Song

APPROVED BY: Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 4: Connector Mating B. Connector mating (continued)

Once together the final step will be locking the CPA. Simply press in to the center of the connector, until you see/feel positive engagement.

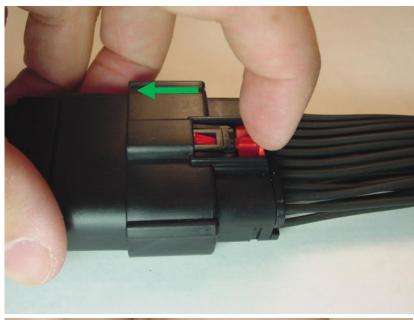



REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
DE	EC No: 673355		25 (70
D5	08/12/2021	MX150 Application Guide	35 of 76

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng


CHECKED BY:
Elvis Song


APPROVED BY:
Mike Vanslambrouck


APPLICATION SPECIFICATION

Section 5: Service Instructions A. Un-mate procedure


To un-mate the connectors, pull back on the CPA (step 1, and step 2). Push connector together to unload the latch system. Then depress the latch with your thumb (step 3). Continue to depress the latch, and gently pull apart connector assemblies (step 4).

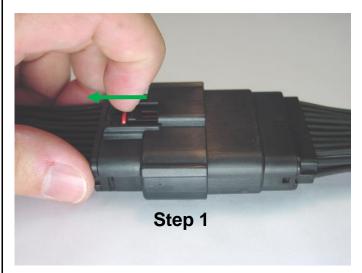

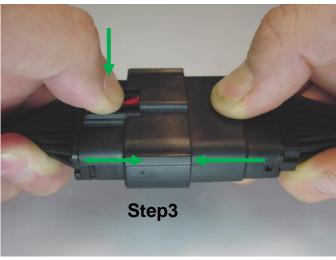

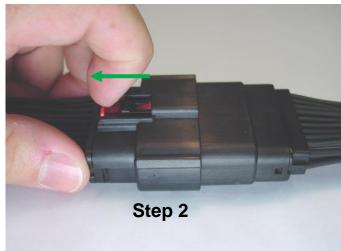

AS-33472-100

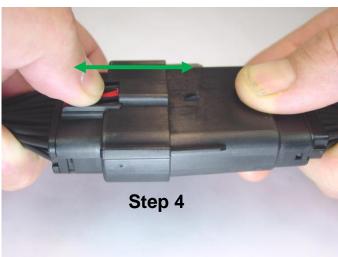

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355	NAVAEOA	nnligation Cui	مام	36 of 76
	08/12/2021	H UCI XIVI	MX150 Application Guide		
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPROVED BY:	

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Elvis Song

Mike Vanslambrouck


APPLICATION SPECIFICATION

Section 5: Service Instructions B. TPA servicing Blade side

The TPA should never be fully removed from the connector housing! Excessive force may damage the TPA!


Step 1: Insert a small pair of needle nose pliers to the designated grab point

Step 2: Pull back 5.0 mm, gently, until the TPA reaches pre-lock position.

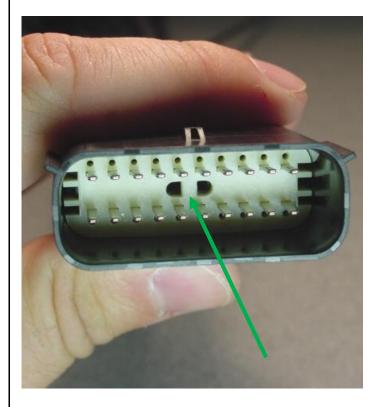

AS-33472-100

Grab point

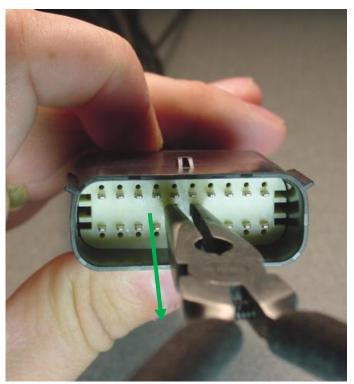

Pull back gently Approximately 5.0mm

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355				37 of 76
טט	08/12/2021	MX150 A	pplication Gui	de	37 01 70
DOCUMEN ⁻	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPROVED BY:	

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC


Elvis Song

Mike Vanslambrouck


APPLICATION SPECIFICATION


Section 5: Service Instructions C. TPA servicing Receptacle side

Step 1: Insert a small screwdriver (2.4 mm – 3.5 mm) into the designated pry point Step 2: Using the housing as a pivot point gently pry out on the TPA, until it reaches pre-lock position (5.0 mm, travel)

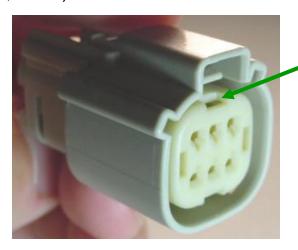

Pry Point

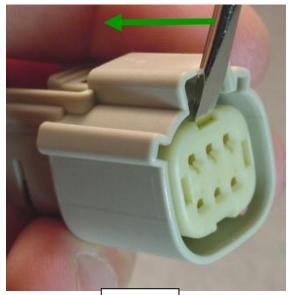

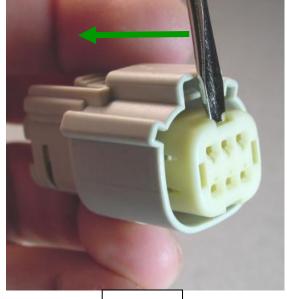

Step 1

Step 2

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

The TPA should never be fully removed from the connector housing! Excessive force may damage

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355				38 of 76
טט	08/12/2021	MX150 A	pplication Gui	de	30 01 70
DOCUMENT	ΓNUMBER:	CREATED / REVISED BY:	EVISED BY: CHECKED BY: APPROVED B		/ED BY:
AS	S-33472-100	Jone Zheng	Elvis Song	Mike Vansl	ambrouck


APPLICATION SPECIFICATION

Section 5: Service Instructions D. 1.50 mm terminal removal

Step 1: Using the 1.50 mm service tool #63813-1500, insert the tip into the terminal service hole adjacent to the terminal to be serviced.

Step 2: Push straight down gently and apply pressure to release locking finger. This motion will release the locking finger, "picking" is not required. Cavity plugs are removed in the same manner.

Do not apply any lateral force, this may damage the tool, or the locking finger! Do not use excessive force, excessive force can damage the lock finger! Do not insert the service tool at an angle, this may cause damage to the terminal!

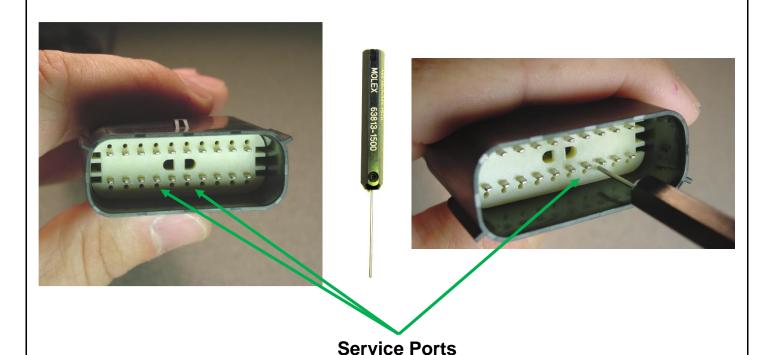

Service tool must be 90° to the connector face!

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
D.E.	EC No: 673355					
D5	08/12/2021	MX150 Ap	oplication Gui	de	39 of 76	
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
AS-33472-100		Jone Zheng	Elvis Song Mike Vanslambrou		ambrouck	
TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC						

APPLICATION SPECIFICATION

Section 5: Service Instructions E. Terminal removal (continued)


Step 3: Once the Lock finger is disengaged, gently pull on the wire to release the terminal.


If the terminal resists, the service tool may not be fully engaged. Push the service tool straight into the service opening to ensure that it has fully disengaged the locking finger.

Do not insert the service tool into the terminal opening!

Do not use excessive force, excessive force can damage the lock finger! Do not insert the service tool at an angle, this may cause damage to the terminal!

Do not apply any lateral force, this may damage the terminal or lock finger!

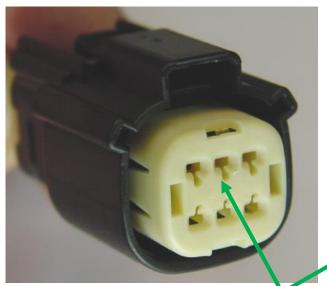

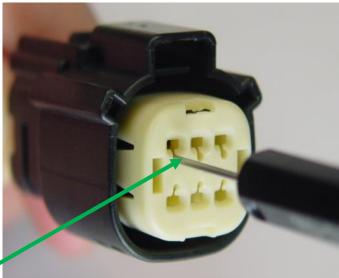

Service Ports

Service tool must be 90° to the connector face!

D5	EC No: 673355	NAN/450 A		1 -	40 of 76
	08/12/2021	WX150 Ap	plication Gui	ae	40 01 10
<u>DOCUMEN</u>	T NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPROVED BY:	
	S-33472-100				

APPLICATION SPECIFICATION

Section 5: Service Instructions

Service tool must be 90° to the connector face!





CORRECT! YES!

WRONG! NO!


REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
D.E.	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	41 of 76

DOCUMENT NUMBER: CREATED / REVISED BY: **CHECKED BY:** APPROVED BY: AS-33472-100 Jone Zheng **Elvis Song** Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 5: Service Instructions F. Terminal removal (continued)

1 2 3

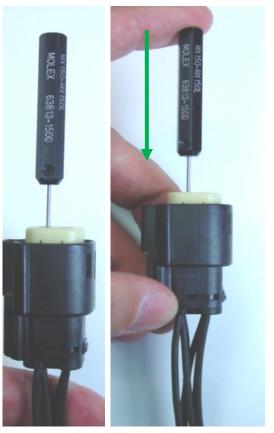



Service tool must be 90° to the connector face!

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355 08/12/2021	MX150 Ap	oplication Gui	de	42 of 76
DOCUMEN ⁻	T NUMBER:	CREATED / REVISED BY:	CHECKED BY:	<u>APPROV</u>	/ED BY:
AS	S-33472-100	Jone Zheng	Elvis Song	Mike Vanslambroud	


APPLICATION SPECIFICATION

Section 5: Service Instructions G. Service tools

If the 1.50 mm terminal needs to be replaced, a new one can be hand crimped using the Molex Crimp tool # 63811-5900(Female)16,14 AWG – 1.3-2.00mm², and # 63811-2600 (Male)22,20,18AWG – 0.35, 0.50, 0.75mm² Shown in (Fig.22a) #63811-2400(Male)16,14AWG – 1.5, 2.00mm² #63811-6000(Female)22,20,18AWG – 0.35, 0.50, 0.75mm². Also shown Molex Terminal removal tool # 63813-1500

Fig. 22a

AS-33472-100

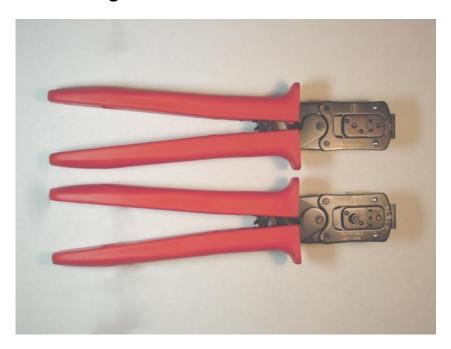



REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355	N/V15(Application (<u> Luido</u>	43 of 76
	08/12/2021		O Application C	dide	
DOCUMENT	ΓNUMBER:	CREATED / REVISED	O BY: CHECKED BY:	APPRO\	/ED BY:

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Mike Vanslambrouck

Elvis Song

APPLICATION SPECIFICATION



Section 6: Electrical Continuity Checking

Fixtures that may come in contact with the perimeter seal must have the interface lead-in geometry as defined on the USCAR and/or Molex interface drawing

Fixtures used for continuity testing must meet the row and pitch dimensions as identified in Section 6.

Fixtures outside these requirements could result in damage to the connector and/or terminal.

Probe pin recommendations:

- 1. When testing the connector for continuity it is imperative that you do not damage the terminals!
- 2. Pogo pins should be checked for damage or sticking several times a shift. This should assure containment if an issue is found.
- 3. First a visual inspection of all the pins for damage should be performed.
- 4. Next a testing block should be used to depress all the pogo pins up into the barrel. If there is a bent or sticking pin, it should remain stuck in the barrel of the pogo pin. A damaged or stuck pin should be replaced before any additional testing is performed.

Probing damage can occur:

- 1. If a sharp ended probe is inserted into the contact of the terminal it may damage the plating and increase contact resistance
- 2. If an oversized diameter probe is inserted into the terminal, this will overstress the beam in the terminal. This will create an environment for intermittent connections, and increased contact resistance.
- 3. If a probe is inserted into the connector on an angle or off center it may damage the terminal, and or the connector.

AS	S-33472-100	Jone Zheng	Elvis Song	Mike Vansl	
DOCUMENT		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
D5	08/12/2021	MX150 A _l	oplication Gui	de	44 of 76
DE	EC No: 673355				44 (70
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.

APPLICATION SPECIFICATION


Section 6: Electrical Continuity Checking Preferred method of probing receptacle

Fixtures used for continuity testing must meet the row and pitch dimensions as identified in Section 6. Fixtures outside these requirements could result in damage to the connector and/or terminal.

When TPA allows access to the box, probe using this method. Check electrical continuity on the terminal by inserting probe pin between terminal access hole and terminal opening with a 0.50 mm probe. Shown below are pictures of MX150 Sealed connector. Unsealed connectors must be probed at the same location (between access hole and terminal opening)

Molex Receptacle connector

View of probe pin female terminal

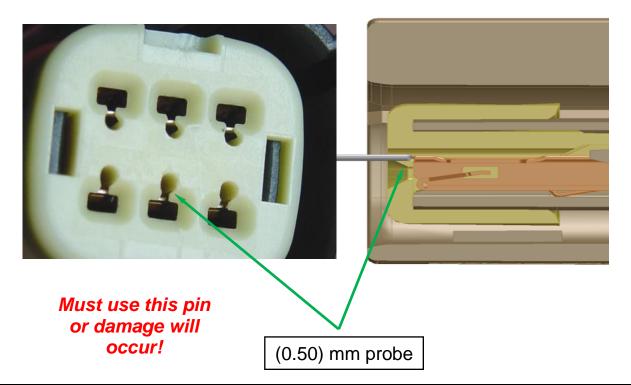

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				45 (70
D5	08/12/2021	MX150 A	pplication Gui	de	45 of 76
DOCUMENT	ΓNUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
Δ9	S-33472-100	Jone Zhena	Elvis Sona	Mike Vansl	ambrouck

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

Preferred method of probing receptacle

Probe pin details

Manufacturer: Everett Charles technologies Preferred probe number: POGO-72J-4


Pin length 0.330"(8.38 mm) Pin diameter: (0.50 mm) Tip shape: Spherical

Must use this pin or damage will


occur!



POGO-72J POGO-72J-S



Dimensions shown are in (mm)

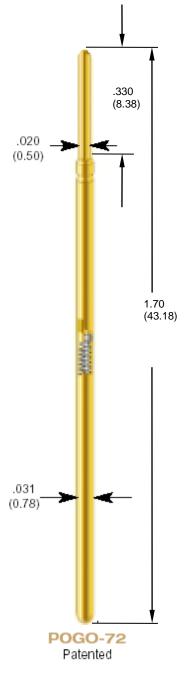

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				40 (70
D5	08/12/2021	MX150 Ap	oplication Gui	de	46 of 76
	•	CREATED / REVISED BY:		KED BY: APPROVED	

AS-33472-100 Jone Zheng Elvis Song Mike Vanslambrouck

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

APPLICATION SPECIFICATION


Section 6: Electrical Continuity Checking B. Alternative method of probing receptacle

Fixtures used for continuity testing must meet the row and pitch dimensions as identified in Section 6. Fixtures outside these requirements could result in damage to the connector and/or terminal.


When TPA does not allow access to the box you must probe down the throat using this method.

Shown below are pictures of MX150 Sealed connector. Unsealed connectors must be probed at the same location (center of receptacle TPA opening) Check electrical continuity on the terminal by inserting probe pin down the center of receptacle TPA opening

Molex Receptacle connector

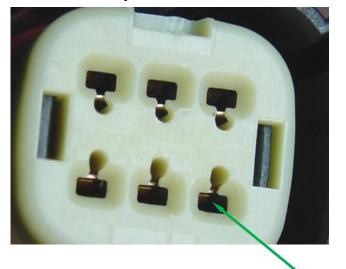

View of probe pin female terminal

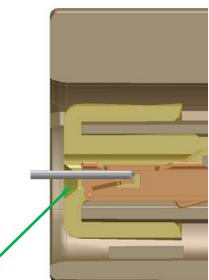

(0.64) mm probe

Must use this pin or damage will occur!

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				47 (70
D5	08/12/2021	MX150 A _l	oplication Gui	de	47 of 76
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	<u>APPRO</u> \	ED BY:
AS	S-33472-100	Jone Zheng	Elvis Song	Mike Vanslambrouck	

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking Alternative

Probe pin details


Manufacturer: Everett Charles Technologies Alternative probe number: POGO-1-J-4

Pin length 0.330" (8.38mm) Pin diameter: (0.64 mm) Tip shape: Spherical


Must use this pin or damage will

occur!



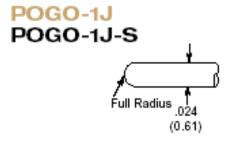

Dimensions shown are in (mm)

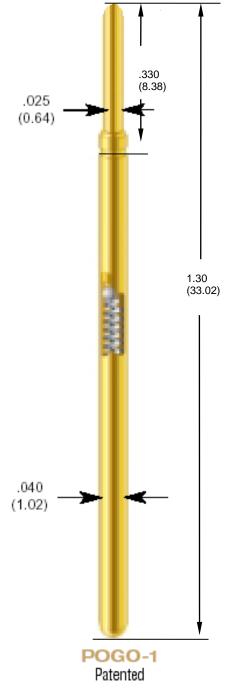

REVISION:	ECR/ECN INFORMATION:	TITLE:				SHEET No.
D5	EC No: 673355 08/12/2021		MX150 Ap	oplication Gui	de	48 of 76
DOCUMENT	NUMBER:	CREA	TED / REVISED BY:	CHECKED BY:	APPROVED BY:	

DOCOMENT NOMBER.

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:
Elvis Song

APPROVED BY:
Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking - Blade

Probe pin details

Manufacturer: Lone Star Industrial

Recommended Probe number: LS054MR-849-4.6 Alternative Probe Number: LS054MR-846-4.6


Pin length .335" (8.51mm)
Pin diameter: .060" (1.52 mm)

Recommended Tip shape: Serrated Alternative Tip shape: Large Concave

Recommended Pin Tip



Alternative Pin Tip



Dimensions shown are in (mm)

PEVISION: ECR/ECN INFORMATION: TITLE:

| EC No: 673355 | MX150 Application Guide

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:


Jone Zheng

CHECKED BY:
Elvis Song

APPROVED BY:
Mike Vanslambrouck

SHEET No.


49 of **76**

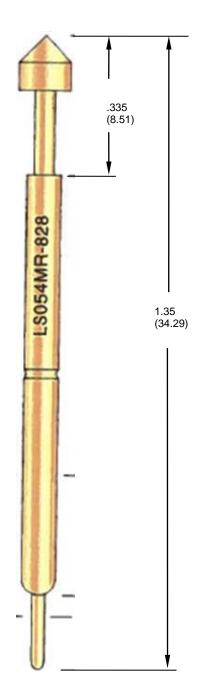

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 16 WAY HYBRID RECEPTACLE PREFERRED PROBING

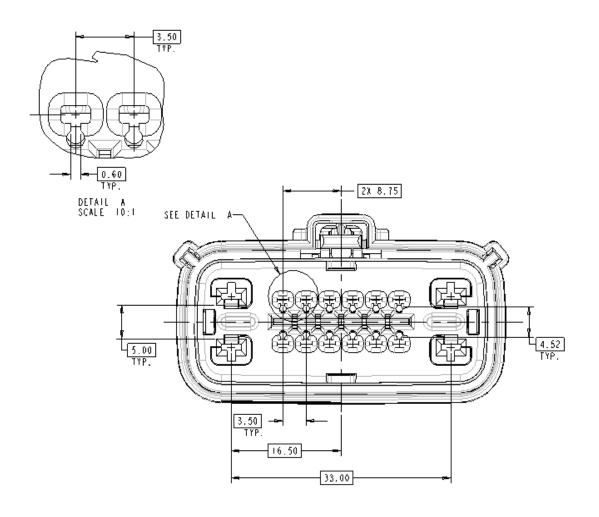


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
DE	EC No: 673355				50 . 70	
D5	08/12/2021	MX150 Ap	oplication Gui	de	50 of 76	
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
AS-33472-100		Jone Zheng Elvis Song Mike Vanslambrou			ambrouck	
TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC						

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 16 WAY RECEPTACLE PREFERRED PROBING

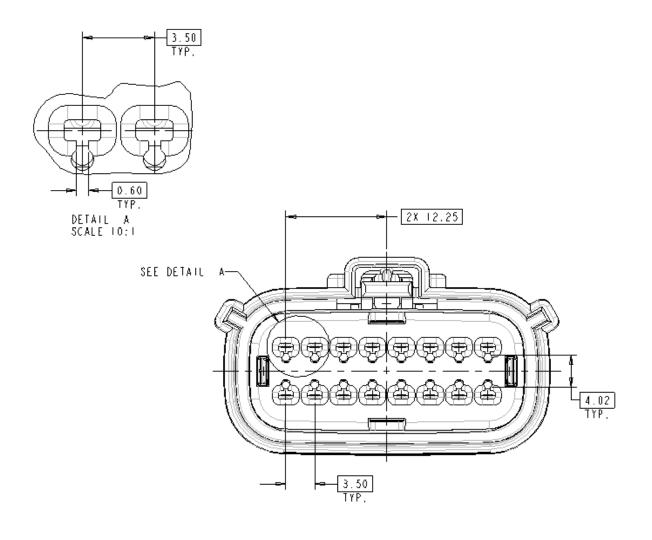


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				E4 (70
D5	08/12/2021	MX150 A _l	oplication Gui	de	51 of 76
DOCUMENT	ΓNUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
AS-33472-100		Jone Zheng Elvis Song Mike Vanslambro			ambrouck
	<u> </u>		ΤΕΜΡΙ ΔΤΕ ΕΙΙ ΕΝΙΔΜΕ	· APPLICATION SPEC	VISIZE AI(V, 1) DOC

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 6 WAY RECEPTACLE PREFERRED PROBING

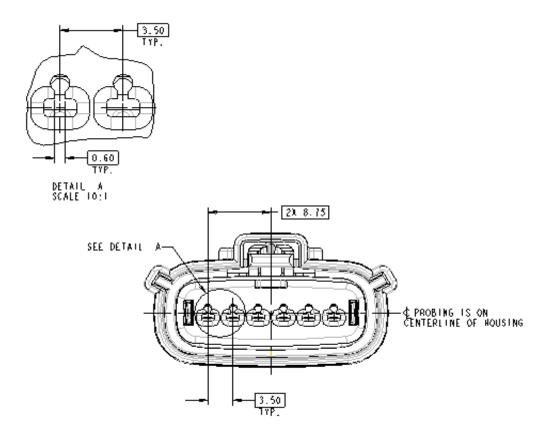

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355 08/12/2021	MX150 A	pplication Gu	ide	52 of 76
DOCUMENT NUMBER:		CREATED / REVISED BY	CHECKED BY:	APPRO\	/FD BY·

AS-33472-100 Jone Zheng Elvis Song Mike Vanslambrouck


TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

AS-33472-100

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 16 WAY RECEPTACLE ALTERNATE PROBING

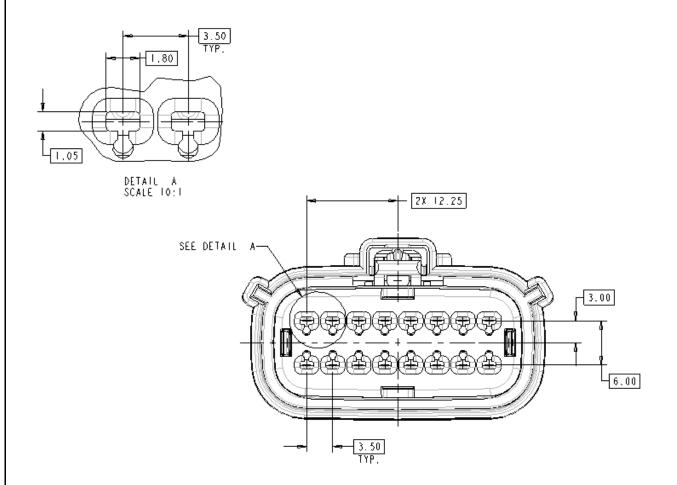

REVISION:	ECR/ECN INFORMATION:	TITLE:				SHEET No.
D5	EC No: 673355 08/12/2021	MX	150 Ap	oplication Gui	de	53 of 76
DOCUMENT NUMBER:		CREATED / RE	<u> </u>	CHECKED BY:	APPROV	ED BY:

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC


Mike Vanslambrouck

Elvis Song

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 16 WAY HYBRID RECEPTACLE ALTERNATE PROBING

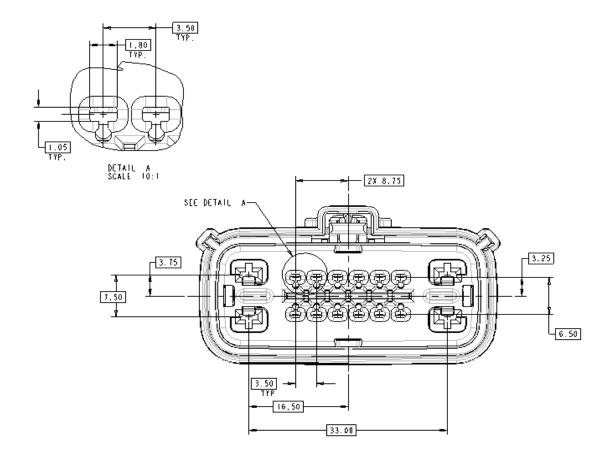


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
DE	EC No: 673355				F4 . 70	
D5	08/12/2021	MX150 A	pplication Gui	de	54 of 76	
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
AS-33472-100 Jone Zheng Elvis		Elvis Song	Mike Vansl	ambrouck		
TEMPLATE ELEMANE, APPLICATION EPECICIZE AVIVADOC						

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 6 WAY RECEPTACLE ALTERNATE PROBING

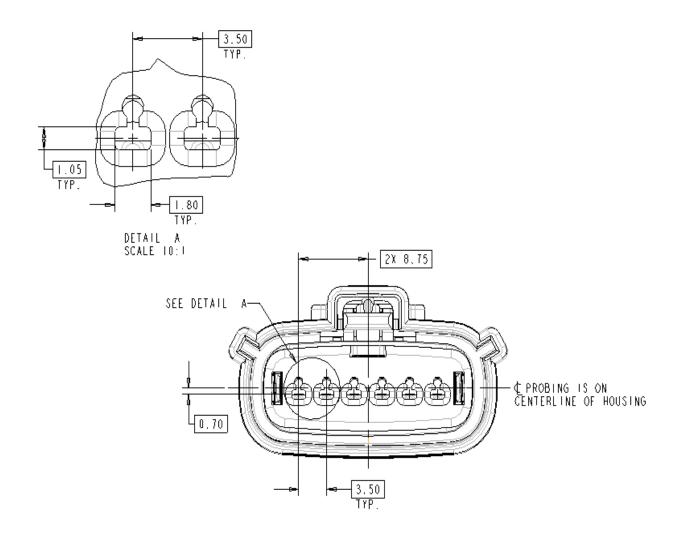


			TEMPLATE FILENAME	: APPLICATION_SPEC	[SIZE_A](V.1).DOC	
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck	
DOCUMEN ^T	ΓNUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
D5	08/12/2021	MX150 Ap	oplication Gui	de 55 of 76		
DE	EC No: 673355					
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 16 WAY HYBRID BLADE

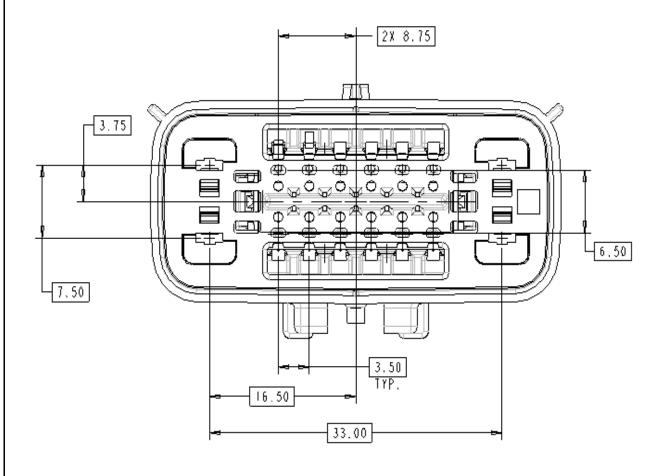


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.			
D5	EC No: 673355	B 43/4 50 A			56 of 76			
	08/12/2021	MX150 Ap	MX150 Application Guide					
<u>DOCUMEN</u>	ΓNUMBER:	CREATED / REVISED BY: CHECKED BY: APPROVE		/ED BY:				
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck			

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 16 WAY BLADE

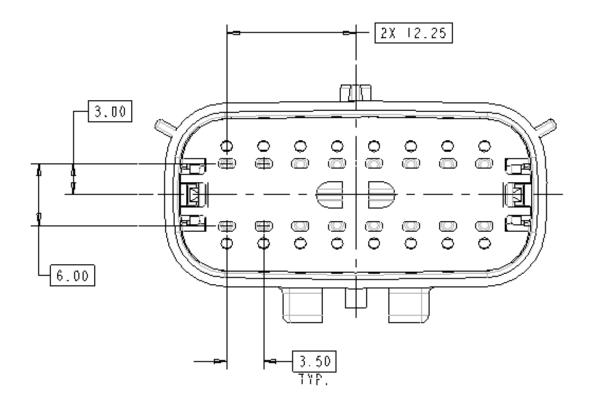


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.			
DE	EC No: 673355		_		57 of 76			
D5	08/12/2021	MX150 A _l	MX150 Application Guide					
DOCUMENT	DOCUMENT NUMBER: CREATED / REVISED BY: CHECKED BY: APPRO		APPRO\	/ED BY:				
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck			

APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 6 WAY BLADE

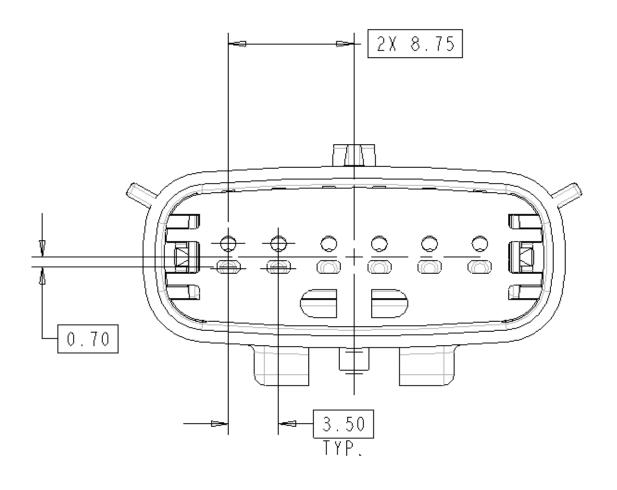


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.	
DE	EC No: 673355				FO (70	
D5	08/12/2021	MX150 A	oplication Gui	de	58 of 76	
DOCUMENT	NUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:	
AS-33472-100 Jone Zheng Elvis Song M		Mike Vansl	ambrouck			
TEMPLATE ELLENAME, APPLICATION, SPECISIZE AVAILADOS						


APPLICATION SPECIFICATION

Section 6: Electrical Continuity Checking

MX150 20 WAY BLADE

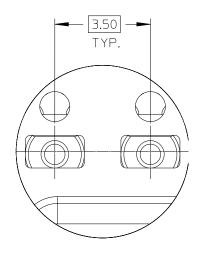

DETAIL A SCALE 10:1

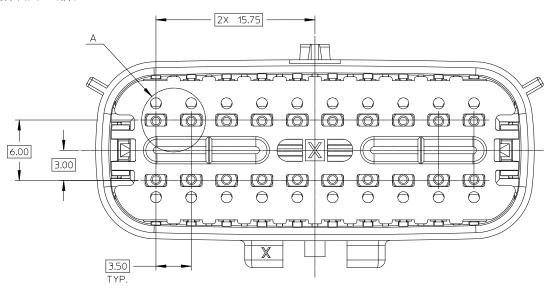

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
DE	EC No: 673355		FO : 70
D5	08/12/2021	MX150 Application Guide	59 of 76

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:
Elvis Song

APPROVED BY: Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 7: Crimping

AS-33472-100

This MX150 crimping information can be found at:

www.molex.com/ind/mx150.html

MX150 Terminal Sales drawing

MX150 Female Terminal Sales Drawing: SD-33012-002

MX150 Female Terminal Crimping Specification: AS-33012-002

MX150 Male Blade Terminal Sales Drawing: SD-33000-001

MX150 Male Blade Terminal Crimping Specification: AS-33000-001

REVISION:	ECR/ECN INFORMATION:	TITLE:				SHEET No.
D5	EC No: 673355 08/12/2021		MX150 Ap	oplication Gui	de	60 of 76
DOCUMENT NUMBER:		CREAT	ED / REVISED BY:	CHECKED BY:	APPROV	ED BY:

Jone Zheng

Elvis Song Mike Vanslambrouck

APPLICATION SPECIFICATION

Section 7: Crimping


DEVICION. FOR/ECN INFORMATION. TITLE.

Issue: No Insulation grip step allowed on 22 gage - 0.35-0.5mm² MX150 Female terminal

Part Numbers:

33012-2003 & 33012-3003 Tin Plated Terminals 33001-2005 & 33001-3005 Gold Plated Terminals 33001-4003 & 33001-5003 Silver Plated Terminals


Original 22 gage crimped terminal with Insulation Grip Step:

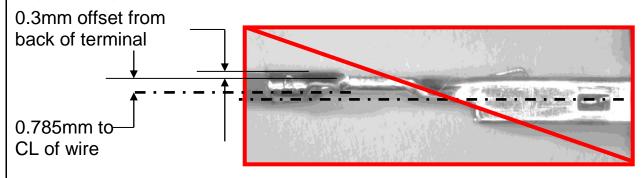

REVISION:	ECR/ECN INFORMATION:	IIILE:			SHEET NO.			
D.E.	EC No: 673355				61 of 76			
D5	08/12/2021	MX150 Ap	MX150 Application Guide					
DOCUMENT	ΓNUMBER:	CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:			
AS-33472-100		Jone Zheng Elvis Song Mike Vanslambroud			ambrouck			
	·	·	TEMPLATE FILENAME	: APPLICATION SPEC	SISIZE AI(V.1).DOC			

APPLICATION SPECIFICATION

Modified Tool Set Up 22 gage crimped terminal without Insulation Grip Step:

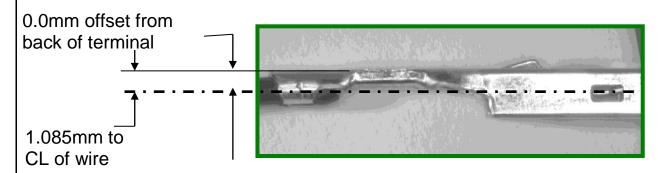

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY: Elvis Song


APPROVED BY: Mike Vanslambrouck

APPLICATION SPECIFICATION


Section 7: Crimping 2.8 Male Blade

Used in MX150 16 way hybrid

Issue: 2.8 terminals, and excessive wire brush

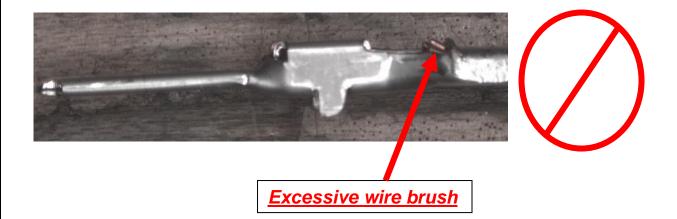

This failure can limit the ability to seat the TPA

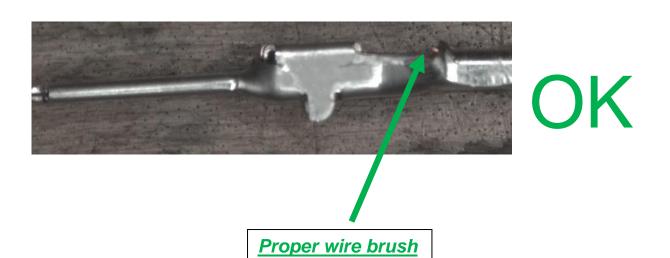

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
DE	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	63 of 76

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:

Elvis Song


Mike Vanslambrouck

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

APPLICATION SPECIFICATION

Section 8: Hybrid Connector A. Un-populated shorting bar connector (TPA in pre-lock)



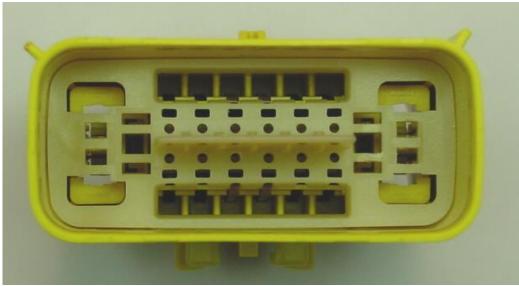

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
55	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	64 of 76

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:
Elvis Song

APPROVED BY:
Mike Vanslambrouck


APPLICATION SPECIFICATION

Section 8: Hybrid Connector

B. Shorting Bar Blade Terminal (gold plating only)

Crimp information can be found on the corresponding terminal drawing.

Wire insulation grip is critical to prevent the rotation of the terminal during installation into the connector.

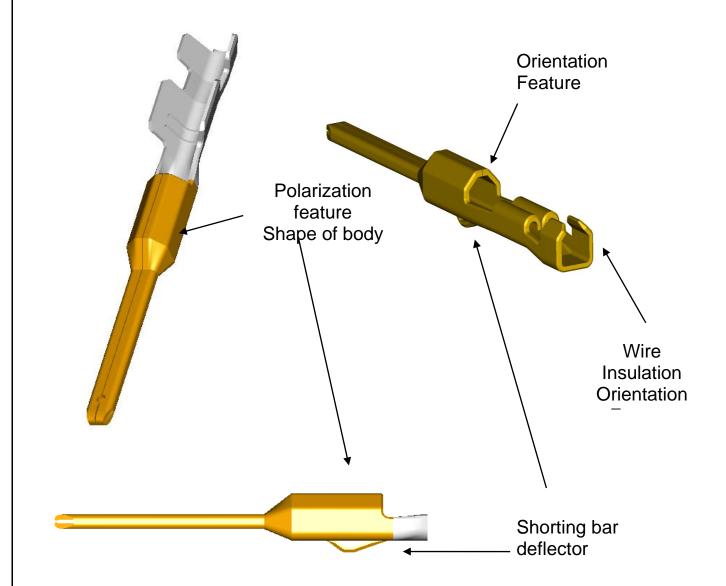


REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				05 (70
D5	08/12/2021	MX150 Ap	oplication Gui	de	65 of 76
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
AS-33472-100		Jone Zheng Elvis Song Mike Vanslambro		ambrouck	
			TEMPLATE FILENAME	: APPLICATION_SPEC	[SIZE_A](V.1).DOC

APPLICATION SPECIFICATION

Section 8: Hybrid Connector C. Single cavity populated shorting bar connector (TPA in Lock)

NOTE! Lifted shorting bar

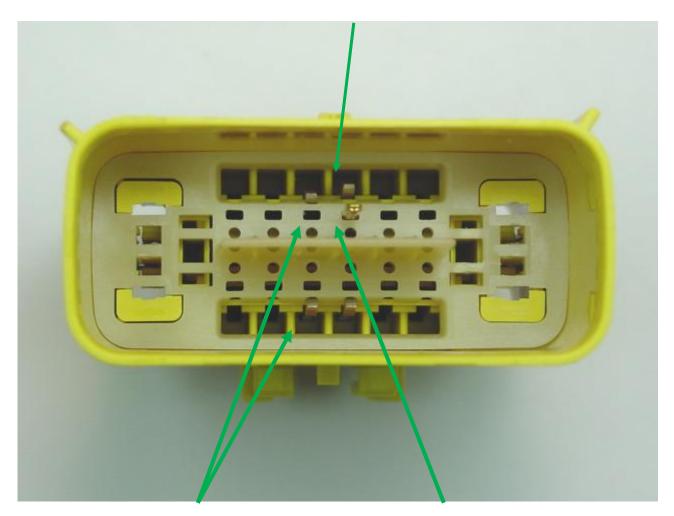

Shorting Bars

Blade Terminal

		I	TEMPLATE FILENAME	· APPLICATION SPEC	ISIZE AI(V 1) DOC
AS-33472-100		Jone Zheng Elvis Song Mike Vanslaml		ambrouck	
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
D5	08/12/2021	MX150 Ap	oplication Gui	de	66 of 76
DE	EC No: 673355				00 (70
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.


APPLICATION SPECIFICATION

Section 8: Connector Assembly D. 1.5 mm Shorting Bar Terminal Installation


With TPA still in pre-lock position, orient terminal to rear of connector. Grip the wire no less than 30 mm from the terminal insulation crimp and insert through appropriate circuit opening. If resistance is encountered, retract the terminal and adjust the angle of insertion. Continue inserting the terminal until it stops and locks up on the lock finger with an audible click.

Correct Orientation

180° Mis-orientation

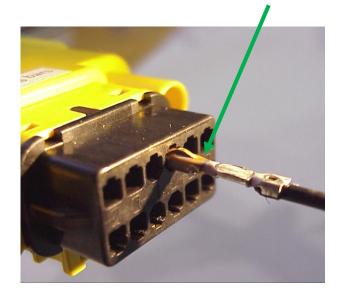

AS-33472-100

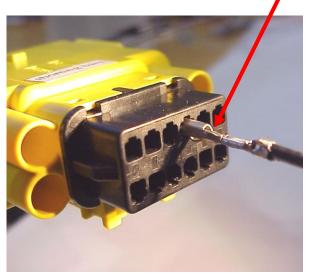

Elvis Song

Mike Vanslambrouck

<u>Do not apply excessive force, this may damage the terminal</u> orientation feature!

REVISION:	ECR/ECN INFORMATION:	TITLE:				SHEET No.
D5	EC No: 673355		B 43/4 = 0 A			67 of 76
D3	08/12/2021		MX150 Ap	oplication Gui	de	07 01 70
DOCUMEN ⁻	DOCUMENT NUMBER: CREATED / REVISED BY: CHECKED BY: APPRO		APPRO\	/ED BY:		


Jone Zheng

APPLICATION SPECIFICATION


Section 8: Connector Assembly E. Populating the 2.8 mm Terminal




Note alignment tabs on Blade terminal

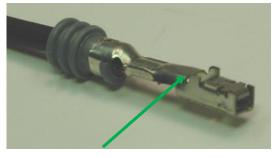

Note alignment tabs on Receptacle terminal

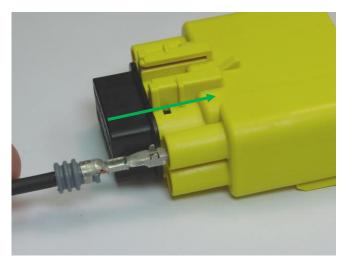

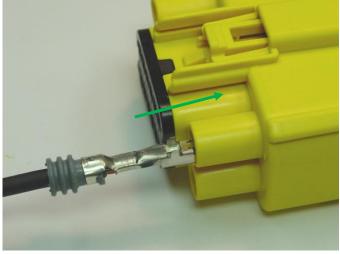

Align tabs and insert until you hear/feel positive engagement with an audible click

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				60 (76
D5	08/12/2021	MX150 A _l	oplication Gui	de	68 of 76
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	<u>APPRO</u> \	ED BY:
AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck

APPLICATION SPECIFICATION


Section 8: Service Instructions F. 2.8 mm Terminal Servicing


Step 1: Using the 2.8 mm service tool #63813-1500, insert the tip into the terminal service hole adjacent to the terminal to be serviced.

Step 2: Push down gently to release locking finger.

DEVICIONI, ECD/ECNINICODMATIONI, TITLE

Do not apply any lateral force, this may damage the tool, or the locking <u>finger!</u>

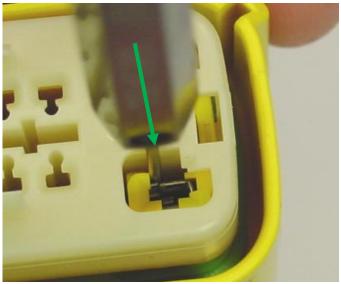

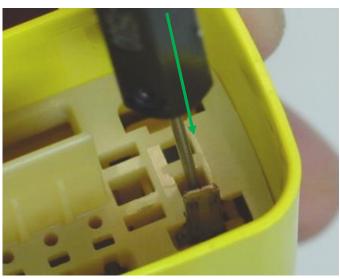

D5	EC No: 673355	MX150 Δn	plication Gui	da	69 of 76
DOCUMEN ⁻	08/12/2021	CREATED / REVISED BY:	CHECKED BY:	APPROV	/FD BV·
-	S-33472-100	OKEKTED/ KEVIOLD DT:	OHEORED DT.	7111101	LD DT.

APPLICATION SPECIFICATION


Section 9: Troubleshooting A. MX150 16 Way Male Hybrid

Issue: Damage on Shorting Bar Terminal





Damage to Shorting Bar Terminal Orientation feature from being put into the grommet cap the wrong way.

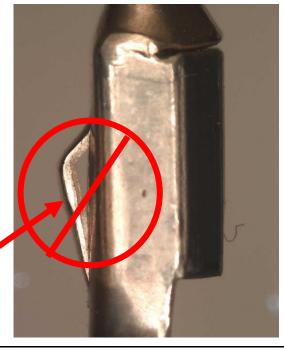

REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
D.E.	EC No: 673355		
D5	08/12/2021	MX150 Application Guide	70 of 76

 DOCUMENT NUMBER:
 CREATED / REVISED BY:
 CHECKED BY:
 APPROVED BY:

 AS-33472-100
 Jone Zheng
 Elvis Song
 Mike Vanslambrouck


APPLICATION SPECIFICATION

Section 9: Troubleshooting B. MX150 16 Way Male Hybrid

Issue: Damage to Orientation Feature Shorting Bar Terminal



Proper Alignment of Shorting Bar Orientation Feature Un-damaged

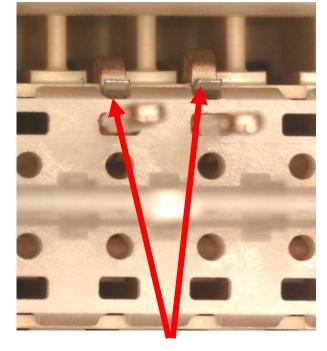

<u>Damaged Terminal Orientation</u> <u>Feature Shorting bars not</u> <u>lifted</u>





REVISION:	ECR/ECN INFORMATION:	TITLE:	SHEET No.
	EC No: 673355		

D5 08/12/2021 MX150 Application Guide

DOCUMENT NUMBER:

AS-33472-100

CREATED / REVISED BY:

Jone Zheng

CHECKED BY:

APPROVED BY:

Mike Vanslambrouck


TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

71 of 76

APPLICATION SPECIFICATION

Section 9: Troubleshooting D. MX150 16 Way Male Hybrid

Issue: TPA should never be fully removed from connector for any reason. If the TPA has been removed, replace entire connector.

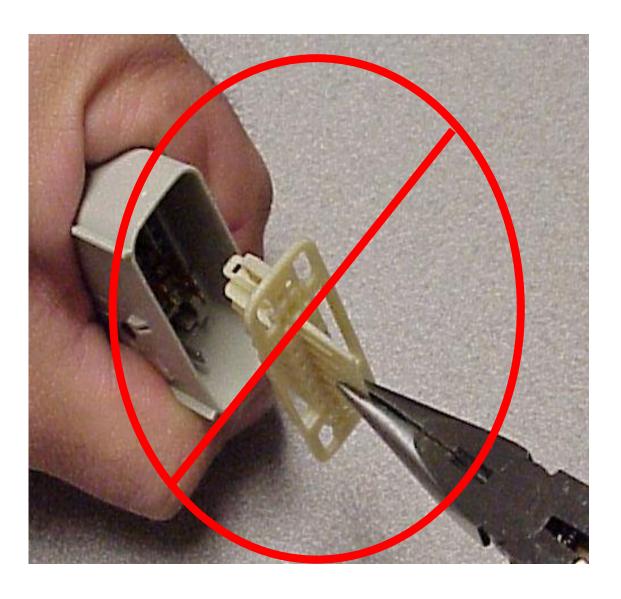


AS-33472-100		Jone Zheng	Elvis Song	Mike Vansl	ambrouck
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPRO\	/ED BY:
ט	08/12/2021	MX150 Ap	oplication Gui	de	72 of 76
D5	EC No: 673355			_	70 - (76
REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.

APPLICATION SPECIFICATION

Section 9: Troubleshooting E. MX150 16 Way Male Hybrid

Issue: Terminal inserted rotated 180 degrees out

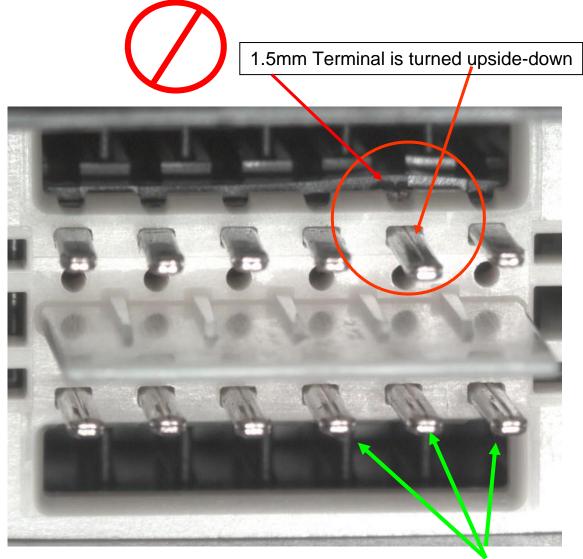

OK

1.5mm Terminals proper orientation

 REVISION:
 ECR/ECN INFORMATION:
 TITLE:
 SHEET No.

 EC No:
 673355
 SHEET No.

D5 MX150 Application Guide

 DOCUMENT NUMBER:
 CREATED / REVISED BY:
 CHECKED BY:
 APPROVED BY:

 AS-33472-100
 Jone Zheng
 Elvis Song
 Mike Vanslambrouck

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

73 of 76

APPLICATION SPECIFICATION

Section 10: Packaging

Assembly at Tier 1(Wire Harness Assembly Plant)


Unpacking:

TPA as received, The TPA are locked in place in the pre-lock position. If the TPA is in final lock follow the service section in section 5.

Handling in Plant:

AS-33472-100

Harness build board/fixture: Molex recommends moving the box to the line, this will insure against damage. Parts should remain in box until assembled placed on a harness assembly build board.

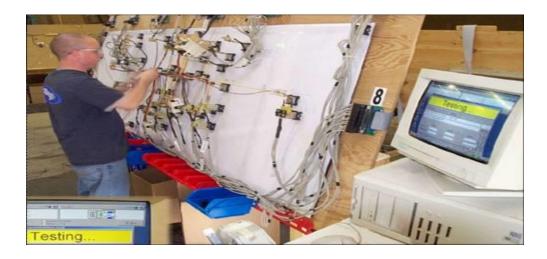

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
D5	EC No: 673355 08/12/2021	MX150 A	pplication Gui	de	74 of 76
DOCUMENT	Γ NUMBER:	CREATED / REVISED BY	CHECKED BY:	APPRO\	/FD BY

Jone Zheng

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

Elvis Song

Mike Vanslambrouck

D5

APPLICATION SPECIFICATION

Section 10: Packaging

Bulk Pack (TYPE 1)

MX150 Seal Plug Male 1x2 through 1x6 Male 2x2 through 2x10 Female 2x2, 1x2, 1x3



Male 16 way Hybrid



Female 1x4 through 1x6 Female 2x3 through 2x10

Bulk Pack (TYPE 4)

Female 16 way Hybrid









REVISION: ECR/ECN INFORMATION: TITLE: SHEET No.

673355
08/12/2021 MX150 Application Guide

 DOCUMENT NUMBER:
 CREATED / REVISED BY:
 CHECKED BY:
 APPROVED BY:

 AS-33472-100
 Jone Zheng
 Elvis Song
 Mike Vanslambrouck

TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A](V.1).DOC

75 of **76**

APPLICATION SPECIFICATION

Section 11: Appendix A

Document Change History:

Revision	Date	Description
А	12/6/16	Added 2.8mm cavity seal plug installation procedure: section 3 – Pages: 20, 21
В	03/15/17	Added "and avoid cavity plug dislocation/push through" to cavity plug trimming note on pages 18 & 19
С	1/10/18	Removed change history information for revisions 1-7
		Section 3.D – Terminal installation revised. Changed the distance to grip the receptacle terminal lead from 30 to 20mm, changes the distance to grip the blade terminal lead from 30 to 25mm
D	04/04/2018	General revision
D1	03/12/2020	Revised Typo's on pages 49, 53, 55 &57 Updated 2.8 cavity plug images & notes.
D2	04/21/2021	Update rcpt cavity plug trimming recommendation
D3	05/10/2021	Update cavity plug instructions
D4	05/25/2021	Update cavity plug to gen2
D5	08/13/2021	Update package method

REVISION:	ECR/ECN INFORMATION:	TITLE:			SHEET No.
DE	EC No: 673355				76 of 76
D5	08/12/2021	MX150 A	MX150 Application Guide		
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPROVED BY:	
AS-33472-100		Jone Zheng	Elvis Song	Mike Vanslambrouck	
TEMPLATE ELLENAME, APPLICATION SPECISIZE AVVAI DOC					