



Visit the website for your country to get more information and discover our products.

India▼


Proceed



HellermannTyton

14/05/2025

Neoprene Sleeve Kit 2mm - 5mm

Art.-No. 600-05001 | PH-SLEEVE-KIT-CR-MIX | 



- Highly elastic, easy to fit chloroprene tubing
- Withstands up to 120 °C intermittent temperature
- Covers many cable diameters with one size
- Available in cut lengths

RoHS




More products in this product group:
[Chloroprene tubing and grommets >](#)

continuous use. To save time and effort when fitting the tubings, try the HellermannTyton NA three prong tools and the Hellerine lubricant, which are specially designed for use with HellermannTyton chloroprene tubing.

Application Method	Thread required sleeves onto the closed prongs. Expand the prongs and slide the wire into the sleeve opening. Close the prongs and hold the sleeve onto the wire and slide the tool away from it. It is advisable to use a lubricant to help removal of tool from the wire due to the elastic tension inherent in these elastomeric sleeves.
Colour	Various (MIX)
Material	Chloroprene Rubber (CR)
PART DESCRIPTION	PH-SLEEVE-KIT-CR-MIX
Pack Cont.	1
Package Content packed in	box
Product Family	Helsyn H
Product Group	Chloroprene tubing and grommets
Short Description	Neoprene Sleeve Kit 2mm - 5mm
Type	PH-SLEEVE-KIT

Product Dimensions

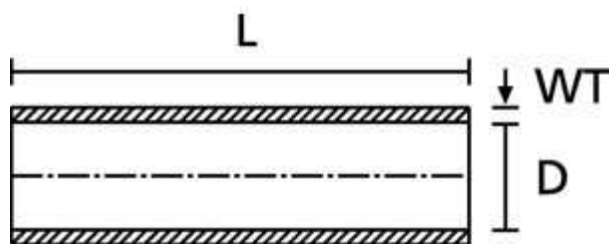

Bundle \varnothing	2-5 mm
Bundle \varnothing max.	5 mm
Bundle \varnothing min.	2 mm



Visit the website for your country to get more information and discover our products.

[Proceed](#)



14/05/2025

Operating Temperature	-55 °C to +55 °C, intermittent +75 °C
ROHS compliant	Yes
Shelf Life	>10 years
Specifications	RoHS ✓

Logistics and Packaging

Country of Origin	GB
GTIN-13 / EAN	5022660199943
Packaging 1 - Height (m)	0.062 m
Packaging 1 - Length (m)	0.303 m
Packaging 1 - Qty	1
Packaging 1 - Type	box
Packaging 1 - Volume (m³)	0.007364112 m³
Packaging 1 - Width (m)	0.392 m
Packaging 2 - Qty	24
Packaging 2 - Type	carton

More Information

ETIM 7.0 Key	EC002254
ETIM 8.0 Key	EC002254
ETIM 9.0 Key	EC002254
UNSPSC Key	39121721