




Extractor Tool Instruction Sheet Order No. 11-03-0043 (HT60923A)

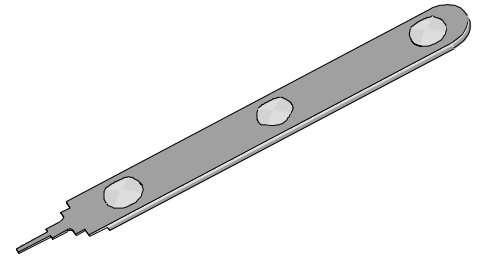


The Micro-Fit 3.0 Extraction Tool is a simple hand tool used to remove a Micro-Fit terminal (P.N. 43030 or 43031) from a Micro-Fit housing (P.N. 43025 or 43020).


OPERATION:

1. Insert the tip of the tool down side "A" or "B", on the mating end of the plug or receptacle, to the stop. See Figure 1.
2. Rotate tool clockwise then counter-clockwise approximately 25° to 30° in each direction, once or twice. See Figure 2.
3. Repeat steps 1 and 2 on opposite side of terminal.
4. Pull on the wire and remove the terminal from the housing.

NOTE: When a terminal is removed in this manner the locking tangs are damaged and the terminal is not reusable.

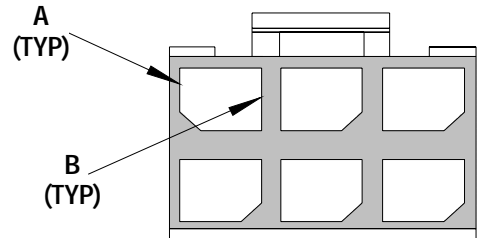


**RECEPTACLE
43025**

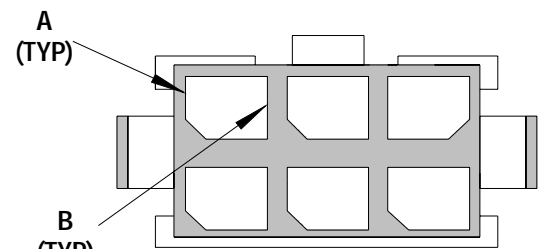

**PLUG
43020**

**Figure 1
CONNECTOR PATTERN**

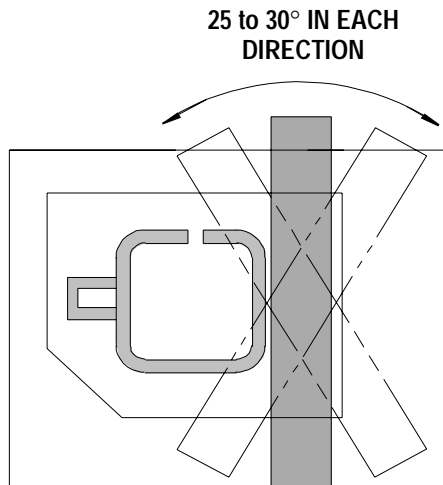

**Figure 2
ROTATING TOOL**

Molex Application Tooling Group

1150 E. Diehl Road
Naperville, IL 60563
Tel: (630) 969-4550
Fax: (630) 505-0049