

PNOZ m ES Profinet

Configurable Control System PNOZmulti

The PILZ logo is displayed in a grey, lowercase, sans-serif font. The letters are bold and modern, with a small dot above the 'i'.

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

Section		000
Section 1	Introduction	5
	1.1 Validity of documentation	5
	1.2 Using the documentation	5
	1.3 Definition of symbols	5
Section 2	Overview	7
	2.1 Scope of supply	7
	2.2 Unit features	7
	2.3 Front view	8
Section 3	Safety	9
	3.1 Intended use	9
	3.2 System requirements	9
	3.3 Safety regulations	10
	3.3.1 Use of qualified personnel	10
	3.3.2 Warranty and liability	10
	3.3.3 Disposal	10
	3.3.4 For your safety	10
Section 4	Function description	11
	4.1 Operation	11
	4.2 Data access	11
	4.3 Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFINET inputs/outputs	12
	4.4 Block diagram	12
Section 5	Installation	13
	5.1 General installation guidelines	13
	5.2 Connect the base unit and expansion modules	13
	5.3 Dimensions	14
Section 6	Commissioning	15
	6.1 General wiring guidelines	15
	6.2 Connecting the supply voltage	15
	6.3 Interface assignment	16
	6.4 Preparing for operation	16
	6.4.1 Download modified project to the PNOZmulti safety system	16
	6.4.2 Set IP address	16
	6.4.3 Install GSDLM file	16
	6.5 Connection example	17
Section 7	Operation	18
	7.1 Messages	18
Section 8	Technical details	20

Section 9	Order reference	22
	9.1 Module	22
	9.2 Accessories	22

1 Introduction

1.1 Validity of documentation

This documentation is valid for the product PNOZ m ES Profinet. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Overview

2.1 Scope of supply

2.2 Unit features


Using the product PNOZ m ES Profinet:

Expansion module for connection to a base unit from the configurable control system PNOZmulti 2 .


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connections for PROFINET
- ▶ status, diagnostic and error displays for communication with PROFINET
- ▶ 128 virtual inputs and outputs on the control system PNOZmulti 2 can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFINET.
- ▶ Transmission rate 100 MBit/s (100BaseTX), full and half duplex
- ▶ Max. 1 PNOZ m ES Profinet can be connected to the base unit
- ▶ Two RJ45 ports
- ▶ Profinet IO device (V2.2) functions in accordance with Conformance Class C
- ▶ Supported functions:
 - RT
 - IRT
 - MRP
 - LLDP
 - I&M 0-4
- ▶ Plug-in connection terminals:
either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti 2 that can be connected.

2.3 Front view

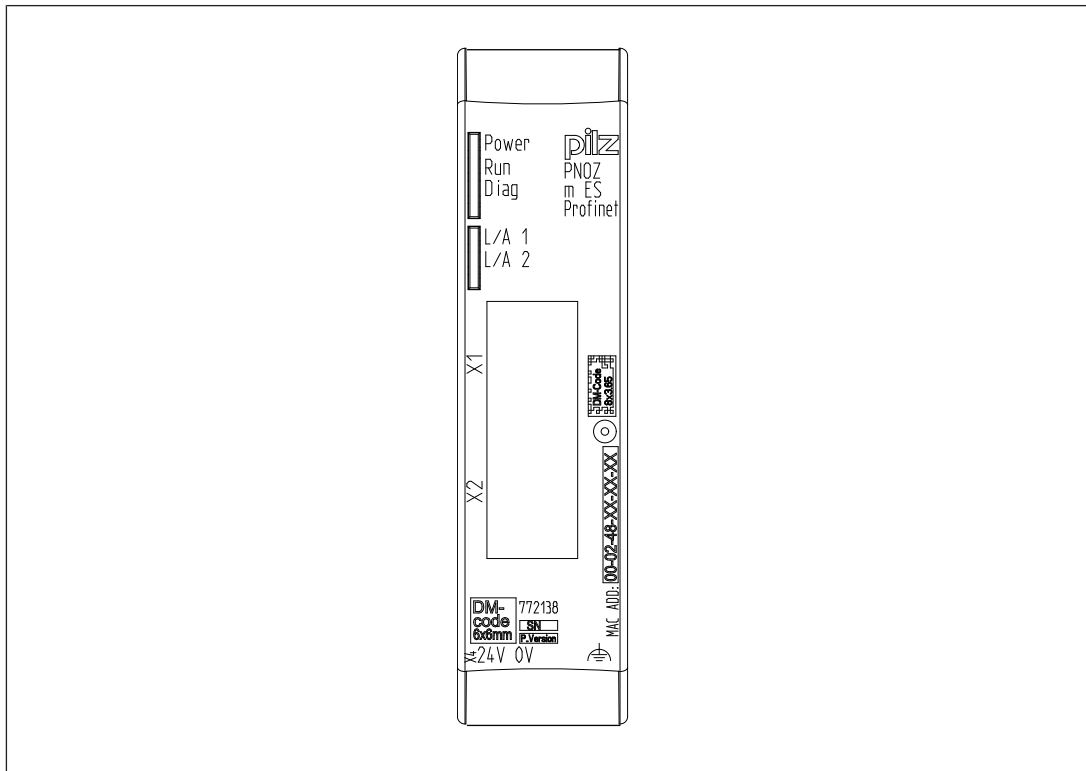

Legend:

- ▶ X1, X2: Profinet interfaces
- ▶ 0 V, 24 V: Supply connections
- ▶ : Functional earth
- ▶ LED:
 - Power
 - Run
 - Diag
 - L/A 1
 - L/A 2

3 Safety

3.1 Intended use

The expansion module PNOZ m ES Profinet is used for communication between the configurable control system PNOZmulti 2 with the PROFINET.

PROFINET is designed for fast data exchange at field level. The expansion module PNOZ m ES Profinet is a passive subscriber (IO device) of the PROFINET. The basic communication functions with the PROFINET conform to the System Description published by the PROFIBUS & PROFINET International (PI) User Group. The central controller (IO controller) reads input information from the IO devices and writes output information to the IO devices as part of each cycle. As well as the cyclical transfer of usable data PROFINET can also be used for diagnostics and commissioning functions. Data traffic is monitored on the IO controller and IO device side.

The expansion module may only be connected to a base unit from the configurable control system PNOZmulti 2 (please refer to the document "PNOZmulti System Expansion" for details of the base units that can be connected).

The configurable control system PNOZmulti 2 is used for the safety-related interruption of safety circuits and is designed for use in:

- ▶ E-STOP equipment
- ▶ Safety circuits in accordance with VDE 0113 Part 1 and EN 60204-1

The expansion module may not be used for safety-related functions.

The following is deemed improper use in particular:

- ▶ Any component, technical or electrical modification to the product
- ▶ Use of the product outside the areas described in this manual
- ▶ Use of the product outside the technical details (see chapter entitled "Technical Details").



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

3.2 System requirements

Please refer to the "Product Modifications" document in the "Version overview" section for details of which versions of the base unit and PNOZmulti Configurator can be used for this product.

3.3 Safety regulations

3.3.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention
- ▶ Have read and understood the information provided in this description under "Safety"
- ▶ And have a good knowledge of the generic and specialist standards applicable to the specific application.

3.3.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended
- ▶ Damage can be attributed to not having followed the guidelines in the manual
- ▶ Operating personnel are not suitably qualified
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.3.3 Disposal

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

3.3.4 For your safety

The unit meets all the necessary conditions for safe operation. However, you should always ensure that the following safety requirements are met:

- ▶ This operating manual only describes the basic functions of the unit. The expanded functions are described in the PNOZmulti Configurator's online help. Only use these functions once you have read and understood the documentations.
- ▶ Do not open the housing or make any unauthorised modifications.
- ▶ Please make sure you shut down the supply voltage when performing maintenance work (e.g. exchanging contactors).

4 Function description

4.1 Operation

The virtual inputs and outputs that are to be transferred via PROFINET are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ m ES Profinet are connected via a jumper.

After the supply voltage is switched on or the PNOZmulti 2 is reset, the expansion module PNOZ m ES Profinet is configured and started automatically.

LEDs indicate the status of the fieldbus module PROFINET.

The configuration is described in detail in the PNOZmulti Configurator's online help.



INFORMATION

The GSDML file is available on the Internet at www.pilz.de.

4.2 Data access

The data is structured as follows:

- ▶ Virtual data
 - Input area PNOZ m ES Profinet
The values for the inputs are set as an output in the Master and transferred to the PNOZmulti 2.
 - Output range PNOZ m ES Profinet
The outputs are configured in the PNOZmulti Configurator and transferred to the Master.
- ▶ Status of LEDs:
Bit 0 ... 4: Status of LEDs on the PNOZmulti 2
 - Bit 0: OFAULT
 - Bit 1: IFAULT
 - Bit 2: FAULT
 - Bit 3: DIAG
 - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the usable data: 2 Bytes with the table number and segment number are sent by the Master for access to the usable data table (15 Bytes are returned to the Master).

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

4.3 Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFINET inputs/outputs

Virtual inputs and outputs can be requested or set directly via the following objects. Each element can be selected individually in the master control system, e.g. virtual inputs i0-31. The data width is also established this way.

Input data

The Master writes to the virtual inputs of the PNOZmulti 2.


Description	Input data from PNOZmulti 2
Virtual inputs i0 – i31	4 Input Bytes
Virtual inputs i32 – i63	4 Input Bytes
Virtual inputs i64 – i95	4 Input Bytes
Virtual inputs i96 – i127	4 Input Bytes

Output data

The Master reads the virtual outputs of the PNOZmulti 2.

Description	Output data from PNOZmulti 2
Virtual outputs o0 – o31	4 Output Bytes
Virtual outputs o32 – o63	4 Output Bytes
Virtual outputs o64 – o95	4 Output Bytes
Virtual outputs o96 – o127	4 Output Bytes

4.4 Block diagram

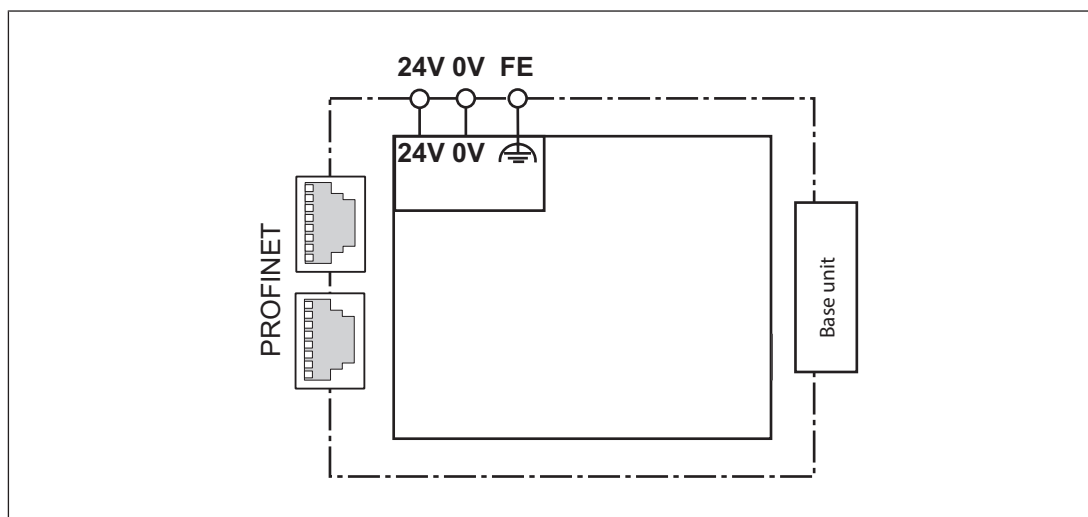

5 Installation

5.1 General installation guidelines

- ▶ The unit should be installed in a single mounting area with a protection type of at least IP54.
- ▶ Fit the safety system to a horizontal mounting rail. The venting slots must face upwards and downwards. Other mounting positions could destroy the safety system.
- ▶ Use the locking slide on the rear of the unit to attach it to a mounting rail.
- ▶ In environments exposed to heavy vibration, the unit should be secured using a fixing element (e.g. retaining bracket or end angle).
- ▶ Open the locking slide before lifting the unit from the mounting rail.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.
- ▶ The ambient temperature of the PNOZmulti units in the control cabinet must not exceed the figure stated in the technical details, otherwise air conditioning will be required.



NOTICE

Damage due to electrostatic discharge!


Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

5.2 Connect the base unit and expansion modules

Connect the base unit and the expansion module as described in the operating instructions for the base units.

- ▶ Connect the black/yellow terminator to the expansion module.
- ▶ Install the expansion module in the position in which it is configured in the PNOZmulti Configurator.

5.3 Dimensions

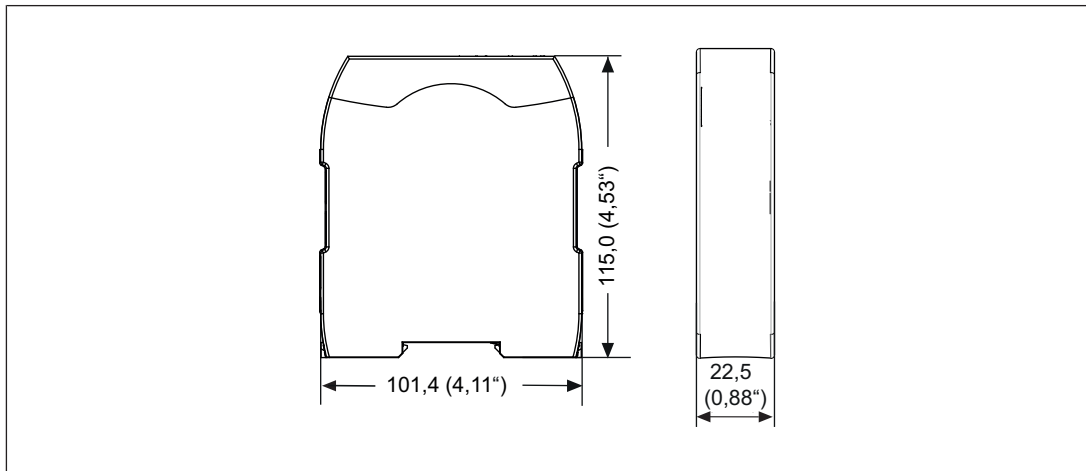

6 Commissioning


6.1 General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with PROFINET.

Please note:

- ▶ Information given in the "Technical details [📖 20]" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to PROFINET:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
Ensure the requirements for the industrial use of PROFINET are met, as stated in the Installation Manual published by the User Group.
- ▶ External measures must be used to connect the terminal  to the functional earth, when the mounting rail is **not** connected to the functional earth.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective separation.



CAUTION!

Only connect and disconnect the expansion module when the supply voltage is switched off.



NOTICE


When installing, you must refer to the guidelines published by the RPOFIBUS & PROFINET International (PI) User Group.

6.2 Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ Terminal **24 V**: + 24 V DC
- ▶ Terminal **0 V**: 0 V

6.3 Interface assignment

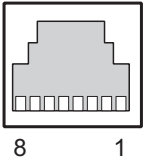RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

6.4 Preparing for operation

6.4.1 Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.



NOTICE

For the commissioning and after every program change, you must check whether the safety devices are functioning correctly.

6.4.2 Set IP address


There are two options:

- ▶ Automatic assignment of the IP address with the Dynamic Host Configuration Protocol (DHCP)
- ▶ Assignment of the IP address by the IO controller before system startup based on the unique unit name.

6.4.3 Install GSDLM file

Install the GSDML file. You can find the GSDML file in the Internet at www.pilz.de.

6.5 Connection example

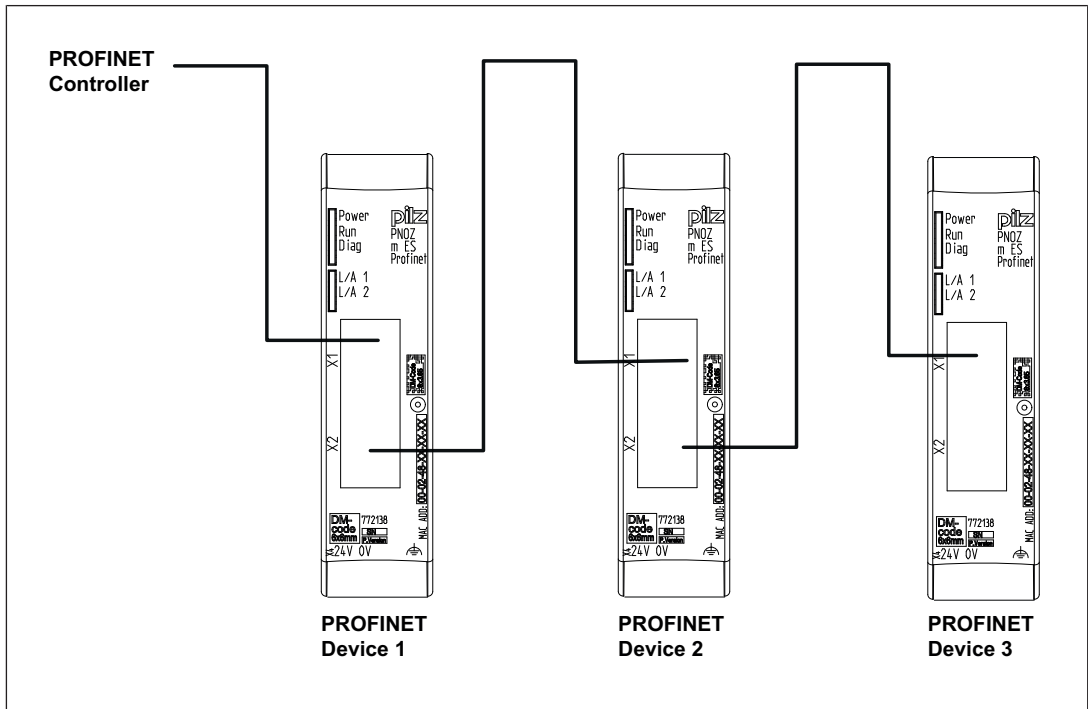

7 Operation

7.1 Messages

When the supply voltage is switched on, the PNOZmulti safety system copies the configuration from the chip card.

The LEDs "POWER", "DIAG", "FAULT", "IFAULT" and "OFAULT" will light up on the base unit.







The expansion module PNOZ m ES Profinet is configured and started automatically. The LEDs "RUN" and "ERR" display the status of the PNOZ m ES Profinet at the PROFINET.

If the expansion module PNOZ m ES Profinet does not receive a configuration from the base unit for a period of 30 s, the expansion module PNOZ m ES Profinet connects to the IO controller and "RUN" status is displayed on PROFINET. The error message "No Connection with Base Module" is sent to the IO controller.

Legend:

	LED on
	LED flashes
	LED off

LED			Meaning
Power		Green	Supply voltage is present
			Supply voltage is not present
Run		Green	The connection to the IO controller is established, the IO controller is in RUN condition
		green, 1x	The connection to the IO controller is established, the IO controller is in STOP condition
		Green	Device identification (LED "Diag" also flashes green)
			No connection to IO controller
Diag		Red	Diagnostic data available (maintenance required or error)
		Green	Device identification (LED "Run" also flashes green)
		Red	No device name assigned

LED			Meaning
L/A1		Green	Bus connection available at X1
		Green	Data traffic present at X1
			Bus connection is not available at X1
L/A2		Green	Bus connection available at X2
		Green	Data traffic present at X2
			Bus connection not available at X2

8 Technical details

General	
Approvals	CCC, CE, EAC (Eurasian), cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24,0 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Supply voltage	
Current consumption	60 mA
Power consumption	1,4 W
Max. power dissipation of module	1,50 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	PROFINET
Unit type	IO-Device
Transmission rates	100 MBit/s
Connection	2 x RJ45
Galvanic isolation	Yes
Environmental data	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	10,0 - 150,0 Hz
Acceleration	1g
Shock stress	
In accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Max. operating height above sea level	2000 m

Environmental data	
Airgap creepage	
In accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
In accordance with the standard	EN 60529
Mounting area (e.g. control cabinet)	IP54
Housing	IP20
Terminals	IP20
Potential isolation	
Potential isolation between	Fieldbus and module voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V
Mechanical data	
Mounting position	Horizontal on top hat rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PC
Front	PC
Top	PC
–	Green
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,50 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,20 - 1,50 mm², 24 - 16 AWG
Torque setting with screw terminals	0,50 Nm
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,20 - 2,50 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length	9,0 mm
Dimensions	
Height	101,4 mm
Width	22,5 mm
Depth	110,4 mm
Weight	86 g

Where standards are undated, the 2014-04 latest editions shall apply.

9 Order reference

9.1 Module

Product type	Features	Order no.
PNOZ m ES Profinet	Fieldbus module, PROFINET for PNOZmulti 2	772 138

9.2 Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 1 piece	779 260

Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783 542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783 543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793 542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793 543

Support

Technical support is available from Pilz round the clock.

Americas

Brazil
+55 11 97569-2804
Canada
+1 888-315-PILZ (315-7459)
Mexico
+52 55 5572 1300
USA (toll-free)
+1 877-PILZUSA (745-9872)

Asia

China
+86 21 60880878-216
Japan
+81 45 471-2281
South Korea
+82 31 450 0680

Australia

+61 3 95446300

Europe

Austria
+43 1 7986263-0
Belgium, Luxembourg
+32 9 3217575
France
+33 3 88104000
Germany
+49 711 3409-444
Ireland
+353 21 4804983
Italy
+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-30

The Netherlands

+31 347 320477

Turkey

+90 216 5775552

United Kingdom

+44 1536 462203

You can reach our international hotline on:

+49 711 3409-444

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

Energy saving by Pilz



The 4-fold safety of automation

COMPONENTS
SYSTEMS
SERVICES

Technical Ecological
Personal Economical



Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Tel.: +49 711 3409-0
Fax: +49 711 3409-133
info@pilz.com
www.pilz.com

pilz
the spirit of safety

CMSE, InduraNET p, PAS4000, PAScal, PASconfig, Pilz, PIT, PLID, PMCPrimo, PMCProtego, PMCTendo, PMD, PMI, PNOZ, Primo, PSEN, PSS, PVS, Safety SafetyYE, SafetyNET p, the spirit of safety, are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.