

# SIEMENS

## SITRANS P

### Pressure transmitter SITRANS P200

#### Compact Operating Instructions


Introduction	1
Safety instructions	2
Description	3
Installing/mounting	4
Connecting	5
Commissioning	6
Service and maintenance	7
Technical specifications	8
Dimension drawings	9
Product documentation and support	A


7MF1565


## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.

 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.

 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.

<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens Aktiengesellschaft. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Table of contents

<b>1</b>	<b>Introduction</b> .....	<b>5</b>
1.1	Purpose of this documentation .....	5
1.2	Checking the consignment.....	5
1.3	Transportation and storage .....	5
1.4	Notes on warranty .....	6
<b>2</b>	<b>Safety instructions</b> .....	<b>7</b>
2.1	Prerequisites for safe use.....	7
2.1.1	Laws and directives .....	7
2.1.2	Conformity with European directives .....	7
2.1.3	Conformity with UK directives .....	8
2.2	Improper device modifications.....	8
2.3	Requirements for special applications .....	8
2.4	Use in hazardous areas.....	9
<b>3</b>	<b>Description</b> .....	<b>11</b>
3.1	Application .....	11
3.2	Hardware configuration .....	11
3.3	Layout of the nameplate .....	12
<b>4</b>	<b>Installing/mounting</b> .....	<b>15</b>
4.1	Basic safety instructions .....	15
4.2	Additional notes on installation of explosion protection devices .....	16
4.3	Installation .....	16
<b>5</b>	<b>Connecting</b> .....	<b>17</b>
5.1	Basic safety instructions .....	17
5.1.1	Grounding for Ex (explosion protection) devices .....	17
5.2	Electrical connections .....	19
5.3	Connecting with IO-Link interface .....	20
5.3.1	Sensor mode .....	20
5.3.2	IO Device Description (IODD) .....	20
5.3.3	IO-Link Version / Profile .....	21
5.3.4	Electrical connection .....	21
<b>6</b>	<b>Commissioning</b> .....	<b>23</b>
6.1	Correction of zero point and span.....	23
<b>7</b>	<b>Service and maintenance</b> .....	<b>25</b>
7.1	Basic safety instructions .....	25

7.2	Maintenance.....	25
7.3	Return procedure .....	25
7.4	Disposal.....	26
<b>8</b>	<b>Technical specifications .....</b>	<b>27</b>
8.1	General technical specifications.....	27
8.2	Certificates and approvals.....	30
8.2.1	Explosion protection .....	30
<b>9</b>	<b>Dimension drawings .....</b>	<b>31</b>
9.1	Dimensional drawings process connections .....	31
9.2	Dimensional drawings electrical connections.....	32
<b>A</b>	<b>Product documentation and support .....</b>	<b>33</b>
A.1	Product documentation .....	33
A.2	Technical support.....	34
	<b>Index .....</b>	<b>35</b>

# Introduction


## 1.1 Purpose of this documentation

These instructions contain all information required to commission and use the device. Read the instructions carefully prior to installation and commissioning. In order to use the device correctly, first review its principle of operation.

The instructions are aimed at persons mechanically installing, connecting and commissioning the device, as well as service and maintenance engineers.

## 1.2 Checking the consignment

1. Check the packaging and the delivered items for visible damages.
2. Report any claims for damages immediately to the shipping company.
3. Retain damaged parts for clarification.
4. Check the scope of delivery by comparing your order to the shipping documents for correctness and completeness.

 <b>WARNING</b>
<b>Using a damaged or incomplete device</b>
Risk of explosion in hazardous areas.
<ul style="list-style-type: none"> <li>• Do not use damaged or incomplete devices.</li> </ul>

## 1.3 Transportation and storage

To guarantee sufficient protection during transport and storage, observe the following:

- Keep the original packaging for subsequent transportation.
- Devices/replacement parts should be returned in their original packaging.
- If the original packaging is no longer available, ensure that all shipments are properly packaged to provide sufficient protection during transport. Siemens cannot assume liability for any costs associated with transportation damages.

<b>NOTICE</b>
<b>Insufficient protection during storage</b>
The packaging only provides limited protection against moisture and infiltration.
<ul style="list-style-type: none"> <li>• Provide additional packaging as necessary.</li> </ul>

Special conditions for storage and transportation of the device are listed in Technical specifications (Page 27).

## 1.4 Notes on warranty

The contents of this manual shall not become part of or modify any prior or existing agreement, commitment or legal relationship. The sales contract contains all obligations on the part of Siemens as well as the complete and solely applicable warranty conditions. Any statements regarding device versions described in the manual do not create new warranties or modify the existing warranty.


The content reflects the technical status at the time of publishing. Siemens reserves the right to make technical changes in the course of further development.

## Safety instructions

### 2.1 Prerequisites for safe use

This device left the factory in good working condition. In order to maintain this status and to ensure safe operation of the device, observe these instructions and all the specifications relevant to safety.

Observe the information and symbols on the device. Do not remove any information or symbols from the device. Always keep the information and symbols in a completely legible state.

Symbol	Explanation
	Consult operating instructions

#### 2.1.1 Laws and directives

Observe the safety rules, provisions and laws applicable in your country during connection, assembly and operation. These include, for example:

- National Electrical Code (NEC - NFPA 70) (USA)
- Canadian Electrical Code (CEC Part I) (Canada)

Further provisions for hazardous area applications are for example:

- IEC 60079-14 (international)
- EN 60079-14 (EU and UK)

#### 2.1.2 Conformity with European directives

The CE mark on the device is a sign of conformity with the following European directives:

Electromagnetic compatibility EMC 2014/30/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.
Atmosphère explosible ATEX 2014/34/EU	Directive of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to equipment and protective systems intended for use in potentially explosive atmospheres.
2011/65/EU RoHS	Directive of the European Parliament and of the Council on the restriction of the use of certain hazardous substances in electrical and electronic equipment

2.3 Requirements for special applications

The standards applied can be found in the EC declaration of conformity for the device.


2.1.3 Conformity with UK directives

The UKCA marking on the device shows conformity with the following UK regulations:

Electromagnetic Compatibility SI 2016/1091	Electromagnetic Compatibility Directive 2016
Explosive Atmospheres SI 2016/1107	Directive for Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres 2016
Directive on the Restriction of the Use of Certain Hazardous Substances SI 2012/3032	Directive on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment 2012

The applicable regulations can be found in the UKCA declaration of conformity of the specific device.

2.2 Improper device modifications

 <b>WARNING</b>
<b>Improper device modifications</b> Risk to personnel, system, and environment can result from modifications to the device, particularly in hazardous areas. <ul style="list-style-type: none"><li>• Only carry out modifications that are described in the instructions for the device. Failure to observe this requirement cancels the manufacturer's warranty and the product approvals. Do not operate the device after unauthorized modifications.</li></ul>

2.3 Requirements for special applications

Due to the large number of possible applications, each detail of the described device versions for each possible scenario during commissioning, operation, maintenance or operation in systems cannot be considered in the instructions. If you need additional information not covered by these instructions, contact your local Siemens office or company representative.

**Note**

**Operation under special ambient conditions**


We highly recommend that you contact your Siemens representative or our application department before you operate the device under special ambient conditions as can be encountered in nuclear power plants or when the device is used for research and development purposes.

## 2.4 Use in hazardous areas

### Qualified personnel for hazardous area applications

Persons who install, connect, commission, operate, and service the device in a hazardous area must have the following specific qualifications:

- They are authorized, trained or instructed in operating and maintaining devices and systems according to the safety regulations for electrical circuits, high pressures, aggressive, and hazardous media.
- They are authorized, trained, or instructed in carrying out work on electrical circuits for hazardous systems.
- They are trained or instructed in maintenance and use of appropriate safety equipment according to the pertinent safety regulations.

 <b>WARNING</b>
<b>Use in hazardous area</b> Risk of explosion. <ul style="list-style-type: none"><li>• Only use equipment that is approved for use in the intended hazardous area and labeled accordingly.</li><li>• Do not use devices that have been operated outside the conditions specified for hazardous areas. If you have used the device outside the conditions for hazardous areas, make all Ex markings unrecognizable on the nameplate.</li></ul>


---

### Note

#### Unsuitable for use in hazardous areas

The devices with IO-Link interface are not approved for use in hazardous areas.

---

 <b>WARNING</b>
<b>Loss of safety of device with type of protection "Intrinsic safety Ex i"</b> If the device or its components have already been operated in non-intrinsically safe circuits or the electrical specifications have not been observed, the safety of the device is no longer ensured for use in hazardous areas. There is a risk of explosion. <ul style="list-style-type: none"><li>• Connect the device with type of protection "Intrinsic safety" solely to an intrinsically safe circuit.</li><li>• Observe the specifications for the electrical data on the certificate and/or in Technical specifications (Page 27).</li></ul>



## Description

### 3.1 Application

The pressure transmitter is used for measuring the gauge pressure and absolute pressure of gases and liquids in the following industrial areas:

- Mechanical engineering
- Power engineering
- Water supply
- Shipbuilding
- Chemical industry
- Pharmaceuticals

### 3.2 Hardware configuration

#### **Device structure without explosion protection**





The pressure transmitter consists of a piezo-resistive measuring cell with a diaphragm installed in a stainless steel enclosure. It can be electrically connected using a plug complying with EN 175301-803-A (IP65), a round plug M12 (IP67), a cable (IP67) or a fast-fit cable gland (IP67). The output signal is 4 to 20 mA, 0 to 10 V or an IO-Link interface.

#### **Device structure with explosion protection**

The pressure transmitter consists of a piezo-resistive measuring cell with a diaphragm installed in a stainless steel enclosure. It can be connected electrically with a connector fulfilling EN 175301-803-A (IP65) or a round plug M12 (IP67). The output signal amounts to between 4 and 20 mA.


### 3.3 Layout of the nameplate

Table 3-1 Overview of the different variants

			
<b>7MF1565 with plug in accordance with EN 175301-803-A</b> <ul style="list-style-type: none"> <li>Type 7MF1565-.....-1..1</li> <li>Type 7MF1565-.....-5..1</li> </ul>	<b>7MF1565 with plug M12x1</b> <ul style="list-style-type: none"> <li>Type 7MF1565-.....-2..1</li> </ul>	<b>7MF1565 with cable (2 m)</b> <ul style="list-style-type: none"> <li>Type 7MF1565-.....-3..1</li> </ul>	<b>7MF1565 with fast-fit cable gland</b> <ul style="list-style-type: none"> <li>Type 7MF1565-.....-4..1</li> </ul>

### 3.3 Layout of the nameplate

Manufacturing date is visible on the label of the pressure transmitter, e.g.: LKK-YMDD-XXX-XX-XXX

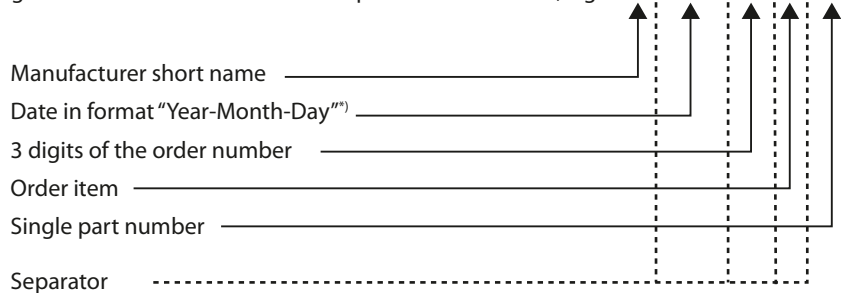

**\*) Decoding for year, month and day information**

Code	Year
A	2010
B	2011
C	2012
D	2013
E	2014
F	2015
H (G) <sup>1)</sup>	2016
J	2017
K	2018
L	2019
M	2020

Code	Year
N	2021
P	2022
R	2023
S	2024
T	2025
U	2026
V	2027
W	2028
X	2029

Code	Month
1	January
2	February
3	March
4	April
5	May
6	June
7	July
8	August
9	September
O	October
N	November
D	December

Code	01-31
Day of month	1st to 31st day

<sup>1)</sup> Conforming to DIN EN 60062

<sup>2)</sup> The letter G is not permitted for new applications since it deviates from DIN EN 60062. It serves only for coding back.

*Description*

---

*3.3 Layout of the nameplate*

# Installing/mounting

## 4.1 Basic safety instructions

### DANGER

#### Pressure applications

Danger to personnel, system and environment will result from improper disassembly.

- Never attempt to loosen, remove, or disassemble process connection while vessel contents are under pressure.

### NOTICE

#### Direct sunlight

Damage to device.

The device can overheat or materials become brittle due to UV exposure.

- Protect the device from direct sunlight.
- Make sure that the maximum permissible ambient temperature is not exceeded. Refer to the information in Technical specifications (Page 27).

### WARNING

#### Wetted parts unsuitable for the process media

Risk of injury or damage to device.

Hot, toxic and corrosive media could be released if the wetted parts are unsuitable for the process medium.

- Ensure that the material of the device parts wetted by the process medium is suitable for the medium. Refer to the information in Technical specifications (Page 27).

---

### Note

#### Material compatibility

Siemens can provide you with support concerning selection of parts wetted by process media. However, you are responsible for the selection of parts. Siemens accepts no liability for faults or failures resulting from incompatible materials.

---

## 4.2 Additional notes on installation of explosion protection devices

Operation is permitted only when connected to certified intrinsically-safe resistive circuits with the following maximum values:

$U_i$	$\leq 30 \text{ V}$
$I_i$	$\leq 100 \text{ mA}$
$P_i$	$\leq 750 \text{ mW}$ Internal inductance $L_i = 0 \text{ nH}$ Internal capacitance $C_i = 0 \text{ nF}$

A maximum ambient air temperature  $T_a$  of  $-25 \text{ }^\circ\text{C}$  to  $+85 \text{ }^\circ\text{C}$  is permitted for the pressure transmitter.

### Use as a resource belonging to Category 1/2:


The pressure transmitters can be mounted in the wall separating the area with Category 1 requirements (Zone 0) and the area with Category 2 requirements (Zone 1). In this case, the process connection must be adequately sealed in compliance with IEC/EN 60079-26, Clause 4.3, for example by providing degree of protection IP67 in compliance with EN60529. The supply must be effected via intrinsically safe circuits with type of protection ia. The measuring cell may only be used for flammable materials to which the diaphragms of the measuring cells are adequately resistant both chemically and in terms of corrosion.

## 4.3 Installation


- The location of the device has no influence on the measurement accuracy.
- Before installation, compare the process data with the data of the rating plate.
- The medium being measured must be suitable for the parts of the pressure transmitter in contact with the medium.
- The overload limit must not be exceeded.
- Connect the devices with fixed cable installation.


# Connecting

## 5.1 Basic safety instructions

 <b>WARNING</b>
<p><b>Unsuitable cables, cable glands and / plug-in connectors</b></p> <p>Danger of explosion in hazardous areas.</p> <ul style="list-style-type: none"> <li>• Only use cable glands/plug-in connectors that fulfill the requirements of the relevant type of protection.</li> <li>• Only use cables that have been designed for an ambient temperature of at least 20 K higher.</li> <li>• Close cable openings for electrical connections that are unused.</li> <li>• When replacing cable glands, only use ones of the same type.</li> <li>• After installation check that the cables are seated firmly.</li> </ul>

### 5.1.1 Grounding for Ex (explosion protection) devices

 <b>WARNING</b>
<p><b>Lack of equipotential bonding</b></p> <p>Danger of explosion through compensating currents or ignition currents through lack of equipotential bonding.</p> <ul style="list-style-type: none"> <li>• Make sure that equipotential bonding exists for the device.</li> <li>• The pressure transmitter must be connected to the equipotential bonding system of the plant via the metal housing (process connection) or the ground conductor of the plug.</li> </ul> <p><b>Exception:</b> It may be permissible to omit connection of the equipotential bonding for devices with type of protection "Intrinsic safety Ex i".</p>

 <b>WARNING</b>
<p><b>Improper power supply</b></p> <p>Risk of explosion in hazardous areas as result of incorrect power supply.</p> <ul style="list-style-type: none"> <li>• Connect the device in accordance with the specified power supply and signal circuits. The relevant specifications can be found in the certificates, in Technical specifications (Page 27) or on the nameplate.</li> </ul>

 **WARNING**

**Unprotected cable ends**

Risk of explosion through unprotected cable ends in hazardous areas.

- Protect unused cable ends in accordance with IEC/EN 60079-14.

 **WARNING**

**Connecting device in an energized state / Disconnecting device from power supply in an energized state**

Risk of explosion in hazardous areas.

- In hazardous areas, only connect the device in a de-energized state and only disconnect the device from the power supply in a de-energized state.

**Exceptions:**

- Devices with the "Intrinsic safety Ex i" type of protection may also be connected or disconnected in an energized state in hazardous areas.
- Exceptions for "Non-sparking nA" type of protection (Zone 2) are regulated in the relevant certificate.

---

**Note**

**Electromagnetic compatibility (EMC)**

You can use this device in industrial environments, households and small businesses.

Metal enclosures ensure improved electromagnetic protection from high frequency radiation. This protection can be increased by grounding the enclosure.

---

---

**Note**

**Improvement of interference immunity**

- Lay signal cables separately to cables with voltages > 60 V.
  - Use cable with twisted wires.
  - Keep the device and the cables at a distance from strong electromagnetic fields.
- 

---

**Note**

**Power supply**

The device should only be supplied with limited energy according to UL61010-1 Second Edition, Section 9.3 or LPS (Low Power Supply) in accordance with UL60950-1 or Class 2 in accordance with UL1310 or UL1585.

---

## 5.2 Electrical connections

Legend			
$I_o$	Output current	$U_B$	Auxiliary power
$U_o$	Output voltage	$\perp$	Grounding
		$R_L$	Load


Connecting with current output and connector in accordance with EN 175301	Connecting with voltage output and connector in accordance with EN 175301
<p>Connection 1(+), 2(-)</p>	<p>Connection 1(+U<sub>B</sub>), 2(-), 3(+U<sub>o</sub>)</p>

Connecting with current output and connector M12x1	Connecting with voltage output and connector M12x1
<p>Connection 1(+), 3(-)</p>	<p>Connection 1(+U<sub>B</sub>), 3(-), 4(+U<sub>o</sub>)</p>

Connecting with the IO-Link variant
<p>L+: 18-33 V DC L-: GND C/Q: IO-Link / Switching output DI/DQ: Switching output</p> <p>L +   C / Q 1 ● 4 ● 2 ● 3 ● DI / DQ   L -</p>

Connecting with current output and cable	Connecting with voltage output and cable
<p>Connection Brown (+), Green (-)</p>	<p>Connection Brown (+U<sub>B</sub>), White (-), Green (+U<sub>o</sub>)</p>


5.3 Connecting with IO-Link interface

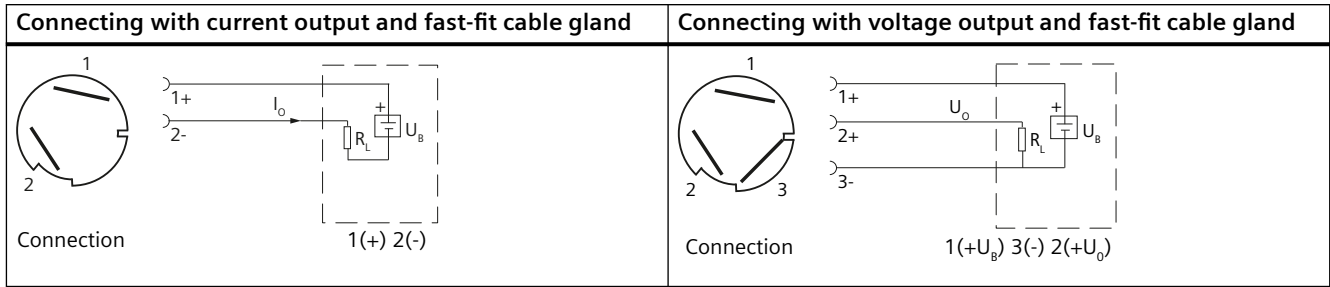


**Version with explosion protection: 4 to 20 mA**

The grounding connection is conductively bonded to the transmitter enclosure.

**Connecting with current output and connector in accordance with EN 175301 (Ex)**

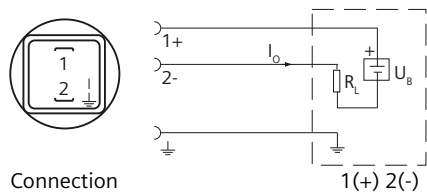

**Connecting with current output and connector M12x1 (Ex)**

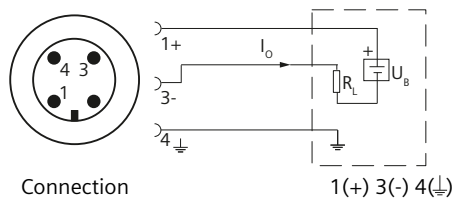

## 5.3 Connecting with IO-Link interface

### 5.3.1 Sensor mode

The sensor can be used in IO-Link mode (IOL) as well as in standard-IO mode (SIO). In IO-Link mode, communication takes place via Pin 4 — in SIO mode, Pin 4 is a normal switching output. There is an additional switching output on Pin 2, which is independent of the mode.

### 5.3.2 IO Device Description (IODD)

The IODD for the sensor can be downloaded at IODDfinder (<https://io-link.com/de/IODDfinder/IODDfinder.php>)


### 5.3.3 IO-Link Version / Profile

The sensor conforms to the standardized IO-Link specification V1.1, IO-Link Common Profile V1.0 and the Smart Sensor Profile ED2.

For more information, please refer to IO-Link (<https://io-link.com/>)


### 5.3.4 Electrical connection

The M12 plug is used as electrical connector. The sensor is intended only for port class A.

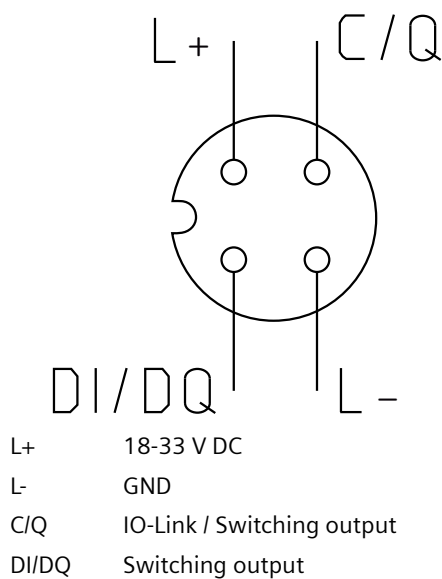



# Commissioning

 <b>WARNING</b>
<b>Improper commissioning in hazardous areas</b>
Device failure or risk of explosion in hazardous areas.
<ul style="list-style-type: none"><li>• Do not commission the device until it has been mounted completely and connected in accordance with the information in Technical specifications (Page 27).</li><li>• Before commissioning take the effect on other devices in the system into account.</li></ul>


## 6.1 Correction of zero point and span


The transmitter is preset to the specific measuring range by the manufacturer. An additional setting is not possible.



# Service and maintenance

## 7.1 Basic safety instructions


 <b>WARNING</b>
<b>Impermissible repair of explosion protected devices</b> Risk of explosion in hazardous areas <ul style="list-style-type: none"><li>• Repair must be carried out by Siemens authorized personnel only.</li></ul>

 <b>WARNING</b>
<b>Use of a computer in a hazardous area</b> If the interface to the computer is used in the hazardous area, there is a risk of explosion. <ul style="list-style-type: none"><li>• Ensure that the atmosphere is explosion-free (hot work permit).</li></ul>

## 7.2 Maintenance

The transmitter is maintenance-free.

Check the start of scale value of the device from time to time.

 <b>WARNING</b>
<b>Impermissible accessories and spare parts</b> Risk of explosion in areas subject to explosion hazard. <ul style="list-style-type: none"><li>• Only use original accessories or original spare parts.</li><li>• Observe all relevant installation and safety instructions described in the instructions for the device or enclosed with the accessory or spare part.</li></ul>

## 7.3 Return procedure

To return a product to Siemens, see Return to Siemens (<https://support.industry.siemens.com/cs/ww/en/sc/3098>).

Contact your Siemens representative to clarify if a product is repairable, and how to return it. They can also help with quick repair processing, a repair cost estimate, or a repair report/ cause of failure report.

**NOTICE**

**Decontamination**

The product may have to be decontaminated before it is returned. Your Siemens contact person will let you know for which products this is required.

## 7.4 Disposal



Devices described in this manual should be recycled. They may not be disposed of in the municipal waste disposal services according to the Directive 2012/19/EC on waste electronic and electrical equipment (WEEE).

Devices can be returned to the supplier within the EC and UK, or to a locally approved disposal service for eco-friendly recycling. Observe the specific regulations valid in your country.

Further information about devices containing batteries can be found at: Information on battery/product return (WEEE) (<https://support.industry.siemens.com/cs/document/109479891/>)

**Note**

**Special disposal required**

The device includes components that require special disposal.

- Dispose of the device properly and environmentally through a local waste disposal contractor.

# Technical specifications

## 8.1 General technical specifications

<b>Mode of operation</b>		
Measuring range $\geq 1 \dots \leq 60$ bar		Piezoresistive with ceramic diaphragm
<b>Input</b>		
<b>Measured variable input</b>		
<b>Measuring range for gauge pressure</b>	<b>Overload limit</b>	<b>Burst pressure</b>
0 ... 1 bar g	$\geq -1 / \leq 2.5$ bar g	> 2.5 bar
0 ... 1.6 bar g	$\geq -1 / \leq 4$ bar g	> 4 bar
0 ... 2.5 bar g	$\geq -1 / \leq 6.25$ bar g	> 6.25 bar
0 ... 4 bar g	$\geq -1 / \leq 10$ bar g	> 10 bar
0 ... 6 bar g	$\geq -1 / \leq 15$ bar g	> 15 bar
0 ... 10 bar g	$\geq -1 / \leq 25$ bar g	> 25 bar
0 ... 16 bar g	$\geq -1 / \leq 40$ bar g	> 40 bar
0 ... 25 bar g	$\geq -1 / \leq 62.5$ bar g	> 62.5 bar
0 ... 40 bar g	$\geq -1 / \leq 100$ bar g	> 100 bar
0 ... 60 bar g	$\geq -1 / \leq 150$ bar g	> 150 bar
<b>Measuring range for absolute pressure</b>	<b>Overload limit</b>	<b>Burst pressure</b>
0 ... 0.6 bar a	$\geq 0 / \leq 2.5$ bar a	> 2.5 bar a
0 ... 1 bar a	$\geq 0 / \leq 2.5$ bar a	> 2.5 bar a
0 ... 1.6 bar a	$\geq 0 / \leq 4$ bar a	> 4 bar a
0 ... 2.5 bar a	$\geq 0 / \leq 6.25$ bar a	> 6.25 bar a
0 ... 4 bar a	$\geq 0 / \leq 10$ bar a	> 10 bar a
0 ... 6 bar a	$\geq 0 / \leq 15$ bar a	> 15 bar a
0 ... 10 bar a	$\geq 0 / \leq 25$ bar a	> 25 bar a
0 ... 16 bar a	$\geq 0 / \leq 40$ bar a	> 40 bar a
<b>Measuring range for gauge pressure (only for U.S. market)</b>	<b>Overload limit</b>	<b>Burst pressure</b>
0 ... 15 psi g	$\geq -5.8 / \leq 35$ psi g	> 35 psi
3 ... 15 psi g	$\geq -5.8 / \leq 35$ psi g	> 35 psi
0 ... 20 psi g	$\geq -5.8 / \leq 50$ psi g	> 50 psi
0 ... 30 psi g	$\geq -5.8 / \leq 80$ psi g	> 80 psi
0 ... 60 psi g	$\geq -11.5 / \leq 140$ psi g	> 140 psi
0 ... 100 psi g	$\geq -14.5 / \leq 200$ psi g	> 200 psi
0 ... 150 psi g	$\geq -14.5 / \leq 350$ psi g	> 350 psi

8.1 General technical specifications

<b>Input</b>		
0 ... 200 psi g	$\geq -14.5 / \leq 550$ psi g	> 550 psi
0 ... 300 psi g	$\geq -14.5 / \leq 800$ psi g	> 800 psi
0 ... 500 psi g	$\geq -14.5 / \leq 1400$ psi g	> 1400 psi
0 ... 750 psi g	$\geq -14.5 / \leq 2000$ psi g	> 2000 psi
0 ... 1 000 psi g	$\geq -14.5 / \leq 2000$ psi g	> 2000 psi
Measuring range for absolute pressure (only for U.S. market)	Overload limit	Burst pressure
0 ... 10 psi a	$\geq 0 / \leq 35$ psi a	> 35 psi
0 ... 15 psi a	$\geq 0 / \leq 35$ psi a	> 35 psi
0 ... 20 psi a	$\geq 0 / \leq 50$ psi a	> 50 psi
0 ... 30 psi a	$\geq 0 / \leq 80$ psi a	> 80 psi
0 ... 60 psi a	$\geq 0 / \leq 140$ psi a	> 140 psi
0 ... 100 psi a	$\geq 0 / \leq 200$ psi a	> 200 psi
0 ... 150 psi a	$\geq 0 / \leq 350$ psi a	> 350 psi
0 ... 200 psi a	$\geq 0 / \leq 550$ psi a	> 550 psi
0 ... 300 psi a	$\geq 0 / \leq 800$ psi a	> 800 psi
<b>Output</b>		
Current signal	4 ... 20 mA	
• Load	$(U_B - 10 \text{ V}) / 0.02 \text{ A}$	
• Auxiliary power $U_B$	7 ... 33 V DC <u>    </u> (10 ... 30 V for Ex)	
• Current consumption $I_B$	$\leq 20$ mA	
Voltage signal	0 ... 10 V DC <u>    </u>	
• Load	$\geq 10$ k $\Omega$	
• Auxiliary power $U_B$	12 ... 33 V DC <u>    </u>	
• Current consumption	< 7 mA at 10 k $\Omega$	
IO-Link interface characteristic	Linear rising L+: 18-33 V DC L-: GND C/Q: IO-Link / Switching output DI/DQ: Switching output Pressure transmitter is only approved for port class A.	
<b>Measuring accuracy</b>		
Measurement deviation at 25 °C (77 °F), including characteristic curve deviation, hysteresis and repeatability	<ul style="list-style-type: none"> <li>• Typical: 0.25% of full-scale value</li> <li>• Maximum: 0.5% of full-scale value</li> <li>• With EMC radiation, the deviation in the measurement accuracy is up to 1%.</li> </ul>	
Set-up time T99	< 5 ms	
Long-term drift	<ul style="list-style-type: none"> <li>• Start of scale value and measuring span</li> </ul> 0.25% of full-scale value/year	



8.2 Certificates and approvals





Mechanical construction	
• Connector enclosure	• Plastic • CuZn, nickel-plated (M12 plug)
• Cable	PVC spec.

## 8.2 Certificates and approvals

Certificates and approvals	
Classification according to Pressure Equipment Directive (PED 2014/68/EU)	For gases of Fluid Group 1 and liquids of Fluid Group 1; meets the requirements of Article 4 Para. 3 (good engineering practice)
CRN (Canada)	
Underwriters Laboratories (UL)	
Shipbuilding <sup>1</sup>	<ul style="list-style-type: none"> <li>• Lloyd’s Register of Shipping (LR)</li> <li>• Den Norske Veritas-Germanischer Lloyd (DNV-GL)</li> <li>• American Bureau of Shipping (ABS)</li> <li>• Bureau Veritas (BV)</li> </ul>
Drinking water approval (ACS)	

<sup>1</sup> Sensors manufactured in China do not have shipbuilding approval. This applies exclusively to sensors that are purchased from Siemens China and have the inscription "Made in China".

### 8.2.1 Explosion protection

Explosion protection in accordance with ATEX	
Intrinsic safety "i" (only with current output)	<ul style="list-style-type: none"> <li>•  II 1/2 G Ex ia IIC T4 Ga/Gb</li> <li>•  II 1/2 D Ex ia IIIC T125 °C Da/Db</li> </ul>
EC type-examination certificate	SEV 10 ATEX 0146
Connection to certified intrinsically-safe resistive circuits with maximum values	$U_i \leq 30 \text{ VDC}$ ; $I_i \leq 100 \text{ mA}$ ; $P_i \leq 0.75 \text{ W}$
Effective internal inductance and capacitance for versions with plugs according to EN 175301-803-A and M12 plugs	$L_i = 0 \text{ nH}$ ; $C_i = 0 \text{ nF}$
Explosion protection in accordance with UKEX CML 22 UKEX 2174	
Intrinsic safety "i" (only with current output)	<ul style="list-style-type: none"> <li>•  II 1/2 G Ex ia IIC T4 Ga/Gb</li> <li>•  II 1/2 D Ex ia IIIC T125 °C Da/Db</li> </ul>

## Dimension drawings

### 9.1 Dimensional drawings process connections

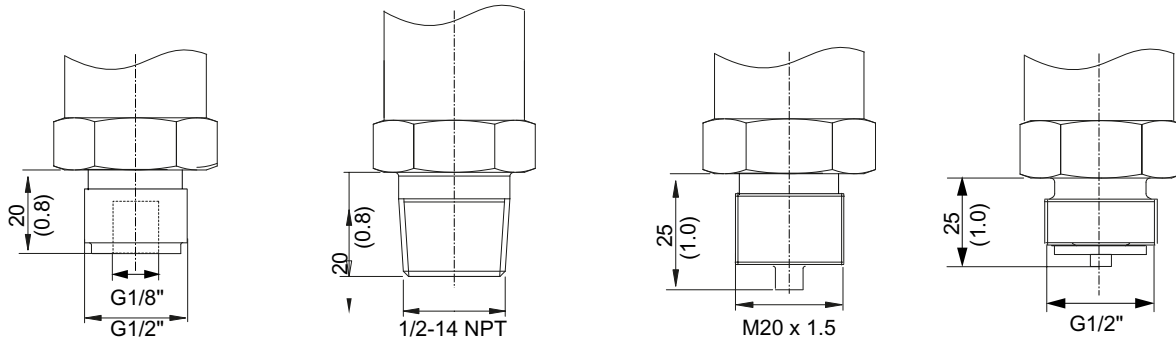


Figure 9-1 Max. 30 Nm

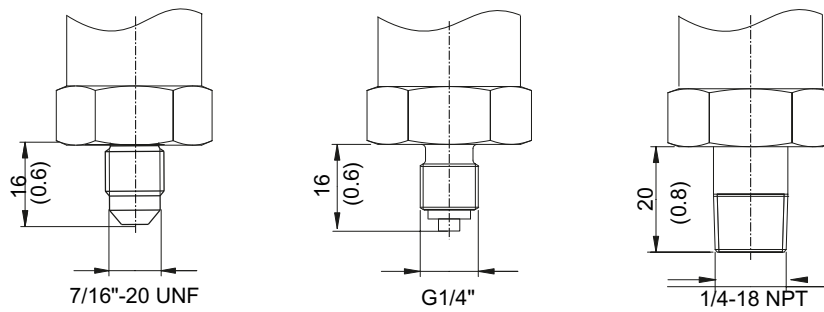


Figure 9-2 Max. 20 Nm

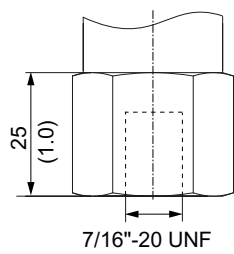


Figure 9-3 Max. 20 Nm




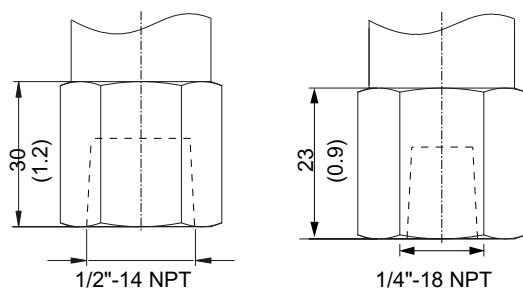


Figure 9-4 Max. 20 Nm; Pmax ≤ 60 bar

## 9.2 Dimensional drawings electrical connections

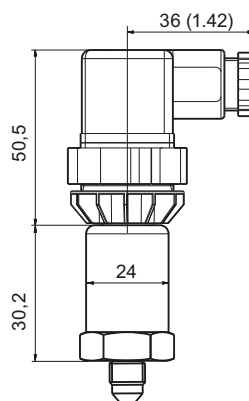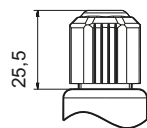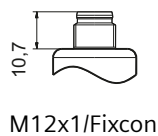

M16x1.5 or 0.5-14 NPT

The SITRANS P200 transmitters can optionally be supplied with an IO-Link electrical connection; see ordering data in Catalog FI01, Section 1.

A description of the IO-Link interface can be found in the separate operating instructions IO-Link interface.

# Product documentation and support

## A.1 Product documentation

Process instrumentation product documentation is available in the following formats:

- Certificates (<http://www.siemens.com/processinstrumentation/certificates>)
- Downloads (firmware, EDDs, software) (<http://www.siemens.com/processinstrumentation/downloads>)
- Catalog and catalog sheets (<http://www.siemens.com/processinstrumentation/catalogs>)
- Manuals (<http://www.siemens.com/processinstrumentation/documentation>)  
You have the option to show, open, save, or configure the manual.
  - "Display": Open the manual in HTML5 format
  - "Configure": Register and configure the documentation specific to your plant
  - "Download": Open or save the manual in PDF format
  - "Download as html5, only PC": Open or save the manual in the HTML5 view on your PC

You can also find manuals with the Mobile app at Industry Online Support (<https://support.industry.siemens.com/cs/ww/de/sc/2067>). Download the app to your mobile device and scan the device QR code.

### Product documentation by serial number

Using the PIA Life Cycle Portal, you can access the serial number-specific product information including technical specifications, spare parts, calibration data, or factory certificates.

#### Entering a serial number

1. Open the PIA Life Cycle Portal (<https://www.pia-portal.automation.siemens.com>).
2. Select the desired language.
3. Enter the serial number of your device. The product documentation relevant for your device is displayed and can be downloaded.

To display factory certificates, if available, log in to the PIA Life Cycle Portal using your login or register.

#### Scanning a QR code

1. Scan the QR code on your device with a mobile device.
2. Click "PIA Portal".

To display factory certificates, if available, log in to the PIA Life Cycle Portal using your login or register.

## A.2 Technical support

### Technical support

If this documentation does not completely answer your technical questions, you can enter a Support Request (<http://www.siemens.com/automation/support-request>).

For help creating a support request, view this video here ([www.siemens.com/opensr](http://www.siemens.com/opensr)).

Additional information on our technical support can be found at Technical Support (<http://www.siemens.com/automation/csi/service>).

### Service & support on the Internet

In addition to our technical support, Siemens offers comprehensive online services at Service & Support (<http://www.siemens.com/automation/serviceandsupport>).

### Contact

If you have further questions about the device, contact your local Siemens representative at Personal Contact (<http://www.automation.siemens.com/partner>).

To find the contact for your product, go to "all products and branches" and select "Products & Services > Industrial automation > Process instrumentation".

Contact address for business unit:

Siemens AG  
Digital Industries  
Process Automation  
Östliche Rheinbrückenstr. 50  
76187 Karlsruhe, Germany

# Index

## C

Catalog  
    catalog sheets, 33  
Certificates, 7, 33  
Conformity with UK directives, 8  
Customer Support, (Refer to Technical support)

## D

Disposal, 26  
Downloads, 33

## H

Hazardous area  
    Laws and directives, 7  
    Qualified personnel, 9  
Hotline, (Refer to Support request)

## L

Laws and directives  
    Disassembly, 7  
    Personel, 7

## M

Manuals, 33  
Modifications  
    correct usage, 8  
    improper, 8

## Q

Qualified personnel, 9

## R

Return procedure, 26

## S

Scope of delivery, 5

Service, 34  
Service and support  
    Internet, 34  
Support, 34  
Support request, 34

## T

Technical support, 34  
    partner, 34  
    personal contact, 34  
Test certificates, 7

## W

Warranty, 6

