

Features

- 3-wire or 4-wire connection (with or without neutral).
- Optionally monitors upper and lower voltage & frequency in 3-phase circuits.
- Allows monitoring of phase sequence, failure and asymmetry incl. neutral fail (only in 4-wire connection).
- The device is supplied from monitored voltage.
- Both output contacts can be set individually.
- Measures real effective value of AC voltage (True RMS).
- Optional response delay of the output contact to the measured fault state or transition from the fault state to the OK state incl. delayed response of output contacts after connecting the power supply.
- Possibility of automatic or manual transition from fault state (memory).
- Optional closing or opening of the output contact when measuring a fault state (Fail Safe / Non Fail Safe).
- Password protection against unauthorized changes to settings.
- Digital backlit display with the possibility of monitoring the current state of the network, incl. possible failures.
- The last five fault states are stored in a history that can be viewed retrospectively.
- Sealable transparent cover for display and controls.

RS PRO Voltage Monitoring Relay

766925



RS PRO is the own brand of RS. The RS PRO Seal of Approval is your assurance of professional quality, a guarantee that every part is rigorously tested, inspected, and audited against demanding standards. Making RS PRO the Smart Choice for our customers.

Product description

- 3-wire or 4-wire connection (with or without neutral).
- Optionally monitors upper and lower voltage & frequency in 3-phase circuits.
- Allows monitoring of phase sequence, failure and asymmetry incl. neutral fail (only in 4-wire connection).
- The device is supplied from monitored voltage.
- Both output contacts can be set individually.
- Measures real effective value of AC voltage (True RMS).
- Optional response delay of the output contact to the measured fault state or transition from the fault state to the OK state incl. delayed response of output contacts after connecting the power supply.
- Possibility of automatic or manual transition from fault state (memory).
- Optional closing or opening of the output contact when measuring a fault state (Fail Safe / Non Fail Safe).
- Password protection against unauthorized changes to settings.
- Digital backlit display with the possibility of monitoring the current state of the network, incl. possible failures.
- The last five fault states are stored in a history that can be viewed retrospectively.
- Sealable transparent cover for display and controls.

Supply

Supply monitored terminals:	L1-L2-L3 (N)
Supply/monitored voltage:	ULN = 3 ~ 90 – 288 V (45-65 Hz) ULL = 3 ~ 155 – 500 V (45-65 Hz)
Consumption (max.):	5 VA

Measuring circuit

Selection of the measured circuit:	Phase voltage - 3 phase, 4 wire Line voltage - 3 phase, 3 wire
Adjustable upper (OV) and lower (UV) voltage levels:	Phase voltage: 90 – 288 VAC Line voltage: 155 – 500 VAC
Upper (HC) / lower (LC) limit voltage:	Phase voltage: 310 VAC / 85 VAC Line voltage: 535 VAC / 150 VA
Adjustable upper (OF) and lower (UF) frequency level:	45 – 65 Hz

Adjustable asymmetry:	Absolute: 5 – 99 VAC Percentage: 2 – 50 %
Adjustable voltage and frequency hysteresis level:	3 – 20 VAC (OV, UV, HC, LC) 0.5 – 2 Hz (OF, UF)
Adjustable hysteresis asymmetry:	Absolute: 3 – 99 VAC Percentage: 2 – 15 %
Accuracy of measured voltage:	+/- 5 V
Accuracy of measured frequency:	+/- 0.3 Hz
Adjustable delay after supply connection P _{on} :	0 – 999 s (HW initialization 250 ms)
Adjustable delay T _{on} :	0.5 – 999 s
Adjustable delay T _{off} :	0.1 – 999 s
Fixed delay:	<100 ms (phase sequence, failure) <200 ms (HC, LC), <500 ms (neutral fail)

Output


Contact type:	2× changeover (AgSnO ₂)
Current rating:	5 A/AC1
Breaking capacity:	1200 VA/AC1, 150 W/DC1
Switching voltage:	240 V AC/30 V DC
Power dissipation (max.):	5 W
Mechanical life:	10.000.000 ops.
Electrical life (AC1):	100.000 ops.

Other information

Operating temperature:	–10 .. +60 °C (14 .. 140 °F)
Storage temperature:	–20 .. +70 °C (–4 .. 158 °F)
Dielectric strength:	AC 4 kV (supply – output)
Operating position:	any
Mounting:	DIN rail EN 60715
Protection degree:	IP20 housing & terminals/IP40 front panel with cover
Overvoltage category:	III.
Pollution degree:	2


Cross-wire section – solid/ stranded with ferrule (mm ²):	max. 1× 2.5, 2× 1.5/ max. 1× 2.5 (AWG 12)
Dimensions:	90 × 36 × 66.5 mm (3.6" × 1.5" × 2.7")
Weight:	132 g (4.7 oz)
Standards:	EN 60255-1, EN 60255-26, EN 60255-27

Description

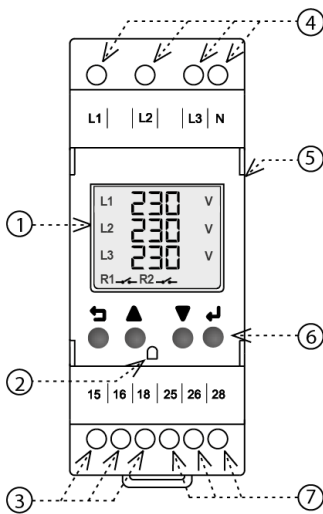


1. Backlit display
2. Place for sealing
3. Output contact RL1 (15-16-18)
4. Supply/monitored voltage terminals (L1-L2-L3-N)
5. Transparent opening cover
6. Control buttons
7. Output contact RL2 (25-26-28)

Description of display

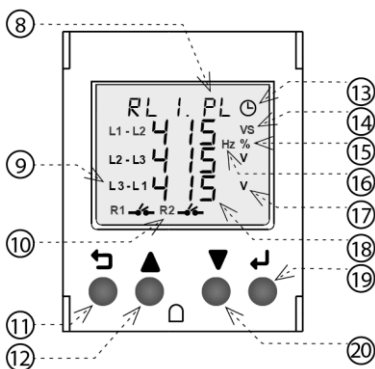

8. Fault status window and function menu in settings
9. Indication of phase or line voltage
10. Status of output contacts RL1 and RL2
11. ESCAPE button
12. UP button – ▲
13. Indication of a running delay
14. Delay in seconds
15. Asymmetry in percent
16. Frequency in hertz
17. Voltage in volts
18. Current state of voltage or other configurable parameter
19. ENTER button
20. DOWN button ▼

Overvoltage - undervoltage

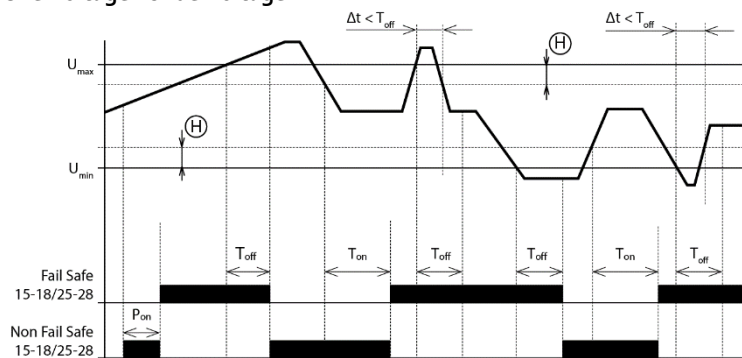

Graph legend:

P_{on} - Power ON delay (delay after power supply connection)
 $P_{on} = 0 - 999$ s (min. 250 ms hardware initialization)
 T_{on} - ON Delay (delay to OK state)
 $T_{on} = 0,5 - 999$ s
 T_{off} - OFF delay (delay to fault state)
 $T_{off} = 0,1 - 999$ s
 T_{off} - Adjustable for OV, UV, OF, UF & asymmetry faults
 T_{off} - Phase sequence, failure <100ms;
 Neutral fail <500ms

Δt - Duration of the fault state

(H) Hysteresis

After the supply/monitored voltage is connected, the delay P_{on} starts timing - during the timing the output contact is in a fault state - in the FAIL SAFE mode it is open. After the delay, if the monitored voltage is in the range $U_{min} \dots U_{max}$, the output contact closes.

If the monitored voltage exceeds the set value U_{max} , the time delay to the fault state (T_{off}) starts. After the delay, the output contact opens.

If the monitored voltage falls below the U_{max} value reduced by the set hysteresis, the time delay start to OK state (T_{on}). After the delay, the output contact closes.


If the duration of the fault state (Δt) is shorter than the set value T_{off} , the status of the output contact does not change.

If the monitored voltage falls below the value U_{min} , the time delay to the fault state (T_{off}) starts. After the delay, the output contact opens.

If the monitored voltage exceeds the value U_{min} increased by the set hysteresis, the time delay start to the OK state (T_{on}). After the delay, the output contact closes.

If the duration of the fault state (Δt) is shorter than the set value (T_{off}), the status of the output contact does not change.

Phase sequence

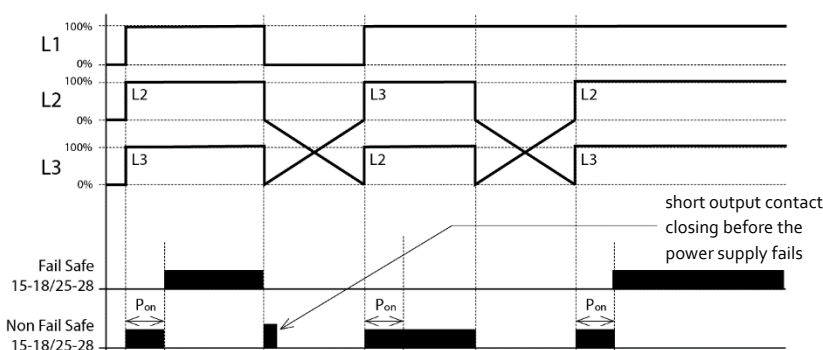


Graph legend:

P_{on} - Power ON delay (delay after power supply connection)
 $P_{on} = 0 - 999$ s (min. 250 ms hardware initialization)

After the supply/monitored voltage is connected, the delay P_{on} starts timing - during the timing the output contact is in a fault state - in FAIL SAFE mode it is open. After the delay, if the phase sequence is correct, the output contact closes.

If the phase sequence is incorrect after the P_{on} delay, the output contact remains open (fault state).

Asymmetry, phase failure

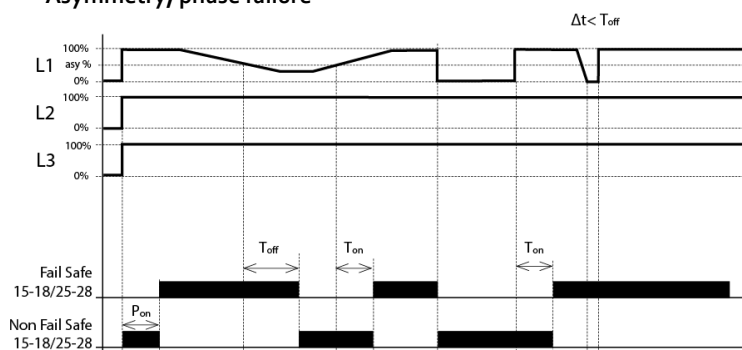

Graph legend:

P_{on} - Power ON delay (delay after power supply connection)

P_{on} = 0 - 999 s (min. 250 ms hardware initialization)

T_{on} - ON Delay (delay to OK state)

T_{on} = 0,5 - 999 s

T_{off} - OFF delay (delay to fault state)

T_{off} = 0,1 - 999 s

T_{off} - Adjustable for OV, UV, OF, UF & asymmetry faults

T_{off} - Phase sequence, failure <100ms;

Neutral fail <500ms

Δt - Duration of the fault state

After the supply/monitored voltage is connected, the delay P_{on} starts timing - during the timing the output contact is in a fault state - in the FAIL SAFE mode it is open. After the delay, if the phase asymmetry is lower than the set value (absolute or percentage), the output contact closes.

If the phase asymmetry exceeds the set value, the time delay to the fault state (T_{off}) begins. After the delay, the output contact opens.

If the phase asymmetry falls below the set value, the time delay starts to OK state (T_{on}). After the delay, the output contact closes.

If the duration of the fault state (Δt) is shorter than the set value T_{off}, the status of the output contact does not change.

If a phase failure occurs, the time delay to the fault state (T_{off}) begins. After the delay, the output contact opens.

If the phase failure resumes, the time delay starts to OK state (T_{on}). After the delay, the output contact closes.

If the duration of the fault state (Δt) is shorter than the set value T_{off}, the status of the output contact does not change.