Separate Controller onizer **Bar Type / Nozzle Type**







Space Saving

Height 37 mm x Width 30 mm

Nozzle type IZT43 Series

Height 32 mm x Width 16 mm





Potential amplitude: 25 V or less*1

Rapid static neutralisation:

Fastest time **0.1** s^{*2}

Static neutralisation is possible even when air is not being supplied.

New IO-Link Compatible

16 mm

- ON/OFF with a single communication line*1 (Periodic transmission of set values and status for up to 4 channels)
- Reading of the device information and parameter batch settings are possible.
- *1 Wiring with an auxiliary power line is required separately.

	Series	Туре	Application	IO-Link
	IZT42 Dual AC		For reducing the potential amplitude	•
Bar	IZT41	AC	For maintaining a constant offset voltage	•
	IZT40	Standard	Simple operation by just turning the power on	_
Nozzle	IZT43	AC	For maintaining a constant offset voltage	•

^{*1} IZT42 installation height: 300 mm

Conditions: Discharge time from 1000 V to 100 V

Object to be neutralised: Charged plate (150 mm x 150 mm, Capacitance 20 pF)

Installation distance: 100 mm (High speed static neutralisation cartridge, Tungsten electrode needle with air purge)

Bar length: 1120 mm





^{*2} IZT40, 41

Dual AC Type IZT42 Series (Potential amplitude reduction specification)



Potential amplitude: 25 V or less*

Rapid static neutralisation: 0.1 s*2

- *1 IZT42 installation height: 300 mm
- *2 IZT40, 41

Conditions: Discharge time from 1000 V to 100 V


Object to be neutralised: Charged plate (150 mm x 150 mm, Capacitance 20 pF)

Installation distance: 100 mm (High speed static neutralisation cartridge, Tungsten electrode needle with air purge)


Bar length: 1120 mm

The potential amplitude can be reduced with SMC's original dual AC type sensor.

Static neutralisation in consideration of damage to a device which is sensitive to electrostatic discharge (ESD) can be achieved. The potential amplitude applied to the applicable workpiece is reduced even if the workpiece is mounted within close proximity of the ionizer.

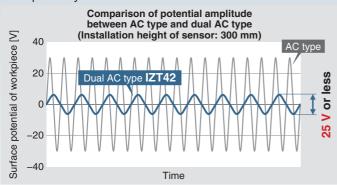


Application Examples For the static neutralisation of glass substrates

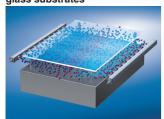

Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate


For the static neutralisation of electric substrates

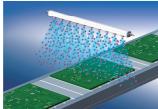

- · Prevents element disruption due to discharge
- · Prevents the adhesion of dust


Dual AC type IZT42

+ ions and - ions are discharged at the same time to allow the + and - ions to reach the workpiece evenly, thereby reducing the potential amplitude.

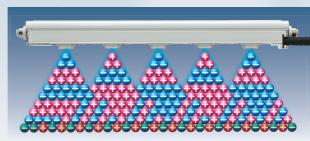

AC type IZT40, 41, 43

+ ion and - ion layers reach the workpiece alternately, which increases the potential amplitude.

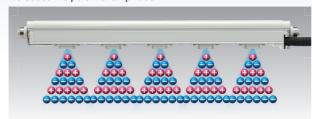


AC Type IZT41, 43 Series





With auto balance function

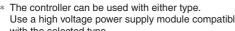








- Emitter contamination detection continually displayed and output
- Individual ON/OFF command from an external input signal

With auto balance function

The sensor is installed within the ionizer body and may be mounted anywhere.

The offset voltage (ion balance) in the static neutralisation area is controlled so that the voltage is maintained at a constant value by monitoring the ions emitted from the ionizer using the ground line.

Effect of auto balance (Image)

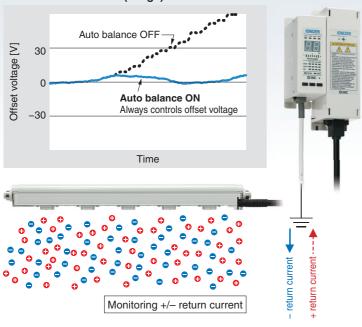




Standard Type IZT40 Series




• Simple operation: Can be controlled by powering the ionizer ON






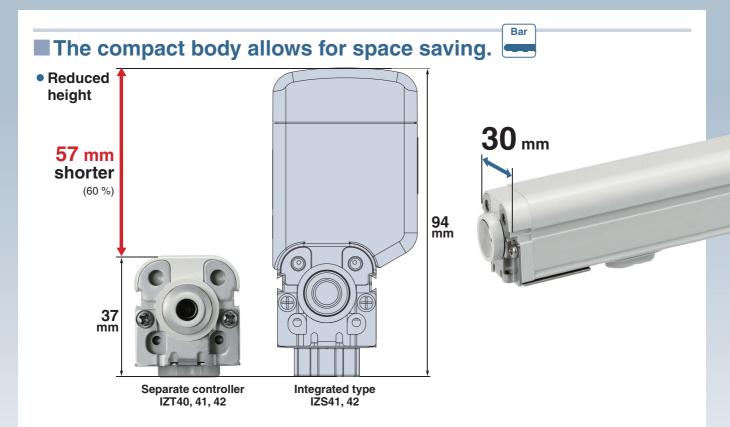

Can be mounted in narrow spaces

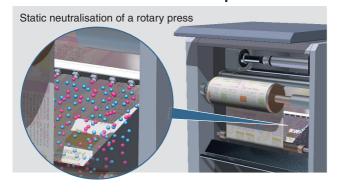

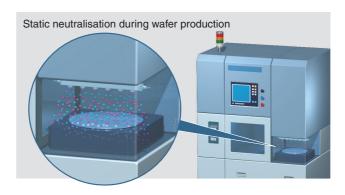

■ Space saving




Thickness 16 mm x Width 53 mm x Height 32 mm


 For the removal of dust and static neutralisation by air blow

For the static neutralisation of plastic bottles and particle elimination



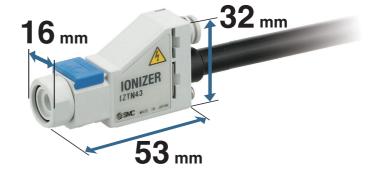



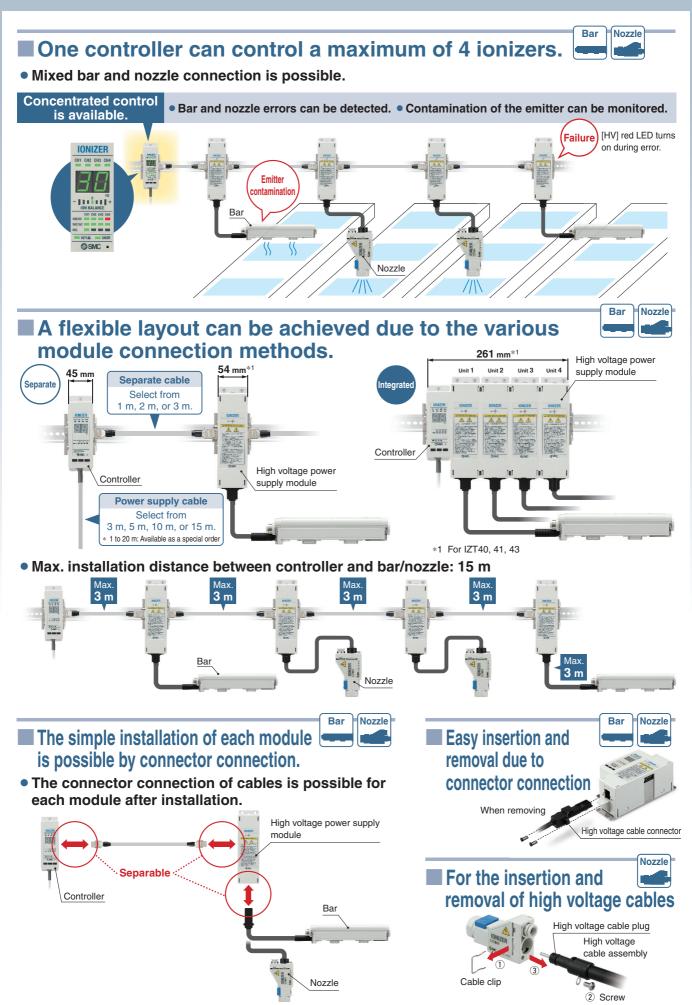


SMC


■ Various low maintenance cartridges can be selected according to the application.



 Minimises the contamination of emitters by discharging compressed air at the surface of the emitters

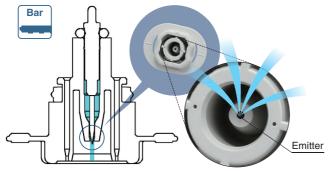

Air covers the emitter.

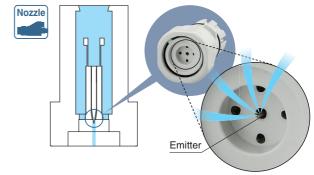


Air covers the emitter.

Emitter cartridge type


High speed static neutralisation cartridge

Long range static neutralisation and dust removal

1 cartridge equipped with 2 assist air nozzles allows for high speed static neutralisation by transferring ionized air produced in the emitter to the workpiece.

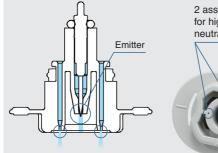


2 assist air nozzles allow for high speed static

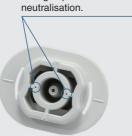

Energy saving static neutralisation cartridge


Short range static neutralisation

Reducing the number of assist nozzles by half for static neutralisation, which does not require a high volume of assist air due to the close distance to the object to be neutralised, allows for energy savings by reducing air consumption.

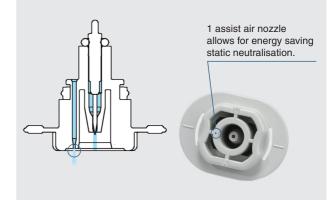





For Bar

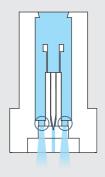



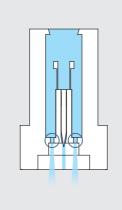




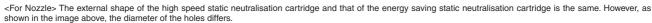

Emitter material type

Tungsten/Single crystal silicon (for silicon wafers)



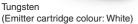





Silicon (Emitter cartridge colour: Grey)




Tungsten (Emitter cartridge colour: White)


Assist air amplified by the sucking in of ambient air (the ejector effect) allows for highly efficient static neutralisation through the efficient transfer of the produced ionized air. Flow rate consumption The ejector effect allows for highly efficient static neutralisation. Nozzle with built-in ejector

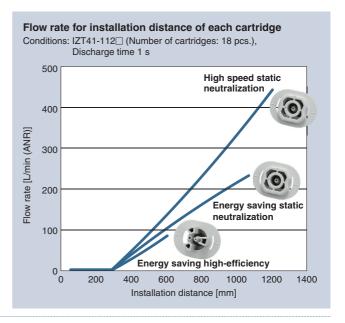

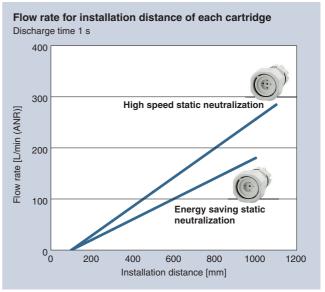



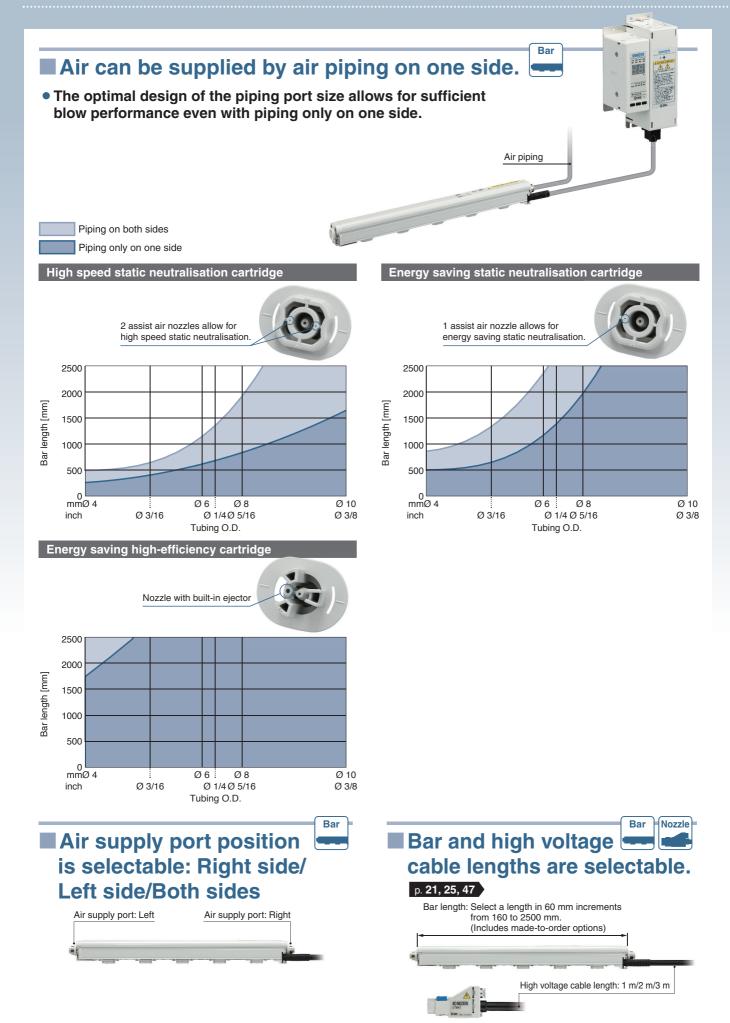

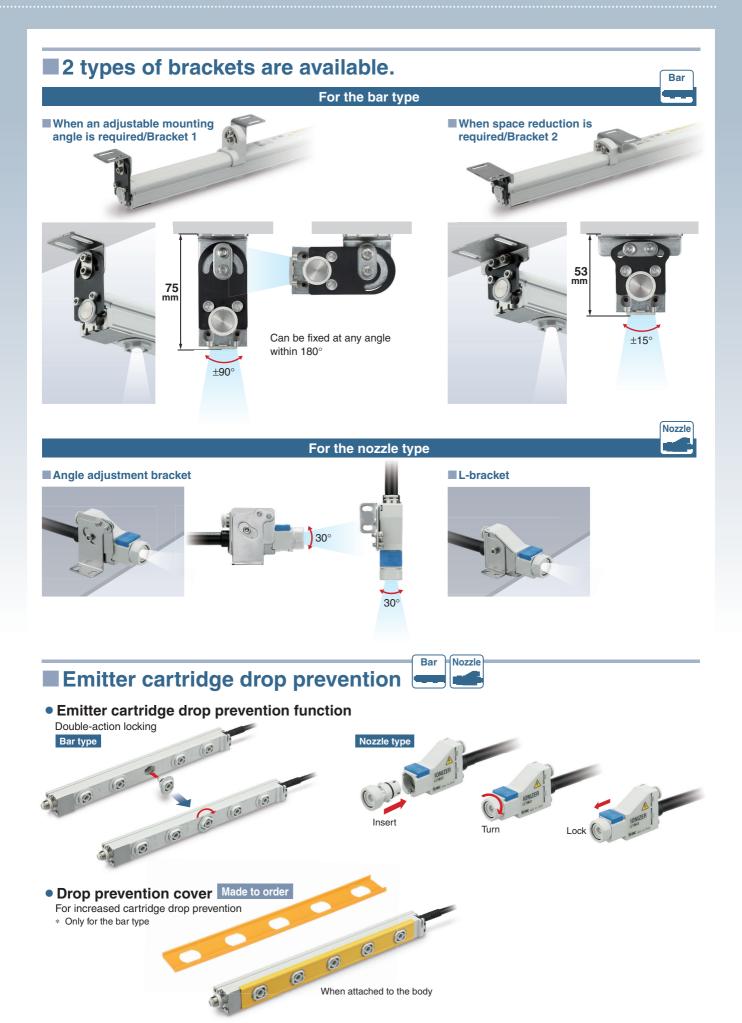



IO-Link is an open communication interface technology between the sensor/ actuator and the I/O terminal that is an international standard: IEC 61131-9.

Visualization of operation and equipment status/Remote monitoring and control by communication



Configuration File (IODD File*1)

· Ion generation ON/OFF signal and offset voltage data


- · Manufacturer · Product part no. · Set value
- *1 IODD File:

IODD is an abbreviation of IO Device Description. This file is necessary for setting the device and connecting it to a master. Save the IODD file on the PC to be used to set the device prior to use

Separate Controller Ionizer Bar Type Ionizer IZT41-L/42-L Series Nozzle Type Ionizer IZT43-L Series

Device settings can be set by the master.

- · Parameter values
- · Control data, etc.

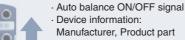

number, etc. · Normal or abnormal device status



IZT41 I7T43

IO-Link Master

6

0 0

Automatic setting function [Data storage function]

When replacing the controller with another of the same type (the same device ID), the parameters (set values) stored in the IO-Link master are automatically copied (set) to the new controller.



Settings are automatically copied when the device is replaced.

setting time and setting errors

Process Data PD IN

Bit offset		03)2	-	01		00	9	-	-	8	9	-	9	
Item	_	H1: et status	CH Initial se		_	H3: et status		14: et status	-	11: neration	-	H2: neration		H3: neration	CH Ion gen	
Bit offset	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80
Item			Reser	vation					CH1: I	on bala	ance (1	0-bit si	gned ir	nteger)		
Bit offset	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64
Item			Reser	vation					CH2: I	on bala	ance (1	0-bit si	gned ir	nteger)		
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
Item			Reser	vation					CH3: I	on bala	ance (1	0-bit si	gned ir	nteger)		
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
Item			Reser	vation					CH4: I	on bala	ance (1	0-bit si	gned ir	nteger)		
Bit offset	3	1	3	0	2	:9	2	8	2	7	2	:6	2	:5	2	4
Item	Error di	agnosis	CPU f (Cont	ailure roller)		oply failure roller)		oply failure age power ply)					Reser	vation		
Bit offset	2	:3	2	2	2	!1	2	0	1	9	1	8	1	7	1	6
Item		11: failure	CFU 1			13: failure		14: failure	CH High v fail	oltage	High v	H2: roltage ure	High v	13: roltage ure	CH High v fail	oltage
Bit offset	1	5	1	4	1	3	1	2	1	1	1	0	(9	8	3
Item		H1: rnal	CH Inte			H3: ernal	CH	H4: rnal	CH	1 1:	CH	H2:	CH	1 3:	CH	14:
Itelli		ation failure							Fan f	ailure	Fan f	ailure	Fan f	ailure	Fan fa	ailure
Bit offset		7	CH			5 1 3:	CH	1		3 -11:		2 H2:		1 -13:	CH	

It is possible to monitor the offset voltage value for each channel with the cyclic (periodic) data.

It is possible to find problems with the equipment in detail for each channel with the cyclic (periodic) data.

Maintenance

Item

CH duplication failure

ו טט_עין																
Bit offset	7	1	7	0	6	9	6	88	6	7	6	6	6	5	6	4
Item	_	OUT Invalid			Rese	rvation				H1: neration		H2: neration		13: neration	CH Ion gen	
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
Item			Reser	vation				CH1: (Offset v	oltage/	adjustr	ment (1	0-bit si	gned ir	nteger)	
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
Item			Reser	vation				CH2: (Offset v	oltage/	adjustr	ment (1	0-bit si	gned ir	nteger)	
Bit offset	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Item	Reservation				CH3: Offset voltage adjustment (10-bit signed integer)											
Bit offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Item			Reser	vation				CH4: (Offset v	oltage	adjustr	ment (1	0-bit si	gned ir	nteger)	

CH duplication failure


Maintenance

CH duplication failure


CH duplication failure

It is possible to adjust the offset voltage for each channel with the cyclic (periodic) data.



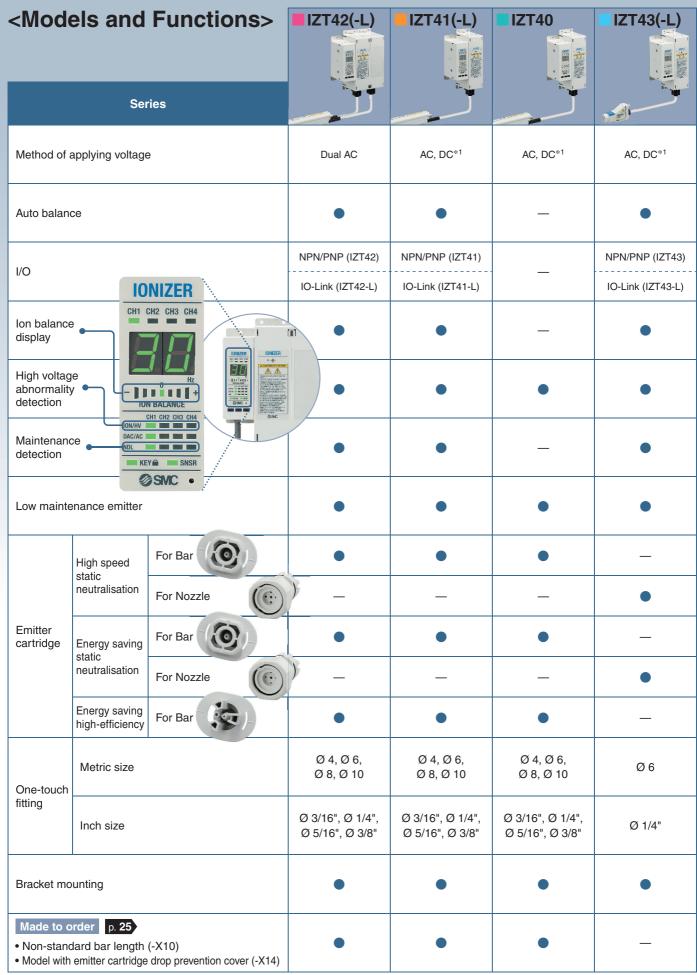


^{*1} Apply cathode or anode to DC.

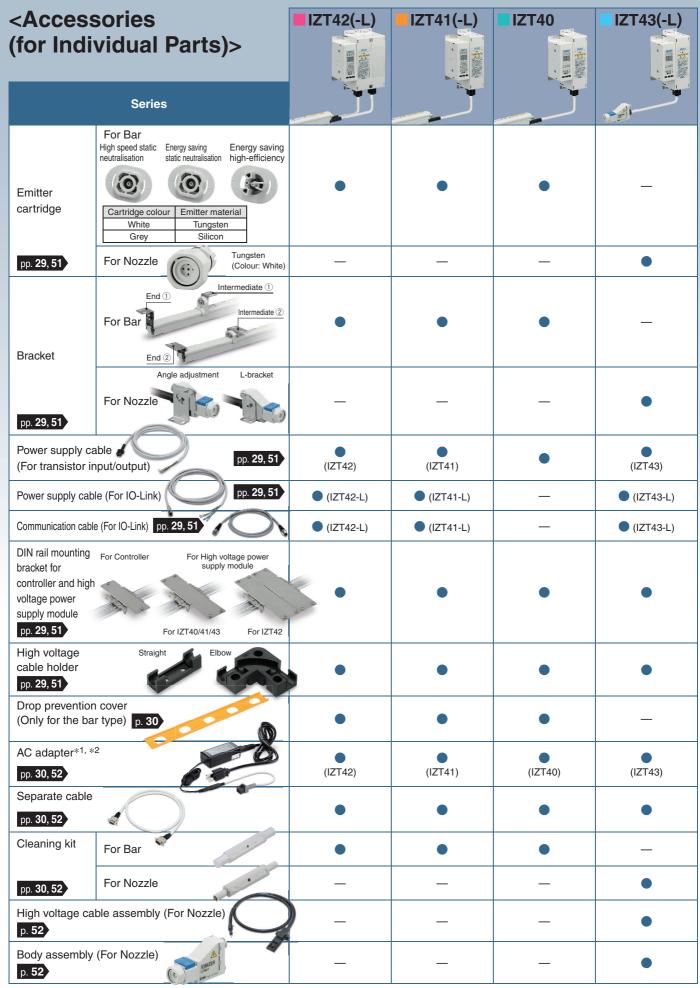

^{*1} Only for use with 1 ionizer bar/nozzle *2 Cannot be used when the input/output specification is IO-Link


<Application Examples: Bar Type>

For the static neutralisation of resin frames

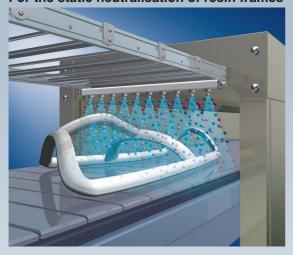

For the static neutralisation of film-molded goods

- Prevents goods from adhering to the conveyer
- · Prevents the dispersion of finished goods

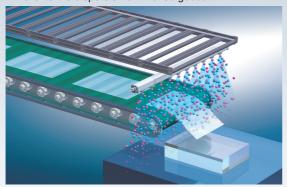


For the static neutralisation of packing films

- Prevents the filled substances from adhering to packing films
- Reduces packing mistakes



For the static neutralisation of glass substrates


 Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate

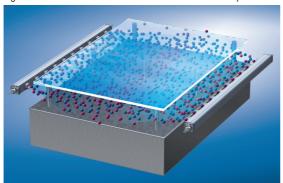




substrate cutting machines

For the static neutralisation of

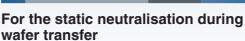


• Prevents breakage due to discharge between wafers and hands

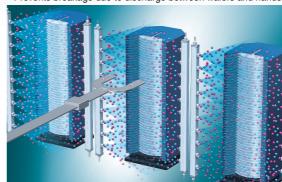

For the static neutralisation of lenses

- Removes dust from lenses
- Prevents the adhesion of dust

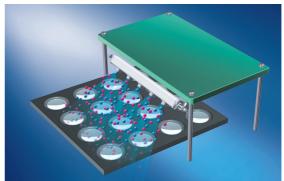




< Application Examples: Nozzle Type>


For the static neutralisation of caps

Removes dust from caps and prevents the adhesion of dust

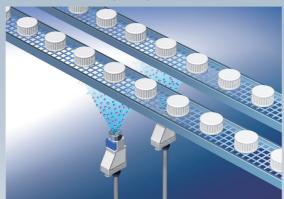


For the static neutralisation of films

- Prevents the adhesion of dust
- Prevents winding failure due to wrinkles, etc.

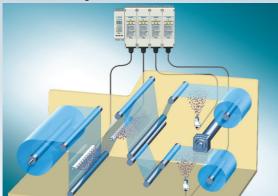


For the static neutralisation of parts feeders

• Prevents the clogging of parts feeders

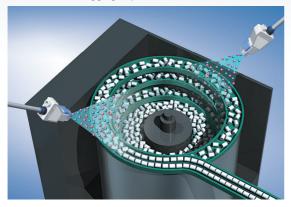


For the removal of dust when detaching from film

Removes dust generated by static electricity when detaching from film

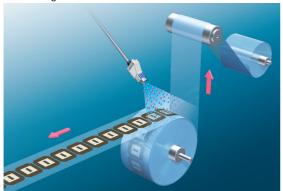


For spot type static neutralisation

- Prevents the electrostatic breakdown of electric parts
- Prevents detachment failure

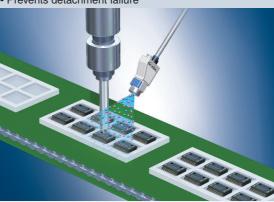


For the static neutralisation of electric substrates

• Prevents the electrostatic breakdown of electric parts

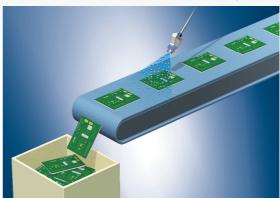


For the prevention of punching press sticking

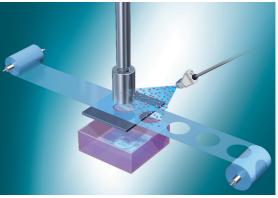

CONTENTS

Separate Controller Bar Type/Nozzle Type Ionizer IZT40/41(-L)/42(-L)/43(-L) Series

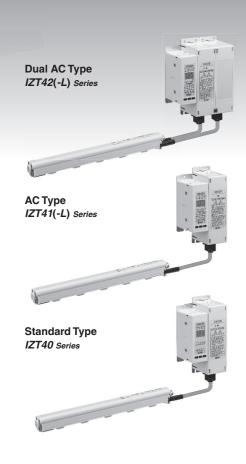



Separate Controller	
Bar Type Ionizer IZT40/41(-L)/42(-L) Series	
Technical Data: Static Neutralisation Characteristics	
1 Installation Distance and Discharge Time	p. 15
② Static Neutralisation Range	
③ Potential Amplitude	p. 19
Pressure — Flow Rate Characteristics	p. 20
How to Order	·
Bar + High Voltage Power Supply Module + Controller	p. 21
For Individual Parts (Bar/High Voltage Power Supply Module/Controller)	-
Made to Order	
Specifications	p. 26
Construction	p. 28
Accessories (for Individual Parts)	p. 29
Accessories Sold Separately	-
Wiring: IZT40, 41(-L), 42(-L)	-
Wiring Circuit: IZT40	-
Wiring Circuit: IZT41, 42	
Wiring Circuit: IZT41-L, 42-L	
Dimensions	·
IZT40, 41(-L)	p. 34
IZT42(-L)	p. 36
Controller	p. 37
High Voltage Power Supply Module	p. 39
Cable	p. 41
Canavata Cantuallar	
Separate Controller	
Nozzle Type Ionizer IZT43(-L) Series	
Technical Data: Static Neutralisation Characteristics ① Installation Distance and Discharge Time	n 15
② Static Neutralisation Range	
- •	
③ Pressure — Flow Rate Characteristics	р. 46
How to Order	. 47
Nozzle + High Voltage Power Supply Module + Controller	-
For Individual Parts (Nozzle/High Voltage Power Supply Module/Controller)	
Specifications	
Construction	
Accessories (for Individual Parts)	
Accessories Sold Separately	-
Wiring: IZT43(-L)	
Wiring Circuit: IZT43-L	
Wiring Circuit: IZT43	p. 54
Dimensions	
IZT43(-L)	p. 55

p. 57

p. 60

p. 63

p. 64 **14**



High Voltage Power Supply Module

Controller

Cable


Specific Product Precautions ---

IZT40/41(-L)/42(-L) Series Technical Data

Static Neutralisation Characteristics

Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

① Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)

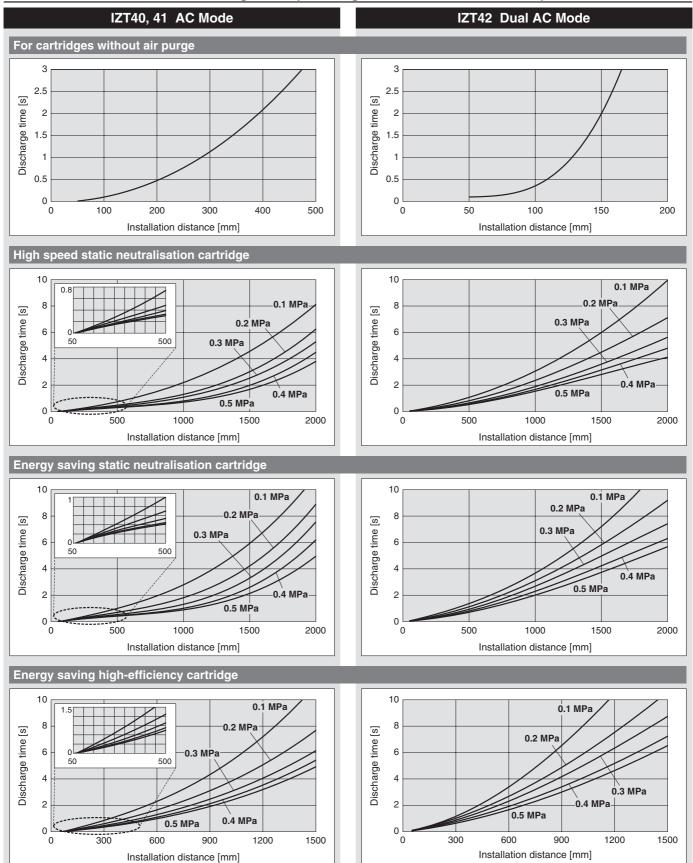

Technical Data | IZT40/41(-L)/42(-L) Series

Static Neutralisation Characteristics


* Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


② Static Neutralisation Range (Discharge Time from 1000 V to 100 V)

IZT40, 41 Ion Generation Frequency: 30 Hz

1) For cartridges without air purge

For IZT40-□D, L, V For IZT41-□D, L, V

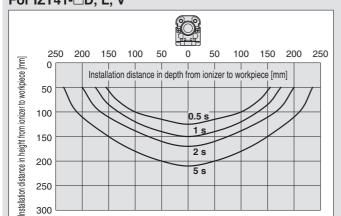


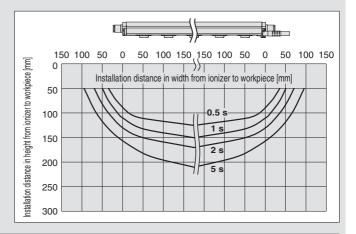


2) High speed static neutralisation cartridge, Supply pressure: 0.3 MPa

For IZT40-□D

For IZT41-□D

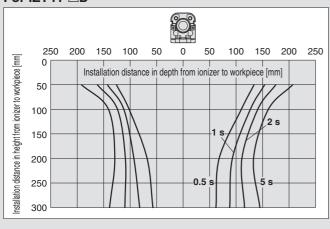


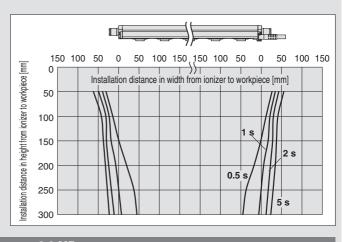


3) Energy saving static neutralisation cartridge, Supply pressure: 0.3 MPa

For IZT40-□L

For IZT41-□L

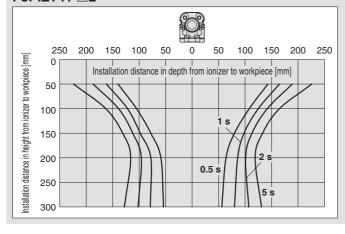

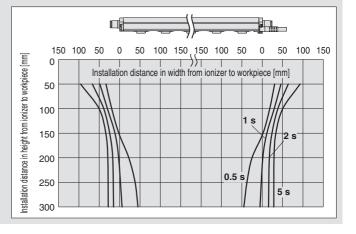

Static Neutralisation Characteristics

* Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


②Static Neutralisation Range (Discharge Time from 1000 V to 100 V)


IZT40, 41 Ion Generation Frequency: 30 Hz

4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT40-□V

For IZT41-□V

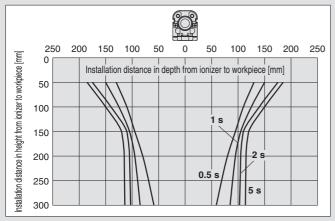


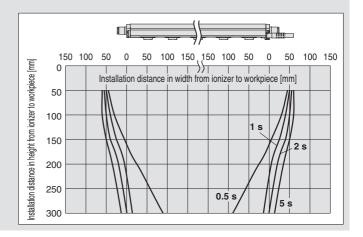


IZT42 Ion Generation Frequency: 30 Hz

1) For cartridges without air purge


For IZT42-□D, L, V

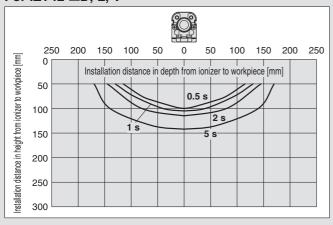


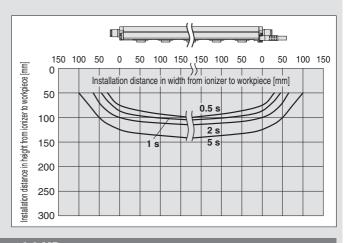

2) High speed static neutralisation cartridge, Supply pressure: 0.3 MPa

For IZT42-□D

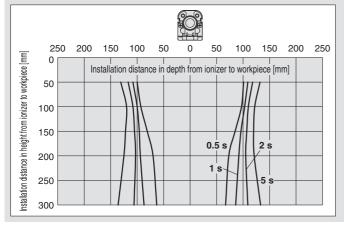

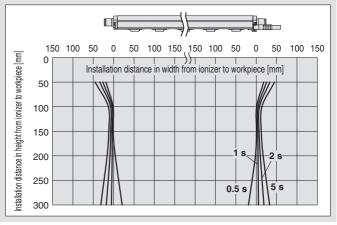

Technical Data | IZT40/41(-L)/42(-L) Series

Static Neutralisation Characteristics


* Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


② Static Neutralisation Range (Discharge Time from 1000 V to 100 V)

IZT42 Ion Generation Frequency: 30 Hz

3) Energy saving static neutralisation cartridge, Supply pressure: 0.3 MPa


For IZT42-□L

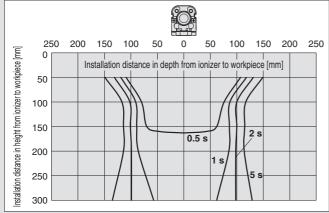


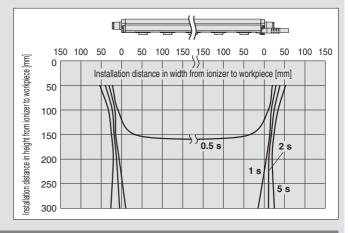

4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT42-□V

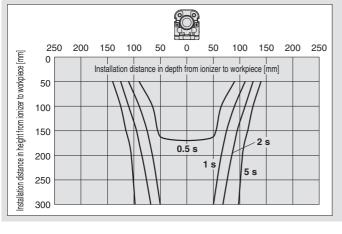


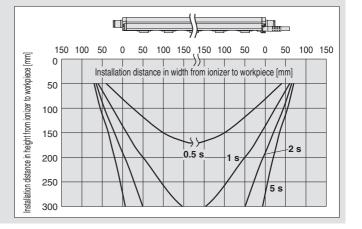

Static Neutralisation Characteristics

Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

3 Potential Amplitude

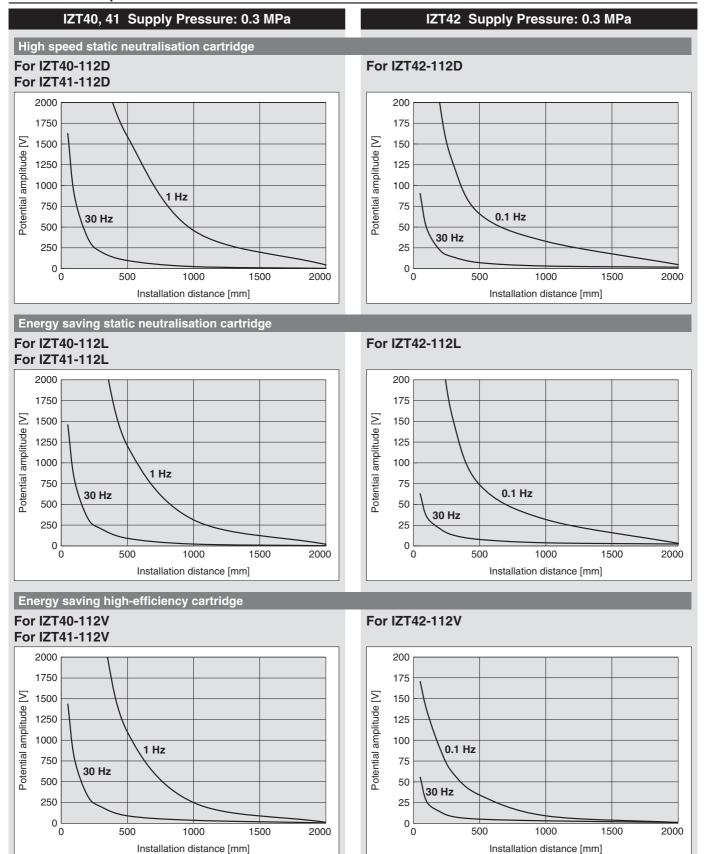



Technical Data IZT40/41(-L)/42(-L) Series


Static Neutralisation Characteristics

Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm, x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

4 Pressure — Flow Rate Characteristics

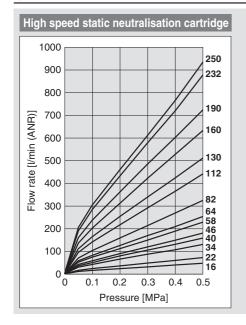

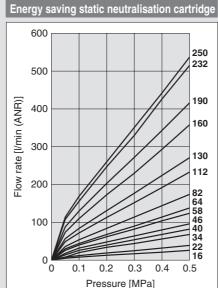

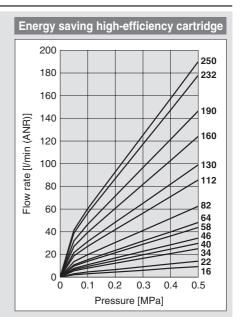


How to measure

a) Air supply from one side

IZT40

IZT41 -16, 22, 34, 40, 46, 58 Connecting tube: O.D. Ø 6 x I.D. Ø 4

IZT42

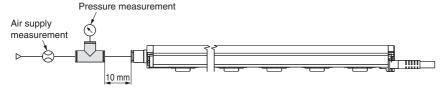

b) Air supply from both sides

IZT40 Connecting tube: O.D. Ø 6 x I.D. Ø 4 IZT41 -64, 82, 112


IZT42 IZT40

-130, 160, 190 Connecting tube: O.D. Ø 8 x I.D. Ø 5 IZT41

IZT42_ IZT40

IZT41 -232, 250 Connecting tube: O.D. Ø 10 x I.D. Ø 6.5

IZT42

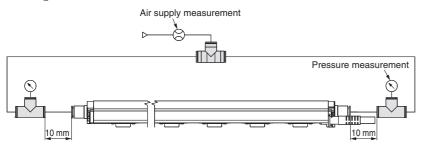






Separate Controller Bar Type Ionizer

IZT40/41(-L)/42(-L) Series

How to Order

Bar + High voltage power supply module + Controller

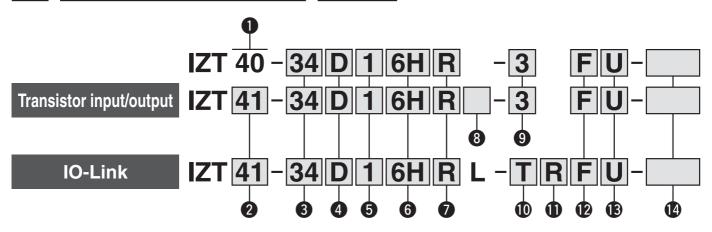

1 Model

Symbol	Model
40	Standard type

2 Model

Symbol	Model
41	AC type
42	Dual AC type

5 High voltage cable length

Symbol	High voltage cable length [m]					
1	1					
2	2					
3	3					

 The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇒ Refer to page 29.

Cumbal	IZT	-40	IZT	- 41	IZT42		
Symbol	Straight	Elbow	Straight	Elbow	Straight	Elbow	
1	1	1	1	1	2	2	
2	2	1	2	1	4	2	
3	3	1	3	1	6	2	

3 Bar length

Length [mm]	Symbol	Length [mm]
160	82	820
220	112	1120
340	130	1300
400	160	1600
460	190	1900
580	232	2320
640	250	2500
	160 220 340 400 460 580	160 82 220 112 340 130 400 160 460 190 580 232

Metric size

6 One-touch fitting

Symbol

4H	Ø 4 Straight
6H	Ø 6 Straight
8H	Ø 8 Straight
AH	Ø 10 Straight
4L	Ø 4 Elbow
6L	Ø 6 Elbow
8L	Ø 8 Elbow
AL	Ø 10 Elbow
Symbol	Inch size
Symbol 5H	Inch size Ø 3/16" Straight
5H	Ø 3/16" Straight
5H 7H	Ø 3/16" Straight Ø 1/4" Straight
5H 7H 9H	Ø 3/16" Straight Ø 1/4" Straight Ø 5/16" Straight
5H 7H 9H BH	Ø 3/16" Straight Ø 1/4" Straight Ø 5/16" Straight Ø 3/8" Straight
5H 7H 9H BH 5L	Ø 3/16" Straight Ø 1/4" Straight Ø 5/16" Straight Ø 3/8" Straight Ø 3/16" Elbow
5H 7H 9H BH 5L 7L	Ø 3/16" Straight Ø 1/4" Straight Ø 5/16" Straight Ø 3/8" Straight Ø 3/16" Elbow Ø 1/4" Elbow

 Refer to the recommended piping port size on the next page for selecting a One-touch fitting.

4 Emitter cartridge type/ Emitter material

Symbol	Туре	Material
D	High speed static	Tungsten
E	neutralisation cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralisation cartridge	Silicon
V	Energy saving	Tungsten
S	high-efficiency cartridge	Silicon


7 Plug position

Symbol	Plug position	
Without plug		
Q	High voltage cable side	
R	Opposite side of the high voltage cable	

8 Input/Output

Symbol	Input/Output
_	NPN
Р	PNP

* The input/output function cannot be used when the AC adapter is being used.

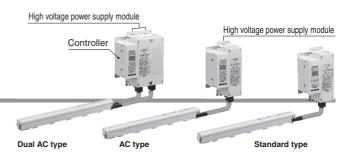

9 Power supply cable length

Symbol	Length [m]
3	3
5	5
10	10
15	15
N	None

To use an AC adapter, specify "N", and select the AC adapter sold separately.

Power supply cable entry direction/length

Symbol	Entry direction Length [m]								
N	No	ne							
J		3							
K	Straight	5							
M		10							
S		3							
Т	Angled	5							
Z		10							

Communication cable entry direction/length

		.,				
Symbol	Entry direction	Length [m]				
N	No	ne				
E		0.5				
G		1				
Н	Straight	2				
J	Straight	3				
K		5				
M		10				
Р		0.5				
Q		1				
R	Analad	2				
S	Angled	3				
Т		5				
Z		10				

12 Bar bracket ⇒ Refer to page 29.

	. •
Symbol	Туре
_	Without bracket
В	With bracket 1
F	With bracket 2

^{*} The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

Number of brackets

Bar length [mm]	End bracket	Intermediate bracket
160 to 760		None
820 to 1600	2	1
1660 to 2380	2	2
2440 to 2500		3

13 DIN rail mounting bracket for controller and high voltage power supply module

⇒ Refer to page 29.

Symbol	For controller	For high voltage power supply module
_	None	None
U	Included	Included
W	Included	None
Υ	None	Included

Made to order ⇒ Refer to page 25.

Symbol	ymbol Description								
-X10 Non-standard bar length									
-X14	Model with drop prevention cover								

Recommended piping port size for the IZT4□

riigii speet	u Static He	atic fleditalisation caltridge													
One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	Ø 4	0	0	•	•	•	-	-	_	_	_	_	_	-	_
6H/6L	Ø6	0	0	0	0	0	0	•	•	•	_	_	_	-	_
8H/8L	Ø 8	0	0	0	0	0	0	0	0	•	•	•			_
AH/AL	Ø 10	0	0	0	0	0	0	0	0	0	0	0	•	•	
5H/5L	Ø 3/16"	0	0	0	0	•	•	•	_	_	_	_	_	-	_
7H/7L	Ø 1/4"	0	0	0	0	0	0	0		•	•	_	_	1	_
9H/9L	Ø 5/16"	0	0	0	0	0	0	0	0	•	•	•	•	1	_
BH/BL	Ø 3/8"	0	0	0	0	0	0	0	0	0	0	0			

^{○:} With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving static neutralisation cartridge

Lifergy Sav	villy static	Heut	ansc	lliOII	carti	luge									
One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	Ø 4	0	0	0	0	0	•	•	•	_	_			_	_
6H/6L	Ø6	0	0	0	0	0	0	0	0	0	•	•	•	•	_
8H/8L	Ø 8	0	0	0	0	0	0	0	0	0	0	0	0		
AH/AL	Ø 10	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	Ø 3/16"	0	0	0	0	0	0	0	•	•	•	_	_	_	_
7H/7L	Ø 1/4"	0	0	0	0	0	0	0	0	0	0	•	•	•	•
9H/9L	Ø 5/16"	0	0	0	0	0	0	0	0	0	0	0	0		
BH/BL	Ø 3/8"	0	0	0	0	0	0	0	0	0	0	0	0	0	0

^{○:} With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving high-efficiency cartridge

One-touch	Applicable		Bar length [mm]												
fitting symbol	tubing O.D. [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	Ø 4	0	0	0	0	0	0	0	0	0	0	0	•	•	•
6H/6L	Ø 6	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8H/8L	Ø 8	0	0	0	0	0	0	0	0	0	0	0	0	0	0
AH/AL	Ø 10	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	Ø 3/16"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7H/7L	Ø 1/4"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9H/9L	Ø 5/16"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
BH/BL	Ø 3/8"	Ó	O	O	0	0	Ó	0	0	0	0	Ó	0	0	Ó


O: With piping only on one side ●: With piping on both sides



For Individual Parts

How to Order



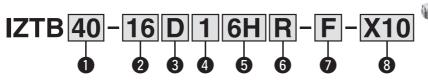

Symbo

D

Ε

M



Model

Symbol	Model
40	Standard type (For IZT40), AC type (For IZT41)
42	Dual AC type (For IZT42)

2 Bar length

Symbol	Length [mm]	Symbol	Length [mm]
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

neutralisation cartridge Tungsten Energy saving nigh-efficiency cartridge

Emitter cartridge type

Type

High speed static

neutralisation cartridge

Energy saving static

Material

Tungsten

Silicon

Tungsten

Silicon

4 ні	igh voltage cable length	
Symbol	High voltage cable length [m]	
1	1	
2	1 1	
3	3	

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders

□ Refer to page 29.

Cumbal	IZT	⁻ 40	IZT	' 41	IZT42			
Symbol	Straight	Elbow	Straight	Elbow	Straight	Elbow		
1	1 1		1	1	2 2			
2	2	1	2	1	4	2		
3	3	1	3	1	6	2		

6 One-touch fitting

9 0	o todon ntang
Symbol	Metric size
4H	Ø 4 Straight
6H	Ø 6 Straight
8H	Ø 8 Straight
AH	Ø 10 Straight
4L	Ø 4 Elbow
6L	Ø 6 Elbow
8L	Ø 8 Elbow
AL	Ø 10 Elbow

Symbol	Inch size
5H	Ø 3/16" Straight
7H	Ø 1/4" Straight
9H	Ø 5/16" Straight
BH	Ø 3/8" Straight
5L	Ø 3/16" Elbow
7L	Ø 1/4" Elbow
9L	Ø 5/16" Elbow
BL	Ø 3/8" Elbow

- Refer to the table below for selecting a One-touch fitting.
- The position of the One-touch fitting and the plug cannot be changed after the delivery of the product.

6 Plug position

Symbol	Position
_	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

7 Bar bracket ⇒ Refer to page 29.

Symbol	Type
_	Without bracket
В	With bracket 1
F	With bracket 2

The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

Number of brackets

Bar length	End bracket	Intermediate bracket
160 to 760		None
820 to 1600	2	1
1660 to 2380	2	2
2440 to 2500		3

8 Made to order ⇒ Refer to page 25.

Symbol	Description
-X10	Non-standard bar length
-X14	Model with drop prevention cover

Recommended piping port size for the IZT4□ High speed static neutralisation cartridge

riigii speci	ngh speed static heatransation cartriage															
One-touch	Applicable		Bar length [mm] 160 220 340 400 460 580 640 820 1120 1300 1600 1900 2320 2500													
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500	
4H/4L	Ø 4 mm	0	0	•	•	•	-	_	_	_	-	_	-	-	_	
6H/6L	Ø 6 mm	0	0	0	0	0	0	•	•	•		_	1	1		
8H/8L	Ø 8 mm	0	0	0	0	0	0	0	0	•	•	•	•	1		
AH/AL	Ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	•	•	•	
5H/5L	Ø 3/16"	0	0	0	0	•	•	•	-	-	-	_	-	-	-	
7H/7L	Ø 1/4"	0	0	0	0	0	0	0	•	•	•	_	1	1		
9H/9L	Ø 5/16"	0	0	0	0	0	0	0	0	•	•	•	•	_	_	
BH/BL	Ø 3/8"	0	0	0	0	0	0	0	0	0	0	0	•	•	•	

^{○:} With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving static neutralisation cartridge

One-touch	Applicable Bar length [mm] tubing O.D. 160 220 340 400 460 580 640 820 1120 1300 1600 1900 2														
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	Ø 4 mm	0	0	0	0	0	•	•	•	_	_	_	_	_	_
6H/6L	Ø 6 mm	0	0	0	0	0	0	0	0	0		•	•		_
8H/8L	Ø 8 mm	0	0	0	0	0	0	0	0	0	0	0	0	•	•
AH/AL	Ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	Ø 3/16"	0	0	0	0	0	0	0	•	•	•	_	-	_	_
7H/7L	Ø 1/4"	0	0	0	0	0	0	0	0	0	0	•	•	•	•
9H/9L	Ø 5/16"	0	0	0	0	0	0	0	0	0	0	0	0	•	•
BH/BL	Ø 3/8"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	•														

^{○:} With piping only on one side ●: With piping on both sides —: Unrecommended piping

Energy saving high-efficiency cartridge

= norgy ou			····• ,		<u> </u>										
One-touch	Applicable		Bar length [mm] 160 220 340 400 460 580 640 820 1120 1300 1600 1900 2320 2500												
fitting symbol	tubing O.D.	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	Ø 4 mm	0	0	0	0	0	0	0	0	0	0	0	•	•	•
6H/6L	Ø 6 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8H/8L	Ø8 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
AH/AL	Ø 10 mm	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5H/5L	Ø 3/16"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7H/7L	Ø 1/4"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9H/9L	Ø 5/16"	0	0	0	0	0	0	0	0	0	0	0	0	0	0
BH/BL	Ø 3/8"	0	0	0	0	0	0	0	0	0	0	0	0	0	0

O: With piping only on one side •: With piping on both sides





Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Individual Parts Combinations

	Bar/ IZTB		High voltage power supply module/IZTP		Controller/IZTC		
	40	42	40	41	42	40	41
IZT40	•		•			•	
IZT41	•			•			•
IZT42		•			•		•

The transistor input/output specification and the IO-Link specification cannot be installed in combination.

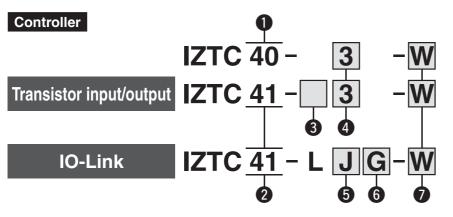

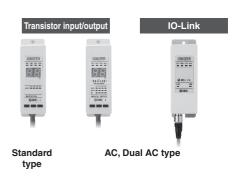

1 Model

Symbol	Model
40	Standard type

2	Model

_	
Symbol	Model
41	AC type, Dual AC type

3 Input/Output

	•	
Symbol	Input/Output	
_	NPN	
Р	PNP	

4 Power supply cable length

Symbol	Length [m]	
3	3	
5	5	
10	10	
15	15	
N	None	

5 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
N	No	ne
J		3
K	Straight	5
M		10
S		3
Т	Angled	5
Z		10

6 Communication cable entry direction/length


Symbol	Entry direction	Length [m]
N	No	ne
Е		0.5
G		1
Н	Straight	2
J		3
K		5
M		10
Р		0.5
Q		1
R	Analad	2
S	Angled	3
Т		5
Z		10

7 DIN rail mounting bracket

⇒ Refer to page 29.

Symbol		Туре
_		None
W	1	Included

High voltage power supply module

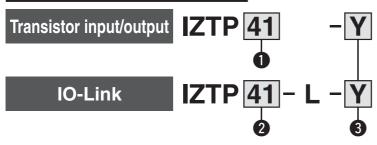



Standard, AC type

3 DIN rail mounting bracket

⇒ Refer to page 29.

	1 0
Symbol	Type
	None
Υ	Included

Model 1


Symbol	Model	
40	Standard type (For Bar)	
41	AC type (For Bar)	
42	Dual AC type (For Bar)	
43	AC type (For Nozzle)	

2 Model

-			
[Symbol	ool Model	
ſ	41	AC type (For Bar)	
ſ	42	Dual AC type (For Bar)	
ſ	43	AC type (For Nozzle)	

Made to Order

Symbol	Description	Specifications
-X10	Non-standard bar length	Manufacturable bar length (Symbol): 10 + 6 x n (n: Integer from 1 to 39) (For n = 1, 2, 4, 5, 6, 8, 9, 12, 17, 20, 25, 30, and 37, use a standard model.)

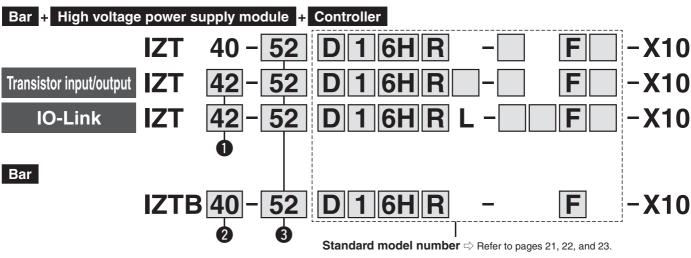


1 Type
41
42

3 Bar length

Ба	lengui						
Symbol	Bar length [mm]						
28	280	106	1060	166	1660	214	2140
52	520	118	1180	172	1720	220	2200
70	700	124	1240	178	1780	226	2260
76	760	136	1360	184	1840	238	2380
88	880	142	1420	196	1960	244	2440
94	940	148	1480	202	2020		
100	1000	154	1540	208	2080		

Symbol	Description	Specifications					
-X14	Model with emitter cartridge drop prevention cover	The main unit is shipped fitted with a drop prevention cover available as an optional accessory.					
		Drop prevention cover					

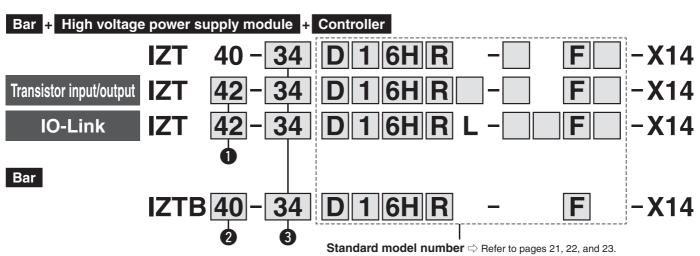

1 Type 41 42

3 Bar length

Standard	Symbol	16	22	34	40	46	58	64	82	112	130	160	190	232	250
Stariuaru	Bar length [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
Non-standard	ard The bar of non-standard length is available. Refer to the how to order above.														



Specifications

Ionizer Specifications

	Ionizer model	IZT40	IZT41(-L)	IZT42(-L)					
Ion generation method									
	applying voltage	AC, DC*1 Dual AC							
Applied vo	Itage	±7000 V ±6000 V							
Offset volta	age* ²	Within ±30 V							
	Fluid		Air (Clean, dry air)						
	Operating pressure		0.5 MPa or less						
Air purge	Proof pressure		0.7 MPa						
	Connecting tube size (One side can be plugged.)	In	Metric size: Ø 4, Ø 6, Ø 8, Ø 10 Inch size: Ø 3/16", Ø 1/4", Ø 5/16", Ø 3/8"						
Current co	nsumption	0.7 A or less (+0.6 A or less per ionizer when connected)	0.8 A or less (+0.7 A or less per ionizer when connected)	1.4 A or less (+1.3 A or less per ionizer when connected)					
Power sup	ply voltage		24 VDC ±10 %						
Input	NPN specification		Voltage range:	d to DC (-) 5 VDC or less tion: 5 mA or less					
signal*3	PNP specification	_	Connected to DC (+) Voltage range: 19 VDC to power supp Current consumption: 5 mA or						
Output signal*3	NPN specification	_	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC						
Signal	PNP specification		Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)						
IO-Link dev	vice* ⁴	_	Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" ta						
Function		High voltage abnormality detection (lon generation stops when an abnormality is detected.)							
Effective s	tatic neutralisation distance	50 to 2000 mm							
Ambient and fluid	Controller, High voltage power supply module	0 to 40 °C							
temperatures	Bar		0 to 50 °C						
Ambient hu	· · · · · · · · · · · · · · · · · · ·		35 to 80 % Rh (No condensation)						
	Controller	Cover: ABS, Aluminium, Switch: Silicone rubber*3							
Material	High voltage power supply module		ABS, Aluminium						
	Bar		cartridge: PBT, Emitter: Tungsten or Sligh voltage cable: Silicone rubber, PV	,					
Standards/	/Directive		CE marking (EMC Directive)						
	Angle of body and and the DO								

- *1 Apply cathode or anode to DC.
- *2 When air purge is performed between a charged object and an ionizer at a distance of 300 mm
- *3 For transistor input/output specification products
- *4 For IO-Link compatible products

IO-Link Communication Specifications

IO-Link type	Device				
IO-Link version	V1.1				
Configuration file format	IODD file*1				
Communication speed	COM2 (38.4 kbps)				
Min. cycle time	8.0 ms				
Process data length	Input data: 13 bytes, Output data: 9 bytes				
On request data communication	Yes				
Data storage function	Yes				
Event function	Yes				
Vendor ID	131 (0 x 0083)				
Device ID	581 (0 x 000245)				

 $[\]ast 1$ The configuration file can be downloaded from the SMC website: https://www.smc.eu



Specifications

IZT42(-L)

Weight		[g]
	Controller	High voltage power supply module
IZT40	210 (230)	680 (690)
IZT41(-L)	210 (230)	680 (690)

1350 (1360)

Number of Emitter Cartridges/Bar Weight

Number o	of Emitter Cartric	dges/E	Bar We	ight											[g]
Bar I	ength symbol	16	22	34	40	46	58	64	82	112	130	160	190	232	250
Number of er	mitter cartridges (pcs.)	2	3	5	6	7	9	10	13	18	21	26	31	38	41
IZT40	High voltage cable (1 m)	360	420	530	590	650	760	820	990	1270	1440	1720	2010	2410	2580
IZT41	High voltage cable (2 m)	490	550	660	720	780	890	950	1120	1400	1570	1850	2140	2540	2710
(Common for bars)	High voltage cable (3 m)	610	670	780	840	900	1010	1070	1240	1520	1690	1970	2260	2660	2830
	High voltage cable (1 m)	520	580	690	750	810	920	980	1150	1430	1600	1880	2170	2570	2740
IZT42	High voltage cable (2 m)	770	830	940	1000	1060	1170	1230	1400	1680	1850	2130	2420	2820	2990
	High voltage cable (3 m)	1010	1070	1180	1240	1300	1410	1470	1640	1920	2090	2370	2660	3060	3230

AC Adapter (Sold Separately) ⇒ Refer to page 30.

Model	IZT40-CG1, IZT40-CG2			
Input voltage	100 to 240 VAC, 50/60 Hz			
Output current	1.9 A			
Ambient temperature	0 to 40 °C			
Ambient humidity	35 to 65 % Rh (No condensation)			
Weight	375 g			
Standards/Directive	CE, cUL			




^{210 (230)} $\ast\,$ The values in () are for IO-Link compatible products.

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Construction

Communication cable

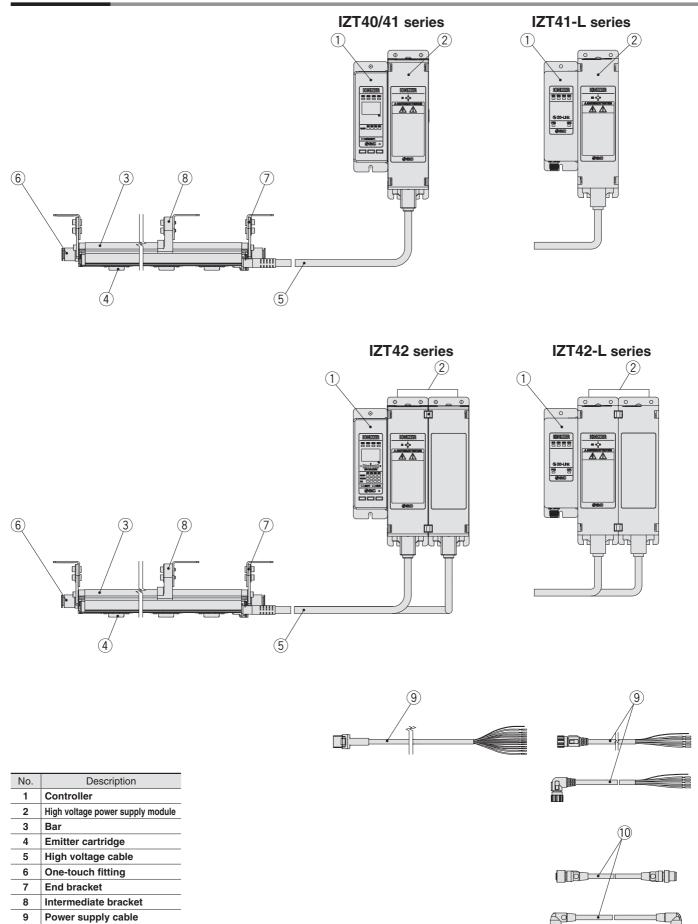

SMC

28

Accessories (for Individual Parts)

Emitter cartridge (For IZT40, 41(-L), 42(-L))

IZT40-ND

High speed static neutralisation







Symbol	Type	Material		
D	High speed static	Tungsten		
Е	neutralisation cartridge	Silicon		
L	Energy saving static	Tungsten		
M neutralisation cartridge		Silicon		

Cartridge colour	Emitter material
White	Tungsten
Grey	Silicon

IZS40-NV

Energy saving high-efficiency

Emitter cartridge type/Emitter material



Symbol	Type	Material		
V	Energy saving	Tungsten		
S	high-efficiency cartridge	Silicon		

Cartridge colour	Emitter material
White	Tungsten
Grey	Silicon

Bar bracket (For IZT40, 41(-L), 42(-L))



Bar bracket

Symbol	Туре	
E1	End bracket 1	
E2	End bracket 2	
M1	Intermediate bracket 1	
M2	Intermediate bracket 2	

* Refer to the table below for selecting a bracket.

Bracket combinations


	Intermediate bracket 1	Intermediate bracket 2
End bracket 1	○ (Adjustment angle ±90°)	×
End bracket 2	X	○ (Adjustment angle ±15°)

O: Available X: Not available

* The number of intermediate brackets required, as listed below, depends on the bar length. Two end brackets are always required regardless of the bar length.

Number of brackets

Bar length	End bracket	Intermediate bracket
160 to 760		None
820 to 1600	2	1
1660 to 2380	2	2
2440 to 2500		3

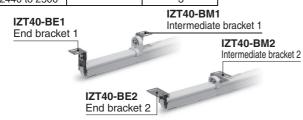

Power supply cable (IZT40, 41, 42)

IZT40-CP3

Cable specifications

⇒ Refer to page 41.

◆ Power supply cable length



	· · · · · / ·
Symbol	Length [m]
3	3
5	5
10	10
15	15

IO-Link power supply cable (IZT41-L, 42-L)

IZT41-CP J



Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
J		3
K	Straight	5
M		10
S		3
Т	Angled	5
Z		10

IO-Link communication cable (IZT41-L, 42-L)

IZT41-CEG



Communication cable entry direction/length

Symbol	Entry direction	Length [m]	
E		0.5	
G		1	
Н	Straight	2	
J	Straight	3	
K		5	
M		10	
Р		0.5	
Q	Angelad	1	
R		2	
S	Angled	3	
Т		5	
Z		10	

DIN rail mounting bracket for controller and high voltage power supply module

IZT40-B 1

DIN rail mounting bracket

	Symbol	Туре			
1 For Controller					
2 For High voltage power supply me		For High voltage power supply module			
	3	For High voltage power supply module for IZT42			

For Controller

For High voltage power supply module







IZT40-B1

IZT40-B2

IZT40-B3

High voltage cable holder

IZT40-E 1

High voltage cable holder

9.	i voitage oable liolae
Symbol	Туре
1	Straight
2	Elbow





IZT40-E1

IZT40-E2

Accessories Sold Separately

Drop prevention cover (For IZT40, 41(-L), 42(-L))

IZS40-E 2


Number of fixed emitter cartridges

Symbol	Туре
2	2 pcs.
3	3 pcs.
4	4 pcs.
5	5 pcs.

Standard bar length


Bar length	Number of required drop prevention covers			
symbol	IZS40-E2	IZS40-E3	IZS40-E4	IZS40-E5
16	1	_	_	_
22	_	1	_	_
34	_	_	_	1
40	_	2	_	_
46	_	1	1	_
58	_	_	1	1
64	_	_	_	2
82	_	1	_	2
112	_	1	_	3
130	_	2	_	3
160	_	2	_	4
190	_	2	_	5
232		1		7
250	_	2	_	7

* Please contact SMC for the non-standard bar length.

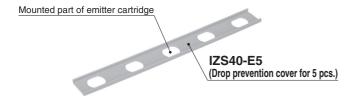


The model number requires the suffix "-X14" to indicate that the body is to be shipped fitted with a drop prevention cover.



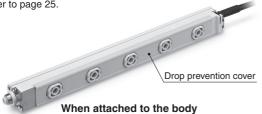

AC adapter (IZT40, 41, 42)

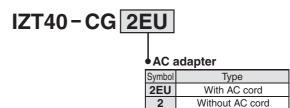


* External input and output cannot be used when the AC adapter is being used.



AC adapter

Separate cable (IZT40, 41, 42)

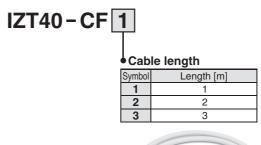



Cleaning kit (For IZT40, 41, 42)



Replacement felt pad: IZS30-A0201

Replacement rubber grindstone: IZS30-A0202

Wiring: IZT40, 41(-L), 42(-L)

IZT40

Cable colour	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connect the power supply to operate the product.
Blue	DC (-)	IN	Connect the power supply to operate the product.
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
Pink	Ion generation stop signal CH1	_	_
	Ion generation stop signal CH2		_
Yellow	Ion generation stop signal CH3	_	_
Purple	Ion generation stop signal CH4	_	_
White	Maintenance detection signal	_	_
Black	Error signal	_	_
Orange	Unused	_	_

IZT41, 42

Cable colour	Signal name	Signal direction	Description
Brown	DC (+)	IN	0
Blue	DC (-)	IN	Connect the power supply to operate the product.
Green	F.G.	_	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
Pink	Ion generation stop signal CH1	IN	Signal input to turn ON/OFF ion generation of each bar (CH1 to 4).
Grey	Ion generation stop signal CH2	IN	NPN specification: Stops generating ions by connecting to 0 V. (Starts generating ions when disconnected.)
Yellow	Ion generation stop signal CH3	IN	PNP specification: Stops generating ions by connecting to +24 VDC. (Starts generating ions when
Purple	Ion generation stop signal CH4	IN	disconnected.)
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning.
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem).
Orange	_	_	_

IZT41-L, 42-L: IO-Link Power Supply Cable

No.	Cable colour	Signal name	Description		
1	Brown	DC (+)			
2	DIOWII	DC (+)	Connect the power supply to operate the ionizer.		
3	Blue	DC (-)			
4	Diue	DC (-)			
5	Green	F.G.	Make sure to ground with $100~\Omega$ or less to use it as a reference electric potential for ionizer.		


No. Signal name Description

No.	Signal name	Description		
1	L+	Power supply for IO-Link		
2	_	_		
3	L-	Power supply for IO-Link		
4	C/Q	_		
5	_	_		

Frequencies

Series	IZT40	IZT41(-L)	IZT42(-L)	
Controller	IZTC40	IZTC41(-L)		
	1	1	0.1	
	3	3	0.5	
	5	5	1	
	8	8	3	
Frequency	10	10	5	
[Hz]	15	15	8	
	20	20	10	
	30	30	15	
	DC+	DC+	20	
	DC-	DC-	30	


Wiring Circuit: IZT40

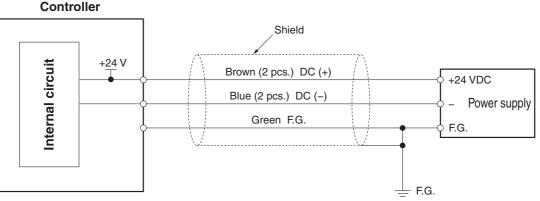


SMC

^{*} Refer to the power supply cable dimensions on page 41 for the cable specifications.


Wiring Circuit: IZT41, 42

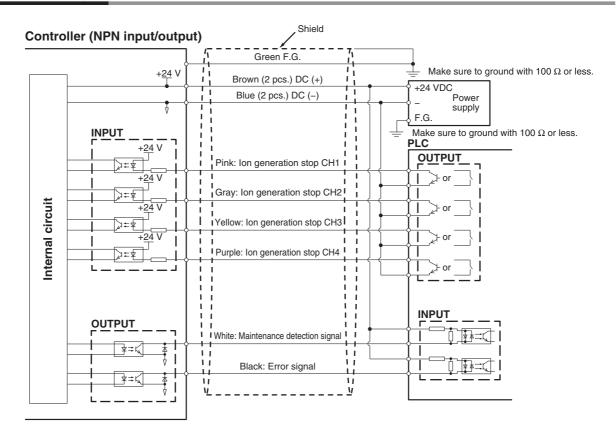

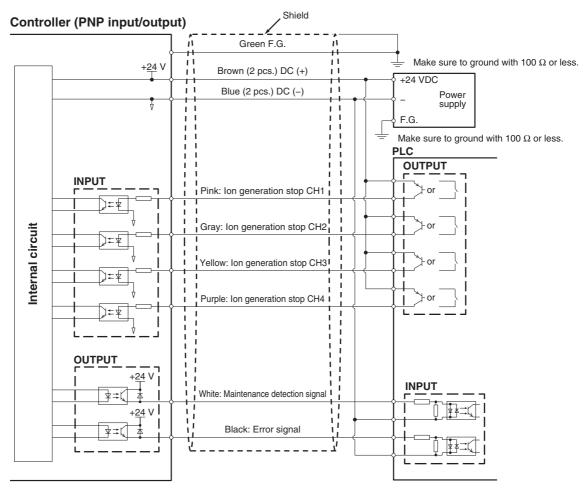


Wiring Circuit: IZT41-L, 42-L

Controller (IO-Link)

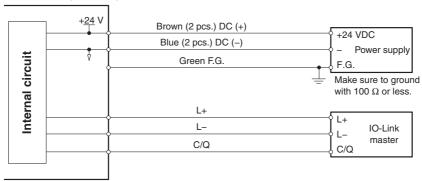

Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

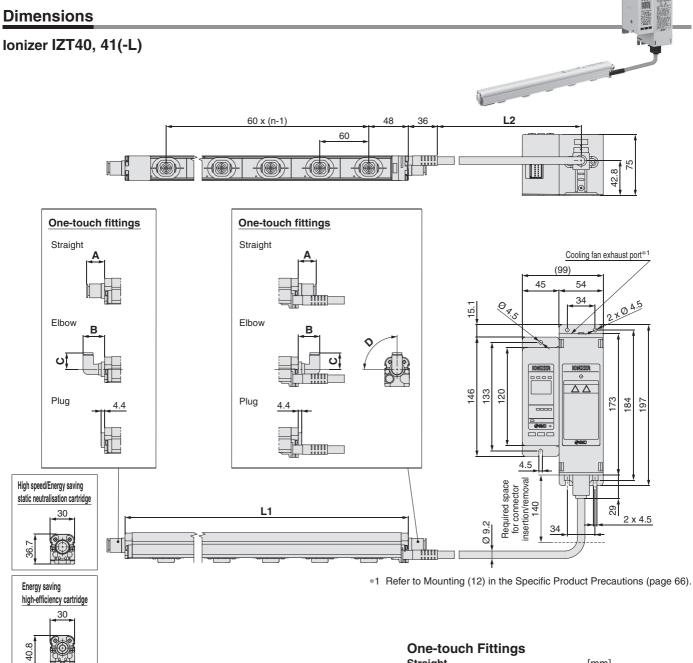

No. of Emitter Cartridges n, Bar Length L1

No. of Emilier Cartridges II, Bar Length L				
Part no.	n [pcs.]	L1 [mm]		
IZT□-16	2	160		
IZT□-22	3	220		
IZT□-34	5	340		
IZT□-40	6	400		
IZT□-46	7	460		
IZT□-58	9	580		
IZT□-64	10	640		
IZT□-82	13	820		
IZT□-112	18	1120		
IZT□-130	21	1300		
IZT□-160	26	1600		
IZT□-190	31	1900		
IZT□-232	38	2320		
IZT□-250	41	2500		

High Voltage Cable Length La

night voltage Cable Length L				
Symbol	L2 [mm]			
1	1000			
2	2000			
3	3000			


Straight	•	[mm]
	Applicable tubing O.D.	Α
	Ø 4	13
Metric	Ø 6	13
wetric	Ø 8	15
	Ø 10	22
	Ø 3/16"	15
Inch	Ø 1/4"	14
IIICII	Ø 5/16"	15
	Ø 3/8"	23

Elbow [mm					
	Applicable tubing O.D.	В	С	D	
	Ø 4	25	19	90°	
	0.0	07	0.1	750	


Metric	Ø 4	25	19	90°
	Ø6	27	21	75°
	Ø 8	29	24	73°
	Ø 10	37	27	71°
	Ø 3/16"	26	20	90°
Inch	Ø 1/4"	27	21	75°
IIICII	Ø 5/16"	29	24	73°
	Ø 3/8"	36	27	71°


Dimensions


End bracket IZT40-BE1 Intermediate bracket IZT40-BM1

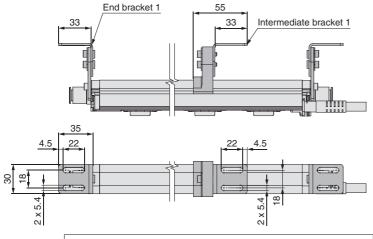




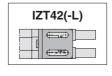


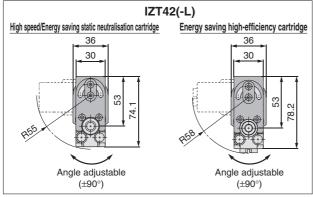


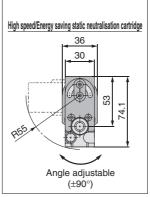


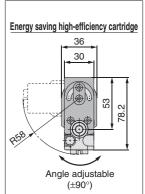



End bracket IZT40-BE2 Intermediate bracket IZT40-BM2

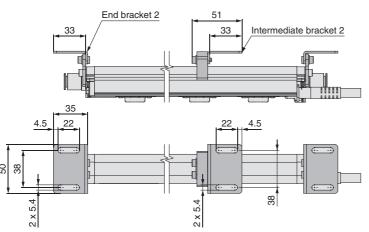

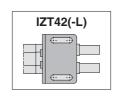

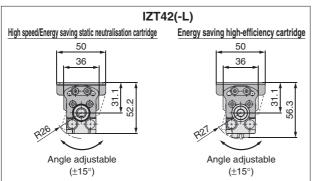


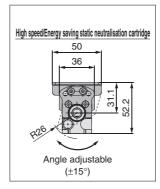

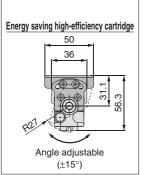



Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

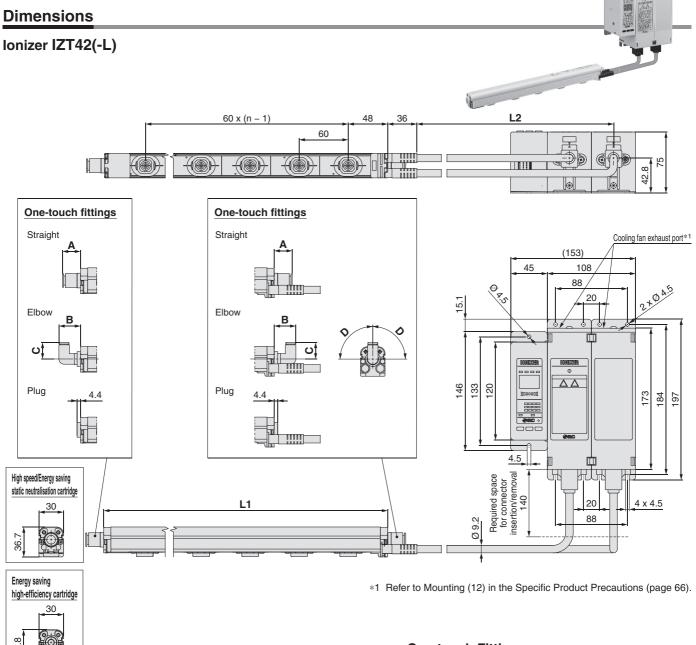

No. of Emitter Cartridges n, Bar Length L1

Part no.	n [pcs.]	L1 [mm]
IZT□-16	2	160
IZT□-22	3	220
IZT□-34	5	340
IZT□-40	6	400
IZT□-46	7	460
IZT□-58	9	580
IZT□-64	10	640
IZT□-82	13	820
IZT□-112	18	1120
IZT□-130	21	1300
IZT□-160	26	1600
IZT□-190	31	1900
IZT□-232	38	2320
IZT□-250	41	2500

High Voltage Cable Length L2

riigii voitage oabie Ecilgiii i	
Symbol	L2 [mm]
1	1000
2	2000
3	3000

One-touch Fittings

Straight		[mm]
	Applicable tubing O.D.	Α
	Ø 4	13
Metric	Ø6	13
Wetric	Ø 8	15
	Ø 10	22
	Ø 3/16"	15
Inch	Ø 1/4"	14
IIICII	Ø 5/16"	15
	Ø 3/8"	23


Elbow [mm]				
	Applicable tubing O.D.	В	С	D
	Ø 4	25	19	90°
Metric	Ø6	27	21	75°
Wetric	Ø 8	29	24	73°
	Ø 10	37	27	71°
	Ø 3/16"	26	20	90°
Inch	Ø 1/4"	27	21	75°
IIICII	Ø 5/16"	29	24	73°
	Ø 3/8"	36	27	71°




IZT40/41(-L)/42(-L) Series


Dimensions


Controller IZT40, 41, 42

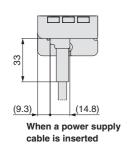


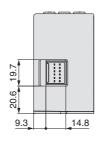




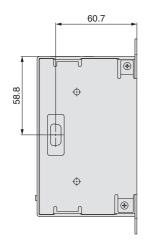

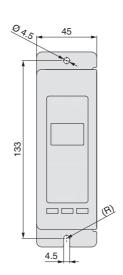

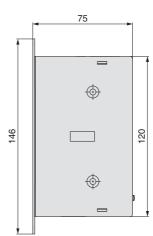

When a DIN rail mounting bracket (IZT40-B1) is used

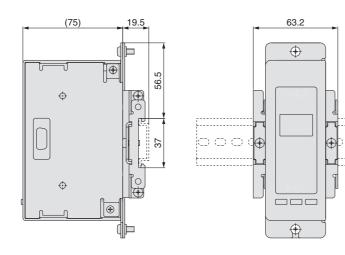





Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Dimensions

Controller IZT41-L, 42-L

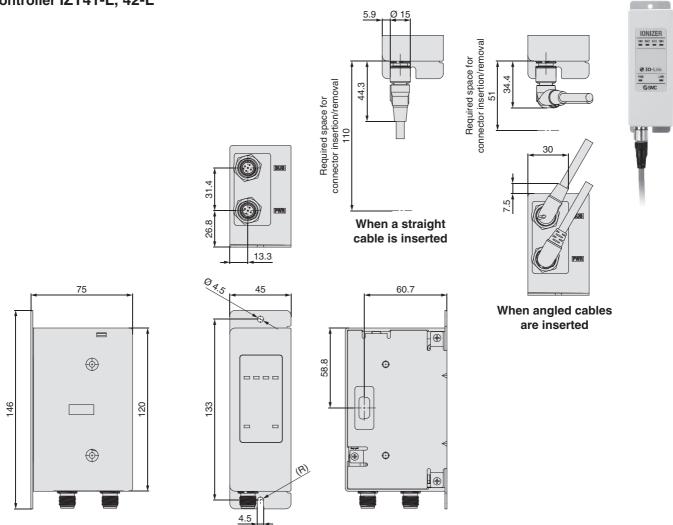

When a DIN rail mounting bracket (IZT40-B1) is used

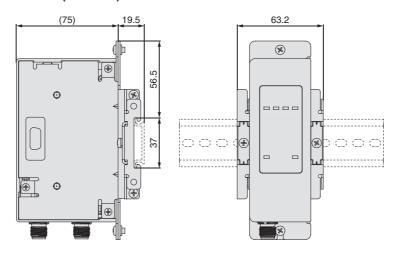





IZT40/41(-L)/42(-L) Series

Dimensions



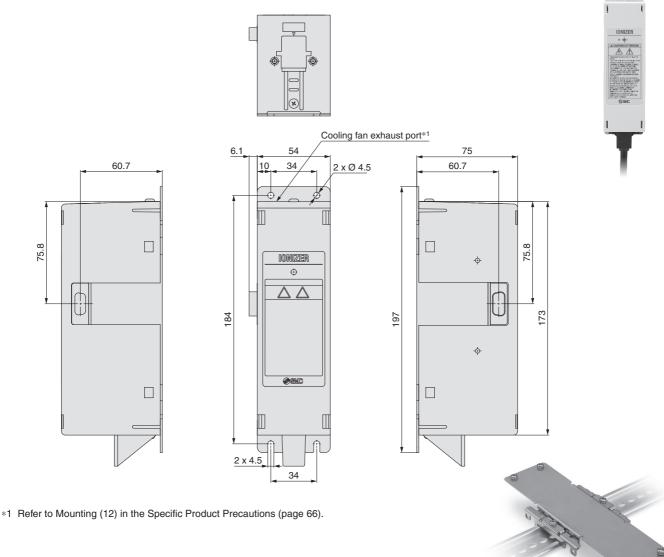


When a DIN rail mounting bracket (IZT40-B2) is used

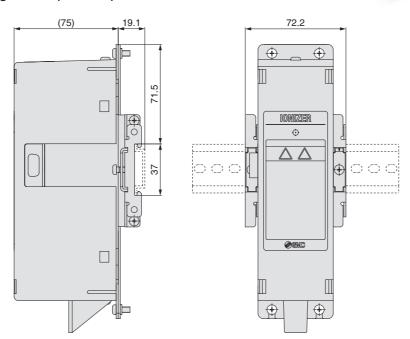




Dimensions

High voltage power supply module for IZT42(-L)

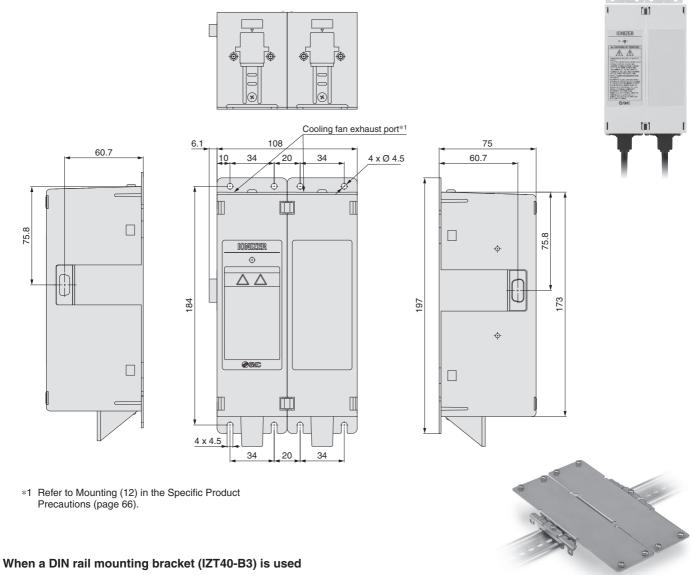

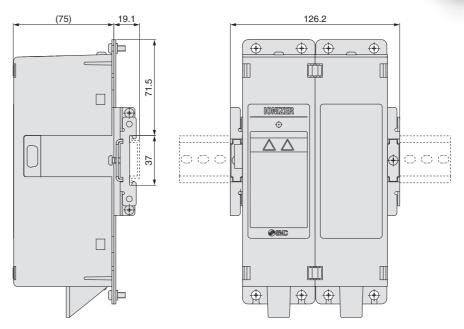




IZT40/41(-L)/42(-L) Series

Dimensions



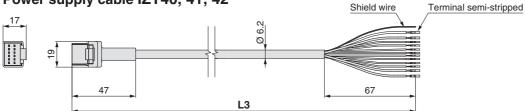


Cable Length L3

Oubic Ecrigin Eo		
Part number	L3 [mm]	
IZT40-CP3	2950	
IZT40-CP5	5000	
IZT40-CP10	9800	
IZT40-CP15	15000	

Cable Specifications

No. of cable wires/Size		12 cores/AWG20 (4 cores), AWG28 (8 cores)
Conductor Nominal cross section O.D.	0.54 mm² (4 cores), 0.09 mm² (8 cores)	
	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)
Insulator	O.D.	1.4 mm Brown, Blue
		0.7 mm White, Green, Pink, Purple, Grey, Yellow, Orange, Black
Sheath	Material	Lead-free PVC
	O.D.	6.2 mm

IO-Link power supply cable IZT41-L, 42-L

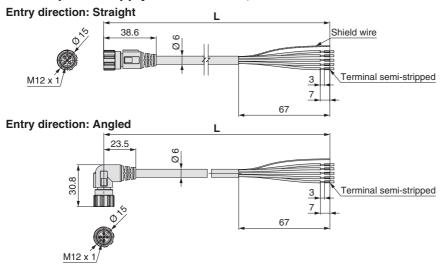


Power Supply Cable Length L


Symbol	Entry direction	Length [m]
IZT41-CPJ	Straight	3
IZT41-CPK		5
IZT41-CPM		10
IZT41-CPS	Angled	3
IZT41-CPT		5
IZT41-CPZ		10

Power Supply Cable Specifications

No. of cable wires/Size		5 cores/AWG22
Conductor	Nominal cross section	0.3 mm ²
	O.D.	0.76 mm
Insulator	O.D.	1.3 mm
Sheath	Material	PVC (Lead-free)
	O.D.	6.0 mm

IO-Link communication cable IZT41-L, 42-L

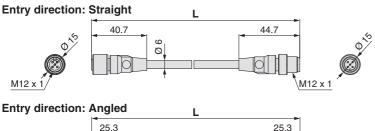

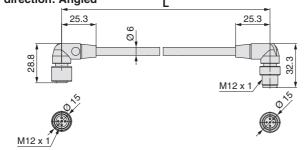

Communication Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CEE		0.5
IZT41-CEG		1
IZT41-CEH	Ctroight	2
IZT41-CEJ	Straight	3
IZT41-CEK		5
IZT41-CEM		10
IZT41-CEP		0.5
IZT41-CEQ		1
IZT41-CER	A I I	2
IZT41-CES	Angled	3
IZT41-CET		5
IZT41-CEZ		10

Communication Cable Specifications

		- · · · · · · · · · · · · · · · · · · ·	
No. of cable wires/Size		5 cores/AWG22	
Conductor	Nominal cross section	0.3 mm ²	
	O.D.	0.76 mm	
Insulator	O.D.	1.5 mm	
Sheath	Material	PVC (Lead-free)	
	O.D.	6.0 mm	



Separate Controller Bar Type Ionizer IZT40/41(-L)/42(-L) Series

Dimensions


Separate cable IZT40-CF□





Cable Length L4


<u> </u>	· - ·
Part number	L4 [mm]
IZT40-CF1	1000
IZT40-CF2	2000
IZT40-CF3	3000


When a separate cable is used

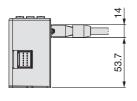


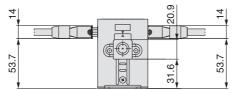

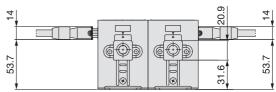

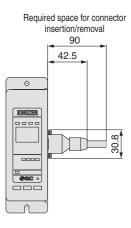

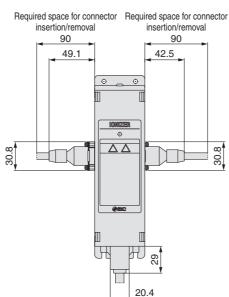

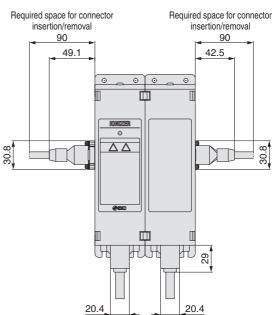


IZT40/41(-L)/42(-L) Series

Dimensions


High voltage cable holder Straight IZT40-E1

Cross-sectional view A-A

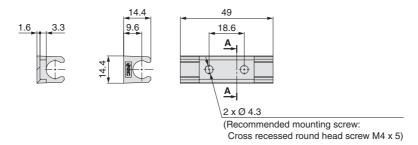

Elbow IZT40-E2

Cross-sectional view A-A

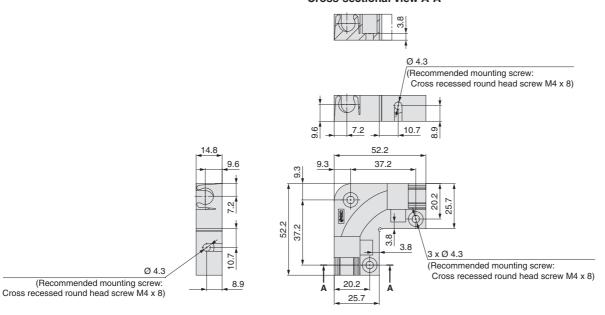




IZT43(-L) Series Technical Data

Static Neutralisation Characteristics


Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

1 Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)




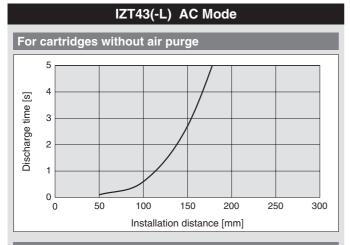

High speed static neutralisation cartridge

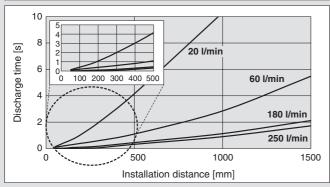

Energy saving static neutralisation cartridge

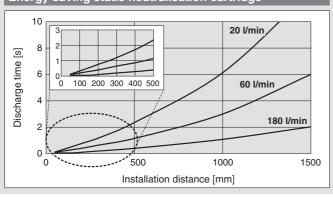


IZT43(-L) Ion Generation Frequency: 30 Hz 1) For cartridges without air purge For IZT43(-L)-D, L Installation distance in depth from ionizer to workpiece [mm] 150 100 0 100 150 200 250 Installation distance in height from ionizer to workpiece 50 100 150 2 s 200 250 300


2) High speed static neutralisation cartridge, Supply pressure: 0.5 MPa

3) Energy saving static neutralisation cartridge, Supply pressure: 0.5 MPa

For IZT43(-L)-D

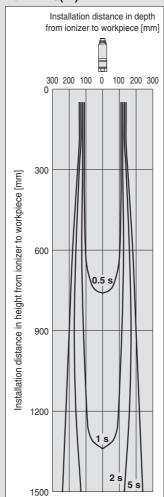

For IZT43(-L)-L

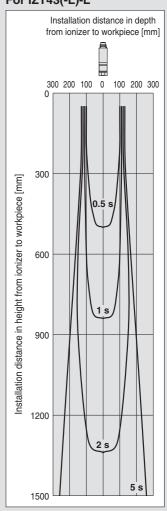





Technical Data IZT43(-L) Series

Static Neutralisation Characteristics

* Static neutralisation characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

③ Pressure — Flow Rate Characteristics

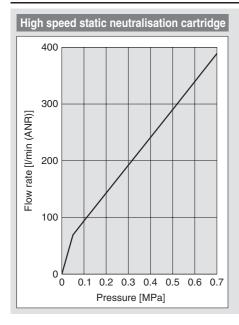


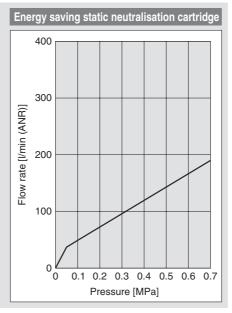

How to measure

a) Air supply

IZT43(-L)-D, L Connecting tube: O.D. \emptyset 6 x I.D. \emptyset 4

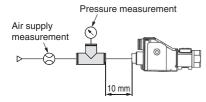

Separate Controller

Nozzle Type Ionizer






High voltage power

How to Order

Nozzle + High voltage power supply module +

Controller

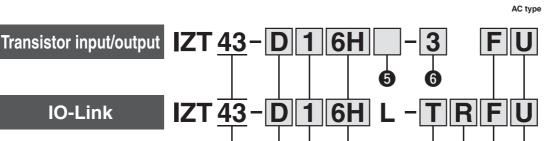

Model 1

Symbol

3 5

10

15

Symbol	Model
43	AC type

IO-Link

Emitter cartridge type

Symbol	Type	
D	D High speed static neutralisation cartridge	
L Energy saving static neutralisation cartride		

6 Power supply cable length

High voltage cable length

Symbol	Length [m]	
1	1	
2	2	
3	3	

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders Refer to page 51.

	,	p g	
Symbol Straight		Straight	Elbow
1 1		1	
2		2	1
	3	3	1

Power supply cable entry direction/length

	<u> </u>		
Symbol	Entry direction Length [m]		
N	None		
J	3		
K	Straight	5	
M		10	
S		3	
T	Angled	5	
Z		10	

4 One-touch fitting

Symbol	Metric size	
6H	Ø 6 Straight	
6L	Ø 6 Elbow	
Symbol	Inch size	
7H	Ø 1/4" Straight	
7L	Ø 1/4" Elbow	

5 Input/Output

Symbol	Input/Output	
_	NPN	
Р	PNP	

8 Communication cable entry direction/length

		· , · · · · · · · · · · · · ·
Symbol	Entry direction	Length [m]
N	None	
E		0.5
G		1
Н	Straight	2
J	Straight	3
K		5
M		10
Р		0.5
Q		1
R	Anglad	2
S	Angled	3
Т		5
Z		10

To use an AC adapter, specify "N", and select the AC adapter sold separately.

Length [m]

5

10

15 None

9 Nozzle bracket ⇒ Refer to page 51.

	O Trouble to the purpose of	
Symbol	Symbol Type	
_	 Without bracket 	
В	L-bracket	
F	Angle adjustment bracket	

DIN rail mounting bracket for controller and high voltage power supply module

⇒ Refer to page 51.

1 0			
Symbol	For Controller For High voltage power supply mod		
_	None None		
U	Included Included		
W	Included	None	
Y None Included		Included	



For Individual Parts

Model

AC type

High speed static neutralisation

cartridge

Energy saving static neutralisation

cartridge

2 Emitter cartridge type

How to Order

Combinations

	Nozzle/ IZTN	High voltage power supply module/IZTP	Controller/IZTC
	43	43	41
17T43	•	•	



AC type

Nozzle	

Model 1

Symbol


43

Symbol

D

L



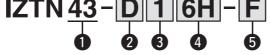

High voltage cable length

Symbol	High voltage cable length [m]	
1	1	
2	2	
3	3	

* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

nher of included high voltage cable holders > Refer to page 51

Number of included high voltage cable holders -/ heler to page 51.		
Cumbal	IZ1	T43
Symbol	Straight Elbow	
1	1	1
2	2	1
3	3	1

The transistor input/output specification and the IO-Link specification cannot be installed in combination.

4 One-touch fitting

Transistor input/output


Symbol	Metric size Ø 6 Straight	
6H		
6L	Ø 6 Elbow	
	Inch size	
Symbol	Inch size	
Symbol 7H	Inch size Ø 1/4" Straight	

5 Nozzle bracket ⇒ Refer to page 51.

Symbol	Type
_	Without bracket
В	L-bracket
F	Angle adjustment bracket

IO-Link

Controller

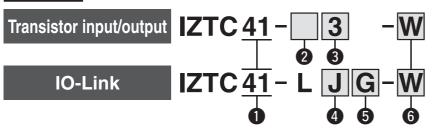



S	ymbol	Model Model	
	41	AC type, Dual AC type	

2 Input/Output

	•
Symbol	Input/Output
_	NPN
Р	PNP

5 Communication cable entry direction/length

O Communication capito onta y an oction front gar		
Symbol	Entry direction	Length [m]
N	No	ne
Е		0.5
G		1
Н	Ctroight	2
J	Straight	3
K		5
M		10
Р		0.5
Q	Analad	1
R		2
S	Angled	3
T		5
Z		10



3 Power supply cable length

Symbol	Length [m]	
3	3	
5	5	
10	10	
15	15	
N	None	

6 DIN rail mounting bracket ⇒ Refer to page 51.

	. 0	
Symbol	Type	
_	None	
W	Included	

4 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
N	N None	
J		3
K	Straight	5
M		10
S	Angled	3
Т		5
Z		10

High voltage power supply module





U IVI	Wiodci	
Symbol	Model	
43	AC type (For Nozzle)	

2 DIN rail mounting bracket ⇒ Refer to page		rail mounting bracket ⇒ Refer to page 51.
	Symbol	
	_	None





Included

Specifications

Ionizer Specifications

lonizer Specifications		
	tion method	Corona discharge type
Method of applying voltage		AC, DC*1
Applied voltage		±6000 V
Offset volta		±30 V or less
	Fluid	Air (Clean, dry air)
Air purge	Operating pressure	0.7 MPa or less
7 pargo	Connecting tube size	Metric size: Ø 6 Inch size: Ø 1/4"
Current co	nsumption	0.4 A or less (+0.4 A or less per ionizer when connected)
Power supp	ply voltage	24 VDC ±10 %
Input	NPN specification	Connected to DC (-) Voltage range: 5 VDC or less Current consumption: 5 mA or less
signal*3	PNP specification	Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less
Output signal*3	NPN specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC
Signal	PNP specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)
IO-Link device*4		Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" table below.
Function		Auto balance, Maintenance detection, High voltage abnormality detection (Ion generation stops when an abnormality is detected.), and Ion generation stop input
Effective static neutralisation distance		50 to 2000 mm
Ambient and fluid temperatures	Controller High voltage power supply module Nozzle	0 to 40 °C
Ambient humidity		35 to 65 % Rh (No condensation)
	Controller	Cover: ABS, Aluminium, Switch: Silicone rubber*3
	High voltage power supply module	ABS, Aluminium
Material	Nozzle	Housing: PBT, Stainless steel, Emitter cartridge: PBT, Emitter: Tungsten, High voltage cable: Silicone rubber, PVC, Stainless steel
Standards/Directive		CE marking (EMC Directive)
1. Apply extends are products DC		

^{*1} Apply cathode or anode to DC.

IO-Link Communication Specifications

IO-Link type	Device
IO-Link version	V1.1
Configuration file format	IODD file*1
Communication speed	COM2 (38.4 kbps)
Min. cycle time	8.0 ms
Process data length	Input data: 13 bytes, Output data: 9 bytes
On request data communication	Yes
Data storage function	Yes
Event function	Yes
Vendor ID	131 (0 x 0083)
Device ID	581 (0 x 000245)

 $^{*1 \ \ \}text{The configuration file can be downloaded from the SMC website: https://www.smc.eu}$



^{*2} When air purge is performed between a charged object and an ionizer at a distance of 300 mm

^{*3} Only applicable to transistor input/output specification products

^{*4} Only applicable to IO-Link compatible products

Specifications

Weight		[9]
	Controller	High voltage power supply module
IZT43(-L)	210 (230)	680 (690)

 $[\]ast\,$ The values in () are for IO-Link compatible products.

Nozzle Weight		
Nozzle		
High voltage cable (1 r		200
IZT43	High voltage cable (2 m)	310

High voltage cable (3 m)


440


AC Adapter (Sold	Separately) ⇒ Refer to page 52.


Model	IZT40-CG1, IZT40-CG2
Input voltage	100 to 240 VAC, 50/60 Hz
Output current	1.9 A
Ambient temperature	0 to 40 °C
Ambient humidity	35 to 65 % Rh (No condensation)
Weight	375 g
Standards/Directive	CE, cUL


Construction

IZT43(-L) series

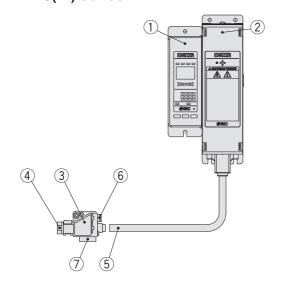

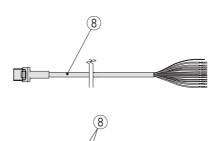

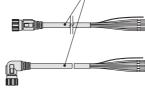

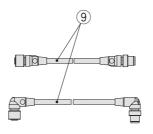

No.	Description	
1	Controller	
2	High voltage power supply module	
3	Nozzle	
4	Emitter cartridge	
5	High voltage cable	
6	One-touch fitting	
7	Bracket	
8	Power supply cable	
9	Communication cable	

Accessories (for Individual Parts)

Emitter cartridge (For IZT43(-L))

IZT43 - N D

Emitter cartridge type/ Emitter material

Symbol	Type	Material
D	High speed static neutralisation cartridge Tungsten	
Energy saving static neutralisation cartridge		Tungsten



Tungsten (Colour: White)

Cartridge colour	Emitter material
White	Tungsten

Nozzle bracket (For IZT43(-L))



Symbol	Туре	
L1	L-bracket	
L2	Angle adjustment bracket	





Power supply cable (IZT43)

IZT40-CP 3

Cable specifications

⇒ Refer to page 60.

Power supply cable length



Tollor ouppry	
Symbol	Length [m]
3	3
5	5
10	10
15	15

IO-Link power supply cable (IZT43-L)

IZT41-CP J



Power supply cable entry direction/length

· · · · · · · · · · · · · · · · · · ·			
Symbol	Entry direction	Length [m]	
J		3	
K	Straight	5	
M		10	
S		3	
Т	Angled	5	
Z		10	

IO-Link communication cable (IZT43-L)

IZT41-CEG



Communication cable entry direction/length

		,
Symbol	Entry direction	Length [m]
Е		0.5
G		1
Н	Ctroight	2
۲	Straight	3
K	Angled	5
M		10
Р		0.5
Ø		1
R		2
S		3
Т		5
Z		10

DIN rail mounting bracket for controller and high voltage power supply module

IZT40-B 1

DIN rail mounting bracket

Symbol	Туре	
1	For Controller	
2	For High voltage power supply module	

For Controller

For High voltage power supply module





IZT40-B1

IZT40-B2

High voltage cable holder

IZT40-E

High voltage cable holder

• i iigi	i voitage cable floid
Symbol	Type
1	Straight
2	Flhow





IZT40-E1

IZT40-E2

Accessories Sold Separately

Body assembly (For IZT43(-L))



Emitter cartridge type

Symbol	Type	
High speed static neutralisation cartridge		
L	Energy saving static neutralisation cartridge	



One-touch fitting		
Symbol	Metric size	
6H	Ø 6 Straight	
6L	Ø 6 Elbow	
Symbol	Inch sizo	

	D O LIBOW
Symbol	Inch size
7H	Ø 1/4" Straight
7L	Ø 1/4" Elbow

High voltage cable assembly (For IZT43(-L))




High voltage cable length

Symbol	Length [m]
1	1
2	2
3	3



AC adapter (IZT43)

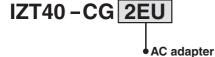


Symbol	Type
2EU	With AC cord
2	Without AC cord

* External input and output cannot be used when the AC adapter is being used.



AC adapter

Separate cable (IZT43)

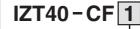


Cable length

Symbol	Length [m]	
1	1	
2	2	
3	3	



Cleaning kit (For IZT43)

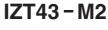



Replacement felt pad: IZT43-A003

Replacement rubber grindstone: IZT43-A004

Wiring: IZT43(-L)

IZT43

Cable colour	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connect the newer cumply to energte the product
Blue	DC (-)	IN	Connect the power supply to operate the product.
Green	F.G.		Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
Pink	Ion generation stop signal CH1	IN	Signal input to turn ON/OFF ion generation of each bar (CH1 to 4).
Grey	Ion generation stop signal CH2	IN	
Yellow	Ion generation stop signal CH3	IN	NPN specification: Stops generating ions by connecting to 0 V. (Starts generating ions when disconnected.) PNP specification: Stops generating ions by connecting to 24 VDC. (Starts generating ions when disconnected.)
Purple	Ion generation stop signal CH4	IN	
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning.
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem).
Orange	_	_	_

IZT43-L: IO-Link Power Supply Cable

No.	Cable colour	Signal name	Description
1	Brown	DC (+)	
2	DIOWII	DC (+)	Connect the power supply to operate the product.
3	Blue	DC (-)	Connect the power supply to operate the product.
4	blue	DC (-)	
5	Green	F.G.	Frame ground of the product. Make sure to ground with a resistance value of $100~\Omega$ or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.

^{*} Refer to the power supply cable dimensions on page 60 for the cable specifications.

IZT43-L: IO-Link Communication Cable


No.	Signal name	Description
1	L+	Power supply for IO-Link
2	_	_
3	L-	Power supply for IO-Link
4	C/Q	_
5	_	_

Frequencies

Series	IZT43(-L)
Controller	IZTC41(-L)
	1
	3
	5
	8
Frequency	10
[Hz]	15
	20
	30
	DC+
	DC-


Wiring Circuit: IZT43-L


Controller (IO-Link)

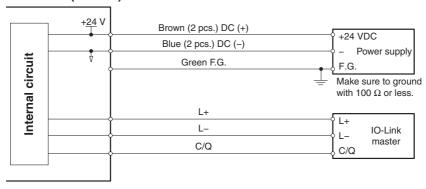




Wiring Circuit: IZT43

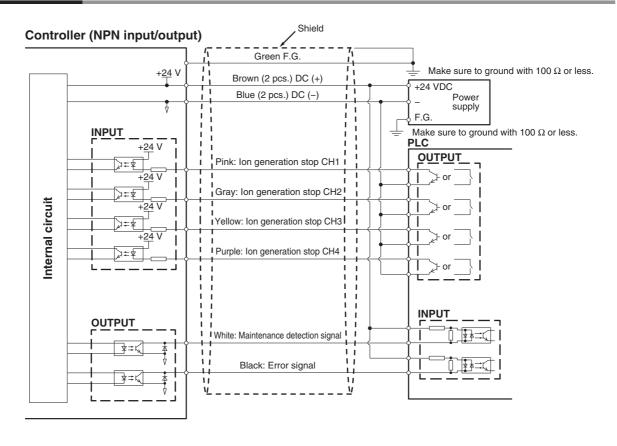

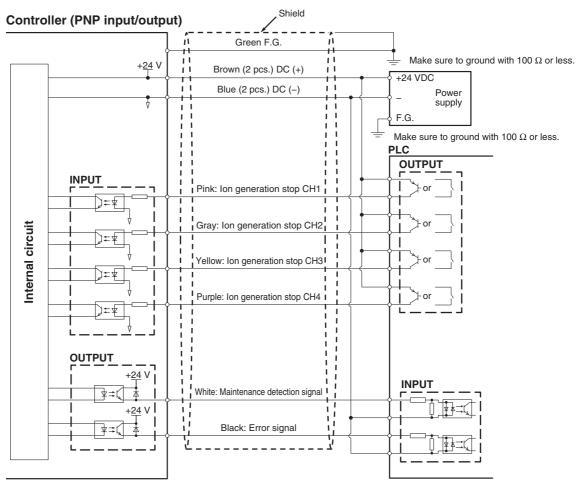

Dimensions

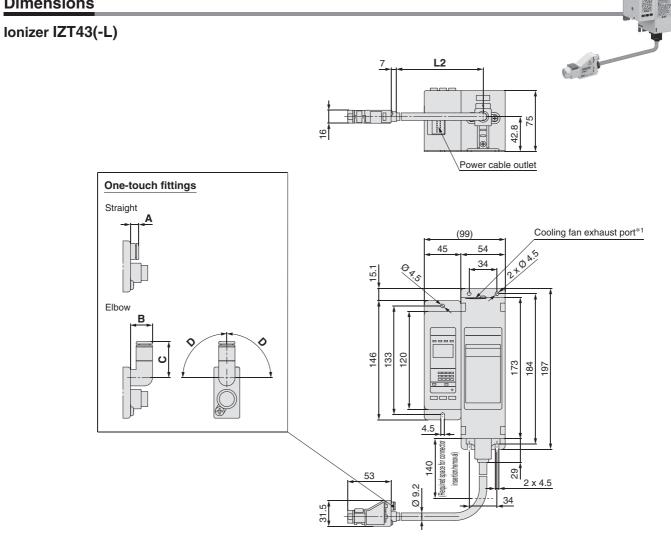

*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).

High Voltage Cable Length L2

g .	oltage oable Ecligiti EE
Symbol	L2 [mm]
1	1000
2	2000
3	3000


One-touch Fittings

Straight			
	Applicable tubing O.D.	Α	
Metric	Ø6	7	
Inch	Ø 1/4"	10	

Elbow [m				
	Applicable tubing O.D.	В	С	D
Metric	Ø6	14	23	105°
Inch	Ø 1/4"	14	26	105°

Dimensions


L-bracket IZT43-BL1

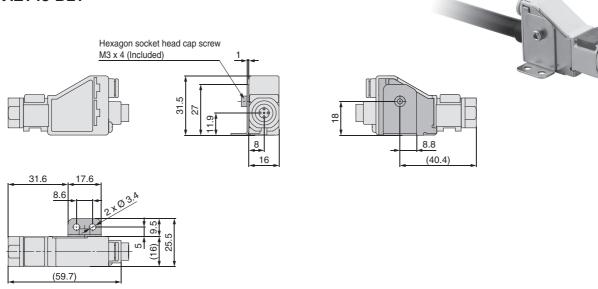


Angle adjustment bracket IZT43-BL2 29.9 Hexagon socket head cap screw M3 x 4 (Included) (16) 40 36 **@** 29.2 2.7 11.2 2487 2 x 3.4 (Mounting angle adjustable range) 30° When adjusting the angle 8.5 (Mounting angle adjustable range) 45 (40) (36) PA. (29.2)(2.7)


Dimensions


Controller IZT43

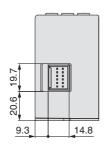


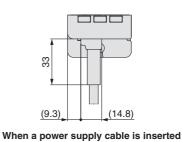



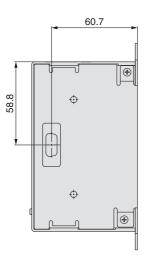


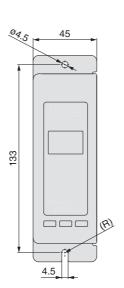

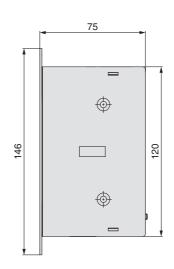




When a DIN rail mounting bracket (IZT40-B1) is used

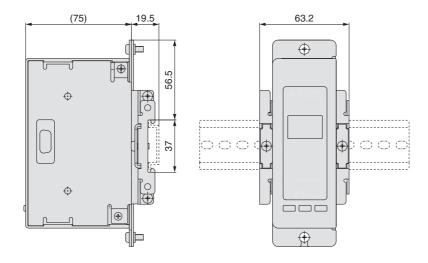


Dimensions


Controller IZT43-L

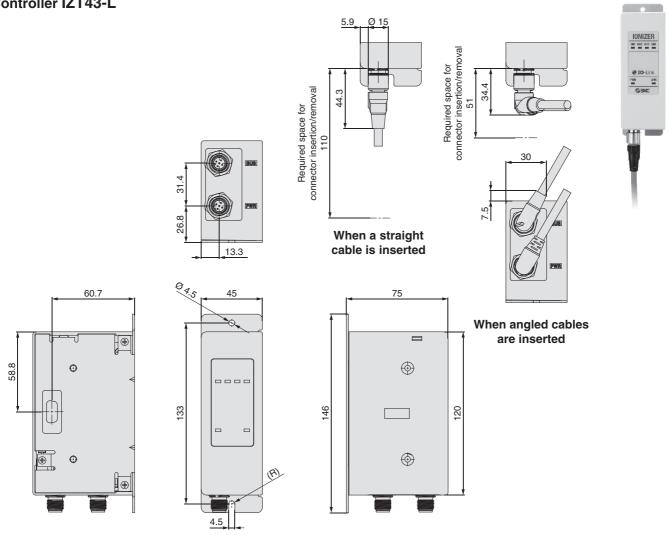

When a DIN rail mounting bracket (IZT40-B1) is used

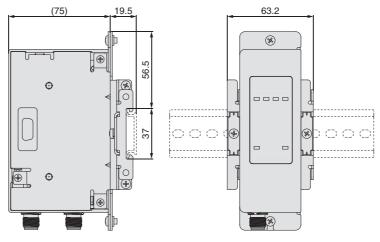




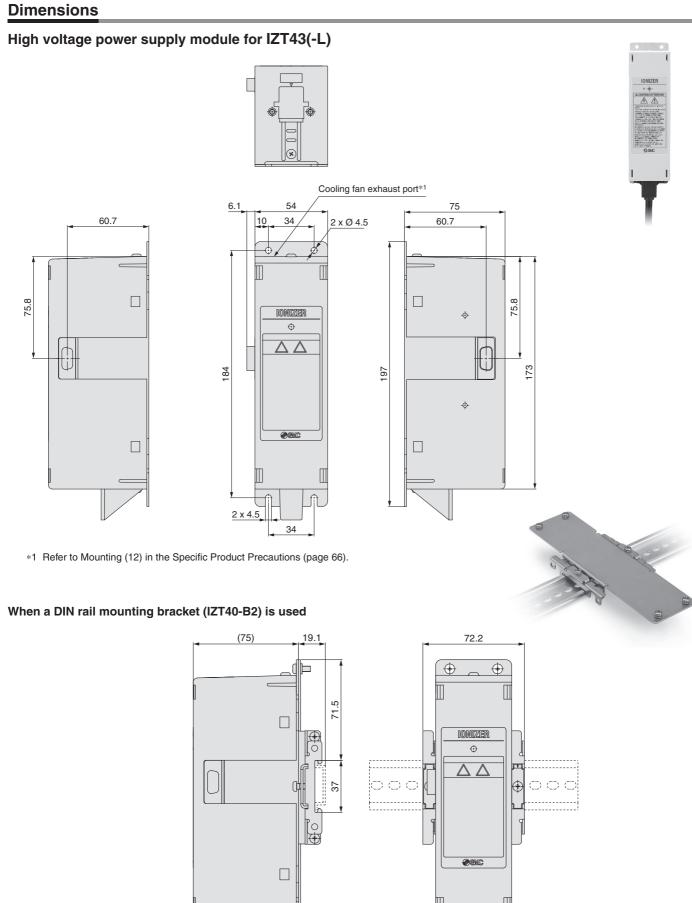

Dimensions

Power supply cable IZT43

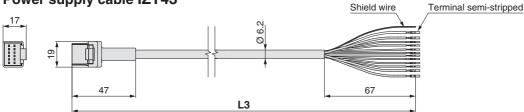


Cable Length L3

ouble folight fo		
Part number	L3 [mm]	
IZT40-CP3	2950	
IZT40-CP5	5000	
IZT40-CP10	9800	
IZT40-CP15	15000	

Cable Specifications

No. of cable wires/Size		12 cores/AWG20 (4 cores), AWG28 (8 cores)	
Nominal cross section		0.54 mm ² (4 cores), 0.09 mm ² (8 cores)	
Conductor	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)	
la sulata a	O.D.	1.4 mm Brown, Blue	
Insulator		0.7 mm White, Green, Pink, Purple, Grey, Yellow, Orange, Black	
Chaath	Material	Lead-free PVC	
Sheath	O.D.	6.2 mm	

IO-Link power supply cable IZT43-L

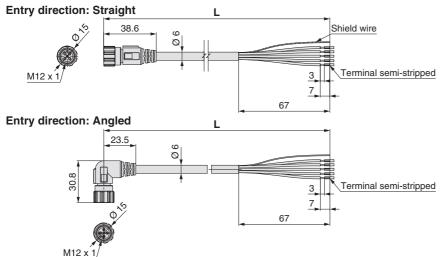


Power Supply Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CPJ		3
IZT41-CPK	Straight	5
IZT41-CPM		10
IZT41-CPS		3
IZT41-CPT	Angled	5
IZT41-CPZ		10

Power Supply Cable Specifications

No. of cable wires/Size		5 cores/AWG22		
Conductor	Nominal cross section	0.3 mm ²		
	O.D.	0.76 mm		
Insulator O.D. 1.		1.3 mm		
Sheath	Material	PVC (Lead-free)		
	O.D.	6.0 mm		

IO-Link communication cable IZT43-L

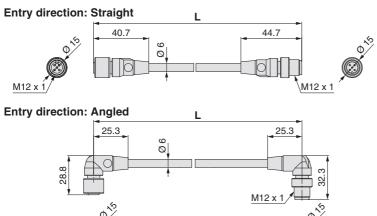

Communication Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CEE		0.5
IZT41-CEG		1
IZT41-CEH	Straight	2
IZT41-CEJ	Straight	3
IZT41-CEK		5
IZT41-CEM		10
IZT41-CEP		0.5
IZT41-CEQ		1
IZT41-CER	Angled	2
IZT41-CES		3
IZT41-CET		5
IZT41-CEZ		10


Communication Cable Specifications

No. of cable wires/Size		5 cores/AWG22	
Conductor	Nominal cross section	0.3 mm ²	
	O.D.	0.76 mm	
Insulator	O.D.	1.5 mm	
Sheath	Material	PVC (Lead-free)	
	O.D.	6.0 mm	



Dimensions


Separate cable IZT40-CF□

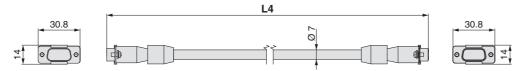



Cable Length L4


- · · · · J ·	
Part number	L4 [mm]
IZT40-CF1	1000
IZT40-CF2	2000
IZT40-CF3	3000


When a separate cable is used

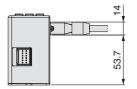


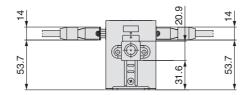

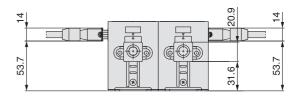

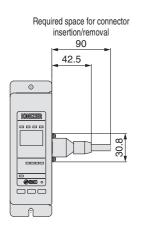


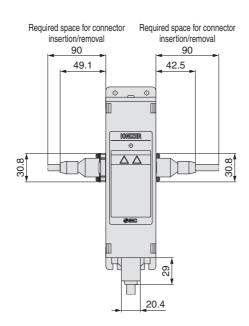

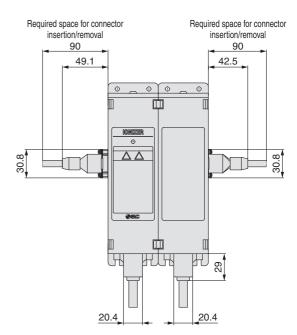

Dimensions

High voltage cable assembly IZT43-A002-□

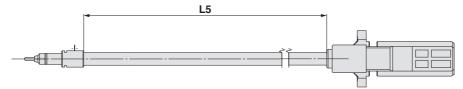



Cable Length L5

Part number	L5 [mm]	
IZT43-A002-1	1000	
IZT43-A002-2	2000	
IZT43-A002-3	3000	


High voltage cable holder Straight IZT40-E1

Cross-sectional view A-A

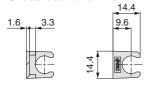

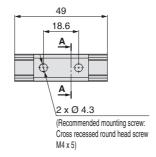

Elbow IZT40-E2

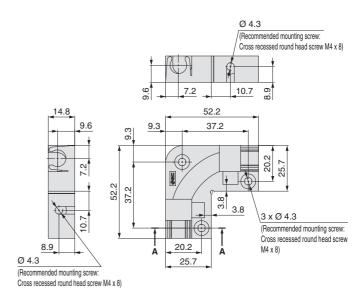

Cross-sectional view A-A




IZT40/41(-L)/42(-L)/43(-L) Series Glossary

1 Discharge Time

Time required for the voltage (attributed to static electric charge) attenuating from an initial value to the arbitrarily selected final value [JIS C 61340-4-7]

The graph shows the time required for the charged plate voltage being discharged from 1000 V to 100 V.

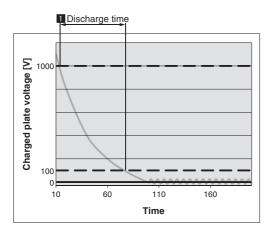

2 Offset Voltage

Voltage which can be measured from the insulated conductive charged plate mounted to the charged plate monitor in the ionized atmosphere [JIS C 61340-4-7]

This catalogue shows the average offset voltage between 1 and 2 minutes after starting the measurement.


3 Peak Offset Voltage

The peak voltage of the pulse voltage type ionizer when considering the offset value of each polarity as an absolute value when the offset voltage fluctuates to the positive and negative side periodically, based on the periodical fluctuation of the ion output from positive to negative [JIS C 61340-4-7]

4 Potential Amplitude

The p-p voltage value is measured by the charged plate using the AC method in which positive and negative ion output fluctuates periodically. [SMC technical term]

The voltage is measured between 1 and 2 minutes after starting the measurement, and the difference between the maximum and minimum values is indicated.

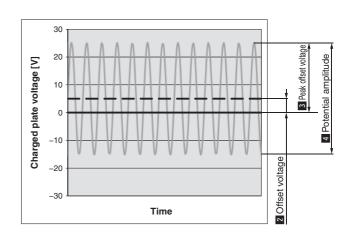



Be sure to read this before handling the products. Refer to the back cover for safety instructions.

Selection

.⚠Warning

- 1. This product is intended to be used with general factory automation (FA) equipment.
 - If considering using the product for other applications (especially those indicated in Warning (4) on the back cover), please consult with SMC beforehand.
- 2. Use this product within the specified voltage and temperature range.
 - Using outside of the specified voltage can cause a malfunction, damage, electrical shock, or fire.
- 3. Use clean compressed air as fluid. (Compressed air quality of Class 2.4.3., 2.5.3., 2.6.3 or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation.)
 - This product is not explosion proof. Never use a flammable gas or an explosive gas as a fluid and never use this product in the presence of such gases.
 - Please contact us when fluids other than compressed air are used.
- 4. This product is not explosion-protected.
 - Never use this product in locations where the explosion of dust is likely to occur or flammable or explosive gases are used. This can cause a fire.

⚠ Caution

- 1. Clean specification is not available with this product.
 - A minute amount of particles are generated due to wearing of the emitters while the product is operating.
 - When bringing into a clean room, confirm the required cleanliness before use.

Mounting

△ Warning

- 1. Reserve enough space for maintenance, piping, and wiring.
 - Please take into consideration that the connector connecting part, plug connecting part, and One-touch fittings for supplying air need enough space for the cable and air tubing to be easily attached/detached.
 - To avoid unreasonable stress applied to the connector mounting part, plug connecting part, and One-touch fitting mounting part, bending of the cable or air tubing should be more than the minimum bending radius.
 - If the cable is bent in an acute angle or load is applied to the cable repeatedly, it may cause a malfunction, wire damage or fire

[Minimum bending radius] Power supply cable: 40 mm
Power supply cable: 48 mm (IO-Link)
Communication cable: 40 mm (IO-Link)
Separate cable (Option): 40 mm
High voltage cable: 30 mm

* Shown above is wiring with the fixed minimum allowable bending radius and at a temperature of 20 °C. A bend radius should be larger at a temperature lower than 20 °C. Regarding the minimum bending radius of the air tubing, refer to the operation manual or catalogue for air tubing.

2. Installation of the high voltage cable

- Use the specified cable holder (IZT40-E1 or IZT40-E2) for installing high voltage cables.
- Follow the instructions below when installing high voltage cables. If these are not followed, the insulation performance of the high voltage cable will decrease, causing failure of the ionizer, which may lead to electrical shock or fire.
- a. Do not cut the cable.
- b. Keep to the minimum bending radius of the cable.
- c. Do not tighten the cable too much with cable ties. Do not deform the cable by placing any object on the cable.
- d. Avoid the problems of cable runaway such as in a cable duct.
- e. Do not twist or damage the cable. If the cable is damaged, it should be replaced.





Be sure to read this before handling the products. Refer to the back cover for safety instructions.

Mounting

. Marning


- 3. Fix the high voltage cable connector using 2 screws included as an accessory.
 - Fix the connector using 2 cross recessed round head screws (M4 x 10 L) with the specified tightening torque. (Refer to the table below.)
- Be sure to fix the high voltage cable plug with a screw.
- 5. Mount on a flat surface and do not apply impact load or excessive external force.
 - If there are irregularities, cracks or height differences, excessive stress will be applied to the housing or brackets, resulting in damage or other trouble.
 - Do not drop or apply a strong shock. Otherwise, damage or an accident can occur.
- Install the product so that the bar does not have an excessive deflection.
 - For a bar length of 820 mm or more, be sure to support the bar at both ends and in the middle by using brackets (IZT40-BM1 or IZT40-BM2). If the bar is held only at the both ends, self-weight of the bar causes deflection, resulting in damage or deformation of the bar.
- Avoid using in a place where noise (electromagnetic wave surge) is generated.
 - If the product is used in an environment where noise is generated, it may lead to a malfunction and deterioration or damage of the internal elements.
 - If the presence of noise is suspected, take preventative measures against noise and avoid crossing wires such as power line and high voltage line.
- 8. Tighten screws with the specified tightening torque.
 - If the mounting screws are tightened in excess of the specified torque range, it may damage the screws or mounted areas.
 - If the tightening torque is insufficient, the screws may become loose. (Refer to the table below.)

Do not touch the emitter directly with fingers or metallic tools.

- Do not touch the emitter with your finger. If the needle sticks to your finger, an electrical shock can cause an instantaneous rapid body motion to escape from the shock, causing injury.
- If the emitter or cartridge is damaged with a tool, the specification will not be met and damage and/or an accident may occur.

\land Caution: High Voltage

The emitter carries a high voltage. If foreign matter is inserted or there is human contact with the emitter, an electrical shock, or an instantaneous body reaction to escape from the shock, can cause injury.

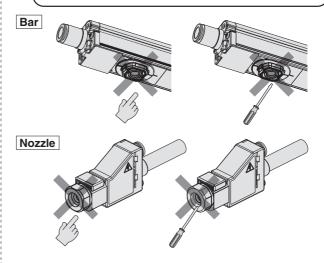

Tightening Torque for Screws

Description		Part number	Screw	Tightening torque
	End bracket	IZT40-BE□	For fixed angle M4 x 8 L	0.72 to 0.76 N·m
			For fixed bar M4 x 8 L	0.51 to 0.55 N⋅m
For Bar	Intermediate bracket 1	IZT40-BM1	M4 x 16 L	0.72 to 0.76 N·m
	Intermediate bracket 2	IZT40-BM2	M4 x 16 L	0.47 to 0.49 N·m
	High voltage cable connector	IZTB4□-□□□□□-□-□	M4 x 10 L	0.49 to 0.53 N⋅m
	L-bracket	IZT43-B1	M3 x 4 L	0.61 to 0.65 N⋅m
	Angle adjustment bracket	IZT43-B2	For fixed angle M3 x 4 L	0.61 to 0.65 N·m
For Nozzle			For fixed nozzle M3 x 4 L	0.61 to 0.65 N⋅m
	High voltage cable connector	IZTN43-□□□□-□	M4 x 10 L	0.49 to 0.53 N·m
	High voltage cable plug	1211143	M3 x 5 L	0.11 to 0.15 N⋅m
Controller		IZTC40 IZTC41(-L)	M4 x 30 L	0.22 to 0.24 N·m
Separate cable		17T40 OF	Spacer	0.40 to 0.60 N·m
		IZT40-CF□	Set screw	0.25 to 0.35 N⋅m
DIN rail mounting bracket		IZT40-B□	M4 x 6 L	1.30 to 1.50 N·m
Cable holder		IZT40-E□	M4 x 8 L (Recommended length)	0.19 to 0.21 N·m






Be sure to read this before handling the products. Refer to the back cover for safety instructions.

Mounting

.↑ Warning


- 10. Do not affix any tape or seals to the controller, high voltage power supply module, bar, and nozzle.
 - If the tape or label contains a conductive adhesive or reflective paint, a dielectric phenomenon may occur due to ions arising from such substances, resulting in electrostatic charging or electric leakage, causing a malfunction, damage, electric shock or fire.
- 11. Installation should be conducted after turning off the power supply and air supply to the controller, high voltage power supply module, bar, and nozzle.
 - If installation or adjustment is performed power or air supplied, electric shock, failure or injury can result.
- 12. The high voltage power supply module uses a fan. A space of 20 mm or more is required from the exhaust port for ventilation. Install the product in a ventilated location so peripheral devices are not affected.

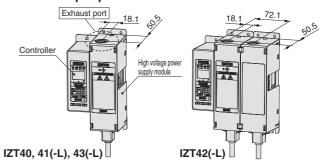

- 13. Do not apply any excessive force to cables, such as repeated bending, tensioning, or placing a heavy object on the cables.
 - It may cause an electric shock, fire, or the breaking of a wire.
- 14. Do not carry the product by holding its cables.
 - It may cause an injury or damage to the product.


⚠ Caution

- 1. When the IZT40, IZT41, IZT42, or IZT43 series is installed, maintain a space from structures or components.
 - If there are electrically conductive objects such as walls or structures close to the bar, generated ions may not reach the target object effectively or product failure or electric shock can result due to dielectric or short-circuit.

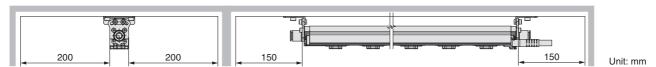

- Make sure to confirm the effect of static neutralisation after installation.
 - The performance of the product varies depending on the surrounding installation and operating conditions. After installation, verify the effects of static neutralisation.
- When installing the IZT41, IZT42, or IZT43 in proximity with an ionizer which operates in DC mode (one polarity, positive or negative), they should be positioned at least 2 meters away from each other.
 - When using the AC mode of the IZT41, IZT42, or IZT43 near the ionizer in DC mode, keep clearance of at least the length shown in the figure below between them. The offset voltage (ion balance) may not be adjusted by the built-in sensor due to the ions discharged from the DC mode ionizer.



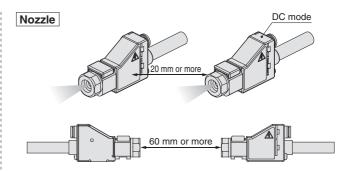

4. Use the specified bracket.



Be sure to read this before handling the products. Refer to the back cover for safety instructions.

Wiring / Piping

⚠ Warning

- Before wiring, ensure that the power supply capacity is larger than the specification and that the voltage is within the specification. Product damage or malfunction can result.
- To maintain product performance, the power supply shall be UL listed Class 2 certified by National Electric Code (NEC) or evaluated as a limited power source provided by UL60950.
- 3. To maintain the product performance, ground the product with an earth ground cable with a resistance of 100 Ω or less. If the product is not grounded, it is not possible to secure the performance and may lead to product failure or malfunction.
- 4. Wiring (including insertion and removal of the connector plug (high voltage cable connector, high voltage cable plug)) should never be carried out with the power supply ON. Otherwise, an electrical shock or accident may occur.
- 5. Use the specified cable for connecting the ionizer controller, high voltage power supply module, bar, and nozzle. Do not disassemble or retrofit. Modifying the product may cause accidents such as electric shock, failure or fire. The product will not be guaranteed if it is disassembled and/or modified.
- 6. Ensure the safety of wiring and surrounding conditions before supplying power.
- 7. Do not connect or disconnect the connector plug (including power source) while the power is supplied. Failure to follow this procedure may cause product malfunction.
- 8. If the ionizer wiring and high power lines are routed together, this product may malfunction due to noise. Therefore, use a separate wiring route for this product.
- Confirm that the wiring is correct before operation. Incorrect wiring will lead to product damage or malfunction.
- 10. Flush the piping before use. Before piping this product, exercise caution to prevent particles, water drops, or oil contents from entering the piping.

Operating Environment / Storage Environment

⚠ Warning

- Observe the fluid temperature and ambient temperature range.
 - Fluid temperature and ambient temperature ranges are; 0 to 40 °C for controller, 0 to 40 °C for high voltage power supply module, 0 to 50 °C for bar, 0 to 40 °C for nozzle, and 0 to 40 °C for AC adapter.
 - Do not use the product in locations where the temperature may change suddenly even if the ambient temperature range is within the specified limits, resulting in condensation.

Operating Environment / Storage Environment

Marning

2. Do not use this product in an enclosed space.

 This product utilises a corona discharge phenomenon. Avoid using in an enclosed space as ozone and nitrogen oxides exist in such places, even though in marginal quantities.

3. Environments to avoid

- Never use or store under the following conditions. These may cause a failure, fire, etc.
 - Environments where the ambient temperature is outside of the product specification
 - Environments where the ambient humidity is outside of the product specification
- c. Environments where abrupt temperature changes may cause condensation
- d. Environments where corrosive gas, flammable gas or other volatile flammable substances are stored
- Environments where the product may be exposed to conductive powder such as iron powder or dust, oil mist, salt, organic solvent, machining chips, particles or cutting oil (including water and any liquids), etc.
- f. Environments where ventilated air from an air conditioner is directly applied to the product
- g. Enclosed or poorly ventilated environments
- h. Environments that are exposed to direct sunlight or heat radiation
- Environments where strong electromagnetic noise is generated, such as strong electrical and magnetic fields or supply voltage spikes
- j. Environments where static electricity is generated
- k. Environments where a strong high frequency occurs
- I. Environments that are subject to potential lightning strikes
- m. Environments where the product may receive direct impact or vibration
- Environments where the product may be subjected to forces or weight that could cause physical deformation

4. Do not use an air containing mist or dust.

- The air containing mist or dust will cause the performance to decrease and shorten the maintenance cycle.
- Install an air dryer (IDF series), air filter (AF/AFF series), and/ or mist separator (AFM/AM series) to obtain clean compressed air (compressed air quality of Class 2.4.3., 2.5.3., 2.6.3 or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation).
- Controller, high voltage power supply module, bar, nozzle, and AC adapter are not resistant to lightening surge.

6. Effects on implantable medical devices

- The electromagnetic waves emitted from this product may interfere with implantable medical devices such as cardiac pacemakers and cardioverter defibrillators, resulting in the malfunction of the medical device or other adverse effects.
- Please use extreme caution when operating equipment
 which may have an adverse effect on your implantable
 medical device. Be sure to thoroughly read the precautions
 stated in the catalogue, operation manual, etc., of your
 implantable medical device, or contact the manufacturer
 directly for further details on what types of equipment need to
 be avoided.





Be sure to read this before handling the products. Refer to the back cover for safety instructions.

Maintenance

<u> Marning</u>

1. Periodically inspect the ionizer and clean the emitters.

- Check regularly if the product is operating with undetected failures or not.
- The maintenance must be performed by an operator who has sufficient knowledge and experience.
- If the product is used for an extended period with dust present on the emitters, the product performance will be reduced.
- An emitter dirt detection function is available with the IZT41, IZT42, and IZT43. When emitter contamination is detected, clean the emitter.
- In cases where the emitter dirt detection function is not used on the IZT41, IZT42, or IZT43, or when the IZT40 is used, perform a neutralising performance test and set a maintenance cycle for periodic cleaning.
- The emitter contamination level is different depending on the installation environment and supply pressure.
- If the performance is not recovered after cleaning, it is possible that emitters are worn. Replace the emitter cartridge.

⚠Caution: High Voltage

This product contains a high voltage generation circuit. When performing maintenance inspection, be sure to confirm that the power supply to the ionizer is turned off. Never disassemble or modify the ionizer, as this may not only impair the product's functionality but could cause an electric shock or electric leakage.

- When cleaning the emitter or replacing the emitter cartridge, be sure to turn off the power supply or air supply to the controller, high voltage power supply module, bar, and nozzle.
 - Never touch the emitters with the power supplied to the controller, high voltage power supply module, bar, and nozzle. Electric shock may cause injury.
 - If an attempt to replace the emitter cartridges is performed before removing air supply, the emitter cartridges may eject unexpectedly due to presence of the compressed air. Remove supply air before replacing the cartridges.
 - If emitter cartridges are not securely mounted to the bar, they may eject or release when air is supplied to the product.
 - Securely mount or remove the emitter cartridges referencing the instructions shown to the right.
 - Securely mount or remove the emitter cartridges with hands and do not use tools.

Bar type

Emitter cartridge tightening torque: 0.2 to 0.3 N·m

Emitter cartridge tightening torque: 0.1 to 0.2 N·m

Bar

Removal of emitter cartridge



Rotate the cartridge
 90 degrees in the counter-clockwise direction.



Pull to remove.


Mounting of emitter cartridge



Insert the cartridge into the bar so that the longer side of the cartridge is mounted at a right angle to the bar.




2) Rotate the cartridge 90 degrees in the clockwise direction, and match the markings on the bar to those on the emitter cartridge and secure.

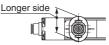




Nozzle

Removal of emitter cartridge

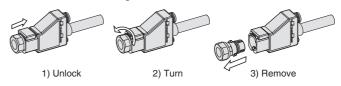

Mounting of emitter cartridge

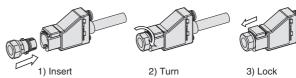


3. Do not disassemble or modify the product.

- Disassembling or modifying the product may cause accidents such as electric shock, failure or fire.
- The product will not be guaranteed if it is disassembled and/

4. Do not operate the product with wet hands.

- Never operate the product with wet hands. It may cause electric shock or other accidents.
- When replacing the high voltage cable for the nozzle, be sure to turn off the power supply or air supply to the controller, high voltage power supply module, and nozzle.

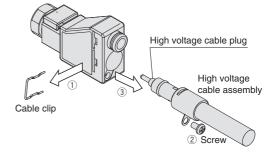







Be sure to read this before handling the products. Refer to the back cover for safety instructions.

Handling

- 1. Do not apply excessive external force or impact (100 m/s² or more).
 - Even though the controller, high voltage power supply module, bar, and nozzle do not appear to be damaged, the internal parts may be damaged and cause a malfunction.
- 2. If the bar length exceeds 8 2 0 mm, hold both ends and the middle of the bar to avoid a moment load being applied.
 - Handling the product by holding either end of the bar may cause deformation or damage of the product.
- 3 . The power cable must be connected and disconnected by hand.
 - The use of tools can result in damage to the product.
 - Hold the connector by hand and pull it out straight.
 - If the connector has a lock mechanism, release the lock and then pull out the connector.
- 4. If smoking, fire, or foul smell occurs in the product, immediately shut off the power supply.
- 5. Do not touch part A of the high voltage connector and part B of the high voltage cable plug by hand. Be careful that moisture or foreign matter does not adhere to the connector and plug.
 - Do not touch part A of the high voltage connector and part B of the high voltage cable plug while handling.
 - Keep the high voltage connector and high voltage cable plug free from contamination. Adhesion of moisture, oil, or foreign matter on part A and part B may cause high voltage electric leakage.
 - If moisture, oil, or foreign matter adheres to part A or part B, clean it with ethanol.

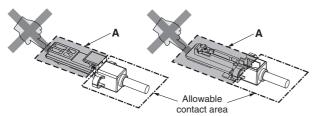

High voltage connector

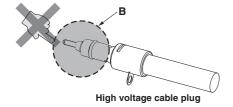

Handling

⚠ Caution

6. Tightening of M12 connector screw

- The screws may become loose if they are not tightened sufficiently.
- Check that they are tightened enough at appropriate intervals during operation.

7. Connection and disconnection of M12 connector

- Do not touch the engagement surface with wet hands.
- Do not pull the cable out by holding the cable.
- Note the key direction.
- When engaging the connectors, insert the connectors until the entire engagement surface is no longer visible and tighten the screws so as not to damage the thread ridges.

Adjustment / Operation

 For details on programming and address setting, refer to the manual from the PLC manufacturer.
 The programming content related to the protocol is designed by the manufacturer of the PLC used.





⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1, and other safety regulations.

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

injury.

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

njury.

▶ Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

njury.

ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogueue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions

- Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogueue.
- An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogueue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country
 to another are governed by the relevant security laws and
 regulations of the countries involved in the transaction. Prior
 to the shipment of a SMC product to another country, assure
 that all local rules governing that export are known and
 followed

↑ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History Edition B - The energy saving high-efficiency cartridge has been ΥQ added. The contents of the technical data have been revised. - The weight of the high voltage power supply module has been changed. - Information on the effects on implantable medical devices has been added to the specific product precautions - Number of pages has been increased from 40 to 44. **Edition C** - The nozzle type, IZT43 series has been added. YU - Number of pages has been increased from 44 to 64. **Edition D** - An IO-Link type has been added to the IZT41/42/43 ZX - Number of pages has been increased from 64 to 72.

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 www.smc.be Bulgaria +359 (0)2807670 www.smc.ba +385 (0)13707288 www.smc.hr Croatia **Czech Republic** +420 541424611 www.smc.cz Denmark +45 70252900 www.smcdk.com Estonia +372 651 0370 www.smcee.ee Finland +358 207513513 www.smc.fi France +33 (0)164761000 www.smc-france.fr Germany +49 (0)61034020 www.smc.de Greece +30 210 2717265 www.smchellas.gr +36 23513000 Hungary www.smc.hu +353 (0)14039000 www.smcautomation.ie Ireland +39 03990691 Italy www.smcitalia.it Latvia +371 67817700 www.smc.lv

office@smc.at
info@smc.be
office@smc.bg
office@smc.br
office@smc.cz
smc@smcdk.com
info@smcee.ee
smcfi@smc.fi
supportclient@smc-france.fr
info@smc.de
sales@smchellas.gr
office@smc.hu
sales@smcautomation.ie
mailbox@smcitalia.it
info@smc.lv

Lithuania +370 5 2308118 www.smclt.lt Netherlands +31 (0)205318888 www.smc.nl Norway +47 67129020 www.smc-norge.no +48 222119600 Poland www.smc.nl Portugal +351 214724500 www.smc.eu Romania +40 213205111 www.smcromania.ro Russia +7 (812)3036600 www.smc.eu Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 www.smc.eu Sweden +46 (0)86031240 www.smc.nu **Switzerland** +41 (0)523963131 www.smc.ch +90 212 489 0 440 www.smcturkey.com.tr Turkey UK +44 (0)845 121 5122 www.smc.uk

info@smc.nl
post@smc.norge.no
office@smc.pl
apoioclientept@smc.smces.es
smcromania@smcromania.ro
sales@smcru.com
office@smc.sk
office@smc.si
post@smc.smces.es
smc@smc.nu
info@smc.ch
satis@smcturkey.com.tr
sales@smc.uk

info@smclt.lt

South Africa +27 10 900 1233 www.smcza.co.za zasales@smcza.co.za