

# Reflection light beam switch with polarisation filter

# RL39-54/32/40a/82a/116

# with terminal compartment

 $C \in$ 



- ¥ Detection range up to 9 m
- ¥ Glare protected with polarisation filter
- ¥ Visible red light
- ¥ Pre-fault indication and output
- ¥ /Light/dark ON, switchable
- Supplied with reflector and mounting accessory
- ¥ Protection degree IP67

#### **General specifications**

0 ... 7 m Effective detection range

Reflector distance 100 ... 9000 mm

Threshold detection range 9 m Light source LED CF Approvals

Reference target H85 reflector red, alternating light Light type

Ambient light limit 10000 Lux

Indicators/operating means

LED yellow: switching state LED red: pre-fault indication Function display

Operating elements sensitivity adjuster Light/dark switch Operating elements

**Electrical specifications** 

10 ... 30 V DC Operating voltage

10 % Ripple  $\Omega$ 35 mA No-load supply current I<sub>0</sub> Time delay before availability tv  $\Omega$ 50 ms

Output

Output of the pre-fault indication NO, static, pnp ( $\&\Omega$ 200 mA)

Switching type light/dark switching Signal output 1 switch output pnp Switching voltage max. 30 V DC Switching current max. 200 mA  $U_{\rm d}$ Voltage drop Ω3 V Switching frequency  $\Omega$ 300 Hz

 $\Omega$ 1,5 ms Response time

Standard conformity

Standards EN 60947-5-2

**Ambient conditions** 

Ambient temperature -25 ... 55 °C (248 ... 328 K) -40 ... 55 °C (233 ... 328 K) Storage temperature

**Mechanical specifications** 

Protection degree IP67


Connection terminal compartment PG9, Ω2.5 mm<sup>2</sup>


Material

Housing PBT Optical face **PMMA** Mass 100 g




### **Curves/Diagrams**

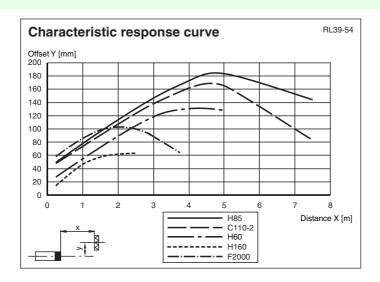


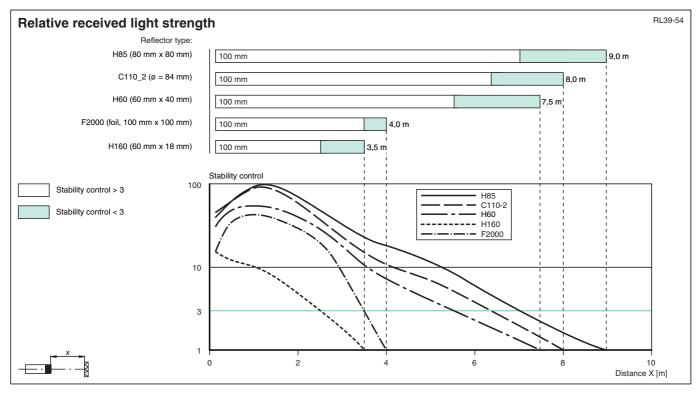

## **Dimensions**

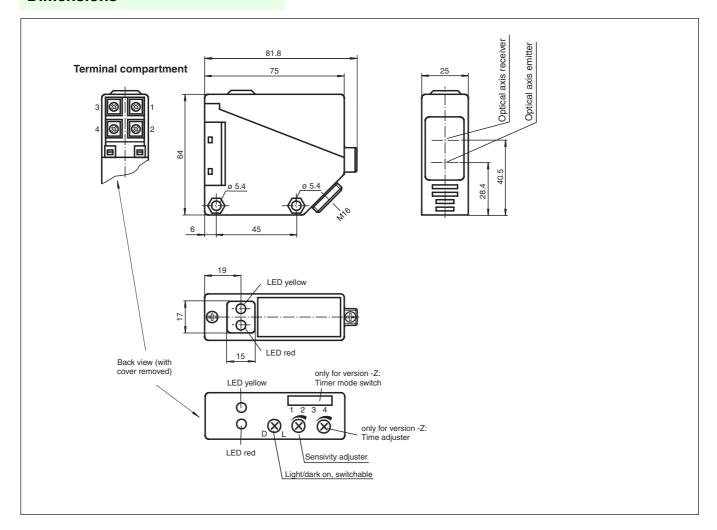

## **Electrical connection**

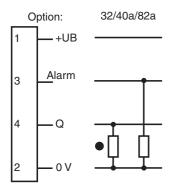

#### **Additional Information**

#### Conventional use:

The reflex light beam switch contains the emitter and receiver in a single housing. The light from transmitter is beamed back from a reflector to the receiver. If an object interrupts the light beam the switching function is initiated.

#### **Mounting instructions:**

The sensor can be fastened over the through-holes directly or with the included mounting bracket.

The base surface must be flat to avoid distorting the housing during mounting. It is advisable to secure the bolts and screws with washers to prevent misalignment of the sensor.

#### Instructions for adjustment:

Connect the sensor to operating voltage, the LED green lights up constantly.

Mount suitable reflector opposite light beam switch and align roughly.

The exact adjustment takes by swivelling the sensor horizontally and vertically. With optimum light reception the yellow LED lights up constantly. In case of bad alignment, the red LED lights up.

#### Object detection check:

Move the object into the light beam. If the object is recorded, the yellow LED goes off. If it isn't going off, reduce the sensitivity with the potentiometer until it goes off. It should light up constantly again when the object is removed.

The red LED lights up if reception deteriorates (e.g. soiled lenses or by maladjustment) and when falling short of the stability control.

#### lustration:

We recommend that you clean the optical interfaces and check the plug-in connections and screw connections at regular intervals.