SIEMENS














SIRIUS modular system

Switching, protecting, starting and monitoring with the highly flexible modular system

Everything for the control cabinet: the SIRIUS modular system.

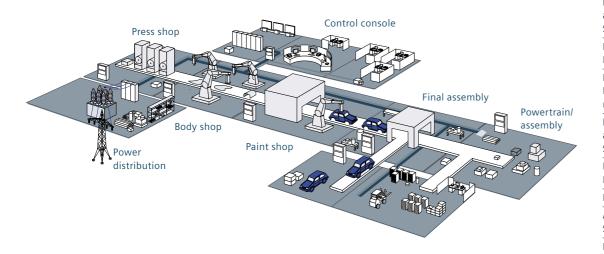

Processing, fitting, transporting. These and similar functions run on many automated production lines. With the extensive range of the SIRIUS modular system, you will find everything you need for switching, protecting, starting and monitoring motors.

Everything. Really easy. With SIRIUS.

Contents

The components of the Sikius modular system Combination of switching devices and protective devices Convenient means of power supply and distribution	4 8 9
Electromechanical switching devices for fuseless assembly of load feeders up to 7.5 kW Size S00 selection and ordering data:	10
Motor starter protector, contactor with overload relay Motor starter protector, contactor with current monitoring relay	10 10
Motor starter protector, soft starter with current monitoring relay Motor starter protector, solid-state switching device with current monitoring relay	13 13
Electromechanical switching devices for fuseless assembly of load feeders up to 18.5 kW Size S0 selection and ordering data:	16
Motor starter protector, contactor, overload relay Motor starter protector, contactor with current monitoring relay	17 17
Motor starter protector, soft starter with current monitoring relay	18
Assembly of direct-on-line starters and reversing starters 37 kW Size S2 selection and ordering data:	20
Motor starter protector, contactor, overload relay Motor starter protector, contactor with current monitoring relay	20 20
Assembly of direct-on-line starters and reversing starters up to 45 kW Size S3 selection and ordering data	24
Size S6, S10 and S12 Selection and ordering data	26
Fuseless load feeders Selection and ordering data:	
Direct-on-line starters (fully pre-assembled load feeders, compact starters)	29
Reversing starters (fully pre-assembled load feeders, compact starters)	30
Communication connection (IO-Link/AS-Interface master, contactors, function modules for mounting on 3RT2 contactors and for connecting to the automation level, compact starters)	31
Infeed systems For compact starters, load feeders, 3-phase busbar, 8US busbar adapter	34
Accessories Selection and ordering data:	
Motor starter protectors	37
Contactors Overload relays, current monitoring relays	39 44
Planning Efficiency	——— 46
-	

Everything. Systematically. SIRIUS modular system.

S2

S3

S0

S00

Building control cabinets must be fast, simple, flexible and space-saving. How can all this be achieved? With the unique SIRIUS modular system that offers everything you will need for switching, protecting, and starting motors and systems. In other words, it provides a modular range of standard components up to 250 kW/ 400 V in only seven sizes, which are perfectly matched to one another, can be combined really easily, and largely use the same accessories. That's how easy industrial controls can be!



S6

S10

S12

Soft starters

Continuous further development and regular innovations ensure that our customers are optimally equipped with SIRIUS and benefit from efficient solutions – now and in the future. All the components that make up the SIRIUS modular system are characterized by a space-saving design and a high degree of flexibility. Configuring, installing, wiring and maintenance are extremely easy and time-saving to perform. So no matter whether you want to configure load feeders with motor starter protectors, overload relays, contactors/solid-state contactors or soft starters, SIRIUS has just the product you will need for any application.

Thanks to the latest innovations to the modular system in sizes S00, S0 and S2 up to 80 A, today's SIRIUS modular system shows even more functional diversity:

In addition to the basic components, the innovated SIRIUS modular system offers new, never-before-seen highlights:

- Feeder assemblies that can be plugged in completely without tools thanks to the consistent use of spring-loaded connections in sizes SOO and SO
- 2- and 3-phase 3RR2 monitoring relays for current monitoring for direct mounting on contactors
- 3RA27 and 3RA28 function modules feature snap-on connection to contactors enabling the easiest possible assembly of direct-on-line starters, reversing starters, and star-delta (wye-delta) starting, and connection to the controller using less wiring via AS-Interface or IO-Link
- 3RB24 overload relay with communication capability, current value transmission, and control of the contactors via IO-Link
- A highlight of the SIRIUS devices is their IE3 suitability, so that they are optimally equipped for conversion to the new IE3 generation of motors

At a glance. The components of the SIRIUS modular system offer a host of benefits.

With its wide range of components, the SIRIUS modular system features the most diverse functions for use in the control cabinet, and offers a host of benefits in assembly and handling, in application monitoring, and also in controller interfacing, or when planning and configuring.



Assembly and handling:

Error prevention and reduced wiring effort – with maximum flexibility

- Load feeders: easy to implement up to 250 kW/400 V from standard devices
- Modular design: everything fits together and can be combined
- Variants and sizes: economical and flexible thanks to 7 compact sizes
- Accessories: low variance with uniform accessories
- **Configuration:** fast commissioning, short setting-up times, and simple wiring
- Mounting: permanently secure mounting, with screw terminals or simply by plugging in
- **Spring-loaded connection system:** quick and secure connection, vibration-proof, and maintenance-free
- Reduced wiring: significant reductions in cable connections thanks to plug-in design and IO-Link or AS-Interface

Applications at a glance:

Increased operational reliability and system availability

- Maintenance: extremely durable, low maintenance, and reliable
- Application monitoring: integrated extremely flexibly into the feeder – thanks to monitoring relays for current monitoring
- IE3/4-ready: With the SIRIUS modular system, we also offer you our familiar reliability when converting to IE3 motors

Connection to the automation level:

Optimal integration into the automation environment

 Communication: standardized connection to AS-Interface, IO-Link and PROFIBUS DP possible

Planning and configuration:

Simplified system planning and documentation

- **Configuration:** easy and fast thanks to extensive CAx data provision
- **Service:** short delivery times even for spare parts thanks to global logistics network
- Environment: environmentally friendly production and materials, recyclable
- **Design:** clear, ergonomic design (winner of the iF Product Design Award)
- Configurator: for the simplest possible selection of products including accessories
- Global use: thanks to comprehensive approvals

Switching. Protecting. Starting. Monitoring. The components of the SIRIUS modular system.



Much more than ON/OFF: SIRIUS 3RV motor starter protectors

The SIRIUS 3RV motor starter protectors are compact, current-limiting motor starter protectors. They ensure secure disconnection in case of a short circuit, and they protect consumers and the system against overload. They are also suited to normal switching duties for loads with a low switching frequency, and for safely isolating the system from the power supply during maintenance work or modifications. For applications over 100 A. SENTRON 3VA and 3VL circuit breakers are suitable.



Rugged and reliable: SIRIUS 3RT contactors

Thanks to their extreme ruggedness and outstanding contact reliability, our contactors switch supremely and reliably. In addition, they enable compact control cabinets with high packing density. With integrated ranges of accessories for sizes S00, S0 and S2, as well as S3 to S12, individual function expansions can be implemented with no great effort. In sizes S00, S0 and S2, the contactors even have the auxiliary switches integrated into the enclosure.



Tripping when things get serious: SIRIUS 3RU and 3RB overload relays

The overload relays of the SIRIUS family are available in thermal and electronic versions, and they are responsible for the inversetime-delayed overload protection in the main circuit. The SIRIUS 3RB electronic overload relavs ensure seamless protection for motors and systems from 0.1 A to 630 A. This current range can be covered with a minimum number of variants thanks to the large setting range. At the same time, power losses are reduced by up to 98% compared to the thermal versions. The devices thus effectively support the global trend for saving energy.



Simplest possible application monitoring: SIRIUS 3RR2 current monitoring relays

The SIRIUS current monitoring relays monitor not so much the motor as the entire plant or driven process for overcurrent and undercurrent, wire break, or phase failure. Thus, load shedding or overload of an application, for example, is detected quickly and reported early. The 3RR2 monitoring relay for current monitoring is integrated directly into the load feeder in sizes SOO, SO and S2. Just attach it to the contactor, and click 'n' go.



Soft starting: SIRIUS 3RW soft starters

SIRIUS 3RW soft starters offer a complete range that covers all standard and high-feature applications of motor starting. Thus the benefits of soft starting can be reaped in the most diverse applications up to 250 kW (at 400 V) for simple and economical implementation of optimum machine concepts. Economical and space-saving soft starting can be implemented up to 55 kW (at 400 V) with the compact 3RW30 with two-phase control. The 3RW40 also offers soft run-down as well as integrated intrinsic device protection functions and motor protection functions. An additional overload relay can therefore be dispensed with. SIRIUS soft starters are available for line voltages up to 600 V – optionally also with thermistor motor protection evaluation.

Switching. Protecting. Starting. Monitoring. The components of the SIRIUS modular system.





SIRIUS contactor with screw terminals



SIRIUS contactor with spring-loaded terminals



Master the highest switching frequencies with confidence: SIRIUS 3RF solid-state contactors

SIRIUS solid-state contactors (size S0) for switching motors impress with their almost limitless service life – even under harsh conditions and at high switching frequencies. The three-phase solid-state contactors switch motors completely silently up to 7.5 kW.

A special reversing contactor version enables changing of the direction of rotation of motors up to 3 kW. The compact devices in widths of 45 or 90 mm can be combined with our motor starter protectors, current monitoring relays, or electronic overload relays. For fast and simple assembly of fuseless and fused motor feeders.

Compact switching and protecting with a high number of additional functions: SIRIUS 3RA6 compact starters

Equipped with the functions of a motor starter protector, a contactor, and an electronic overload relay, the compact starter as a direct-on-line or reversing starter up to 32 A offers maximum reliability with minimum variance. Safe shutdown at end of service life provides an additional advantage with regard to system availability. Reduced wiring in the main circuit thanks to the ingeniously simple infeed system including PE connection, and in the control circuit thanks to the optional AS-Interface or integrated IO-Link interface represent the fastest possible assembly of entire feeder groups. Thanks to incorporation into the concept of Totally Integrated Automation and pre-defined faceplates for visualization, informative device diagnostics are available without the otherwise necessary configuring effort.

Faster wiring thanks to integrated spring-loaded terminals

The entire S00/S0 range in the main and control circuit is available for the first time with spring-loaded terminals. This accelerates device connection, and offers maximum safety in operation. The extremely simple wiring guarantees fast installation. A further advantage: The gas-tight terminal connection is resistant to shaking and vibration. In addition, you benefit from maximum contact reliability even under the harshest of conditions. No need to re-tighten the connection terminals (often the usual practice). A special advantage: The link modules for direct-on-line, reversing, and star-delta (wye-delta) starting are also available with spring-loaded terminals. With this, you can mount entire feeders completely without tools. In size S2, spring-loaded terminals in the auxiliary circuit are optionally available.

Maximum flexibility when it comes to connections

All the components of the SIRIUS modular system are, of course, also available with screw terminals for special requirements such as mechanical engineering in the semiconductor industry.

Switching. Protecting. Starting. Monitoring. The components of the SIRIUS modular system.



Straight to the point: the 3RA21 direct-on-line starter



Phases swapped: the 3RA22 reversing starter



Two stages – one start: the 3RA24 contactor assembly for star-delta start

Ready for immediate use: pre-wired SIRIUS load feeders

Load feeders start loads with a combination of protection and switching functions. To reduce time and costs, and above all to minimize standstill times, we offer you a wide range of pre-wired starter solutions:

- Direct-on-line starters up to 30 kW the right starter combination for all motors – both for standard rail mounting as well as with 60 mm busbar adapter.
- Reversing contactor assemblies up to 37 kW – the appropriate combination for reversing duty – both for standard rail mounting as well as with 60 mm busbar adapter.
- Contactor assemblies for star-delta starting up to 75 kW – the solution for starting in stages for reducing start-up current peaks of motors.
- Soft starters when soft starting and stopping are required (in the case of the 3RW40 even with integral overload protection).

An almost unlimited number of further tested combinations can be assembled easily from the individual components. The following manuals help you to make your selection, and they can be found in the Industry Online Support Portal at http://support.automation.siemens.com.

SIRIUS Innovations:

Configuration Manual "Configuring SIRIUS Innovations – Selection Data for Fuseless and Fused Load Feeders"

SIRIUS:

Configuration Manual "Configuring SIRIUS – Selection Data for Load Feeders in Fuseless Design"

Configuration instructions for IE3 motors:

Configuration manual for SIRIUS switching devices with IE3 motors

Motor starter protector for motor protection with relay function, contactor and current monitor-

ing relay

Combination of switching devices and protective devices

Electromechanical switching devices	Contactor and overload relay with fuse	Motor starter protector for motor protection and contactor	Motor starter protector for motor protection with relay function and contactor	Motor starter protector for starter protection, contactor and overload relay	Compact starter	Motor starter protector for motor protection, contactor and current monitor- ing relay
For details see:*	p. 25, 26, 27, 28	p. 12, 17, 21, 25, 29, 30		p. 11, 17, 21	p. 29, 30	p. 12, 17, 21
			1		ı	
Short circuit	ф	*	*	*	*	*
Overload						
Switching			<u> </u>			
Monitoring						< 1.6A > 80A
	M	M	M	M	M	M
	Fused			Fuse	eless	
Solid-state switching devices	Mot. starter protector for motor protection, solid-state switching device (soft starter or solid-state contactor) and curr. monit. relay	Motor starter protector for starter protection, soft starter and current monitoring relay	Fuse and soft starter	Fuse, solid-state switching device and current monitoring relay	Motor starter protector for motor protection and solid-state switching device (soft starter or solid-state contactor)	Motor starter protector for motor protection, 3RM1 motor starter
For details see:*	p. 14, 15, 19, 23	p. 19, 23	p. 26, 27, 28		p. 14, 15, 23, 25	p. 29, 30
	ı	I			I	I
Short circuit	*	*		ф	<u>*</u>	<u>*</u>
Overload						
Switching	**	-	中华	₩	*	-
Monitoring	(M)	() () () () () () () () () ()	M	(M)	M	M
	Fuse	eless	Eu	sed	Fuse	eless

 $[\]ensuremath{^{\star}}$ For further details and for solutions not listed here, see Catalog IC 10

Convenient power infeed and distribution: SIRIUS 3RV29 and 3RA68 infeed systems.







Efficient and flexible power distribution

The components of the SIRIUS modular system can be wired extremely flexibly. For sizes S00 and S0, the simplest method is to connect the components via the associated SIRIUS 3RV29 infeed system in each case. Alongside this, the 3RA68 infeed system is available in conjunction with the compact starter – both connection methods are available optionally for devices with screw and spring-loaded terminals. Individual motor starter protectors, complete load feeders, and compact starters are just clicked into the infeed systems. An entire feeder group is thus supplied with energy without any time-consuming wiring and without any risk of error: Click 'n' go!

Alternatively, you can also use conventional wiring: by means of parallel wiring, 3-phase busbars or 8US busbar adapters with which SIRIUS load feeders can be mounted directly on a 60 mm busbar system.

These diverse combination options provide you with the most effortless solution to implement your individual control cabinets – simply perfectly tailored to your application.

Assembly – Highlights

- New flexibility for installation and expansion
- More free space in the control cabinet thanks to extremely compact design
- Infeed (3RA68) either on the left or right with conductor cross-section up to 70 mm²
- Optional wiring channel between the feeders
- Additional integration of further 1-, 2- or 3-pole components via terminal block
- Maximum current carrying capacity of 100 A (3RA68)
- Integration of load feeders with screw and spring-loaded terminals
- High vibration resistance, especially for switching devices with spring-loaded terminals
- Time savings during installation thanks to simple plug-in design
- For 3RA68 infeed system also with PE connection option

Motor starter protector for starter protection, contactor with overload relay

Motor starter protector for motor protection, contactor with current monitoring relay



	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector*		
2	Link module	3RA1921-1DA00	3RA2911-2AA00
3	Contactor (AC/DC)*		
4	Overload relay		




	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector*		
2	Link module	3RA1921-1DA00	3RA2911-2AA00
3	Contactor (AC/DC)*		
4	Current monitoring relay*		

^{*} For the article numbers of the basic components, see overview table on page 12

^{*} For the article numbers of the basic components, see overview table on page 11

Starter combinations in size S00: motor starter protector for starter protection, contactor and overload relay

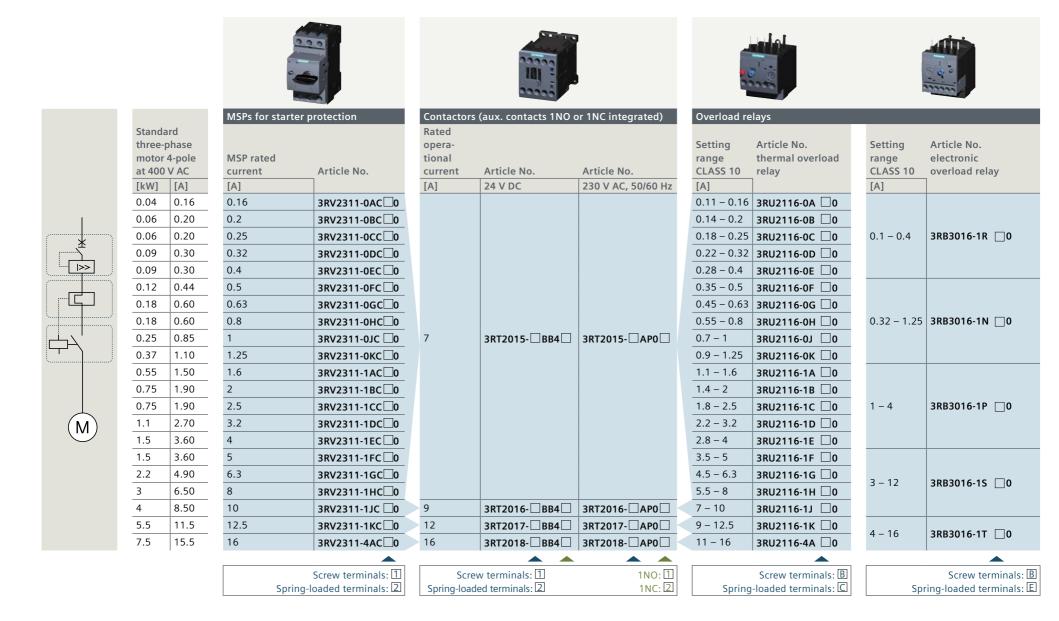



Standard

three-phase

motor 4-pole

[A]

0.16

0.20

0.20

0.30 0.30

0.44 0.60

0.60

0.85

1.10

1.50

1.90

1.90

2.70

3.60

3.60

4.90

6.50

8.50

11.5

at 400 V AC

[kW]

0.04

0.06

0.06

0.09

0.09 0.12

0.18 0.18

0.25

0.37

0.55

0.75

0.75

1.1

1.5

1.5

1.5

3


4

5.5

|>>

| > 80 A

MSPs for motor protection			
Setting range for			
thermal overload			
release CLASS 10	Article No.		
[A]	Article No.		
0.11 – 0.16	3RV2011-0AA 0		
0.14 - 0.2	3RV2011-0BA□0		
0.18 - 0.25	3RV2011-0CA□0		
0.22 - 0.32	3RV2011-0DA□0		
0.28 - 0.4	3RV2011-0EA□0		
0.35 – 0.5	3RV2011-0FA □0		
0.45 - 0.63	3RV2011-0GA□0		
0.55 – 0.8	3RV2011-0HA□0		
0.7 – 1	3RV2011-0JA □0		
0.9 – 1.25	3RV2011-0KA□0		
1.1 – 1.6	3RV2011-1AA□0		
1.4 – 2	3RV2011-1BA□0		
1.8 – 2.5	3RV2011-1CA□0		
2.2 – 3.2	3RV2011-1DA□0		
2.8 – 4	3RV2011-1EA□0		
3.5 – 5	3RV2011-1FA □0		
4.5 – 6.3	3RV2011-1GA□0		
5.5 – 8	3RV2011-1HA□0		
7 – 10	3RV2011-1JA □0		
9 – 12.5	3RV2011-1KA□0		
10 – 16	3RV2011-4AA 0		

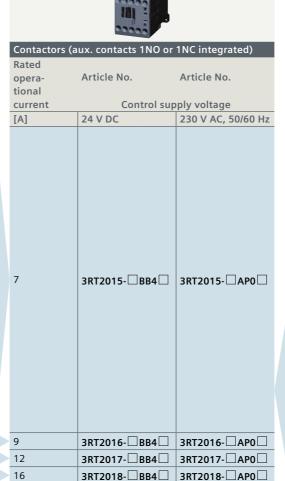



[A]



	Article No.	Article No.
Meas.	Basic (analog	Standard (digital
range	adjustable)	adjustable)
[A]		

Screw terminals: 1 Spring-loaded terminals: 2

Spring-loaded terminals: 2

1NO: 1

1NC: 2

1.6 - 16

24 V AC/DC: A 24 – 240 V AC/DC: W

Screw terminals: 1

3RR2141- ☐ A ☐ 30

Screw terminals: 1 Spring-loaded ter.: 2

3RR2241-□F□30

24 V AC/DC: A 24 – 240 V AC/DC: W



Fuseless assembly with solid-state switching devices

Assembly up to 7.5 kW (S00)


Motor starter protector for motor protection, soft starter with current monitoring relay (stand-alone installation)


Motor starter protector for motor protection, solid-state contactor with current monitoring relay (stand-alone installation)



1) To use a 3RR2 current monitoring relay on a 3RW30/40 soft starter, the terminal support for standalone assembly is necessary. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start For 3RW40: Activate/deactivate the 3RR2 monitoring relay via the BYPASS output

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector*		
2	Link module	3RA2921-1BA00	3RA2911-2GA00
3	Soft starter*		
4	Terminal support stand-alone	3RU2916-3AA01	3RU2916-3AC01
5	Current monitoring relay*1)		

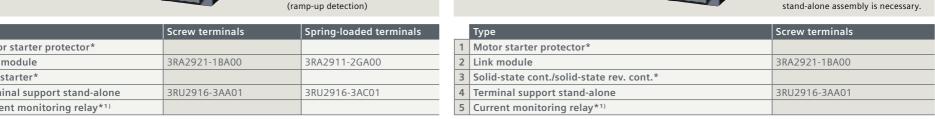

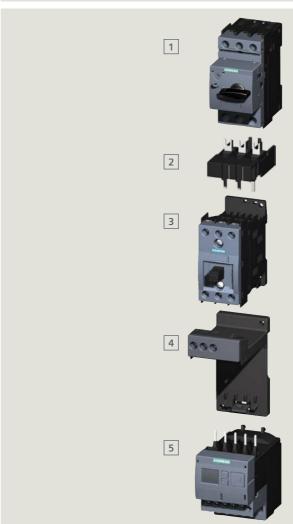


¹⁾ To use a 3RR2*41 curr. monit. relay of size S00, the terminal support for stand-alone assembly is necessary.

^{*} For the article numbers of the basic components, see overview table on page 14

^{*} For the article numbers of the basic components, see overview table on page 15


Motor starter protector for motor protection, soft starter with current monitoring relay (stand-alone installation: see combination options on page 13)



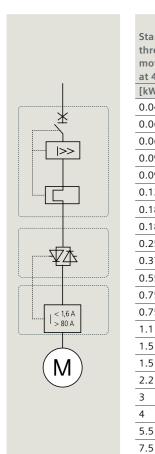

		Motor starter prot	ectors
Standard		Setting range for	
three-p		thermal overload	
motor		release	
at 400		CLASS 10	Article No.
[kW]	[A]	[A]	
0.04	0.16	0.11 – 0.16	3RV2011-0AA□0
0.06	0.20	0.14 - 0.2	3RV2011-0BA□0
0.06	0.20	0.18 - 0.25	3RV2011-0CA□0
0.09	0.30	0.22 - 0.32	3RV2011-0DA□0
0.09	0.30	0.28 - 0.4	3RV2011-0EA□0
0.12	0.44	0.35 - 0.5	3RV2011-0FA □0
0.18	0.60	0.45 - 0.63	3RV2011-0GA□0
0.18	0.60	0.55 – 0.8	3RV2011-0HA□0
0.25	0.85	0.7 – 1	3RV2011-0JA □0
0.37	1.10	0.9 – 1.25	3RV2011-0KA□0
0.55	1.50	1.1 – 1.6	3RV2011-1AA□0
0.75	1.90	1.4 – 2	3RV2011-1BA□0
0.75	1.90	1.8 – 2.5	3RV2011-1CA□0
1.1	2.70	2.2 – 3.2	3RV2011-1DA□0
1.5	3.60	2.8 – 4	3RV2011-1EA□0
1.5	3.60	3.5 – 5	3RV2011-1FA □0
2.2	4.90	4.5 – 6.3	3RV2011-1GA□0
3	6.50	5.5 – 8	3RV2011-1HA□0
4	8.50	7 – 10	3RV2011-1JA □0
5.5	11.5	9 – 12.5	3RV2011-1KA□0
7.5	15.5	10 – 16	3RV2011-4AA□0



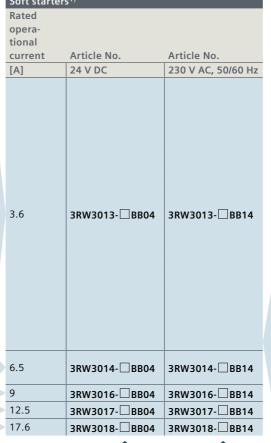





	A CONTRACTOR OF THE PARTY OF TH	
Current mo	nitoring relays	
Meas. range	Article No. Basic (analog adjustable)	Article No. Standard (digital adjustable)
1.6 – 16	3RR2141-□A□30	3RR2241-□F□30

Screw terminals: 1 Spring-loaded terminals: 2

Screw terminals: 1 Spring-loaded terminals: 2


Screw terminals: 1 Spring-loaded terminals: 2 24 V AC/DC: A 24 – 240 V AC/DC: W


Screw terminals: 1 Spring-loaded ter.: 2 24 V AC/DC: A


24 – 240 V AC/DC: W

¹⁾ Rated operational voltage 200 – 480 V

Starter combinations: motor starter protector for motor protection, solid-state switching device and current monitoring relay (stand-alone installation: see combination options on page 13)

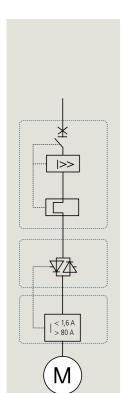

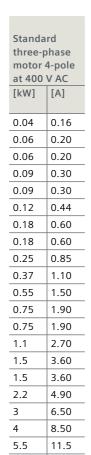

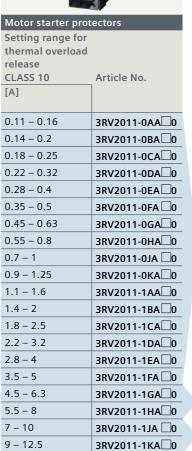





1000	-	-t-millimit	
Solid-state	contactors ²⁾		
Rated			
000.0	Article No.	Article No.	
tional			
current		ply voltage	
[A]	24 V DC	110 – 230 V AC,	
		50/60 Hz	
5.2	3RF3405-□BB04	3RF3405-□BB24	
9.2	3RF3410-□BB04¹¹	3RF3410-□BB24¹)	
12.5	3RF3412-□BB04¹)	3RF3412-□BB24¹)	
16	3RF3416- BB041)	3RF3416-□BB24¹)	





	Article No.	Article No.
Meas.	Basic (analog	Standard (digital
range	adjustable)	adjustable)
[A]		

3RR2141- A 30³)

- 1) Width 90 mm
- 2) Rated operational voltage Ue 48 480 V
- 3) Can be mounted directly on solid-state contactor with screw terminals using connection adapter 3RF3900-0QA88

7.5

15.5

10 – 16

Screw terminals: 1 Spring-loaded terminals: 2

3RV2011-4AA 0

Screw terminals: 1 Spring-loaded terminals: 2

Screw terminals: 1 Spring-loaded terminals: 2

3RR2241-□F□30³)

24 V AC/DC: A

24 - 240 V AC/DC: W

Solid-state reversing contactors 2)				
3.8	3RF3403-1BD04	3RF3403-1BD24		
5.4	3RF3405-1BD04	3RF3405-1BD24		
7.4	3RF3410-1BD04 ¹⁾	3RF3410-1BD24 ¹⁾		

Assembly 18.5 kW (S0)

Motor starter protector for starter protection, contactor and overload relay

Motor starter protector for motor protection, contactor with current monitoring relay



	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector*		
2	Link module ¹⁾	AC 3RA2921-1AA00 DC 3RA2921-1BA00	3RA2921-2AA00 3RA2921-2AA00
3	Contactor*		
4	Overload relay*		


^{*} For the article numbers of the basic components, see overview table on page 17




	Ту	/pe	Screw terminals	Spring-loaded terminals
	1 M	lotor starter protector*		
	2 Liı	nk module ¹⁾	AC 3RA2921-1AA00 DC 3RA2921-1BA00	3RA2921-2AA00 3RA2921-2AA00
	3 Cc	ontactor*		
4	4 Cι	urrent monitoring relay*		

^{*} For the article numbers of the basic components, see overview table on page 17

Starter combinations size S0: Motor starter protector for starter protection, contactor and overload relay

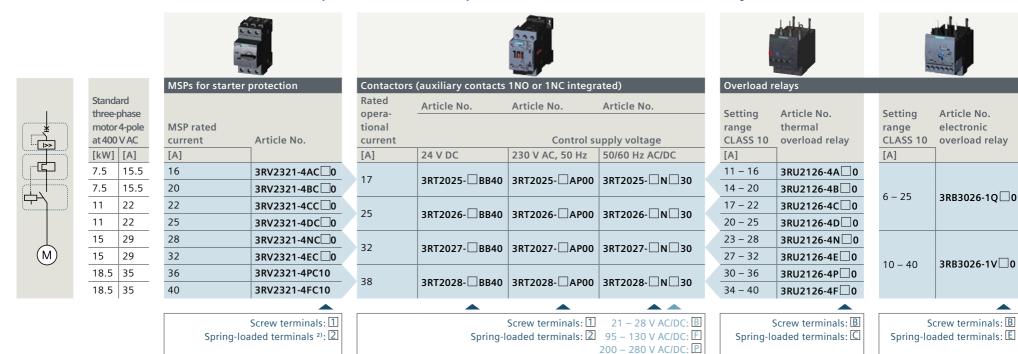

Starter combinations size S0: Motor starter protector for motor protection, contactor with current monitoring relay

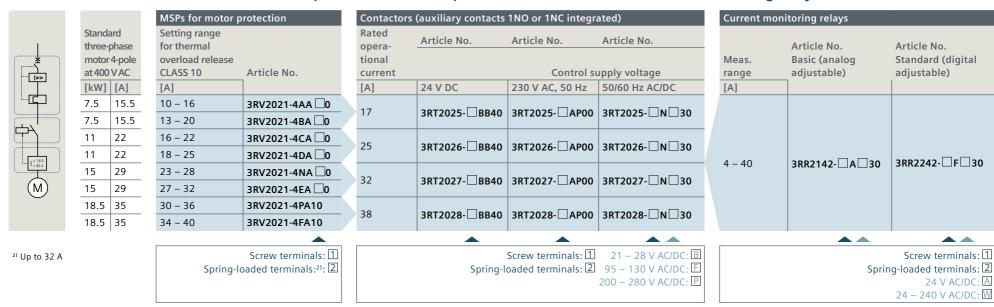

Assembly up to 18.5 kW (S0)

Motor starter protector for motor protection, 3RW30 soft starter with current monitoring relay (stand-alone installation)

Motor starter protector for starter protection, 3RW40 soft starter (integrated electronic overload relay) with current monitoring relay (stand-alone installation)







5



1) Can only be used up to 32 A
2) To use a 3RR2 current monitoring relay on a 3RW30/40 soft starter, the terminal support for stand-alone assembly is necessary.

In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.

For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start


For 3RW40: Activate/deactivate the 3RR2 monitoring relay relay after the end of the soft start

via the BYPASS output (ramp-up

detection)

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector*		
2	Link module ¹⁾	3RA2921-1BA00	3RA2921-2GA00
3	Soft starter*		
4	Terminal support stand-alone	3RU2926-3AA01	3RU2926-3AC01
5	Current monitoring relay*2)		

 $\ensuremath{^{\star}}$ For the article numbers of the basic components, see overview table on page 19

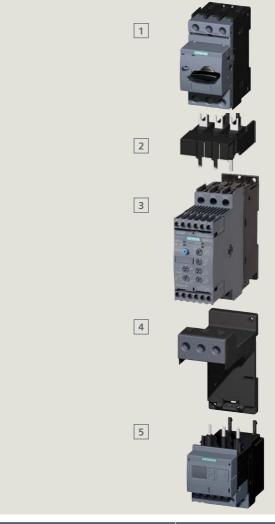

- 1) Can only be used up to 32 A 2) To use a 3RR2 current monitoring relay on a 3RW30/40 soft starter, the terminal support for stand-alone assembly is necessary. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active. For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start For 3RW40: Activate/deactivate the 3RR2 monitoring relay via the BYPASS output (ramp-up detection)
- Type Screw terminals Spring-loaded terminals

 1 Motor starter protector*
 2 Link module¹) 3RA2921-1BA00 3RA2921-2GA00

 3 Soft starter*
 4 Terminal support stand-alone 3RU2926-3AA01 3RU2926-3AC01

 5 Current monitoring relay*²)

^{*} For the article numbers of the basic components, see overview table on page 19

Starter combinations in size S0: Motor starter protector for motor protection, 3RW30 soft starter with current monitoring relay (stand-alone installation: see combination options on page 18)



Starter combinations in size S0: Motor starter protector for starter protection, 3RW40 soft starter and current monitoring relay (stand-alone installation: see combination options on page 18)



Motor starter protector for starter protection, contactor and overload relay

Motor starter protector for motor protection, contactor with current monitoring relay



	5	
	Туре	Screw terminals
1	Motor starter protector*	
2	Link module (can only be used up to 65 A)	3RA2931-1AA00
3	Contactor*	
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Overload relay*	
	* For the article numbers of the basic components, see overview	table on page 17

1
2
3
4
5


	Туре	Screw terminals
1	Motor starter protector*	
2	Link module (can only be used up to 65 A)	3RA2931-1AA00
3	Contactor*	
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Current monitoring relay*	

^{*} For the article numbers of the basic components, see overview table on page 17

Starter combinations in size S2: Motor starter protector for motor protection, contactor and current monitoring relay

	S	tandard	d	MSPs for starter	protection	Contactors (aux	iliary contacts 1NO	or 1NC integrated)	Overload	relays			
	tl	ree-ph	ase			Rated			Setting	Article No.	Setting	Article No.	
		otor 4-		Rated breaker		operational			range	thermal	range	electronic	
*	_	t 400 V		current	Article No.	current	Article No.	Article No.	CLASS 10	overload relay	CLASS 10	overload relay	
(<	[1	(W] [/	A]	[A]		[A]	230 V AC, 50 Hz	50/60 Hz AC/DC	[A]	CLASS 10	[A]	CLASS 10E ¹⁾	
;C _	1	8.5 3	E	36	3RV233 □-4PC10	40	3RT2035-□AP00	3RT2035-□N□30	22 – 32	3RU2136-4EB0			
	'	0.5	J	40	3RV233□-4UC10	40			28 – 40	3RU2136-4FB0	20 – 80	3RB3036-1W□□	
中人	_	22 41	1	45	3RV233 □-4VC10	50	3RT2036-□AP00	2072026 □N□20	36 – 45	3RU2136-4GB0			
\/	_		<u> </u>	52	3RV233 □-4WC10			3K12U30-LINLI3U	40 – 50	3RU2136-4HB0			
	2	30 55 65	3RV233 □-4XC10	65	2072027	0 3RT2037-□N□30	47 – 57	3RU2136-4QB0	20 - 60	3KB3U30-1W			
$\stackrel{\longleftarrow}{M}$	_		J	65	3RV233 □-4JC10	03	3K12U37-LAPUU	3K12U37-LINLI3U	54 – 65	3RU2136-4JB0			
	37	37 66	6	73	3RV233□-4KC10	80	3RT2038-□AP00		62 – 73	3RU2136-4KB0			
		5/	57	′ 0	O	80 2)	3RV233□-4RC10	80	3K12U36-LIAPUU	3K12U30-LINLI3U	70 – 80	3RU2136-4RB0	
¹⁾ As 3RB3133 also available vanother CLASS and other fu					ching capacity 65 kA at 400 V: 1 ning capacity 100 kA	Spri	Screw terminals: 1 ng-loaded terminals n auxiliary circuit: 3					tor mounting: B 0 ht-thr. transf.: X 1 W 1	
					at 400 V: 2								

Starter combinations in size S2: Motor starter protector for motor protection, contactor with current monitoring relay

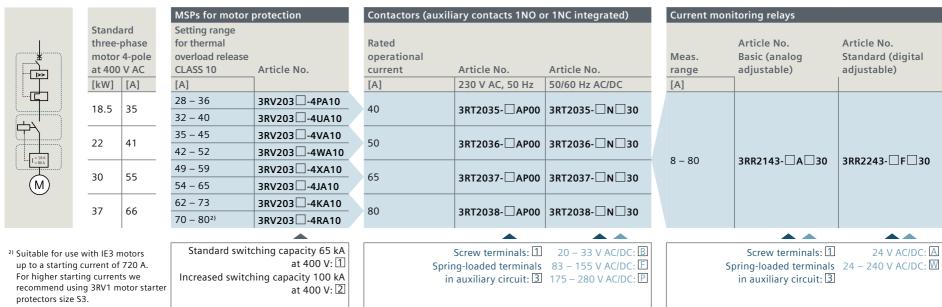

Size S2 up to 37 kW

Motor starter protector for motor protection, soft starter without overload protection and current monitoring relay (stand-alone installation)

Motor starter protector for starter protection, 3RW40 soft starter with overload protection and current monitoring relay (stand-alone installation)









- ¹⁾ Can only be used in combination with 3RA2932-1AC00 standard mounting rail adapter (specially for soft starters)
- ²⁾ To use a 3RR2 current monitoring relay on a 3RW30/40 soft starter, the terminal support for standalone assembly is necessary. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.
- For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start











- 1) Can only be used in combination with 3RA2932-1AC00 standard mounting rail adapter (specially for soft starters)
- ²⁾ To use a 3RR2 current monitoring relay on a 3RW30/40 soft starter, the terminal support for standalone assembly is necessary. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.
- For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start

	Туре	Screw terminals
1	Motor starter protector*	
2	Link module (can only be used up to 65 A) 1)	3RA2931-1AA00
3	Soft starter*	
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Current monitoring relay* 2)	

	Туре	Screw terminals
1	Motor starter protector*	
2	Link module (can only be used up to 65 A) 1)	3RA2931-1AA00
3	Soft starter*	
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Current monitoring relay* 2)	

^{*} For the article numbers of the basic components, see overview table on page 23

^{*} For the article numbers of the basic components, see overview table on page 23

Starter combinations in size S2: Motor starter protector for motor protection, 3RW30 soft starter with current monitoring relay (stand-alone installation: see combination options on page 22)




Starter combinations in size S0: Motor starter protector for starter protection, 3RW40 soft starter with current monitoring relay (stand-alone installation: see combination options on page 22)




Assembly S3 up to 45 kW

Direct-on-line start

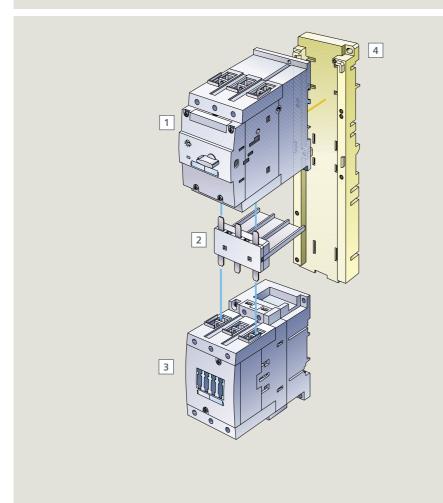

	Туре	Version	Article No.
1	Motor starter protector size S3		
2	Link module	AC DC	3RA19 41-1AA00 3RA19 41-1BA00
3	Contactor size 3		
4	Standard mounting rail adapter		3RA19 42-1A

Reversing start

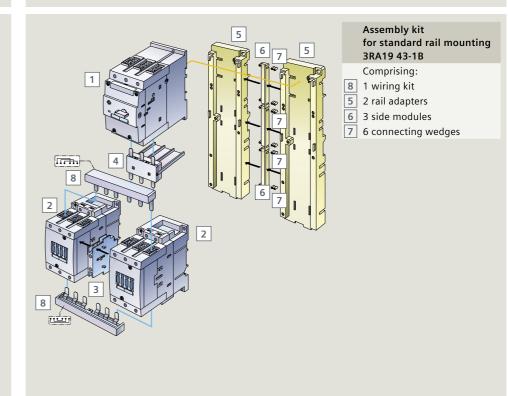

	Type	Version	Article No.
1	Motor starter protector size \$3		
2	2 contactors size S3		
3	Mechanical interlock		3RA19 24-2B
4	Link module	AC DC	3RA19 41-1AA00 3RA19 41-1BA00
5	Standard mounting rail adapter		
6	Side modules for rail adapter (1 Article No. = 100 units)		3RA19 02-1B
7	Connecting wedges (1 Article No. = 100 units)		8US19 98-1AA00
8	Wiring kit: upper wiring module lower wiring module		3RA19 43-2A

Selection and ordering data S3





		Motor start	er protectors	Contac
Standa three- motor 4-pole at 400	phase V AC	Setting range for thermal overload release CLASS 10	Article No.	Rated opera- tional current
[kW]	[A]	[A]		[A]
30	55	42 – 63	3RV1041-4JA10	65
				65
27		F7 7F	2004044 414440	80
37	66	57 – 75	3RV1041-4KA10	80
45	80	70 – 90	3RV1041-4LA10	95
				95
45	80	80 – 100	3RV1041-4MA10	



	Contactors		
	Rated operational current	Control supply voltage	Article No.
	65	230 V AC, 50/60 Hz	3RT1044-1AL20
	65	24 V DC	3RT1044-1BB40
	80	230 V AC, 50/60 Hz	3RT1045-1AL20
	80	24 V DC	3RT1045-1BB40
	95	230 V AC, 50/60 Hz	3RT1046-1AL20
	95	24 V DC	3RT1046-1BB40





Soft starters			Overload re	lays
Rated operational current	Article No.		3	Article No. thermal overload relay
			45 – 63	3RU1146-4JB0
80	3RW3046-1BB 4 3RW4046-1BB 4		57 – 75	3RU1146-4KBO
106	3RW3047-1BB ☐ 4 3RW4047-1BB ☐ 4		70 – 90	3RU1146-4LB0
			80 – 100	3RU1146-4MB0






0.0				
range	Article No. electronic overload relay CLASS 10			
25 – 100	3RB2046-1EB0 ¹⁾			

²⁴ V AC/DC: ① 110 – 230 V AC/DC: ①

¹⁾ As 3RB2143 also available with another CLASS and other functions



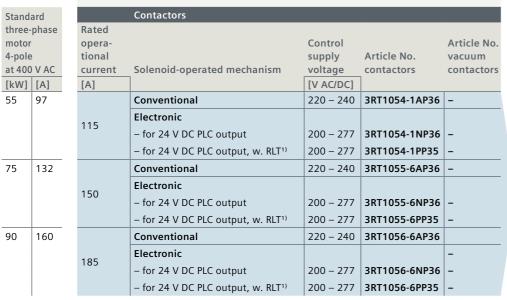



Overload relays					
range	Article No. electronic overload relay CLASS 10	Version			
50 – 200 50 – 200	3RB2056-1FW2 ²⁾ 3RB2056-1FC2 ²⁾	w. strthrough transf. w. busbar connection			



- Constitution			
Soft starter	S		
Rated			
opera-			
tional	supply	Austria Na	
current	voltage	Article No.	
[A]			
134	230 V AC	3RW4055-6BB44	
134	115 V AC	3RW4055-6BB34	
162	230 V AC	3RW4056-6BB44	
162	115 V AC	3RW4056-6BB34	
102	IIIJVAC	3KW4030-0BB34	

¹⁾ RLT: remaining lifetime

²⁾ As 3RB2143 also available with another CLASS and other functions

Selection and ordering data for fused feeders of sizes S6, S10, S12 Size S10







Overload relays			
Setting range CLASS 10	Article No. electronic overload relay CLASS 10	Version	
55 – 250	3RB2066-1GC2 ²⁾	with busbar connection	
160 – 630	3RB2066-1MC2 ²⁾	with busbar connection	




Soft starter	S	
Rated opera-	Control	
current	supply voltage	Article No.
[A]		
230	230 V AC	3RW4073-6BB44
230	115 V AC	3RW4073-6BB34
280	230 V AC	3RW4074-6BB44
280	115 V AC	3RW4074-6BB34

¹⁾ RLT: remaining lifetime

²⁾ As 3RB2163 also available with another CLASS and other functions



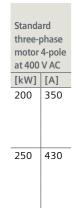

	Contactors			
Rated				
opera-		Control		Article No.
tional		supply	Article No.	vacuum
current	Solenoid-operated mechanism	voltage	contactors	contactors
[A]		[V AC/DC]		
	Conventional	220 – 240	3RT1075-6AP36	3RT1275-6AP36
400	Electronic			
400	– for 24 V DC PLC output	200 – 277	3RT1075-6NP36	3RT1275-6NP36
	– for 24 V DC PLC output, w. RLT ²⁾	200 – 277	3RT1075-6PP35	_
	Conventional	220 – 240	3RT1076-6AP36	3RT1276-6AP36
F00	Electronic			
500	– for 24 V DC PLC output	200 – 277	3RT1076-6NP36	3RT1276-6NP36
	– for 24 V DC PLC output, w. RLT ²⁾	200 – 277	3RT1076-6PP35	_



Overload r	elays ¹⁾	
	Article No.	
Setting	electronic	
range	overload relay	
CLASS 10	CLASS 10	Version
[A]		
160 – 630	3RB2066-1MC2 ³⁾	with busbar connection



Soft starters				
Rated				
opera-	Control			
tional	supply			
current	voltage	Article No.		
[A]				
356	230 V AC	3RW4075-6BB44		
356	115 V AC	3RW4075-6BB34		
432	230 V AC	3RW4076-6BB44		
432	115 V AC	3RW4076-6BB34		

SENTRON 3VL circuit breakers are suitable for fuseless short-circuit and overload protection of soft starters from size S6. For more detailed information, please refer to the catalog.

For applications over 100 A, SIRIUS contactors can be combined with SENTRON 3VL circuit breakers. For more detailed information, please refer to the configuring aid "Configuring SIRIUS load feeders in fuseless design."

¹⁾ When using trip CLASS 20, refer to the configuration aid "Configuring SIRIUS fuseless load feeders," and to the catalog


²⁾ RLT: remaining lifetime


³⁾ As 3RB2163 also available with another CLASS and other functions

Fuseless load feeders up to 15 kW



Standard		3RA21 direct-on-line sta	arters
three-phase		Setting range	
motor 4-pole		for thermal	
at 400 \	/ AC	overload release	Type of coordination "2"
[kW]	[A]	[A]	at Iq = 150 kA at 400 V
0.06	0.20	0.14 – 0.2	3RA2110-0B
0.06	0.20	0.18 – 0.25	3RA2110-0C 15-1 S00
0.09	0.30	0.22 – 0.32	3RA2110-0D 🗌 15-1 🔲 🔲 🗎 S00
0.09	0.30	0.28 – 0.4	3RA2110-0E 15-1 S00
0.12	0.44	0.35 – 0.5	3RA2110-0F 🗌 15-1 🔲 🔲 🗎 S00
0.18	0.60	0.45 – 0.63	3RA2110-0G 🗌 15-1 🔲 🔲 🗎 S00
0.18	0.60	0.55 – 0.8	3RA2110-0H 🗌 15-1 🔲 🔲 🔲 S00
0.25	0.85	0.7 – 1	3RA2110-0J 🗌 15-1 🔲 🔲 🔲 S00
0.37	1.10	0.9 – 1.25	3RA2110-0K 🗌 15-1 🔲 🔲 🔲 S00
0.55	1.50	1.1 – 1.6	3RA2110-1A 🗌 15-1 🔲 🔲 🔲 S00
0.75	1.90	1.4 – 2	3RA2110-1B 🗌 15-1 🔲 🔲 🔲 S00
0.75	1.90	1.8 – 2.5	3RA2110-1C 🗌 15-1 🔲 🔲 🔲 S00
1.1	2.07	2.2 – 3.2	3RA2110-1D 🗌 15-1 🔲 🔲 🔲 S00
1.5	3.60	2.8 – 4	3RA2110-1E 🗌 15-1 🔲 🔲 🔲 S00
1.5	3.60	3.5 – 5	3RA2120-1F 24-0
2.2	4.90	4.5 – 6.3	3RA2120-1G 24-0 50
3	6.50	5.5 – 8	3RA2120-1H 24-0 50
4	8.50	7 – 10	3RA2120-1J 24-0 . S0
5.5	11.5	9 – 12.5	3RA2120-1K 24-0 50
7.5	15.5	10 – 16	3RA2120-4A 26-0 50
7.5	15.5	13 – 20	3RA2120-4B 27-0 50
11	22	16 – 22	3RA2120-4C 27-0 50
11	22	18 – 25	3RA2120-4D 27-0 50
15	29	23 – 28	3RA2120-4N 27-0 50
15	29	27 – 32	3RA2120-4E 27-0 50

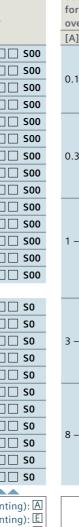

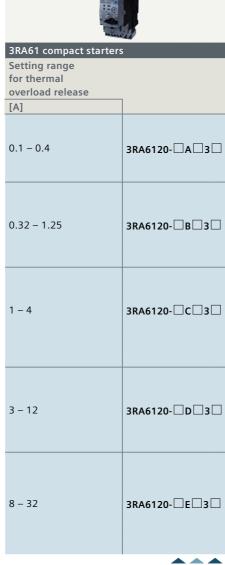



SIRIUS 3RM1 motor star	ters
Setting range for thermal overload release [A]	
0.1 – 0.5	3RM1□01□AA□4
0.4 – 2.0	3RM1□02□AA□4
1.6 – 7.0 (10 A)*	3RM1□07□AA□4

Direct-on-line starter ① Failsafe direct-on-line starter ①
Screw terminals: 1 Spring-loaded terminals: 2 Mixed connection method: 3
24 V DC Us 🛈 110 – 230 V AC; 110 V DC Us 🗍

Note: The 3RM1 motor starters do not have integral short-circuit protection. They can be used very effectively in combination with SIRIUS motor starter protectors in group assemblies, for example.

Screw terminals (standard rail mounting): A Spring-loaded terminals (standard rail mounting): C Screw terminals (busbar adapter): Spring-loaded terminals (busbar adapter): 4 V DC: B B 4

230 V AC: A P O

24 V AC/DC: B 110 – 240 V AC/DC: P

Without terminals: 0

With screw terminals: 1

With spring-loaded terminals: 2

^{*}Operation of resistive loads with maximum 10 A



Standard		3RA22 reversing starters	
three-p motor at 400 [kW]	4-pole	Setting range for thermal overload release	Type of coordination "2" at Iq = 150 kA at 400 V
0.06	0.20	0.14 - 0.2	3RA2210-0B □15-2 □□□ S00
0.06	0.20	0.18 – 0.25	3RA2210-0C
0.09	0.30	0.22 - 0.32	3RA2210-0D 🗆 15-2 🔲 🔲 🗆 S00
0.09	0.30	0.28 - 0.4	3RA2210-0E
0.12	0.44	0.35 - 0.5	3RA2210-0F 🗌 15-2 🔲 🔲 🗎 S00
0.18	0.60	0.45 - 0.63	3RA2210-0G 🗌 15-2 🔲 🔲 🗎 S00
0.18	0.60	0.55 - 0.8	3RA2210-0H 🗌 15-2 🔲 🔲 📗 S00
0.25	0.85	0.7 – 1	3RA2210-0J 🔲 15-2 🔲 🔲 🗎 S00
0.37	1.10	0.9 – 1.25	3RA2210-0K 🗌 15-2 🔲 🔲 🗎 S00
0.55	1.50	1.1 – 1.6	3RA2210-1A 🗌 15-2 🔲 🔲 🗎 S00
0.75	1.90	1.4 – 2	3RA2210-1B 🗌 15-2 🔲 🔲 🔲 S00
0.75	1.90	1.8 – 2.5	3RA2210-1C 🗌 15-2 🔲 🔲 🔲 S00
1.1	2.70	2.2 – 3.2	3RA2210-1D 🗌 15-2 🔲 🔲 🔲 S00
1.5	3.60	2.8 – 4	3RA2210-1E 🗌 15-2 🔲 🔲 🔲 S00
1.5	3.60	3.5 – 5	3RA2220-1F 24-0 50
2.2	4.90	4.5 – 6.3	3RA2220-1G 24-0 . S0
3	6.50	5.5 – 8	3RA2220-1H
4	8.50	7 – 10	3RA2220-1J 24-0 S0
5.5	11.5	9 – 12.5	3RA2220-1K 26-0 50
7.5	15.5	10 – 16	3RA2220-4A 🗌 27-0 🔲 🔲 🗎 S0
7.5	15.5	13 – 20	3RA2220-4B □27-0 □□□ S0
11	22	16 – 22	3RA2220-4C
11	22	18 – 25	3RA2220-4D □ 27-0 □ □ □ S0
15	29	23 – 28	3RA2220-4N 🗌 27-0 🔲 🔲 🗎 S0
15	29	27 – 32	3RA2220-4E □27-0 □□□ S0

Screw terminals (standard rail mounting) S00: 🗚
Screw terminals (standard rail mounting) S0: 🗵
Spring-loaded terminals (standard rail mounting) S00: 🗉
Spring-loaded terminals (standard rail mounting) S0: 🗉
Screw terminals (busbar adapter): 🗖
Spring-loaded terminals (busbar adapter): \mathbb{H}
24 V DC: B B 4

230 V AC: A P O

io .
t starters

Manage	
3RA62 compact starter	S
Setting range	
for electronic	
overload release	_
[A]	
0.1 – 0.4	3RA6250-□A□3□
0.32 – 1.25	3RA6250-□B□3□
1 – 4	3RA6250-□C□3□
3 – 12	3RA6250-□D□3□
8 – 32	3RA6250-□E□3□





SIRIUS 3RM1 motor star	ters
Setting range	
for electronic	
overload release	1
[A]	
0.1 – 0.5	3RM1□01□AA□4
0.4 – 2.0	3RM1□02□AA□4
1.6 – 7.0 (10 A)*	3RM1□07□AA□4


Note: The 3RM1 motor starters do not have integral short-circuit protection. They can be used very effectively in combination with SIRIUS motor starter protectors in group assemblies, for example.

^{*}Operation of resistive loads with maximum 10 A


Communication connection – General and contactors

Function modules for IO-Link or AS-i that are mounted on contactors (24 V DC) with communication interface are required for connecting the load feeders to the controller. Depending on the version, these communicate with an IO-Link interface group or any AS-i master. Alternatively, the contactors can be connected to the controller via IO-Link and by means of the 3RB24 overload relay.

Typical configuration in the environment of IO-Link

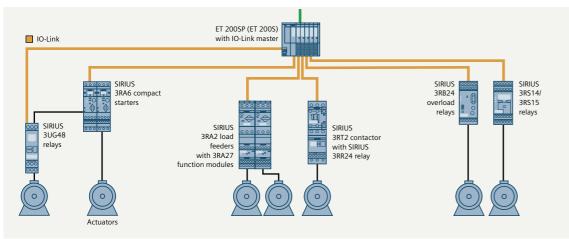

Typical configuration in the environment of AS-Interface

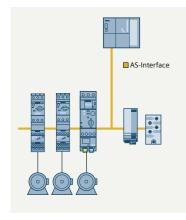

AS-Interface	
Version	Article No.
CP343-2P communications processor for connecting	
SIMATIC S7-300 to AS-Interface (AS-i Spec.3.0)	6GK7343-2AH11-0XA0
for up to 62 load feeders	
Front connector 20-pin, with screw-type contacts	6ES7392-1AJ00-0AA0
Front connector 20-pin, with spring-loaded contacts	6ES7392-1BJ00-0AA0
DP/AS-i LINK Advanced, gateway between	
PROFIBUS DP and AS-Interface	
 Single master for up to 62 load feeders 	6GK1415-2BA10
– Double master for up to 124 load feeders	6GK1415-2BA20
AS-Interface power supply unit IP20	
– 120/230 V AC 3 A	3RX9501-0BA00
– 24 V DC 3 A	3RX9501-1BA00
– 120/230 V AC 5 A	3RX9502-0BA00
– 120/230 V AC 8 A	3RX9503-0BA00
Further system components for AS-Interface	See Industry Mall or Catalog IKPI





Three- phase motor 400 V [kW]	Rated opera- tional current contactor
3	7
4	9
5.5	12
7.5	16
5.5	12
7.5	16
11	25
15	32
18.5	38

Contactors S00 with communication interface			
	Control supply voltage		
Aux. contacts	Article No.		
	24 V DC		
1NC	3RT2015-□BB42-0CC0		
1NO	3RT2015-□BB41-0CC0		
1NC	3RT2016-□BB42-0CC0		
1NO	3RT2016-□BB41-0CC0		
1NC	3RT2017-□BB42-0CC0		
1NO	3RT2017-□BB41-0CC0		
1NC	3RT2018-□BB42-0CC0		
1NO	3RT2018-□BB41-0CC0		
Contactors S0 w	Contactors S0 with communication interface		
1NO + 1NC	3RT2024-□BB40-0CC0		
1NO + 1NC	3RT2025-□BB40-0CC0		
1NO + 1NC	3RT2026-□BB40-0CC0		
1NO + 1NC	3RT2027-□BB40-0CC0		
1NO + 1NC	3RT2028-□BB40-0CC0		

Screw terminals: 1 Spring-loaded terminals S00/S0: 2

18.5	40
22	50
30	65
37	80

Contactors S2 with communication interface		
	3RT2035-□NB30-0CC0	
	3RT2036-□NB30-0CC0	
3RT2037-□NB30-0CC0		
	3RT2038-□NB30-0CC0	

Screw terminals: 1 Spring-loaded terminals in auxiliary circuit: 3

Parallel wiring



Direct-on-line starter			
	Article No.		
ON-delay	3RA2811- 🗆 CW10		
OFF-delay (with aux. voltage)	3RA2812- □ DW10		

		+11 + 1 +11 + 1
Reversing starter		
		Article No.
Wiring kit for contactors	S00	3RA2913-2AA 🗌
Wiring kit for contactors with screw terminals	S0	3RA2923-2AA 🗆
Wiring kit for contactors	52	3RA2933-2AA 🗌

100			
Star-delta (wye-delta) starter ¹⁾²⁾⁴⁾			
Article No.			
Function module		3RA2816-0EW20	
Wiring kit for contactors	S00	3RA2913-2BB 🗌	
Wiring kit for contactors	S0	3RA2923-2BB □	
Wiring kit for contactors	S2	3RA2933-2BB □	

IO-Link



Direct-on-line starter ¹⁾²⁾			
Article No.			
Function module 3RA2711- AA00			






AS-Interface



40000			
Direct-on-line starter ^{1) 2)}			
Article No.			
Function module 3RA2712- AA00			
Screw terminals: 1			

The second	+11+	
Reversing starter ^{1) 2) 3)}		
		Article No.
Function module		3RA2712- 🗌 BA00
Wiring kit for contactors	S00	3RA2913-2AA 🗌
Wiring kit for contactors	S0	3RA2923-2AA 🗌
Wiring kit for contactors	S2	3RA2933-2AA 🗌

	Screw terminals: 1
Spr	ing-loaded terminals: 🛛

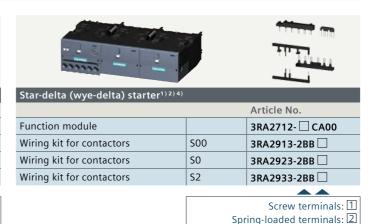

The contactor assemblies represented above can be combined with motor starter protectors, overload relays, and monitoring relays (see the figures on the previous pages)

Spring-loaded terminals: 2


¹⁾ The wiring modules for the control circuit are not required

²⁾ The contactor with basic module must be implemented as a communication contactor (see page 28)

³⁾ Comprising 1 basic module and 1 coupling module ⁴⁾ Comprising 1 basic module and 2 coupling modules

Communication connection – Compact starter

IO-Link

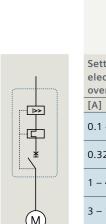





overload relays with IO-Link		
Module connector, 14-pole, 8 cm, for 1 space between two contactors	3RA2711-0EE02	
Module connector, 14-pole, 21 cm, for diverse space combinations between two contactors	3RA2711-0EE03	
Operator panel (incl. enabling module and interface cover)	3RA6935-0A	
Connecting cable for operator panel	3RA6933-0A	

AS-Interface



8 – 32



3RA6400- ☐ EB42



Screw terminals: 1

3RA6500- ☐ EB42


ſ <u></u>	
	- >>
	. *
	M

	3RA61 direct-on-line	3RA62 reversing	
Setting range for	starter	starter	
electronic			
overload release	CPS ¹⁾	CPS ¹⁾	
[A]	24 V AC/DC	24 V AC/DC	
0.1 - 0.4	3RA6120- 🗌 AB34	3RA6250- ☐ AB34	
0.32 – 1.25	3RA6120- ☐ BB34	3RA6250- ☐ BB34	
1 – 4	3RA6120- ☐ CB34	3RA6250- ☐ CB34	
3 – 12	3RA6120- 🗌 DB34	3RA6250- □ DB34	
8 – 32	3RA6120- ☐ EB34	3RA6250- □ EB34	






AS-Interface accessories			
AS-i addressing unit	3RK1904-2AB0		
AS-Interface mounting module for 3RA6 compact starter (24 V DC)			
Without additional inputs/outputs	3RA6970-3A		
With two local inputs	3RA6970-3B		
With two free external inputs	3RA6970-3C		
With one free external input and one free external output	3RA6970-3D		
With two free external outputs	3RA6970-3E		
For local control	3RA6970-3F		

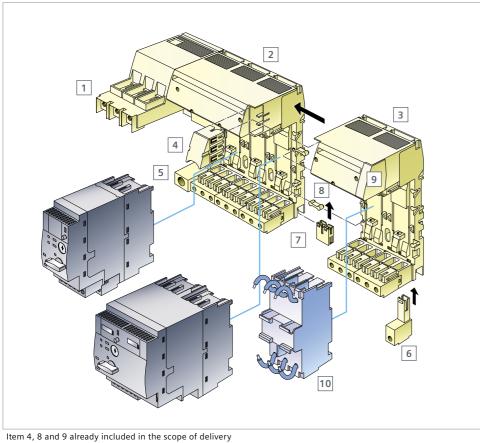

	Туре	Version of term:	Article No.	
1	For busbar mounting		THE CITY OF	
	Infeed with screw mirals 25 n² left			
	with permanent fitte ansion	Scew terwinal up to 63 A	3RA6812-8AB	
	module	8000		
	Infeed with scre	Spling-loaded terminals up to		
	with permanent of the pansion	63ÅA ♦	3RA6812-8AC	
	module	000000000000000000000000000000000000000		
	Infeed with screw terming 50 – 70 mm² left with permanently fitted 3-socket expansion	c ew terminals up to 100 A	3RA6813-8AB	
	modul modul management with the modul modul management with the modul modul management with the	bc-ew terminals up to 100 A	SKADO I S-OAD	
	Infeed with screw terminals 54 – 70 mm² left with permanently fitted 3-soclet expansion	Spring-loaded to hin ls up to	3RA6813-8AC	
	module	100 A		
	Terminal covers for infeled to screw terminals	25/35 mm²	3RA6880-2AB	
	Territo over or infeed w. screw terminals	50/70 mm ²	3RA6880-3AB	
	Infeed will g-loaded terminals 25/35 mm ²		3RA6830-5AC	
	BASO		JIMO630-3AC	
3	ts	Screw terminals	3RA6822-0AB	
2	3 - 1 - 10	Screw terminals	3RA6823-0AB	
	2-socket expansio	Spring-loaded terminals	3RA6822-0AC	
	3-socket expansion th 3 slots	Spring-loaded terminals	3RA6823-0AC	
4	Expansion pllg between 2 expansion modules			
_	(already included in the scope of delivery of the	ne expansion modules)		
5	PE infeed		1	
	PE infeed 25 Personn2	Screw terminals	3RA6860-6AB	
	PE infeed 25/35 mm ²	Spring-loaded terminals	3RA6860-5AC	
6	PE tap		I	
	PE tap 6/10 mm ²	Screw terminals	3RA6870-4AB	
	PE tap 6/10 mm ²	Spring-loaded terminals	3RA6870-3AC	
7	PE expansion plug			
8	Connecting wedge (already included in scope of 2 and 3)			
9	Cover cap of the power bus (already included in scope of 1)			
	Further accessories			
10	Adapter 45 mm for 3RV1/3RV2 motor starter 3RA6890-0B			
10	protector with screw terminals		31(100)0 00/1	
	Expansion plug for SIRIUS 3RV29 infeed system		3RA6890-1AA	
	Terminal block for integration of 1-, 2- or 3-pole	Spring-loaded terminals	3RV2917-5D	
	components			


3RV29 infeed system (3RV2 motor starter protectors and 3RA2 load feeders)

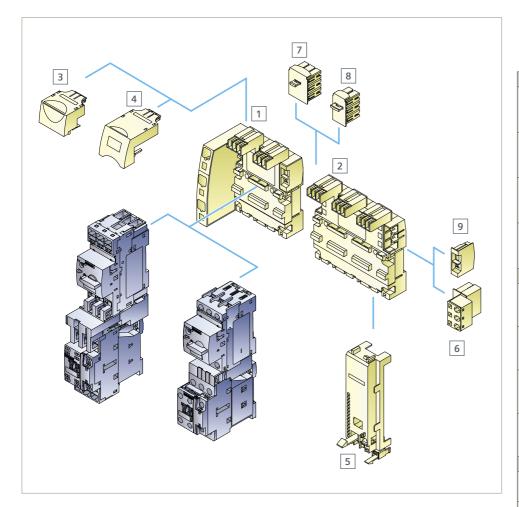

	Type	Vars on	47	Size iv 187 / 3 3 1 23 n c or starter protecters	Article No.
1	3-phase busbars With infeed on tincl. 3RV2917-6A tend cover	notor starter	<i>₩</i>	S000, S0	3RV2917-1A
	With infeed on the right incl. 3RV2917-6A end cove	For 2 motor st		SOD, SO	3RV2917-1E
	For system expansion incl. 3RV2917-5B400 expansion plug	For 2 motor starter protectors		Some	3RV2917-4A
2	For sylving expression For 3 motor starter protectors			S00, S0	3RV2917-4B
		1	1 unit	S00	3RV2917-5CA00
3	motor	terminals	10 units	S00	3RV2917-5C
		Spring-loaded	1 unit	S00	3RV2917-5AA00
		terminals	10 units	500	3RV2917-5A
		4	1 unit	S0	3RV1927-5AA00
4		Screw terminals	10 units	S0	3RV1927-5A
		Spring loaded	1 unit	S0	3RV2927-5AA00
		Spring-loaded terminals		50	3RV2927-5A
	Accessories				
5	Contactor base for assembling direct-on-line or reversing starters or preassembled 3RA2 load feeders			S00	3RV2917-7AA00
	Contactor base for assembling direct-on-line or reversing starters or preassembled 3RA2 load feeders			S00/S0	3RV2927-7AA00
6	Terminal block for integration of 1-, 2- or 3-pole components				3RV2917-5D
	Standard mounting rail, 45 mm, for integrating other devices into the system, such as 5SY miniature circuit breakers				3RV1917-7B
7	Extra-wide expansion plug				3RV2917-5E
	Spare parts				
8	Expansion plug				3RV2917-5BA00
9	End cover				3RV2917-6A

	Туре	Size	Article No.				
	3-phase busbars						
	For infeed to several 3RV2 motor starter protectors (screw terminals) mounted side-by-side on standard rails, with touch protection		Modular spacing 45 mm	Modular spacing 55 mm	Modular spacing 63 mm	Modular spacing 75 mm	
	For 2 motor starter protectors	S00, S0	3RV1915-1AB	3RV1915-2AB	3RV1915-3AB	_	
		S2	_	3RV1935-1A	_	3RV1935-3A	
1	For 3 motor starter protectors	S00, S0	3RV1915-1BB	3RV1915-2BB	_	_	
		S2	_	3RV1935-1B	_	3RV1935-3B	
		S00, S0	3RV1915-1CB	3RV1915-2CB	3RV1915-3CB	_	
	For 4 motor starter protectors	S2	_	3RV1935-1C	_	3RV1935-3C	
	For 5 motor starter protectors	S00, S0	3RV1915-1DB	3RV1915-2DB	_	_	
3-phase infeed terminals							
2	Connection from above	S00, S0	3RV2925-5AB				
		S2	3RV2935-5A				
	Connection from below	S00, S0	3RV2915-5B				
3-phase infeed terminals for constructing type E starters							
	Connection from above	S00, S0	3RV2925-5EB				
		S2	3RV2935-5E				
	Accessories						
	Cover caps for connection tags	S00, S0	3RV1915-6AB				
	Touch protection for empty positions	S2	3RV1935-6A				

|--|

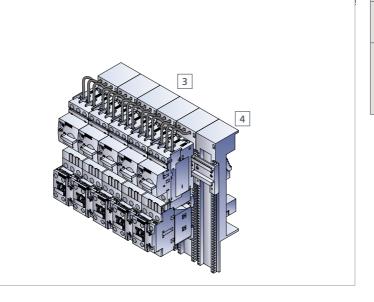



	For MSPs, size	Rated operational current [A]	Adapter length [mm]	Adapter width [mm]	Article No.	
3	Busbar adapters for 60-mm systems					
	For motor starter protectors and load feeders with screw terminals					
	S00, S0	25	200	45	8US1251-5DS10	
	S0	32	260	45	8US1251-5NT10	
	S2	80	200	55	8US1261-5MS13	
	S2	80	260	55	8US1261-6MT10	
	S2 ¹⁾	80	260	118	8US1211-6MT10	
	For motor starter protectors and load feeders with spring-loaded terminals					
	S00, S0	25	200	45	8US1251-5DS11	
	S00, S0	25	260	45	8US1251-5DT11	
	S0	32	260	45	8US1251-5NT11	

the assembly of feeders for reversing starters comprising a motor starter protector and two contactors

0	Accessories			
4	Device holder for lateral mounting	200	45	8US1250-5AS10
	on busbar adapters	260	45	8US1250-5AT10
	Side module for widening busbar adapters	200	9	8US1998-2BJ10
	Spacer for fixing the feeder onto the busbar adapter			8US1998-1BA10
	Vibration and shock kit for increased vibration and shock loads S00/S0			8US1998-1CA10
	S2			8US1998-1DA10

Accessories for 3RV2 motor starter protectors (S00, S0, S2)

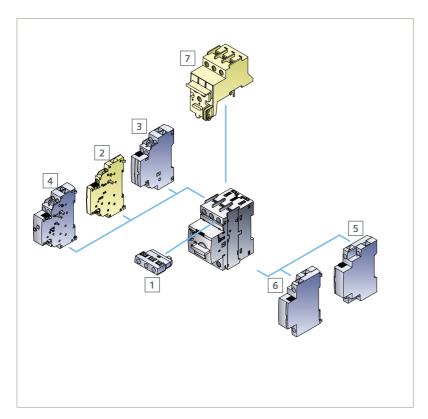


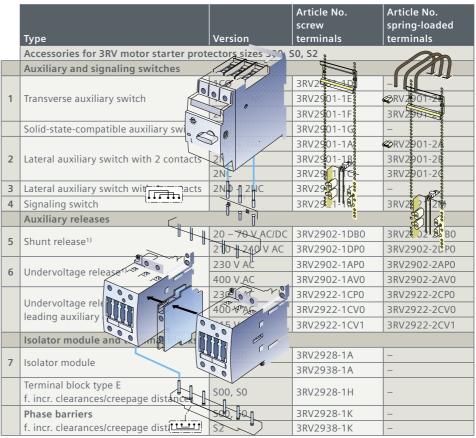





Туре	Version	Article No.			
Door-coupling rotary operating mechanisms	Door-coupling rotary operating mechanisms				
Door-coupling rotary operating mech. (black) with extension shaft ²⁾	130 mm	3RV2926-0B			
Door-coupling rotary operating mech. (black) with extension shaft	330 mm	3RV2926-0K			
EMERGENCY-STOP door-cpl. rot. oper. mech. (red/yellow) w. ext. shaft ²⁾	130 mm	3RV2926-0C			
EMERGENCY-STOP door-cpl. rot. oper. mech. (red/yellow) w. ext. shaft	330 mm	3RV2926-0L			
Molded-plastic enclosures for surface mounting					
For motor starter protector (+ lateral auxiliary switch) S00, S0	54 mm	3RV1923-1CA00			
For motor starter protector (+ lateral aux. switch + auxiliary release) S00, S0	72 mm	3RV1923-1DA00			
For motor starter protector (+ lateral auxiliary switch + auxiliary release) S2	82 mm	3RV1933-1DA00			
Molded-plastic enclosure for surface mounting with EMERGENCY-STOP door-cpl. rot. op. mech. f. MSP (+ lateral aux. switch) S00, S0	54 mm	3RV1923-1FA00			
Molded-plastic enclosure for surface mounting w. EMERGENCY-STOP door-cpl. rot. op. mech. f. MSP (+ lateral aux. switch + aux. release) S00, S0	72 mm	3RV1923-1GA00			
Molded-plastic enclosure for surface mounting w. EMERGENCY-STOP door-cpl. rot. oper. mech. f. MSP (+ lateral aux. switch + aux. release) S2	82 mm	3RV1933-1GA00			

¹⁾ Other versions on request 2) The operating mechanism is also suitable for 3RA6 compact starters

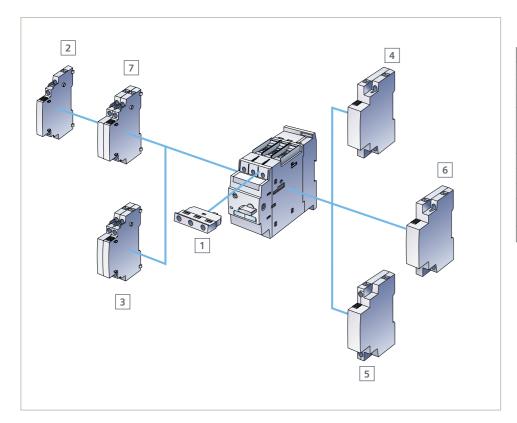

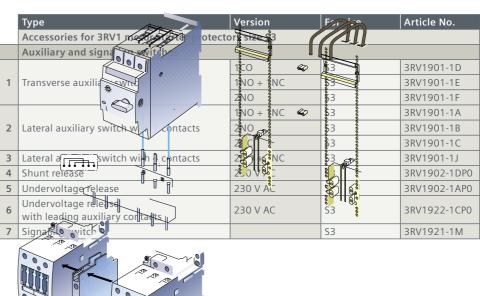


Accessories for 3RT201 contactors (S00)

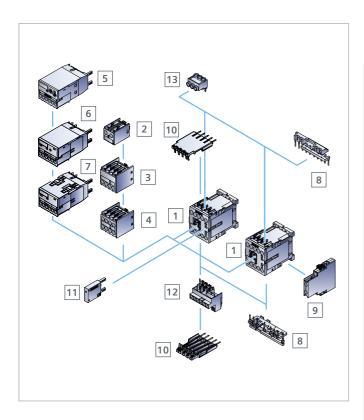


	Fitting of auxiliary switches on the front for	Version	Article No. screw terminals	Article No. spring-loaded terminals
1	3RT2 contactors	Standard		
	1-pole auxiliary switch block,	1NO	3RH2911-1AA10	_
2	cable entry from above	1NC	3RH2911-1AA01	_
_	1-pole auxiliary switch block,	1NO	3RH2911-1BA10	-
	cable entry from below	1NC	3RH2911-1BA01	-
	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1LA11	_
3	cable entry from above	2NO	3RH2911-1LA20	_
,	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1MA11	_
	cable entry from below	2NO	3RH2911-1MA20	_
		1NC	3RH2911-1HA01	3RH2911-2HA01
		2NC	3RH2911-1HA02	3RH2911-2HA02
	1- to 4-pole auxiliary switch block	1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
4	1- to 4-pole auxiliary switch block	2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
	Solid-state-compatible auxiliary switch blocks	1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
	2-pole	2NO	3RH2911-1NF20	3RH2911-2NF20
	2 porc	2NC	3RH2911-1NF02	3RH2911-2NF02
5	6 7 8 see page 32 (function modules for mounting	ng on contactors and	for connecting to th	e automation level)
		2NO	3RH2911-1DA20	3RH2911-2DA20
	Laterally mountable auxiliary switch blocks	1NO + 1NC	3RH2911-1DA11	3RH2911-2DA11
9		2NC	3RH2911-1DA02	3RH2911-2DA02
	Solid-state-compatible auxiliary switch block laterally mountable, right	1NO + 1NC	_	3RH2911-2DE11
	Solder pin adapter for contactors	For 4 contactors	3RT1916-4KA2	_
	with 4-pole auxiliary switch block	(package)	JKITTO TKAZ	
10	Solder pin adapter for contactors	For 4 contactors (package)	3RT1916-4KA1	_
	Surge suppressor, e.g. varistor			
11	Without LED	127 – 240 V AC	3RT2916-1BD00	3RT2916-1BD00
	With LED	127 – 240 V AC	3RT2916-1JL00	3RT2916-1JL00
12	Terminal module	Adapter	3RT1916-4RD01	_
12	for contactor with screw terminals	Plug	3RT1900-4RE01	_
13	3-phase infeed terminal	Conductor cross- section: 6 mm	3RA2913-3K	-

Accessories for 3RT202 contactors (S0)

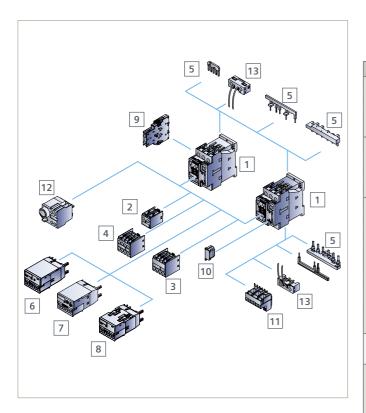


	Fitting of auxiliary switches on the front for	Version	Article No. screw terminals	Article No. spring-loaded terminals
1	3RT2 contactors	Standard		
	1-pole auxiliary switch block,	1NO	3RH2911-1AA10	-
2	cable entry from above	1NC	3RH2911-1AA01	-
	1-pole auxiliary switch block,	1NO	3RH2911-1BA10	-
	cable entry from below	1NC	3RH2911-1BA01	-
	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1LA11	-
3	cable entry from above	2NO	3RH2911-1LA20	-
3	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1MA11	
	cable entry from below	2NO	3RH2911-1MA20	
		1NC	3RH2911-1HA01	3RH2911-2HA01
		2NC	3RH2911-1HA02	3RH2911-2HA02
	1- to 4-pole auxiliary	1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
	switch block	2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
4		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
		1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
	Solid-state-compatible auxiliary	2NO	3RH2911-1NF20	3RH2911-2NF20
	switch blocks 2-pole	2NC	3RH2911-1NF02	3RH2911-2NF02
5	6 7 8 see page 32 (function r the automation level)	modules for mounting on contactor	s and for connectin	g to
	Laterally many match la	2NO	3RH2921-1DA20	3RH2921-2DA20
	Laterally mountable auxiliary switch blocks	1NO + 1NC	3RH2921-1DA11	3RH2921-2DA11
9	auxiliary switch blocks	2NC	3RH2921-1DA02	3RH2921-2DA02
	Solid-state-compatible auxiliary switch block, laterally mountable	1NO + 1NC	_	3RH2921-2DE11
	Surge suppressor, e.g. varistor			
10	Without LED	127 – 240 V AC	3RT2926-1BD00	3RT2926-1BD00
	With LED	127 – 240 V AC	3RT2926-1JL00	3RT2926-1JL00
	Terminal module	Adapter	3RT1926-4RD01	-
11	for contactor with screw terminals	Plug	3RT1900-4RE01	
		ON-delay, 0.1 – 30 s	3RT2926-2PA01	_
	Pneumatic	ON-delay, 1 – 60 s	3RT2926-2PA11	_
12	delay block 1NO + 1NC	OFF-delay, 0.1 – 30 s	3RT2926-2PR01	_
	TINO + TINC	OFF-delay, 1 – 60 s	3RT2926-2PR11	-
		Connection from above	3RT2926-4RA11	3RT2926-4RA12
13	Coil terminal module	Connection from below	3RT2926-4RB11	3RT2926-4RB12
		Connection diagonally	3RT2926-4RC11	3RT2926-4RC12
		, ,		

Accessories for 3RT203 contactors (S2)

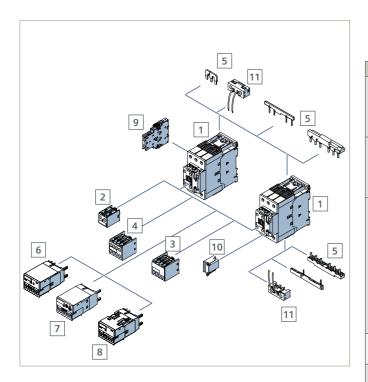


			A	A (* 1 N)
	Fitting of auxiliary switches		Article No.	Article No. spring-loaded
	on the front for	Version	terminals	terminals
1	3RT2 contactors	Standard		
	1-pole auxiliary switch block,	1NO	3RH2911-1AA10	_
_	cable entry from above	1NC	3RH2911-1AA01	_
2	1-pole auxiliary switch block,	1NO	3RH2911-1BA10	_
	cable entry from below	1NC	3RH2911-1BA01	_
	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1LA11	_
	cable entry from above	2NO	3RH2911-1LA20	_
3	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1MA11	
	cable entry from below	2NO	3RH2911-1MA20	
		1NC	3RH2911-1HA01	3RH2911-2HA01
		2NC	3RH2911-1HA02	3RH2911-2HA02
		1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
	1- to 4-pole auxiliary switch block	2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
4		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
		1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
	Solid-state-compatible auxiliary switch blocks 2-pole	2NO	3RH2911-1NF20	3RH2911-2NF20
	switch blocks 2-pole	2NC	3RH2911-1NF02	3RH2911-2NF02
5	6 7 8 see page 32 (function r the automation level)	nodules for mounting o	on contactors and fo	r connecting to
		2NO	3RH2921-1DA20	3RH2921-2DA20
	Laterally mountable	1NO + 1NC	3RH2921-1DA11	3RH2921-2DA11
9	auxiliary switch blocks	2NC	3RH2921-1DA02	3RH2921-2DA02
	Solid-state-compatible auxiliary switch block, laterally mountable	1NO + 1NC	-	3RH2921-2DE11
	Surge suppressor, e.g. varistor (230 V AC)	127 – 240 V AC		
10	Without LED		3RT2936-1BD00	3RT2926-1BD00
	With LED	127 – 240 V AC	3RT2936-1JL00	3RT2926-1JL00
11		Connection from above	3RT2926-4RA11	3RT2926-4RA12
	Coil terminal module	Connection from below	3RT2926-4RB11	3RT2926-4RB12
		Connection diagonally	3RT2926-4RC11	-

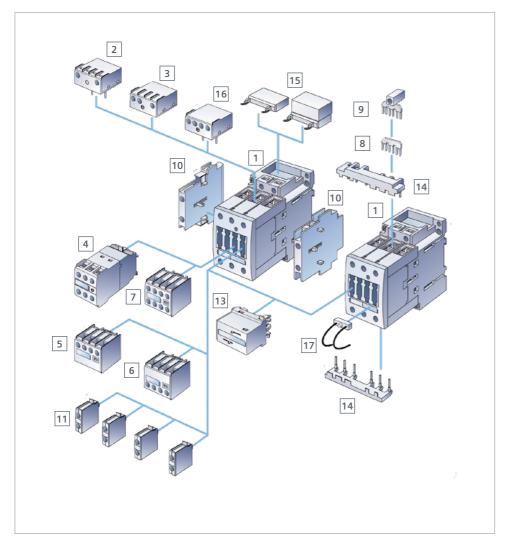


	Туре	Version	Artici No.
1	3RT10 contactors, size 8		3P12 J D 5-1 AP00
2	Electronic timing re ON-delay	0.5 0 s	19.26-2CH21
3	Electronic timing OFF-delay	0.5 – 80 s	3 T19 Z5-2DH21
4	Auxiliary switch by solid-state time delay ON-delay OFF-delay.	0 s	38T19 26-2ED21 38T19 28-2FL21
5	2-pole a witch block cable entry from above	1NC	3 119 25-1LA11
6	2-pole auxiliary switch block, cable entry from below	1NO + 1NC	3 -1 -1 MA11
7	4-poleganishary soutch block	2NO + 2NC	3RH19 21-1HA11
8	Links 107 all all using (star jumper) 3-pole, ithout co		3RT19 46-4BA31
9	-polytinal		3RT19 46-4BB31
10	more real property of the second seco	1NO + 1NC	3RH19 21-1DA11
11	1-pole auxiliary swi	1NO	3RH19 21-1CA10
	(max. 4 can be snap	1NC	3RH19 21-1CA01
12	Mechanical interlock, laterally mountable	_	3RA19 24-2B
13	Mechanical interfect sample mounted on the front	_	3RA19 24-1A
14	Wiring modul p or bottom (reversing duty)	_	3RA19 43-2A
15	Surge suppressor (varistor, RC element, diode combination), can be mounted at top or bottom	-	3RT19 26-1BD00
16	Coupling link for direct mounting on the contactor coil	_	3RT19 26-3AB31
17	LED module for indicating contactor function	_	3RT19 26-1QT00

Accessories for 3RT1 contactors (S6 – S12)

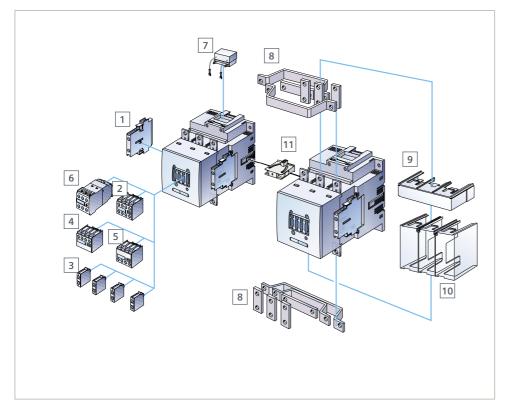

	Туре	Version	Article No.
	2-pole auxiliary switch		Į
1	– 2nd block (left/rig	1NO + 1 (8)	3RH1921-1JA11
	– 2nd block (left/) ht	1NO@ 1N	3RH1921-1KA11
		2NO	3RH1921-1KA20
	4-pole auxiliary	000	
2	- With sequence dig.	2NO♥ 2NE	3RH1921-1XA22-0MA0
	– With sequence digit 1.	2NO + 2N	3RH1921-1HA22
3	1-pole auxiliary switch block, or front	1NO 🖁	3RH1921-1CA10
3	(max. 4 napped ou)	1NC	3RH1921-1CA01
4	2-pole auxiliary switch block, or front	1NO + 1N	3RH1921-1LA11
-	cable entry from above		JKITT JET TEKTT
5	2-pole auxiliary sviton block, on front	1NO + 1NC	3RH1921-1MA11
	cable entry from below	8	
	Auxilia witche lock, solid-state time delay	1NO + 1NC	
6	ON-delayo V AC	0 10 s	3RH1926-2ED21
	240 V AS	0.5 10 s	3RH1926-2FL21
7	OVACH TO		3RT1956-1CD00
	0 0	For S6	3RA1953-2M
8	Top an book rufe	For S10	3RA1963-2A
	Top are boll rate	For S12	3RA1973-2A
9	Tamaian and a second	For S6	3RT1956-4EA2
9	Terminal cover for box	For S10/S12	3RT1966-4EA2
10	Terminal cover for calle lyg and busbar	For S6	3RT1956-4EA2
10	connections	For S10/S12	3RT1966-4EA2
11	Mechanical in		3RA1954-2A

Operating mechanism types

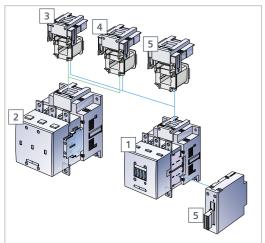

1	SRITU and SRIT4 air-break contactor, sizes S6, S10 and S12
2	3RT12 vacuum contactor, sizes S10 and S12
3	Withdrawable coils for contactors with 3RT1A conventional op. mech.
4	Withdrawable coils for contactors with 3RT1N electronic op. mech.
5	Withdrawable coils and lateral mounting module (snap-on) for 3RT1P contactors w. el. oper. mech. and remaining lifetime signal

	Size	Three-phase	Contactor	Withdrawable coil t	for op. mech.	
		motor	without coil	Conventional	Electronic	
		400 V		Control supply voltage		
				220 – 240 V AC/DC	200 – 277 V AC/DC	
		kW	Article No.	Article No.	Article No.	
		55	3RT1054-1LA06	3RT1955-5AP31	3RT1955-5NP31	
	S6	75	3RT1055-6LA06			
		90	3RT1056-6LA06			
	S10	110	3RT1064-6LA06	3RT1965-5AP31	3RT1965-5NP31	
		132	3RT1065-6LA06			
		160	3RT1066-6LA06			
	S12	200	3RT1075-6LA06	3RT1975-5AP31	3RT1975-5NP31	
	312	250	3RT1076-6LA06			

¹⁾ For more surge suppressors, see the Industry Mall or Catalog IC 10

Version	For size	Article No.		
Terminal supports for stand-alone installation				
Screw fixing and snap-on mounting onto TH 35 standard mounting rail	500	3RU2916-3A □ 01		
Screw fixing and snap-on mounting onto TH 35 standard mounting rail	50	3RU2926-3A □ 01		
Screw fixing and snap-on mounting onto TH 35 standard mounting rail	S2	3RU2936-3AA01		
Mechanical RESET comprising:				
Resetting plungers, holders and formers	S00, S0, S2	3RU2900-1A		
Resetting plungers, holders and formers	S00, S0, S2	3RB3980-0A		
Push buttons with extended stroke (12 mm), IP65, Ø 22 mm	S00, S0, S2	3SB3000-0EA11		
Extension plungers for compensation of the distance between a push button and the unlatching button of the relay	S00, S0, S2	3SX1335		
Cable releases with holders for RESET for drill holes Ø 6.5 mm	in the control pa	nel		
Length 400 mm	S00, S0, S2	3RU2900-1B		
Length 400 mm	S00, S0, S2	3RB3980-0B		
Length 600 mm	S00, S0, S2	3RU2900-1C		
Length 600 mm	S00, S0, S2	3RB3980-0C		
Sealable cover for 3RB3, 3RU2, 3RR2, transparent				
For covering the setting knobs	S00, S0, S2	3RV2908-0P		
For covering the setting knobs	S00, S0, S2	3RB3984-0		
For covering the setting knobs	S00, S0, S2	3RR2940		
Modules for electrical remote reset				
24 – 30 V AC/DC	S00, S0, S2	3RU1900-2AB71		
110 – 127 V AC/DC	S00, S0, S2	3RU1900-2AF71		
220 – 250 V AC/DC	S00, S0, S2	3RU1900-2AM71		
	Terminal supports for stand-alone installation Screw fixing and snap-on mounting onto TH 35 standard mounting rail Screw fixing and snap-on mounting onto TH 35 standard mounting rail Screw fixing and snap-on mounting onto TH 35 standard mounting rail Mechanical RESET comprising: Resetting plungers, holders and formers Resetting plungers, holders and formers Push buttons with extended stroke (12 mm), IP65, Ø 22 mm Extension plungers for compensation of the distance between a push button and the unlatching button of the relay Cable releases with holders for RESET for drill holes Ø 6.5 mm Length 400 mm Length 400 mm Length 600 mm Sealable cover for 3RB3, 3RU2, 3RR2, transparent For covering the setting knobs For covering the setting knobs For covering the setting knobs Modules for electrical remote reset 24 – 30 V AC/DC 110 – 127 V AC/DC	Terminal supports for stand-alone installation Screw fixing and snap-on mounting onto TH 35 standard mounting rail Screw fixing and snap-on mounting onto TH 35 standard mounting rail Screw fixing and snap-on mounting onto TH 35 standard mounting rail Screw fixing and snap-on mounting onto TH 35 standard mounting rail Mechanical RESET comprising: Resetting plungers, holders and formers Resetting plungers, holders and formers Soo, So, S2 Push buttons with extended stroke (12 mm), IP65, Ø 22 mm Extension plungers for compensation of the distance between a push button and the unlatching button of the relay Cable releases with holders for RESET for drill holes Ø 6.5 mm in the control pa Length 400 mm Soo, So, S2 Length 600 mm Soo, So, S2 Length 600 mm Soo, So, S2 Sealable cover for 3RB3, 3RU2, 3RR2, transparent For covering the setting knobs For covering the setting knobs Soo, So, S2 Modules for electrical remote reset 24 – 30 V AC/DC Soo, So, S2 110 – 127 V AC/DC Soo, So, S2		







Can be combined with the following overload and current monitoring relays					
3RU2	3RB3	3RR2			
-					
-	-				

Screw terminals: A Spring-loaded terminals: C

Accessories for 3RU11 thermal overload relays and 3RB20/21 electronic overload relays

		Version	For size	Article No.
	1	Terminal supports for stand-alone installation for 3RU1	1	
1		Screw fixing and snap-on mounting onto a TH 35 standard mounting rail size S3 also for T75 standard mounting rail	\$3	3RU1946-3AA01
		Mechanical RESET for 3RU11 and 3RB20/21 comprising	:	
The second second	2	Resetting plungers, holders and formers		3RU1900-1A
2	3	Push buttons with extended stroke (12 mm), IP65, Ø 22 mm	- S3 - S12	3SB3000-0EA11
3		Extension plungers for compensation of the distance between a push button and the unlatching button of the relay	- S3 – S12	3SX1335
		Cable releases with holders for RESET for 3RU11 and 3I for holes Ø 6.5 mm in the control panel, max. control pan		m
	4	Length 400 mm	62 612	3RU1900-1B
4		Length 600 mm	S3 – S12	3RU1900-1C
· Same		Sealable cover for 3RB20/21, transparent		
		For covering the setting knobs	S3 – S12	3RB2984-0
5 8888	Terminal covers for 3RU11 and 3RB20/21			
			S3	3RT1946-4EA1
	5	Covers for cable lugs and busbar connections	S6	3RT1956-4EA1
Children .			S10/S12	3RT1966-4EA1
222			S3	3RT1946-4EA2
15 6	6	Covers for box terminals	S6	3RT1956-4EA2
2.2.0			S10/S12	3RT1966-4EA2
STATE		Cover for screw terminals between contactor	S6	3RT1956-4EA3
-		and overload relay without box terminals (1 unit required per combination)	S10/S12	3RT1966-4EA3
7 603 5.3		Box terminal block		
	7	For round and ribbon cable conductors up to 70 mm ²	S6	3T1955-4G
	,	For round and ribbon cable conductors up to 120 mm ²	S6	3T1956-4G
		For round and ribbon cable conductors up to 240 mm ²	S10/S12	3T1966-4G

Planning Efficiency

Planning Efficiency™ from Siemens provides you with seamless support throughout your entire process sequence – from the concept, through the design, all the way to commissioning and service.

New standards and directives, tight deadlines and increasingly strict quality requirements – control cabinet builders are facing substantial changes in their everyday work. Planning Efficiency helps you structure your processes even more efficiently, round-the-

clock. Helpful online functions are provided in each process phase – at no charge. Benefit from Planning Efficiency by achieving time savings and optimizing workflows.

Planning Efficiency provides you with easy access to product information and product data worldwide and at any time. This simplifies your product selection and the integration of product data into your CAE and CAD system. Use the time you save to come up with new ideas and innovations.

Your benefits with Planning Efficiency:

Get to the right product faster with intuitive product selection

- Full selection of products and systems on the basis of technical features or in accordance with application requirements
- Simple and intuitive operation
- Configuration and ordering lists can be saved in the file format of your choice (txt, pdf, xls, csv)
- Direct transfer of the ordering list to the Siemens Industry Mall shopping cart
- Fast access to product data for the selected product and system configuration
- Availability in several languages facilitates global use

Time savings of up to 80% with universal product data for your CAE and CAD system

- No manual data collection necessary
- Universal manufacturer data for all commonly used CAE and CAD systems
- Simple generation of standard-compliant documentation
- Selection of the desired languages enables global commissioning

User-friendly compilation of project-specific documentation

- Compile and structure manuals, data sheets, FAQs and certificates simply by dragging and dropping
- Insert your own content via the Notes function
- Further processing possible thanks to selectable export formats (pdf, xml, rtf)
- After generating the documentation, automatic translation into the desired language is possible
- Always up-to-the-minute with the Update function

Comprehensive support – anywhere, anytime

- FAQs, application examples, information on successor products and product innovations
- Fast support for technical inquiries
- Discuss and share experiences with users in the Forum
- Provision of high-quality product data for your planning programs
- Find information faster with helpful filtering and folder functions in mySupport
- Automatic notifications when new information appears for your preferred topics

To obtain the right product for your application, Siemens offers you initial product highlights on the websites. Comprehensive application examples can also be found in the Siemens Industry Online Support. Configurators for products and systems represent another important aid in selecting the right components.

With just a few clicks, the respective configurator will guide you to the right product or system for your requirements. Simply enter the relevant parameters and select your solution.

Product data relevant to the configured solution are available for mechanical and electrical planning, e.g. 3D models, circuit diagrams, certificates, and operating instructions. In addition, the resulting product list can also be exported to Excel, or transferred to the Siemens Industry Mall shopping cart for ordering.

The configurators are available online in the Siemens Industry Mall and offline in the CA01 Catalog. Product selection doesn't come any faster, clearer or simpler. With the CAx Download Manager, all the CAx data types required for use in all commonly used CAE and CAD systems are provided for your desired products in just four selection steps, free of charge and with daily updates. Your individual download package is then available to you for further use as a zip file.

This means time savings of up to 80% when integrating your product data into your CAE and CAD system.

In accordance with directives, the documentation is part of the system and requires certification, giving the purchaser the right to full plant documentation.

To support you in this, a manual configurator has been developed with which you can implement individualized and standard-compliant documentation – fully in accordance with the relevant project-specific requirements.

You can thus select the chapters relevant to the respective product from the available manuals of the installed Siemens components. FAQs, certificates, data sheets, and your own content, can also be integrated. This means the documentation is perfectly tailored to individual needs, and consequently, the information is easier to locate.

Whether you need help with implementing your project, or you want to expand your plant, or plan a new one:
With Siemens Industry Online Support, you receive 24/7 technical support as well as access to all the necessary product information and data.

The one-time registration process is free. Then you can use the full range of functions, and profit from the helpful online functions in mySupport.

Questions and requests regarding all aspects of planning and design can also be discussed with our experts in the Online Forum.

You can find more information with the QR code



Siemens AG Digital Factory Control Products P.O. Box 23 55 90713 Fuerth Germany Subject to change without prior notice 06/16 Article No.: E20001-A380-P302-V11-7600 Dispo 27601 WS 06161.5 Printed in Germany

© Siemens AG 2016

Subject to changes and errors. The information given in this document only contains general descriptions and/or performance features which may not always specifically reflect those described, or which may undergo modification in the course of further development of the products. The requested performance features are binding only when they are expressly agreed upon in the concluded contract.

All product designations may be trademarks or product names of Siemens AG or supplier companies whose use by third parties for their own purposes could violate the rights of the owners.