Fieldbus System

(For Input/Output)



Supports digital inputs/outputs, analogue inputs/outputs, and IO-Link units

◆ IO-Link unit compatible SI unit

EtherNet/IP™

EtherCAT

PROFINET



<Compatible Protocols>

















3000







Please contact SMC for details on compatible products.

IO-Link unit

- 2 models (port class A and port class B)
- Master/device diagnosis function
- The data can be accessed from via PC (setting tool).

Device parameter setting function, Automatic saving/writing

Self-diagnosis function

Equipped with an input/output open/shortcircuit detection function and an input/output signal ON/OFF counter function

Web server function


Status checks and forced output are possible via web browser.

Various connectors available

The following connectors are selectable for the input/output devices: M12 connectors, M8 connectors, D-sub connectors, and spring type terminal blocks.

Up to 9 units*1 can be connected.


Up to 9 units can be connected in any order.

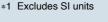




EX600 Series

Can be connected with digital, analogue and IO-Link Units

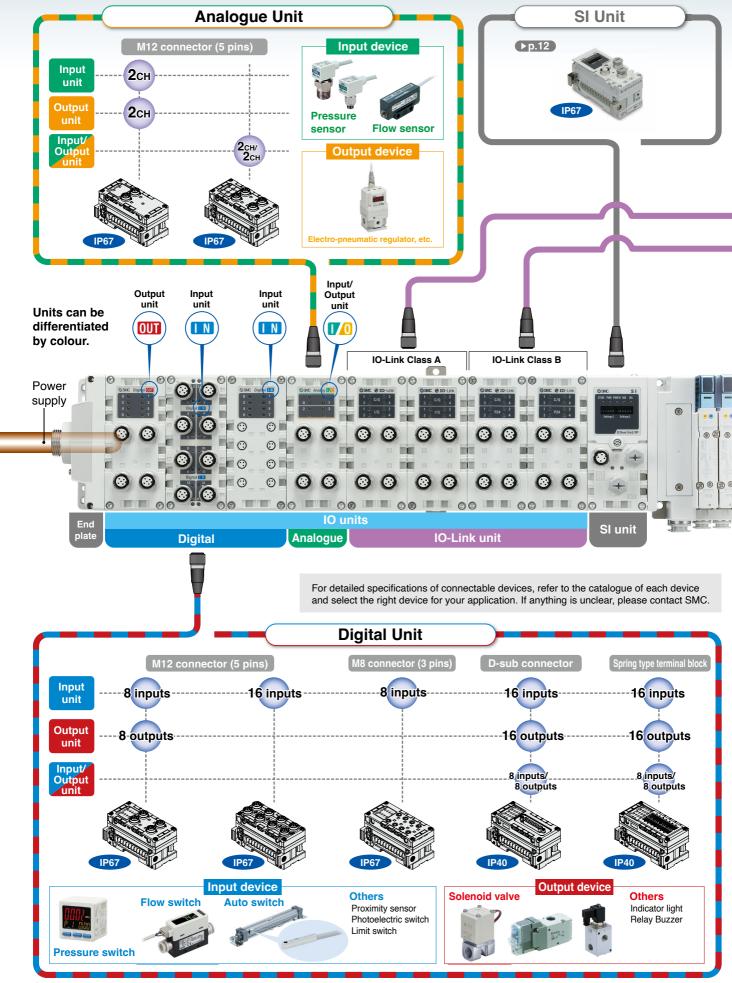

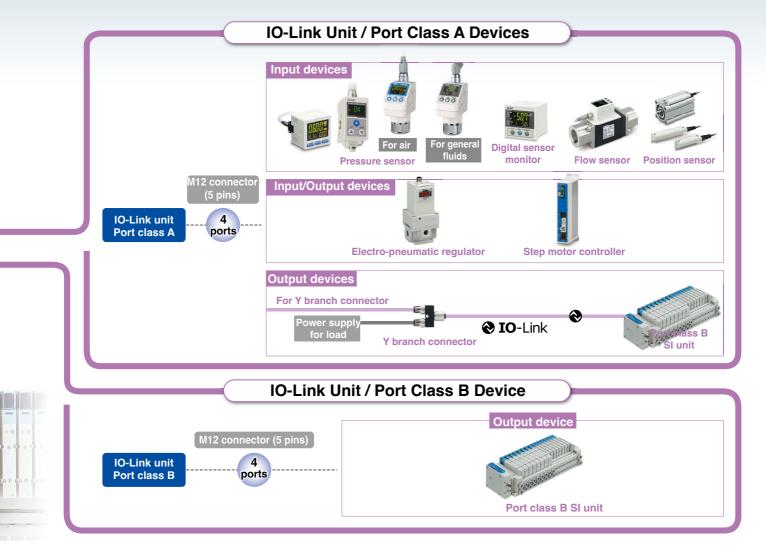

■ Connectable Solenoid Valve Series

A continue to the continue				Flow rate characteristics	s (4/2 → 5/3)	Max. number	Power consumption	Applicable	
Applicable valve			C [dm³/(s·bar)]	b	of solenoids	[W]	cylinder size		
*1 IP67		_	UK	SY3000	1.6	0.19		0.35 (Standard) 0.1 (With power-saving circuit)	Ø 50
	•	_		313000	3.6	0.17	32		Ø 63
		c	N us	SY7000	5.9	0.20			Ø 80
*1, *3	_	_		JSY1000	0.91	0.48		0.2 (With power-saving circuit)	Ø 40
IFO7		ϵ	UK	JSY3000	2.77	0.27	32	0.4 (Standard)	Ø 50
	•	•		JSY5000	6.59	0.22		0.1 (With power-saving circuit)	Ø 80
IP40		ϵ	UK	S0700*2	0.37	0.39	32	0.35	Ø 25
*1 IP67	(_	UK	SV1000*2	1.1	0.35			Ø 40
a saidth				3 4 2 0 0 0	2.4	0.18	32	0.6	Ø 63
acces and acces and acces and acces	c Al us		SV3000*2	4.3	0.21			Ø 80	
*1	(€ CA	VQC1000	1.0	0.30	24	0.4 (Standard)	Ø 40
IP67		_		VQC2000	3.2	0.30			Ø 63
		7		VQC4000	7.3	0.38		0.95 (Standard)	Ø 160
-10				VQC5000	17	0.31		0.4 (Low-wattage type)	Ø 180
Applicable vacuum unit					Nozzle diamo [mm]	eter	Max. number of solenoids	Power consumption [W]	Max. vacuum pressure [kPa]
IP40					0.7			16 0.4	
			€ FR	ZK2□A	1.0		10		04
	(7)		ZNZLA	1.2		16		– 91
			1.5	1.5					

- *1 Units with a D-sub connector or spring type terminal block are IP40.
- *2 There are no manifold part number setting for the EX600-SPN3/4/31, EX600-SEN7/8, and EX600-SEC3/4. (Order it separately.)
- *3 The JSY1000 is IP40.



IO-Link

IO-Link is a communication technology for sensors and actuators that is an international standard, IEC 61131-9.

This technology is used to send/receive device information such as manufacturer, product part number, parameters, and diagnostic data, as well as the control data including ON/OFF signals and measured values of the sensor, by connecting the IO-Link unit and sensor in a 1:1 configuration.

IO-Link enables condition monitoring and error detection of the sensor and equipment, and it can contribute to the reduction of startup labour and recovery time and the realisation of preventive and predictive maintenance.

Reduced design and startup labour


- Batch setting of device parameters from the upper level
- Remote check of device information
- Detection and remote unified check of device misconnection/non-connection

Minimum recovery time due to error detection

- Early detection of location where problem is occurring via communication
- Early obtaining of information on problem phenomenon via communication
- Early recovery during product replacement (automatic setting of device parameters)


Preventive and predictive maintenance through condition monitoring

- Monitors changes in measured values of a sensor during signal ON/OFF
- Monitors the number of device operations and automatically notifies when the set number of operations has been exceeded
- Remote monitoring of device and equipment conditions via communication

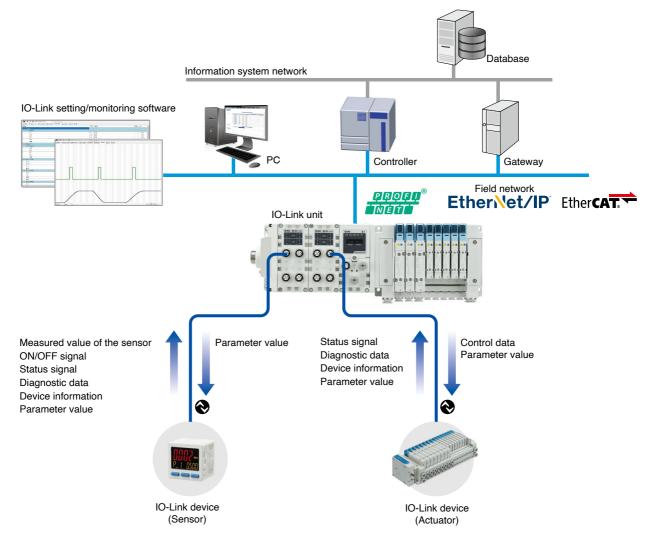



IO-Link System Configuration

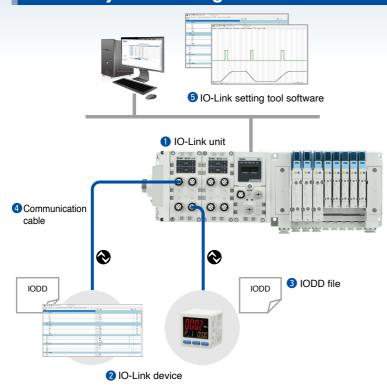

10-Link unit

 Acts as a gateway between the IO-Link communication and the upper level communication

2 IO-Link device

 A sensor/actuator connecting to an IO-Link unit in a 1:1 configuration

3 IODD file

- A file in which device properties and parameters are described
- · Registered to the setting tool
- · Provided by the device manufacturer

4 Communication cable


- A 4-wire or 5-wire general-purpose cable that is the same as the existing sensor cable (Unshielded cable)
- · Max. cable length: 20 m

5 IO-Link setting tool (IO-Link Device Tool)

- Software for the setting and monitoring of an IO-Link unit/device
- *1 A setting tool compatible with the IO-Link units of every manufacturer is used for the SMC EX600 series IO-Link unit. (IO-Link Device Tool V5-PE (V5 or later only) manufactured by TMG Technologie und Engineering GmbH (hereinafter referred to as TMG))


IO-Link Interface

The connecting part between the IO-Link unit and the device is called a "port." Each port can be switched between "IO-Link mode" for digital communication and "standard I/O mode" for conventional contact input/output.

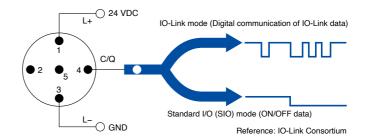


■2 types of interfaces

There are two methods for power supply: one is for sensors, and the other is for actuators.

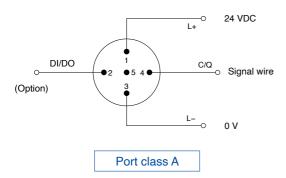

The control power supply wire and signal wire can be connected with one cable. (Mainly for sensors)

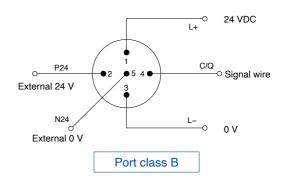

The control power supply wire, external power supply wire, and signal wire can be connected with one cable. (Mainly for actuators)



IO-Link Unit

■ Can be connected with digital, analogue, and IO-Link units

Up to 9 IO-Link units can be connected. (36 IO-Link devices can be connected.)
Digital units, analogue units, and IO-Link units can be mixed, and up to 9 units can be connected in any order.


[Connectable SI unit] **PROFO** 4 IO-Link devices can be connected. **i** NETO For connectable SI units, refer EtherNet/IP Up to 9 units in any combination to pages 12, 16, and 17 of this catalogue. EtherCAT. 0 0 0 **○■ ② ③** 000000000 00 11 00 11 00 11 00 11 00 SI unit

IO-Link unit

■ Supports both port class A and port class B


Analogue

Digital

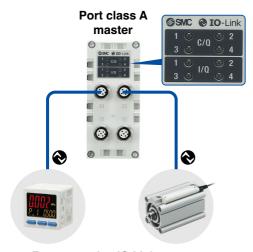


For connecting IO-Link sensors

Pressure sensors, flow sensors, actuator position sensors, electro-pneumatic regulators, etc.

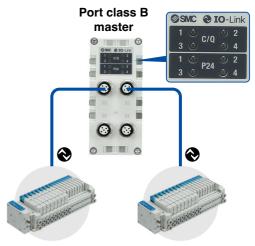

For connecting IO-Link compatible SI units (for valve driving)

■ The data can be accessed from via PC (IO-Link setting tool).

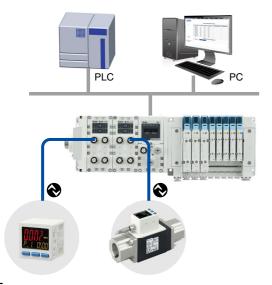

IO-Link units and IO-Link devices can be set and monitored from a PC without going through a PLC.


- Process data
- Unit parameters, Device parameters
- Unit information, Device information
- Port diagnosis, Device diagnosis
- * The IO-Link setting tool is TMG's IO-Link Device Tool. It can be downloaded for free from TMG's website. However, to use it for more than 30 days, a license key for the IO-Link Device Tool is required.



■ Diagnosis function

Diagnosis on a master and device is possible from the upper level communication.

Master (port) diagnostic information can be obtained via PLC program or PC (web browser). Device diagnostic information can be obtained via PC (setting tool).

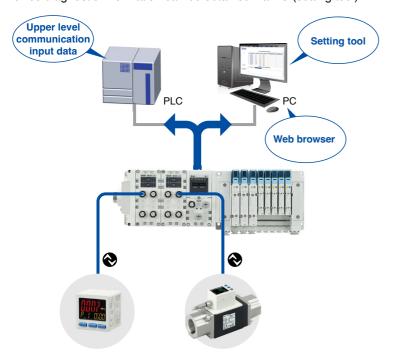

Items of master (port) diagnosis
Detection of port short-circuit
Detection of non-connected device
Detection of misconnected device (check error)
Notification of port misconfiguration (excessively large input/output data)
Conditions of diagnostic event (port, device)

from devices are shown in event codes.

Items of device diagnosis

Diagnostic results (problem phenomenon) received

■ Device parameter setting function, Automatic saving/writing

The parameter setting of devices is possible from the upper level communication.

Parameter setting is possible via PC (setting tool).

It is also possible to use output data or message data via PLC program. The device parameters **Upper level** can even be set from communication the PLC program. output data 00 00 **Automatic saving** of parameters **Automatic writing** of parameters Automatic saving and writing using the data storage function · Saves device parameters to the master automatically · Automatic writing from the master during device replacement

EtherNet Fieldbus Functions


PROFINET (EX600-SPN3/4/31), EtherNet/IP™ (EX600-SEN7/8), and EtherCAT (EX600-SEC3/4) support the following functions.

■ Compatible topologies (Connection configuration)

The EX600-SEN7/8, EX600-SPN3/4/31, and EX600-SEC3/4 support star, linear, and ring network topologies. Linear type Ring type PLC PLC Switching hub is not required. PROFINET **PROFINET** Cable length can EtherNet/IP™ EtherNet/IP™ be shortened. EtherCAT EtherCAT EX600 1 EX6004 EX600 4 EX600 2 EX600 2 EX600 3 EX600 3

For ring networks, communication can be continued even if one of the communication cables in the network is disconnected or damaged. As the EX600-SEN7/8 supports Device Level Ring (DLR), and the EX600-SPN3/4/31 supports Media Redundancy Protocol (MRP), the disconnected point can be identified.

* In order to use DLR or MRP, the PLC must be able to support it.

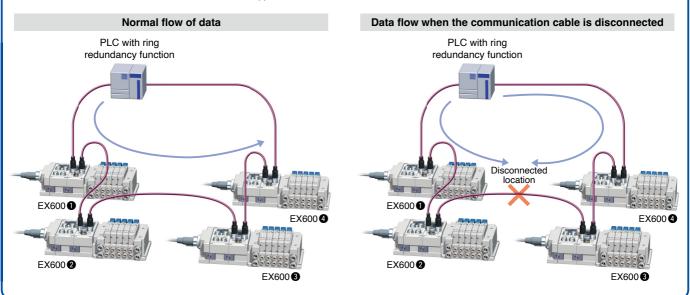


■ Supports the QuickConnect[™] function and the Fast Start Up function



In the case of a tool changer, it takes about 10 seconds for communication to be connected in some products after the power to the device installed on the tool is turned ON.

The EX600-SEN7/8 supports the Quick-Connect™ function, and the EX600-SPN3/4/31 supports the Fast Start Up function, witch enables communication connection in only approx. 0.5 s.


* In order to use the QuickConnect™ function or the Fast Start Up function, the PLC must be able to support it.

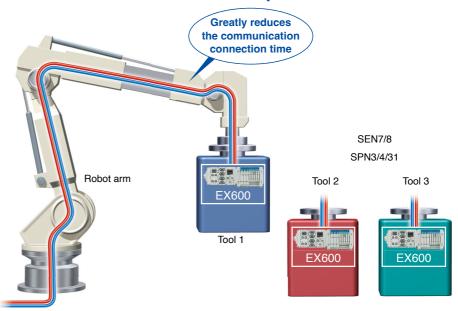

■ Built-in web server function

The EX600-SEN7/8, EX600-SPN3/4/31, and EX600-SEC3/4 have a built-in web server function, which enables status checks, parameter settings (EX600-SEN7/8 and EX600-SEC3/4), and forced output of the EX600 using general-purpose web browsers, such as Google Chrome.

Start-up of the system and maintenance can be performed efficiently.

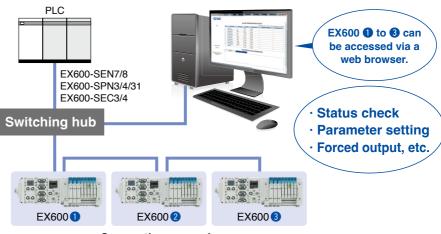


Connection example

PROFINET Technology

■ System Redundancy S2

As the EX600-SPN3/4/31 supports System Redundancy S2, it can continue communication using the backup controller when the primary controller malfunctions. This allows for the prevention of problems caused by unexpected communication interruption.

* In order to use System Redundancy S2, the PLC must be able to support this function.

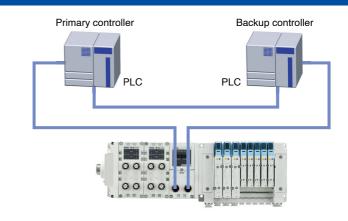



EX600-SPN31 PROFINET/OPC UA

PC UA server function

As the data communication protocol OPC UA is platform independent, it can be used to improve efficiency and visualization onsite by transmitting operating status, diagnostic information, etc.

It can also communicate with devices using other Fieldbus protocols.

Various production equipment status visualization methods

Flow, pressure, temperature, and other sensor information can be communicated to the host system via Industrial Ethernet or the OPC UA data communication protocol.



Equipment status can be monitored from another location or from outside the office.

Web server function The operating status can be confirmed via a standard web browser, eliminating the need for

HTTPS

Via Browser

PLC-dependent software.



Direct connection User and password







Edge server


IoT gateway

PROFI NĖT

Via PLC

Direct connection



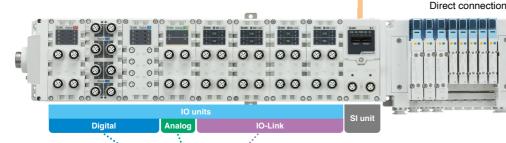

Ionizer




Supports secure communication

Supports communication methods with communication encryption and username and password authentication requirements




As objects are displayed by unit, equipment configuration is easy to understand.

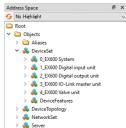


Supports the text display of operating status As the unit operating status numerical value is also displayed as text, information is easy to understand.

Data Access View						
#	Server	Display Name	Value			
1	EX600@192.168.0.2	Communication status	1 (Communication is established (Idle))			
2	EX600@192.168.0.2	Port status info	4 (Operate)			
3	EX600@192.168.0.2	Port status info	1 (Deactivated)			
4	EX600@192.168.0.2	Port status info	5 (Standard I/O input)			
5	EX600@192.168.0.2	Port status info	6 (Standard I/O output)			

OPC UA client UAexpert display examples

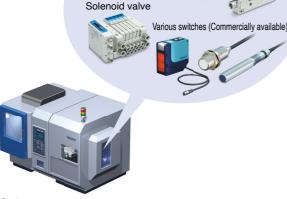

Pressure switch



Fieldbus System EX600

D-sub connector

These units are capable of connection using a D-sub connector. There are three types of units: for digital input, output, and input/output. The digital output unit can be connected with an SMC manifold solenoid valve F kit (D-sub connector).


Manifold solenoid valves can be connected using a cable with a D-sub connector.

SY series

SV series


- S0700 series VQC series
- SJ series VQ series
- SQ series JSY series
- Please limit the number of valve connections to 16 stations for single and 8 stations for double. Refer to the catalogue of each product for pin assignment details.

VVZS3000-21A-□-X192 (Non-waterproof cable example)

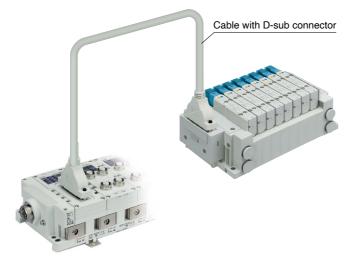

■ Spring type terminal block


These terminal block units are compatible with individual wiring configurations. There are three types of units: for digital input, output, and input/output. Wiring connection to a sensor connector box, etc., can be carried out easily using only a flat head screwdriver.

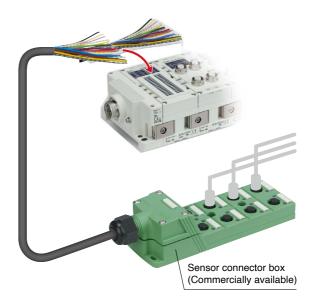

■ Digital input unit




This unit is for inputting a digital signal (ON/OFF signal). The signal of a 2-wire/3-wire auto switch attached to the actuator can be acquired to feedback a signal to the PLC. The control signal of an entire system can be managed by a Fieldbus system.

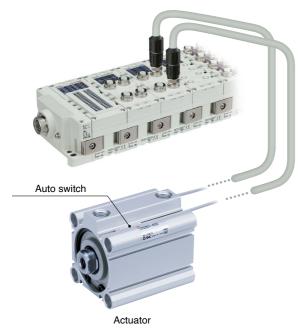

Analogue input/output unit

IP67

These units are for inputting or outputting an analogue signal (voltage/current). A single unit performs both input and output, allowing feedback control where analogue signals are received from a pressure sensor and sent to a pressure controller. Installation space is minimised as well.

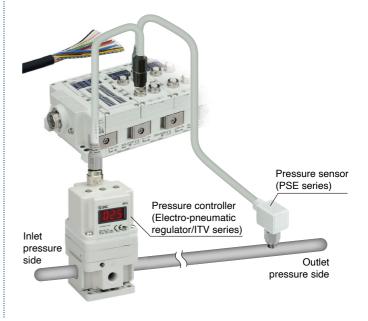

Self-diagnosis function

The following shows examples of the self-diagnosis function.

Short/Open-circuit detection

It is possible to detect short or open circuits of input devices such as electronic 2-wire switches and 3-wire switches and output devices such as solenoid valves. The location of the error can be identified by the indicator light and the network.





(Red flashing) Open circuit

Counter function


It is possible to ascertain the maintenance period and identify the parts that require maintenance by an input and output signal ON/OFF counter function. When the counter function is enabled and a certain number of contact operations is reached, the display of the counter will flash in red.

* The counter function is not provided with analogue units.

■ Individual units can be connected and removed one by one.

A unique clamping method is adopted to prevent screws from falling out. Units can be separated easily by loosening the joint bracket.

Up to 9 units can be connected in any order.

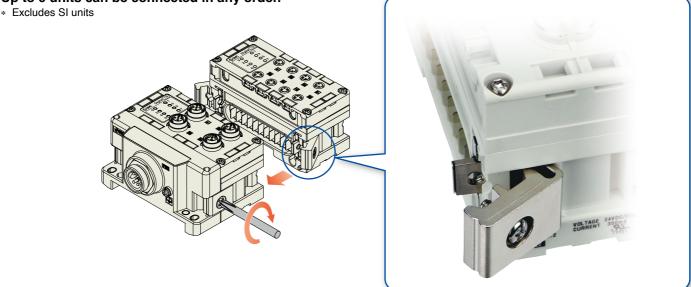




CONTENTS

Type 3 Integrated input-output type

Fieldbus System (For Input/Output) **EX600** Series



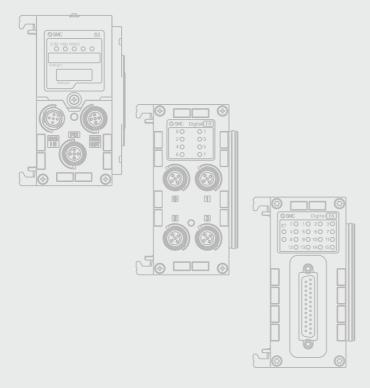

Parts Structure ······	р.	12
How to Order		
SI Unit ·····		
Digital Input Unit ·····		
Digital Output Unit ·····		
Digital Input/Output Unit ·····		
Analogue Input Unit ······		
Analogue Output Unit ······		
Analogue Input/Output Unit ······		
IO-Link Unit ·····		
End Plate (D side) ······		
Handheld Terminal ······	····· p.	14
Specifications		
All Units Common ·····		
SI Unit ·····	p.	15
Digital Input Unit ······	p.	18
Digital Output Unit ······	p.	19
Digital Input/Output Unit ······	p.	19
Analogue Input Unit ······	p.	20
Analogue Output Unit ······	p.	20
Analogue Input/Output Unit ······	p.	21
IO-Link Unit ······	p.	22
End Plate ·····	p.	22
Handheld Terminal ·····	p.	22
Dimensions ·····	p.	23
Parts Description ·····	p.	29
LED Indicator ······	p.	31
Aggagagiag		
Accessories ① End Plate Bracket ····································	n	25
2 Valve Plate	p.	00
3 End Plate (U side) ······		
Reinforcing Brace		
Seal Cap (10 pcs.) · · · · · · · · · · · · · · · · · · ·		
6 Marker (1 sheet, 88 pcs.)		
Power Supply Cable (7/8 inch connector) ······	····· p.	3/
Power Supply Field-wireable Cannactor (7/9 inch)	_	0-
Connector (7/8 inch) ······	p.	3/
Power Supply Cable Auto-company Factor (Auto-company)		٥-
(M12 connector, For EX600-ED2) ······	р.	3/
Power Supply Cable		0.0
(M12 connector, For EX600-ED4/5) ······		
Communication Cable		
Prield-wireable Communication Connector		
1 I/O Cable with Connector, I/O Connector	p.	45


Specific Product Precautionsp. 46

Fieldbus System






Parts Structure

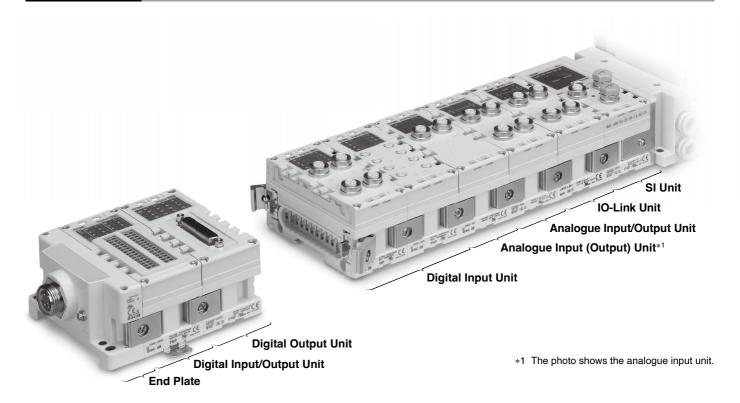

How to Order

SI Unit

EX600-SPR1A-

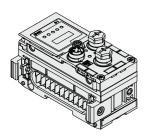

			Specifications •
Symbol	Protocol	Output type	Note
PR1A	PROFIBUS DP	PNP (Negative common)	1
PR2A	FROFIBUS DF	NPN (Positive common)	1
DN1A	DeviceNet®	PNP (Negative common)	1
DN2A	Devicemet	NPN (Positive common)	ı
MJ1	CC-Link	PNP (Negative common)	1
MJ2	CC-LINK	NPN (Positive common)	1
CF1-X60	CC-Link IE Field	PNP (Negative common)	(Made to order)
EN7	EtherNet/IP™	PNP (Negative common)	IO-Link unit
EN8	Ethernet/IP	NPN(Positive common)	IO-Link unit
EC3	EtherCAT	PNP (Negative common)	IO-Link unit
EC4	EllielOAT	NPN (Positive common)	IO-Link unit
PN3		PNP (Negative common)	IO-Link unit
PN4	DDOCINET	NPN (Positive common)	IO-Link unit
PN31	PROFINET	PNP (Negative common)	IO-Link unit OPC UA server




How to Order

Digital Input Unit



N

N

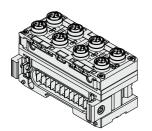


Description PNP NPN

Number of inputs, open-circuit detection, and connector

Symbol	Number of inputs	Open-circuit detection	Connector
В	8 inputs	No	M12 connector (5 pins) 4 pcs.
С	8 inputs	No	M8 connector (3 pins) 8 pcs.
C1	8 inputs	Yes	M8 connector (3 pins) 8 pcs.
D	16 inputs	No	M12 connector (5 pins) 8 pcs.
E	16 inputs	No	D-sub connector (25 pins)
F	16 inputs	No	Spring type terminal block (32 pins)

Digital Output Unit


EX600-DYPB

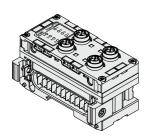

Juipui type •	 • Nu	mber of c	outputs and conne
Description	Symbol	Number of	Conne
PNP	Oyllibul	outputs	Conne
NPN	В	8 outputs	M12 connector (5 pins

Symbol	Number of outputs	Connector
В	8 outputs	M12 connector (5 pins) 4 pcs.
Ε	16 outputs	D-sub connector (25 pins)
F	16 outputs	Spring type terminal block (32 pins)



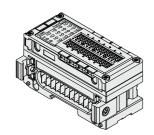

Input/Output type


•••	.6	output typos
	Symbol	Description
	Р	PNP
	N	NPN

Number of inputs/outputs and connector

Symbol	Number of inputs	Number of outputs	Connector
E	8 inputs	8 outputs	D-sub connector (25 pins)
F	8 inputs	8 outputs	Spring type terminal block (32 pins)

Analogue Input Unit

EX600-AXA

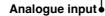

- Number of input channels and connector					
Symbol	Number of input channels	Connector			
Δ	2 channels	M12 connector (5 pins) 2 pcs			


Analogue Output Unit

EX600-AYA



• Number of output channels and connector					
Symbol	Number of output channels	Connector			
Α	2 channels	M12 connector (5 pins) 2 pcs.			



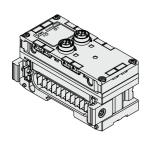



How to Order

Analogue Input/Output Unit **EX600-AMB**


Analogue input/output

Number of input/output channels and connector

Symbo	Number of input channels	Number of output channels	Connector
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.

IO-Link Unit

EX600-LAB1

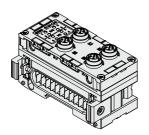

Port specification •	<u> </u>	mber of ports	and connector	
Description	Symbol	Number of ports	Connector	
Port class A	В	4	M12 connector	

Symbol	Description	Symbol	Number of ports	
Α	Port class A	В	4 porto	
В	Port class B	В	4 ports	


The compatible SI unit models are as shown below.

EtherNet/IP™: EX600-SEN7/8 PROFINET: EX600-SPN3/4/31 EtherCAT: EX600-SEC3/4

End Plate (D side)

EX600-ED

EX600-ED4/5 are not yet UL-compliant.

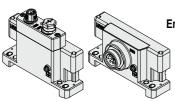

For M12

For 7/8 inch

End plate mounting position: D side

Power supply connector

End plate

	Symbol	Power supply connector	Specifications
	2 M12 (5 pins) B-coded 3 7/8 inch (5 pins) 4 M12 (4/5 pins) A-coded*1		IN
			IN
			IN/OUT
	5	M12 (4/5 pins) A-coded*1	IN/OUT

^{*1} The pin layout for the "4" and "5" pin connectors is different.

Refer to the dimensions on page 24.

Mounting method

Symbol Description		Note
Without DIN rail mounting bracket		_
2 With DIN rail mounting bracket		For SV, S0700, and VQC series
3	With DIN rail mounting bracket	For SY and JSY series


(5 pins) 4 pcs.

* When the end plate (U side) is used, the symbol for the mounting method must be the same as the D side.

Handheld Terminal

EX600-HT1A

Handheld terminals are not yet UL-compliant.

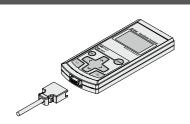

- Cabic longin		
Symbol	Description	
_	No cable	
1	1 m	
3	3 m	

Specifications

All Units Common Specifications

Ħ	Operating temperature range Operating: -10 to 50 °C, Stored: -20 to 60 °C		
Į	Operating humidity range	35 to 85 % RH (No condensation)	
.€	Withstand voltage*1	500 VAC for 1 minute between external terminals and FE	
듑	Insulation resistance*1	e *1 500 VDC, 10 M Ω or more between external terminals and FE	

^{*1} Except handheld terminals

SI Unit (EX600-SPR□A) PROFIBUS

<u> </u>	or only (Excoo-or Hills) i Horiboo				
Model		EX600-SPR1A	EX600-SPR2A		
6	Protocol	PROFIBUS	DP (DP-V0)		
a i	Device type	PROFIBUS	S DP Slave		
은	Communication speed	9.6/19.2/45.45/93.75/187.5/500 kbps 1.5/3/6/12 Mbps			
₹	Configuration file	GSD	file*2		
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs)			
Te	rminating resistor	Internally in	nplemented		
Internal current consumption (Power supply for Control/Input)		80 mA or less			
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)		
	Number of outputs	32 outputs (8/16/24/3	32 outputs (8/16/24/32 outputs selectable)		
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)			
Ĕ	Power supply	24 VD	C, 2 A		
	Fail safe	HOLD/CLEAR/F	orced power ON		
	Protection	Short-circuit protection			
Er	closure	IP67 (Manifold assembly)			
St	andards	CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)			
W	eight	300	0 g		
		·	·		

^{*2} The configuration file can be downloaded from the SMC website: https://www.smc.eu

SI Unit (EX600-SDN□A) DeviceNet®

<u> </u>	SI OIII (EX000-3DN A) Devicence			
	Model	EX600-SDN1A	EX600-SDN2A	
	Protocol	DeviceNet®: Volume 1 (Editio	n 2.1), Volume 3 (Edition 1.1)	
ءِ ا	Device type	Communica	tion Adapter	
을	Communication speed	125/250/	500 kbps	
<u>8</u>	Configuration file	EDS file*3		
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inpu	ts/512 outputs)	
Con	Applicable messages	Duplicate MAC ID Check Message, Group 2 Only Unconnected Explicit Message Explicit Message (Group 2), Poll I/O Message (Predefined M/S Connection set)		
	Applicable function	QuickConnect™		
De	viceNet® power supply	11 to 25 VDC (Current consumption 50 mA or less)		
	ernal current consumption ower supply for Control/Input)	55 mA or less		
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)	
-	Number of outputs	32 outputs (8/16/24/32 outputs selectable)		
utput	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)		
5	Power supply	24 VD	C, 2 A	
٦	Fail safe	HOLD/CLEAR/F	orced power ON	
	Protection	Short-circuit protection		
Er	closure	IP67 (Manifo	old assembly)	
St	andards	CE/UKCA marking (EMC direc	tive/RoHS directive), UL (CSA)	
W	eight	30	0 g	
			"	

^{*3} The configuration file can be downloaded from the SMC website: https://www.smc.eu

SI Unit (EX600-SMJ□) CC-Link

Si Chit (EXCOC-SMC) CO-Link				
	Model	EX600-SMJ1	EX600-SMJ2	
Ę	Protocol	CC-Link (Ver. 1	I.10, Ver. 2.00)	
∃ĕ	Station type	Remote De	vice Station	
nication	Communication speed	156/625 kbps 2.5/5/10 Mbps		
1	Configuration file	CSP+	file*4	
Commu	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs) 1/2/3/4 stations occupied		
Internal current consumption (Power supply for Control/Input)		75 mA or less		
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)	
ــ	Number of outputs	32 outputs (8/16/24/32 outputs selectable)		
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)		
ጀ	Power supply	24 VDC, 2 A		
	Fail safe	HOLD/CLEAR/Forced power ON		
	Protection	Short-circuit protection		
Er	nclosure	IP67 (Manifold assembly)		
St	andards	CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)		
Weight		300	0 g	

^{*4} The configuration file can be downloaded from the SMC website: https://www.smc.eu





 $\mathsf{EX600}\text{-}\mathsf{SDN}\square\mathsf{A}$



Specifications



SI Unit (EX600-SCF1-X60) CC-Link IE Field

Model		EX600-SCF1-X60*1
	Protocol	CC-Link IE Field
	Station type	Intelligent Device Station
_	Communication speed	1 Gbps
₽.	Allowable station number setting	1 to 120
<u>2</u>	Allowable network number setting	1 to 239
딜	Transmission method	Cyclic transmission
Communication	Configuration file	CSP+ file*2
Ņ	Occupied input size	RX: 32 to 176 bits
	Occupied iliput size	RWr: 32 to 608 words
	Occupied output size	RY: 32 to 176 bits
	Occupied output size	RWw: 32 to 608 words
Internal current consumption (Power supply for Control/Input)		140 mA or less
	Output type	Source/PNP (Negative common)
	Number of outputs	32 outputs
Ħ	Load	Solenoid valve with surge voltage suppressor
Output	Loau	24 VDC, 1.0 W or less (SMC)
ō	Power supply	24 VDC, 2 A
	Fail safe	HOLD/CLEAR/Forced power ON
	Protection	Short-circuit protection
Er	nclosure	IP67 (Manifold assembly)
St	andards	CE/UKCA marking (EMC directive/RoHS directive)
W	eight	300 g

- *1 For details on this product, refer to the SMC website.
- *2 The configuration file can be downloaded from the SMC website: https://www.smc.eu



SI Unit (EX600-SEN□) EtherNet/IP™

	Model	EX600-SEN7	EX600-SEN8		
	Protocol	EtherN	let/IP™		
	Protocol	(Conformance version: Composite 18)			
	Communication speed	10/100) Mbps		
_	Communication method	Full duplex	/Half duplex		
Communication	Configuration file	EDS	file*3		
<u>8</u>	IP address setting	SI Unit switch settings: 192.168.0 or 1.1 to 254			
들	range	Through DHCP serv	er: Optional address		
ᄩ		Vendor ID: 7 (SI	MC Corporation)		
ķ	Device information		nmunication Adapter)		
		Product of	code: 258		
	QuickConnect		•		
	DLR	•			
	Web server function				
10	-Link unit	•			
	ernal current consumption ower supply for Control/Input)	120 mA or less			
	Output type	Source/PNP	Sink/NPN		
	Output type	(Negative common)	(Positive common)		
	Number of outputs	32 oı	utputs		
Output	Load		rge voltage suppressor / or less (SMC)		
	Power supply	24 VD	C, 2 A		
	Fail safe	HOLD/CLEAR/F	orced power ON		
	Protection	Short-circui	it protection		
En	closure	IP67 (Manifold assembly)			
St	andards	CE/UKCA marking, UL (CSA)			
W	eight	30	0 g		
O The		has decorded from the OMO website bits of the own one			

^{*3} The configuration file can be downloaded from the SMC website: https://www.smc.eu



Specifications



SI Unit (EX600-SEC□) EtherCAT

Model		EX600-SEC3	EX600-SEC4		
ੁ <u>ਛ</u> Protocol		EtherCAT (Conformance Test Record V.2.3.0)			
Communication	Communication speed	100 ľ	Mbps		
₹	Configuration file	XML file*1			
ខ	Web server function)		
10	-Link unit				
	ernal current consumption wer supply for Control/Input)	120 mA or less			
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)		
	Number of outputs	32 outputs (8/16/24/32 outputs selectable)			
ď	Load	Solenoid valve with surge voltage sup	pressor 24 VDC, 1.0 W or less (SMC)		
Output	Power supply	24 VD	C, 2 A		
	Fail safe	HOLD/CLEAR/F	orced power ON		
	Protection	Short-circuit protection			
En	closure	IP67 (Manifold assembly)			
Sta	andards	CE/UKCA marking, UL (CSA)			
We	eight	300 g			

^{*1} The configuration file can be downloaded from the SMC website: https://www.smc.eu




SI Unit (EX600-SPN□) PROFINET

Model		EX600-SPN3	EX600-SPN4	EX600-SPN31		
on.	Protocol	PROFII	PROFINET IO			
	FIOLOGOI	(Conforman	ce Class C)	(Conformance Class B)		
	Communication speed		100 Mbps			
ati	Configuration file		GSDML file*2			
nic	Fast Start Up			●*3		
nu	(Communication connection time)	(Approx.	500 ms)	(Approx. 1 s)		
Communication	MRP		•			
ပိ	System Redundancy S2		•			
	Web server function		•			
	OPC UA server function	_	•			
10	-Link unit	•				
	ernal current consumption ower supply for Control/Input)	120 mA or less				
	Output turns	Source/PNP	Sink/NPN	Source/PNP		
_	Output type	(Negative common)	(Positive common)	(Negative common)		
Output	Number of outputs		32 outputs			
E	Load	Solenoid valve with surg	e voltage suppressor 24 VI	DC, 1.0 W or less (SMC)		
	Fail safe	HC	LD/CLEAR/Forced power	ON		
	Protection	Short-circuit protection				
En	closure	IP67 (Manifold assembly)				
Sta	andards	CE/UKCA marking, UL (CSA)				
We	eight	300 g				
2. The configuration file can be downloaded from the SMC website; h						


 $[\]ast 2\,$ The configuration file can be downloaded from the SMC website: https://www.smc.eu

^{*3} When the OPC UA server is set to disabled


Specifications

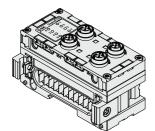


EX600-DX□B

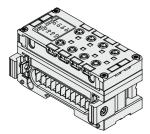


EX600-DX□C□

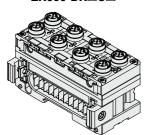

EX600-DX□D

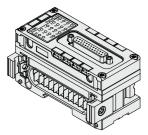

EX600-DX□E

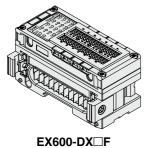


Digital Input Unit

_:3	signal input onit							
	Model		EX600-DXPB	EX600-DXNB	EX600-DXPC□	EX600-DXNC□	EX600-DXPD	EX600-DXND
	Input type		PNP	NPN	PNP	NPN	PNP	NPN
	Input connecto	r	M12 (5-pir	n) socket*1	M8 (3-pin) socket*3	M12 (5-pir	n) socket*1
	Number of inpu	uts	8 inputs (2 inpu	uts/Connector)	8 inputs (1 inp	out/Connector)	16 inputs (2 inp	outs/Connector)
	Supplied voltage	ge			24 \	/DC		
	Max. supplied current			onnector Unit	or 0.25 A/Connector 2 A/Unit		0.5 A/Connector 2 A/Unit	
Input	Protection		Short-circuit protection					
드	Input current (at 24 VDC)		9 mA or less					
	ON voltage		17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
	OFF voltage		5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
	Open circuit	2 wires	_	-	0.5 mA	/Input*2	-	-
	detection current 3 wires		_	-	0.5 mA/Cd	onnector*2	_	_
Cu	Current consumption		50 mA	or less	55 mA	or less	70 mA	or less
En	closure	•	IP67 (Manifold assembly)					
Standards			CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)					
Weight			300	0 g	27	5 g	34	0 g


- *1 M12 (4-pin) connector can be connected.
- *2 Function only applies to the EX600-DX□C1.
 *3 When connecting the M8 plug connector, the tightening torque must be 0.2 N·m ±10 %. If tightened with an excessive tightening torque, this may cause the connector thread of the unit to break.

	Model	EX600-DXPE	EX600-DXNE	EX600-DXPF	EX600-DXNF		
	Input type	PNP	NPN	PNP	NPN		
	Input connector		et (25 pins) No.4-40 UNC	Spring type terminal block (32 pins)			
	Number of inputs	16 in	puts	16 inputs (2 inp	outs x 8 blocks)		
	Supplied voltage		24 \	/DC			
Input	Max. supplied current	2 A/	2 A/Unit		0.5 A/Block 2 A/Unit		
-	Protection	Short-circuit protection					
	Input current (at 24 VDC)	5 mA or less					
	ON voltage	,	7 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
Αŗ	plicable wire	_	_	0.08 to 1.5 mm ²	(AWG16 to 28)		
Cı	irrent consumption	50 mA	or less	ss 55 mA or less			
Er	closure	IP40 (Manifold assembly)					
St	andards	CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)					
Weight		300 g					


Specifications

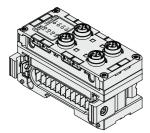

EX600-DY□B

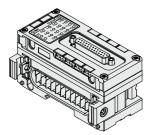

EX600-DY□E EX600-DM□E

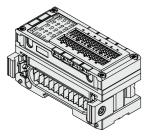

EX600-DY□F EX600-DM□F

Digital Output Unit

$\overline{}$	gitai Output Oilit	1					
	Model	EX600-DYPB	EX600-DYNB	EX600-DYPE	EX600-DYNE	EX600-DYPF	EX600-DYNF
	Output type	PNP	NPN	PNP	NPN	PNP	NPN
	Output connector	M12 (5-pir	M12 (5-pin) socket*1		et (25 pins) No.4-40 UNC	Spring type terminal block (32 pins)	
ם	Number of outputs	8 outputs (2 out	8 outputs (2 outputs/Connector)		ıtputs	16 outputs (2 ou	tputs x 8 blocks)
Output	Supplied voltage		24 VDC				
	Max. load current			0.5 A/Output 2 A/Unit			
	Protection	Short-circuit protection					
Ap	plicable wire	_ _			1.5 mm² 6 to 28)		
Сι	rrent consumption	50 mA or less					
Enclosure		IP67 IP40 (Manifold assembly) (Manifold assembly)					
Sta	andards	CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)					
Weight		300 g					

^{*1} M12 (4-pin) connector can be connected.

Digital Input/Output Unit

	Model	EX600-DMPE	EX600-DMNE	EX600-DMPF	EX600-DMNF
Input/Output type		PNP	NPN	PNP	NPN
C	onnector	D-sub socket (25 pins) Lock screw: No.4-40 UNC		Spring type terminal block (32 pins)	
	Number of inputs	8 in	puts	8 inputs (2 inp	uts x 4 blocks)
	Supplied voltage		24 \	/DC	
	Max. supplied current	2 A/	Unit	0.5 A/Block 2 A/Unit	
Input	Protection		Short-circu	it protection	
드	Input current (at 24 VDC)		5 mA	or less	
	ON voltage	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)			
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)			
	Number of outputs	8 ou	tputs	8 outputs (2 out	puts x 4 blocks)
ᇽ	Supplied voltage		24 \	/DC	
Outp	Max. load current	0.5 A/Output 2 A/Unit			
	Protection	Short-circuit protection			
A	pplicable wire	_	_	0.08 to 1.5 mm ² (AWG16 to 28)	
Cı	urrent consumption	50 mA	or less	60 mA	or less
Eı	nclosure	IP40 (Manifold assembly)			
St	tandards	CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)			
W	eight eight	300 g			
Ci Ei	OFF voltage Number of outputs Supplied voltage Max. load current Protection pplicable wire urrent consumption nclosure tandards	(At PNP input, 5 V or less (At NPN in	between the pin for input put, between the pin for input between the pin for input tputs 24 \ 0.5 A/ 2 A/ Short-circu or less IP40 (Maniformarking (EMC direct	ut terminal and supplied input terminal and supplied input terminal and supplied 8 outputs (2 out /DC Output Unit it protection 0.08 to 1.5 mm² 60 mA old assembly) tive/RoHS directive),	voltage of 0 V) blied voltage of +2 voltage of 0 V) puts x 4 blocks) c (AWG16 to 28) or less


Specifications



Analogue Input Unit

	Model		EX600)-AXA	
	Input type		Voltage input	Current input	
	Input conn	ector	M12 (5-pir	n) socket*1	
	Input chan	nel	2 channels (1 ch	annel/Connector)	
	Supplied v	oltage	24 \	/DC	
	Max. suppl	ied current	0.5 A/Co	onnector	
<u></u>	Protection		Short-circui	t protection	
Input	Input 12 bit resolution		0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA	
=	signal range	16 bit resolution	–10 to 10 V, –5 to 5 V	–20 to 20 mA	
	Max. rated input signal		±15 V	±22 mA*2	
	Input impedance		100 kΩ	50 Ω	
	Linearity (25 °C)		±0.05 % F.S.		
	Repeatabil	ity (25 °C)	±0.15	% F.S.	
	Absolute acc	curacy (25 °C)	±0.5 % F.S.	±0.6 % F.S.	
Cι	Current consumption		70 mA or less		
En	Enclosure		IP67 (Manifold assembly)		
Sta	Standards		CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)		
We	eight		29	0 g	

- *1 M12 (4-pin) connector can be connected.
 *2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

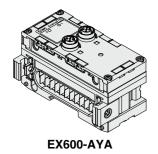


Analogue Output Unit

	Mod	el	EX600)-AYA		
	Output type	e	Voltage output	Current output		
	Output con	nector	M12 (5-pir	n) socket*3		
	Output cha	nnel	2 channels (1 cha	annel/Connector)		
	Supplied vo	oltage	24 \	/DC		
	Max. load current		0.5 A/Cd	onnector		
Output	Protection		Short-circuit protection			
out	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
	Load impedance		1 kΩ or more	600 Ω or less		
	Linearity (25 °C)		±0.05 % F.S.			
	Repeatabili	ity (25 °C)	±0.15 % F.S.			
	Absolute acc	curacy (25 °C)	±0.5 % F.S.	±0.6 % F.S.		
Cu	Current consumption		70 mA or less			
En	Enclosure		IP67 (Manifold assembly)			
Sta	Standards		CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)			
We	eight		290	0 g		

^{*3} M12 (4-pin) connector can be connected.

Specifications

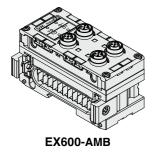


Analogue Input/Output Unit

Model		el	EX600	-AMB		
	Input type		Voltage input	Current input		
	Input conn	ector	M12 (5-pin) socket*1			
	Input chan	nel	2 channels (1 channel/Connector)			
	Supplied v	oltage	24 V	/DC		
	Max. suppl	ied current	0.5 A/Co	nnector		
<u>.</u>	Protection		Short-circuit	t protection		
Input	Input signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
	Max. rated	input signal	15 V	22 mA*2		
	Input impe	dance	100 kΩ	250 Ω		
	Linearity (25 °C)		±0.05 % F.S.			
	Repeatability (25 °C)		±0.15 % F.S.			
	Absolute accuracy (25 °C)		±0.5 % F.S.	±0.6 % F.S.		
	Output type		Voltage output	Current output		
	Output connector		M12 (5-pin) socket*1			
	Output channel		2 channels (1 channel/Connector)			
	Supplied voltage		24 VDC			
	Max. load o	current	0.5 A/Connector			
Output	Protection		Short-circuit protection			
ō	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
	Load impe	dance	1 kΩ or more	600 Ω or less		
	Linearity (2	25 °C)	±0.05 9	% F.S.		
	Repeatabil	ity (25 °C)	±0.15 9	% F.S.		
	Absolute accuracy (25 °C)		±0.5 % F.S.	±0.6 % F.S.		
Cı	urrent consi	umption	100 mA or less			
Er	nclosure		IP67 (Manifol	ld assembly)		
St	andards		CE/UKCA marking (EMC direct	tive/RoHS directive), UL (CSA)		
W	eight		300 g			

^{*1} M12 (4-pin) connector can be connected. *2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

Specifications

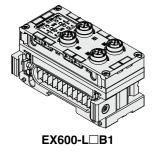

IO-Link Unit

Model		EX600	-LAB1	EX600-LBB1	
IC	-Link version		Version	on 1.1	
IC	-Link port class	Clas	ss A	Class B	
Communication speed		COM1 (4.8 kBaud) COM2 (38.4 kBaud) COM3 (230.4 kBaud) * Changes automatically according to the connected device			
N	umber of IO-Link ports		4	4	
Compatible SI unit (Protocol)			EX600-SPN3/4/	(EtherNet/IP™) '31 (PROFINET) /4 (EtherCAT)	
Max. supply current	Device power supply (L+)	0.5 A/Connector (2 A/Unit)		0.5 A/Connector (1 A/Unit)	
Мах. supp	External power supply (P24)	_		1.6 A/Connector (3 A/Unit)	
	Pin no.	2	4	4	
	Input type	PNP			
Input	Protection	Short-circuit protection			
∣≡	Rated input current	Approx. 2.5 mA		Approx. 5.8 mA	
	ON voltage		13 V o	r more	
	OFF voltage	8 V or less			
	Pin no.		2	4	
Ę	Output type		PI	NP	
Output	Max. load current (C/Q line)	(Sup		Output r supply for control/input)	
	Protection	Short-circuit protection			
Cı	urrent consumption	50 mA or less			
Eı	nclosure	IP67 (Manifold assembly)			
St	andards	CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)			
W	eight	320 g			





EX600-ED2-□

EX600-ED4/5-□



EX600-ED3-□



End Plate

	Model		EX600-ED2-□	EX600-ED3-□	EX600-ED4/5-□		
S	Power supply	PWR IN	M12 (5-pin) plug	7/8 inch (5-pin) plug	M12 (4-pin) plug		
랿	connector	PWR OUT	_	_	M12 (5-pin) socket		
냶	Power supply connector Rated voltage	Power supply for control/input		24 VDC ±10 %			
	voltage	Power supply for output	24 VDC +10/-5 %				
Power	Rated	Power supply for control/input	Max 2A	Max 8 A	Max 4 A		
8	current	Power supply for output	IVIAX. ∠ A	IVIAX. O A	IVIAX. 4 A		
Er	nclosure		IP67 (Manifold assembly)				
St	andards*1		CE/UKCA marking (EMC directive/RoHS directive), UL (CSA)				
W	eight		170 g	175 g	170 g		

^{*1} The EX600-ED4/5- \square is not compliant with UL (CSA) standards.

Handheld Terminal

Model	EX600-HT1A-□	
Power supply	Power supplied from SI unit connector (24 VDC)	
Current consumption 50 mA or less		
Display LCD with backlight		
Connection cable	Handheld terminal cable (1 m ··· EX600-AC010-1, 3 m ··· EX600-AC030-1)	
Enclosure	IP20	
Standards*1	CE/UKCA marking (EMC directive/RoHS directive)	
Weight 160 g		

^{*1} The handheld terminal is not compliant with UL (CSA) standards.


* Cannot be used with the EX600-SEN7/8, EX600-SPN3/4/31, EX600-SEC3/4, and EX600-L□B1




Dimensions

SI Unit


EX600-SPR□A EX600-SDN□A EX600-SMJ□

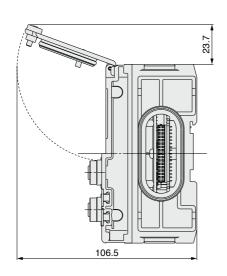


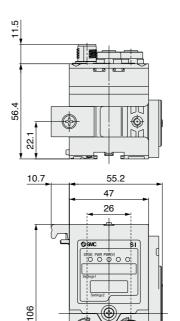


22

EX600-SEN7/8 EX600-SPN3/4/31 EX600-SEC3/4

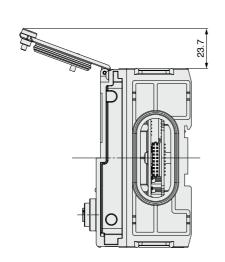


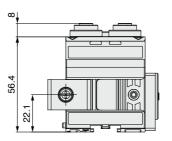


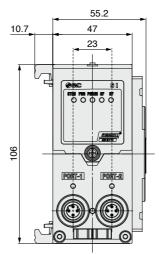



Dimensions

End Plate (D side) EX600-ED2

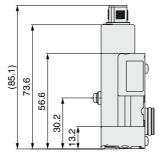


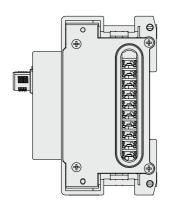


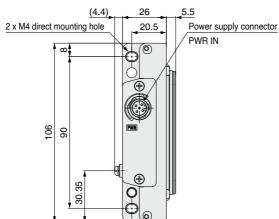


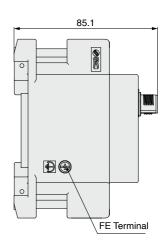


EX600-ED4/ED5

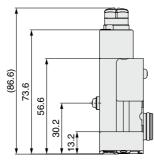

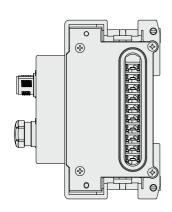

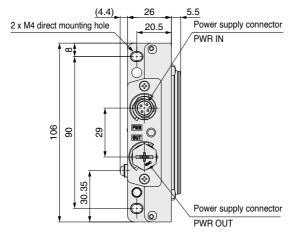

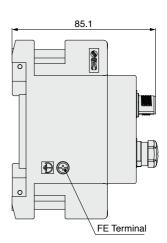

Power supply connector PWR IN: M12 5-pin plug, B-coded

miz o pini piag, b oodou			
Configuration	EX600-ED2		
Configuration	Pin no.	Description	
	1	24 V (for output)	
2 1	2	0 V (for output)	
5(00)	3	24 V (for control/input)	
3 4	4	0 V (for control/input)	
	5	FE	

Power supply connector PWR IN: M12 4-pin plug, A-coded

Continuiration -		EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)	
		Pin no.	Description	Pin no.	Description
3 _ 2 1		1	24 V (for control/input)	1	24 V (for output)
	60	2	24 V (for output)	2	0 V (for output)
	3		0 V (for control/input)	3	24 V (for control/input)
	4 1	4	0 V (for output)	4	0 V (for control/input)


Power supply connector PWR OUT: M12 5-pin socket, A-coded


Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2)	
Corniguration	Pin no.	Description	Pin no.	Description
1 2	1	24 V (for control/input)	1	24 V (for output)
60	2	24 V (for output)	2	0 V (for output)
(%)	3	0 V (for control/input)	3	24 V (for control/input)
4 5 3	4	0 V (for output)	4	0 V (for control/input)
, 5	5	Unused	5	Unused





Dimensions

End Plate (D side) EX600-ED3

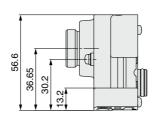

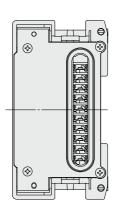

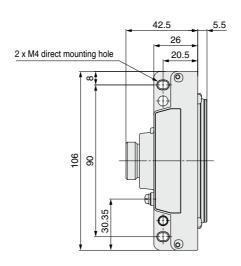

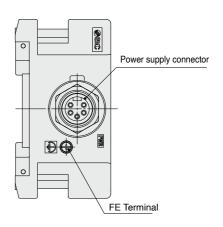


Power supply connector PWR: 7/8 inch 5-pin plug


I	Configuration	Pin no.	Description
I		1	0 V (for output)
I		2	0 V (for control/input)
I		3	FE
I		4	24 V (for control/input)
I		5	24 V (for output)




Dimensions


Digital Unit

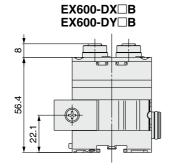

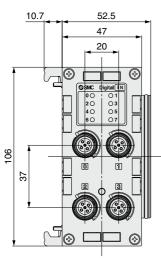



EX600-DX□C□

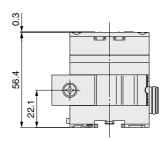

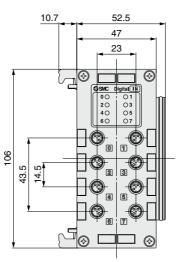


EX600-DX□D

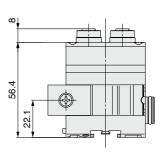


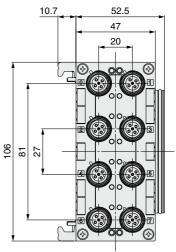


EX600-DX□E EX600-DY□E EX600-DM□E


22.1

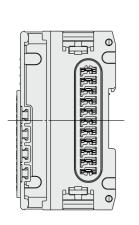

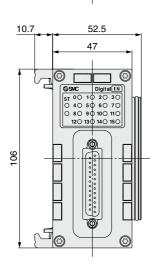


EX600-DX□F EX600-DY□F EX600-DM□F

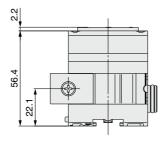

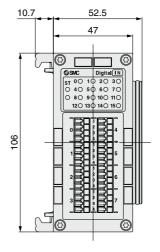


Dimensions

EX600-AMB

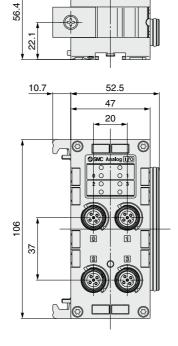



IO-Link Unit

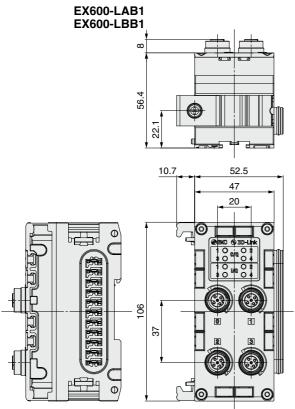

Parts Description

SI Unit

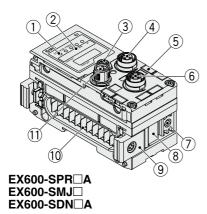


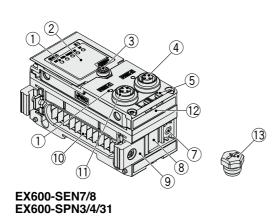

No.	Name	Use
1	Status indication LED	Displays unit status
2	Indication cover	Open for setting the switch.
3	Indication cover set screw	Loosen for opening the indication cover.
4	Connector (BUS OUT)	Connects to the fieldbus output cable (SPEEDCON)*1
5	Marker groove	Can be used to mount a marker
6	Connector (PCI)	Connects to the handheld terminal cable (SPEEDCON)
7	Valve plate mounting holes	Fixes a valve plate in place
8	Valve plate mounting groove	Inserts a valve plate
9	Joint bracket	Links units to one another
10	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power
11	Connector (BUS IN)	Connects to the cable for fieldbus input (SPEEDCON)*1
12	MAC address name plate	Displays a unique 12-digit MAC address for each SI unit
13	Seal cap	Mounted on the connectors (BUS OUT and PCI) at the time of shipment


^{*1} The EX600-SEN7/8, EX600-SPN3/4/31, and EX600-SEC3/4 are not SPEEDCON compatible.


Digital Unit

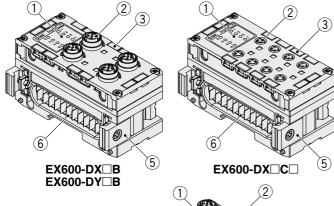


EX600-SEC3/4

No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with input or output devices (Only the EX600-D□□B and EX600-DX□D are SPEEDCON compatible.)
3	Marker groove	Can be used to mount a marker
4	Lock screw	Secures the D-sub connector in place (No.4-40 UNC)
5	Joint bracket	Links units to one another
6	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power

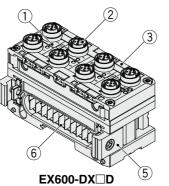


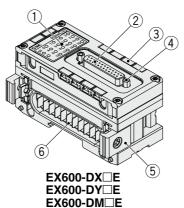

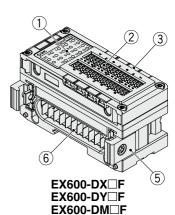


Parts Description

Analogue Unit

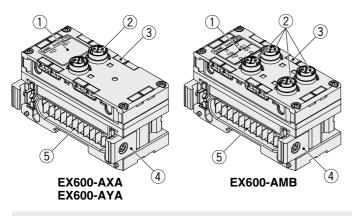


No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with input or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power

IO-Link Unit

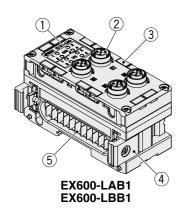


No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with IO-Link, input, or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighbouring unit and supplies power

End Plate

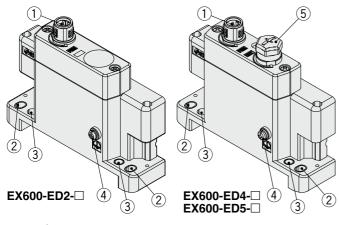


No.	Name	Use
1	Power connector (PWR IN)	Supplies power to the unit and/or input/ output device (Only the EX600-ED2/ED4/ ED5-□ is SPEEDCON compatible.)
2	Fixing hole for direct mounting	Connects directly to equipment
3	Fixing hole for DIN rail	Converts to manifold or for DIN rail mounting
4	FE terminal	Used for grounding Ground this terminal securely to improve noise immunity.
5	Connector (Unused) Power connector (PWR OUT)	Supplies power to the device on the downstream side

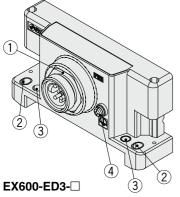


LED Indicator


EX600-SPR□A

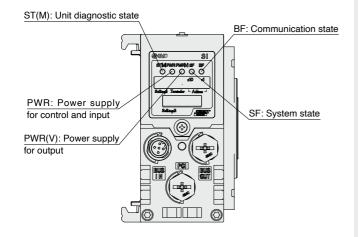


EX600-SDN□A

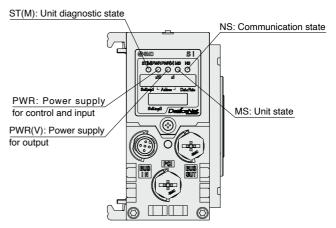


EX600-SEC□

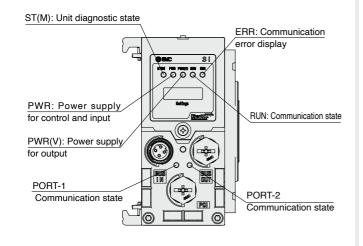


EX600-SEN7/SEN8

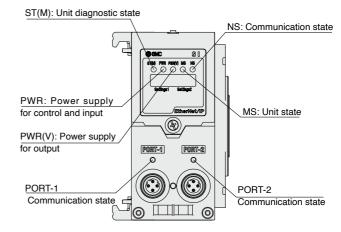

EX600-SPN3/4/31

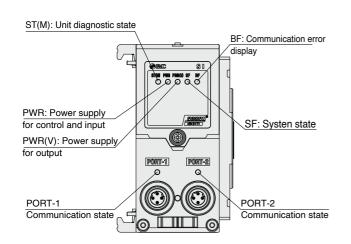


EX600-SMJ□

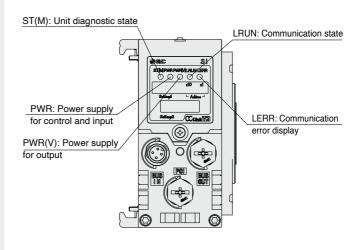




LED Indicator


EX600-DX□B

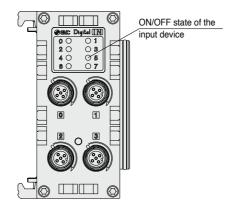


EX600-DX□C□

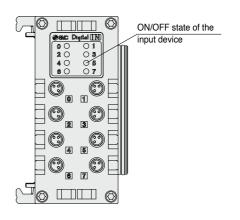

EX600-DX□D

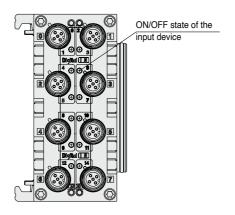


EX600-DX□E

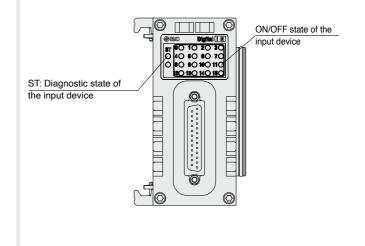


LED Indicator


EX600-DX□F

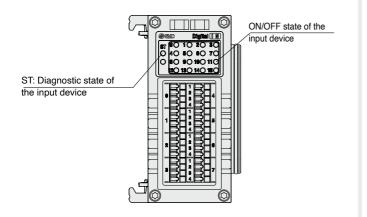


EX600-DY□B

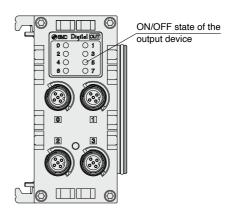


EX600-DY□E

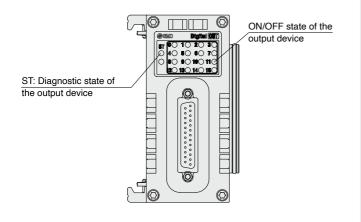


EX600-DY□F

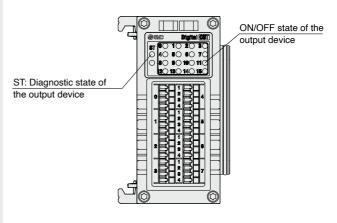

EX600-DM□E

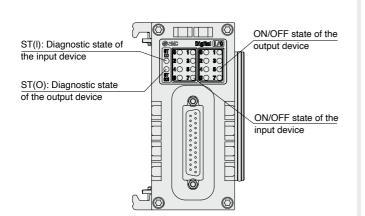


EX600-DM□F

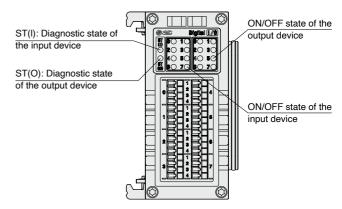


LED Indicator


EX600-AXA

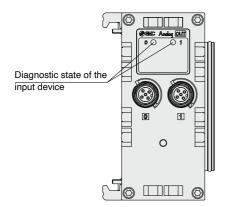


EX600-AYA

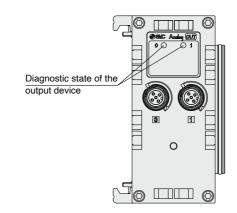


EX600-AMB

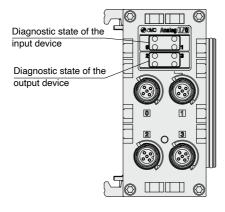


EX600-LAB1

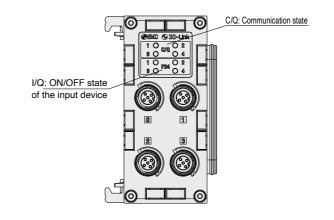

EX600-LBB1

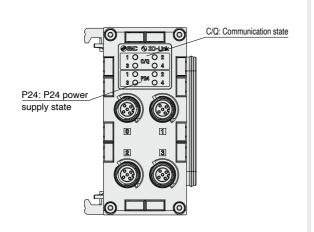

Accessories

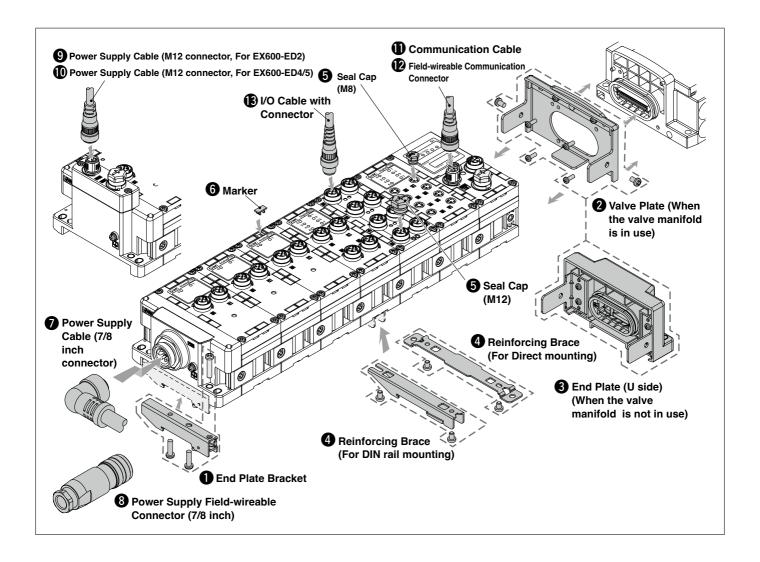

End Plate Bracket

This bracket is used for the end plate of DIN rail mounting.



EX600-ZMA2

Enclosed parts

Round head screw (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.


EX600-ZMA3

(Specialised for SY series)

Enclosed parts

Round head screw with washer (M4 x 20) $\,$ 1 pc. P-tight screw (4 x 14) $\,$ 2 pcs.

Valve Plate

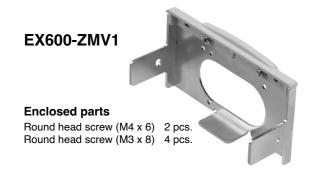

EX600-ZMV2

(Specialised for SY series)

Enclosed parts


Round head screw (M4 x 6) 2 pcs. Round head screw (M3 x 8) 2 pcs.







3 End Plate (U side)

The end plate is for use when the manifold valve is not connected.

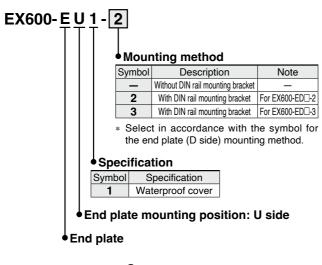

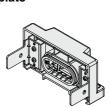

EX600-EU1

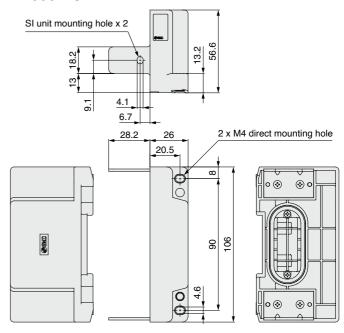

Enclosed parts

Round head screw (M4 x 5) 2 pcs.

4 Reinforcing Brace

This bracket is used on the bottom of the unit at the intermediate position for connecting 6 units or more.

* Be sure to attach this bracket to prevent connection failure between the units caused by deflection.



For DIN rail mounting EX600-ZMB2



Seal Cap (10 pcs.)


Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.





6 Marker (1 sheet, 88 pcs.)


The signal name of I/O device and each unit address can be entered and mounted on each unit.

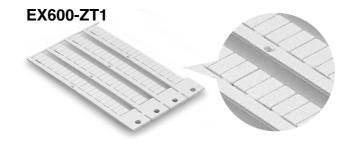

Power Supply Cable (7/8 inch connector)


PCA-1558810 Straight 2 m PCA-1558823 Straight 6 m PCA-1558836 Right angled 2 m PCA-1558849 Right angled 6 m


Straight connector type

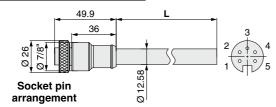



Angled connector type

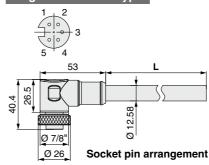

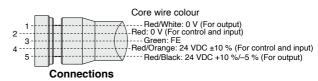

Item	Specifications
Cable O.D.	Ø 12.58 mm
Conductor nominal cross section	1.5 mm ² /AWG16
Wire O.D. (Including insulator)	2.35 mm
Min. bending radius (Fixed)	110 mm

Power Supply Field-wireable Connector (7/8 inch)

PCA-1578081

Socket [compatible with AWG22-16]



Applicable Cable

Item	Specifications	
Cable O.D.	Ø 12.0 to 14.0 mm	
Wire gauge (Stranded	0.34 to 1.5 mm ²	
wire cross section)	AWG22 to 16	


Power Supply Cable (M12 connector, For EX600-ED2) * The shape of the M12 connector is B-coded (Reverse key).


PCA-1564927 Straight 2 m PCA-1564930 Straight 6 m PCA-1564943 Right angled 2 m PCA-1564969 Right angled 6 m



SPEEDCON

Straight connector type

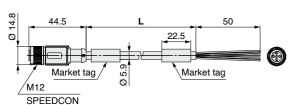

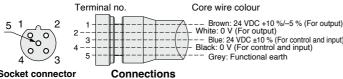

Socket connector pin arrangement B-coded (Reverse key) Brown: 24 VDC +10 %/-5 % (For output)
 White: 0 V (For output)
 Blue: 24 VDC ±10 % (For control and input)
 Black: 0 V (For control and input)


Socket connector pin arrangement B-coded (Reverse key)


o 0

2 2

3

Angled connector type

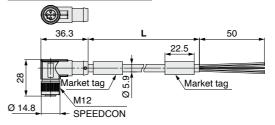

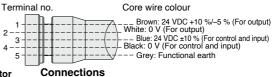


Specifications Cable O.D. Ø 5.9 mm 0.34 mm²/AWG22 Conductor nominal cross section Wire O.D. (Including insulator) 1.27 mm Min. bending radius (Fixed) 59 mm




Accessories **EX600** Series

(M12 connector, For EX600-ED4/5)

* The shape of the M12 connector is A-coded (Normal key).

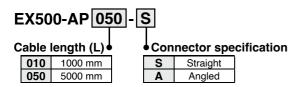


Straight connector type

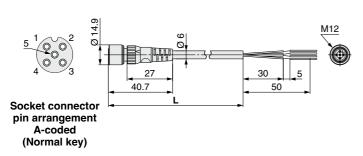


Item	Specifications
Cable O.D.	Ø 6 mm
Nominal cross section	0.3 mm ² /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)


Angled connector type

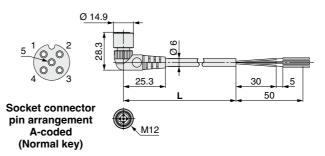



Item	Specifications
Cable O.D.	Ø 6 mm
Nominal cross section	0.3 mm ² /AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

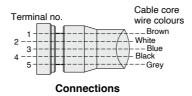

SPEEDCON

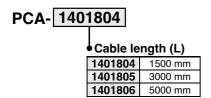


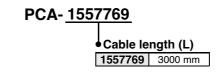

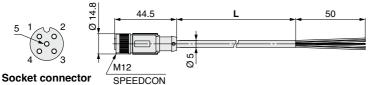


pin arrangement A-coded (Normal key)

Item	Specifications
Cable O.D.	Ø 5 mm
Nominal cross section	0.3 mm ² /AWG22
Wire diameter (Including insulator)	1.27 mm
Min. bending radius	21.7 mm (Fixed)

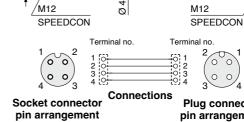



A-coded (Normal key)

Plug connector pin arrangement A-coded (Normal key)

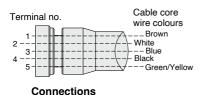


1 Communication Cable

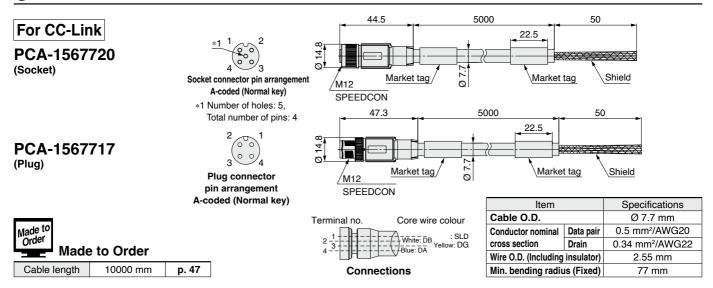

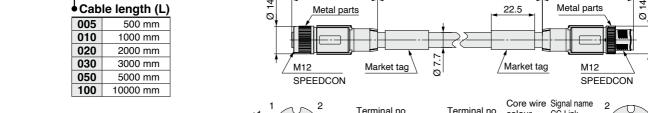

44.5

Item		Specifications
Cable O.D.		Ø 7.7 mm
Conductor nominal	Data pair	0.5 mm ² /AWG20
cross section	Drain	0.34 mm ² /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min bending radius (Fixed)		77 mm

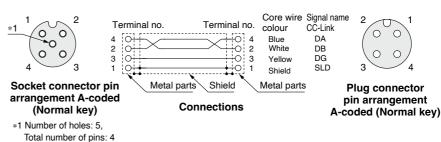


47.3


Total number of pins: 4

EX9-AC 005 MJ-SAPA (With angled connector on both sides (Socket/Plug))


EX9-AC 005 MJ-SSPS (With connector on both sides (Socket/Plug))

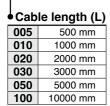


Item		Specifications
Cable O.D.		Ø 7.7 mm
Conductor nominal	Data pair	0.5 mm ² /AWG20
cross section	Drain	0.34 mm ² /AWG22
Wire O.D. (Including insulator)		2.55 mm
Min. bending radius (Fixed)		77 mm

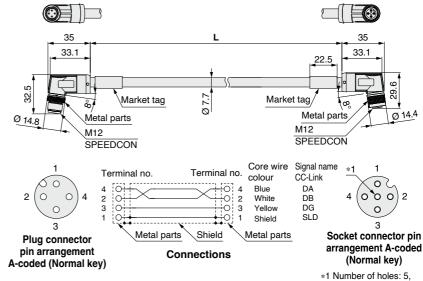



1 Communication Cable

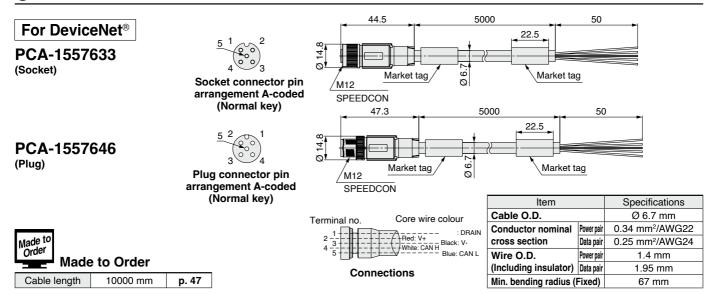

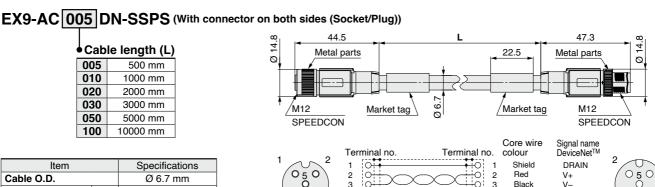


Item		Specifications
Cable O.D.		Ø 6.7 mm
Conductor nominal	Power pair	0.34 mm ² /AWG22
cross section	Data pair	0.25 mm ² /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator)	Data pair	1.95 mm
Min. bending radius (Fixed)		67 mm

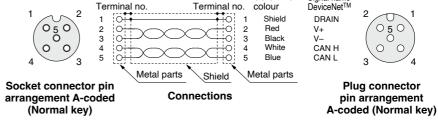


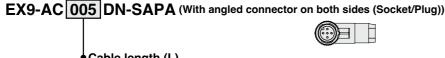


Cable length (L)		
005	500 mm	
010	1000 mm	
020	2000 mm	
030	3000 mm	
050	5000 mm	
100	10000 mm	

Item		Specifications
Cable O.D.		Ø 6.7 mm
Conductor nominal	Power pair	0.34 mm ² /AWG22
cross section	Data pair	0.25 mm ² /AWG24
Wire O.D.	Power pair	1.4 mm
(Including insulator)	Data pair	1.95 mm
Min. bending radius (Fixed)		67 mm

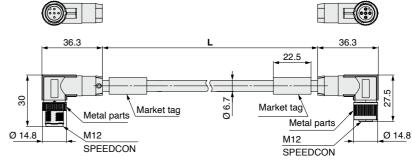

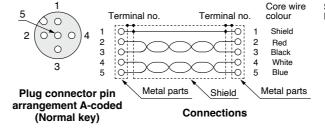

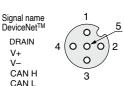

Socket connector pin arrangement A-coded (Normal key)


1 Communication Cable




PCA-1557688

(Socket)


PCA-1557691 (Plug)

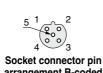


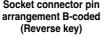



Plug connector pin arrangement B-coded (Reverse key)

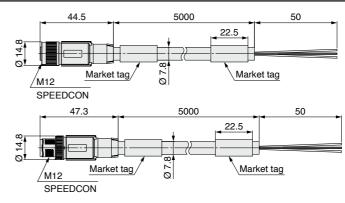

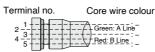



Shield line is connected to the knurl. **Connections**

Item	Specifications
Cable O.D.	Ø 7.8 mm
Conductor nominal cross section	0.34 mm ² /AWG22
Wire O.D. (Including insulator)	2.55 mm
Min. bending radius (Fixed)	78 mm

For EtherCAT® For PROFINET For EtherNet/IP®

EX9-AC 020 EN-PSRJ (Plug/RJ-45 connector)

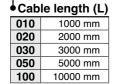


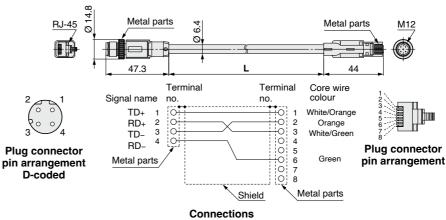

(Straight cable)

Item	Specifications
Cable O.D.	Ø 6.4 mm
Conductor nominal cross section	0.14 mm ² /AWG26
Wire O.D. (Including insulator)	0.98 mm
Min. bending radius (Fixed)	26 mm

PCA-1446566 (Plug)

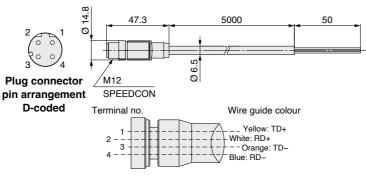



Connections

Item	Specifications
Cable O.D.	Ø 6.5 mm
Conductor nominal cross section	AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	45.5 mm



Communication Cable

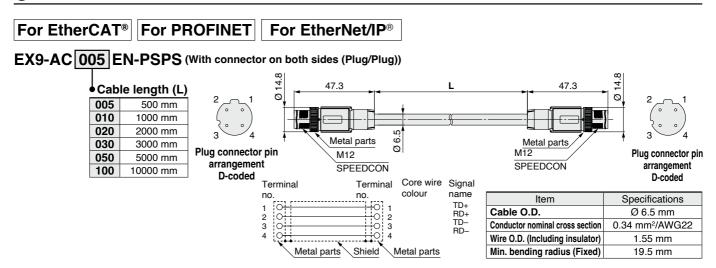


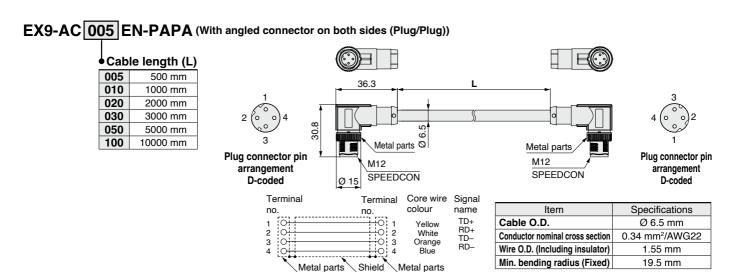


Prield-wireable Communication Connector

Plug

For CC-Link For DeviceNet® PCA-1075526 PCA-1075528

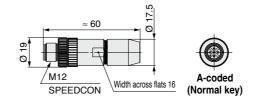

For PROFIBUS DP PCA-1075530

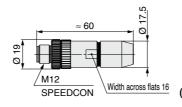



Applicable Cable Item Specifications Cable O.D. 4.0 to 8.0 mm 0.14 to 0.75 mm²/AWG26 to 18 Wire gauge (Solid cable/Flexible cable) (Stranded wire 0.08 to 0.5 mm²/AWG28 to 20 cross section)

(With ferrule)


For EtherCAT® For PROFINET

For EtherNet/IP®

PCA-1446553





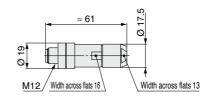


Applicable Cable

Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm ² /AWG26 to 22

* The table above shows the specifications for the applicable cable. Adaptation for the connector may vary on account of the conductor construction of the electric wire.


Socket

For CC-Link | For DeviceNet® PCA-1075527 PCA-1075529

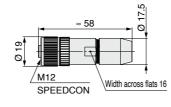



For PROFIBUS DP PCA-1075531

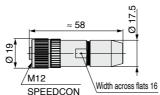



Applicable	Cable
Item	Specifications
Cable O.D.	4.0 to 8.0 mm
Wire gauge	0.14 to 0.75 mm²/AWG26 to 18

(Stranded wire

cross section)

(Solid cable/Flexible cable)

0.08 to 0.5 mm²/AWG28 to 20


(With ferrule)

(B) I/O Cable with Connector, I/O Connector

For details, refer to the Web Catalogue.

Name	Use	Part no.	Description
Cable with	For sensor	PCA-1557769	Cable with M12 connector (4 pins/3 m)
connector		PCA-1557772	Cable with M8 connector (3 pins/3 m)
	For sensor	PCA-1557730	Field-wireable connector (M8/3 pins/Plug/Piercecon® connection)
Field-wireable connector		PCA-1557743	Field-wireable connector
		PCA-1557756	(M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)
Y connector	For sensor	PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)
1 connector		PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)


* When using the Y connector, connect it to the connector on the I/O unit through the sensor cable (PCA-1557769) with the M12 connector.

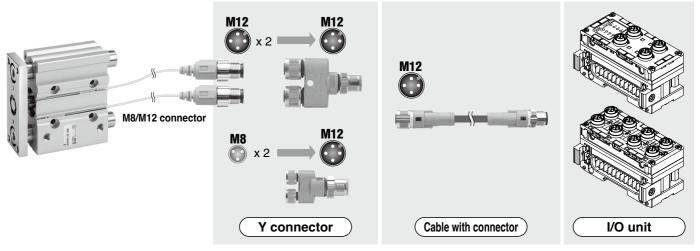



For IO-Link Unit

45



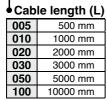

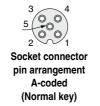

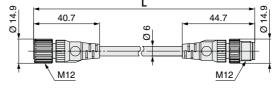

0 14.9


Plug connector pin arrangement A-coded (Normal key)

Termina	l no	<u>.</u>			Core wire colour
1 2 3 4 5	99999		$\begin{array}{c c} & & & \\ & & & \\ \end{array}$	1 2 3 4 5	Brown White Blue Black Grey
		Connections			


Item	Specifications		
Cable O.D.	Ø 6 mm		
Conductor nominal cross section	0.3 mm ² /AWG22		
Wire O.D. (Including conductor)	1.5 mm		
Min. bending radius (Fixed)	40 mm		

(B) I/O Cable with Connector, I/O Connector

Port Class B EX260-SIL SI Unit and Port Class A IO-Link Master Connection Example

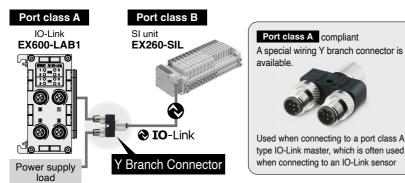




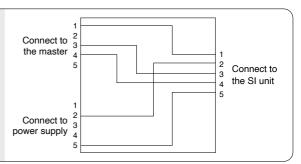


Y Branch Connector for IO-Link

This connector is used to supply power to the valve manifold by branching the IO-Link communication cable in cases where a port class A IO-Link master is used.

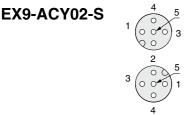

Socket connector pin arrangement A-coded (Normal key)

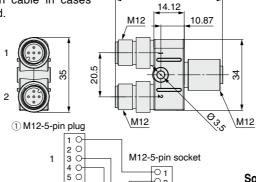

2 M12-5-pin plug

50

⊙ 3






Socket connector pin arrangement A-coded (Normal key)

Solenoid valve power supply cable side pin arrangement when using a branch connector

1	_	Unused
2	SV24V	+24 V for solenoid valve
3	_	Unused
4	-	Unused
5	SV0V	0 V for solenoid valve

IO-Link Device Tool License Key

USB dongle EX9-ZSW-LDT1

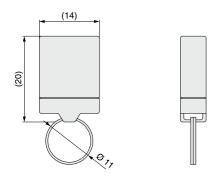



The IO-Link Device Tool V5-PE (V5 or later only) manufactured by TMG is required for setting IO-Link devices.

The IO-Link Device Tool can be downloaded for free from TMG's website. However, to use it for more than 30 days, a license key for the IO-Link Device Tool is required.



EX600 Series Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For fieldbus system precautions, refer to the "Operation Manual" on the SMC website: https://www.smc.eu

Mounting

- 1. When handling and assembling units, do not touch the sharp metal parts of the connector or plug.
- 2. When connecting six stations or more, be sure to use the intermediate reinforcing brace (EX600-ZMB1 or EX600-ZMB2).

Operating Environment

⚠ Caution

1. Select the proper type of enclosure according to the operating environment.

IP65/67 is achieved when the following conditions are met.

- Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors.
- 2) Appropriately mount each unit and valve manifold.
- 3) Be sure to mount a seal cap on any unused connectors. If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapour.

When connected to the EX600-D□□E or EX600-D□□F, manifold enclosure is IP40.

Also, the handheld terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Adjustment / Operation

Marning

<Handheld Terminal>

1. Do not apply pressure to the LCD.

There is a possibility of the crack of LCD and injuring.

The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.

This may cause injuries or equipment damage.

Incorrect setting of parameters can cause a malfunction. Be sure to check the settings before use.

This may cause injuries or equipment damage.

⚠ Caution

<Handheld Terminal>

1. Do not press the setting buttons with a sharp pointed object.


This may cause damage or equipment failure.

Do not apply excessive load and impact to the setting buttons.

This may cause damage, equipment failure or malfunction.

When the order does not include the SI unit, a valve plate which connects the manifold and SI unit, is not mounted. Use attached valve holding screws and mount the valve plate.

(Tightening torque: 0.6 to 0.7 N·m)

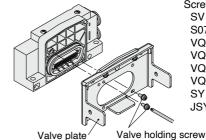

Screw tightened parts SV series: 2 places S0700 series: 2 places VQC1000 series: 2 places VQC2000 series: 3 places VQC4000 series: 4 places VQC5000 series: 4 places SY series: 2 places JSY series: 2 places

■Trademark

DeviceNet[®] is a trademark of ODVA. EtherNet/IP[®] is a trademark of ODVA.

EtherCAT[®] is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. Modbus[®] is a registered trademark of Schneider Electric, licensed to the Modbus Organization, Inc. QuickConnect™ is a trademark of ODVA.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1, and other safety regulations.

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

injury.

Warning indicates a hazard with a medium level of risk★ Warning: which, if not avoided, could result in death or serious

njury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

njury.

ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions
 - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

△ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

∧ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revisio	n History	
Edition B	 The EtherNet/IP® communication protocol has been added. An analog output unit and an input/output unit have been added. A D-sub connector and a spring type terminal block have been added. SY3000/5000 series valves have been added as applicable solenoid valves. Number of pages has been decreased from 64 to 60. 	
Edition C	- The EtherCAT® communication protocol has been added.	PX
Edition D	- The PROFINET communication protocol has been added.	RS
Edition E	 A dual port EtherNet/IP® product has been added. SY7000 series valves have been added as applicable solenoid valves. 	TS
Edition F	 The IO-Link Unit has been added. JSY series valves have been added as connectable valves. The "How to Order" and "Dimensions" pages of the connectable valves have been deleted. An end plate (D side) and M12 (4/5 pins) A-coded power supply connectors have been added. Number of pages has been decreased from 68 to 48. 	YT
Edition G	- An IO-Link unit compatible SI unit has been added (PROFINET)	ZR

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 www.smc.be www.smc.bg Bulgaria +359 (0)2807670 Croatia +385 (0)13707288 www.smc.hr Czech Republic +420 541424611 www.smc.cz Denmark +45 70252900 www.smcdk.com Estonia +372 651 0370 www.smcee.ee Finland +358 207513513 www.smc.fi France +33 (0)164761000 www.smc-france.fr Germany +49 (0)61034020 www.smc.de Greece +30 210 2717265 www.smchellas.gr +36 23513000 Hungary www.smc.hu Ireland +353 (0)14039000 www.smcautomation.ie sales@smcautomation.ie +39 03990691 Italy www.smcitalia.it Latvia +371 67817700 www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com info@smcee.ee smcfi@smc.fi supportclient@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 www.smclt.lt **Netherlands** +31 (0)205318888 www.smc.nl www.smc-norge.no Norway +47 67129020 +48 222119600 Poland www.smc.pl Portugal +351 214724500 www.smc.eu Romania +40 213205111 www.smcromania.ro Russia +7 (812)3036600 www.smc.eu Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 www.smc.eu Sweden +46 (0)86031240 www.smc.nu **Switzerland** +41 (0)523963131 www.smc.ch Turkey +90 212 489 0 440 www.smcturkey.com.tr UK +44 (0)845 121 5122 www.smc.uk

info@smclt.lt info@smc.nl post@smc-norge.no sales@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro sales@smcru.com office@smc.sk office@smc.si post@smc.smces.es smc@smc.nu info@smc.ch info@smcturkey.com.tr sales@smc.uk

South Africa +27 10 900 1233 zasales@smcza.co.za www.smcza.co.za