5 Port Solenoid Valve


New

Plug-in Type

Thanks to the flow increase, valve size can be reduced! Sayes energy and space



SY5000 00 ø4, ø6, ø8 fittings are connectable.

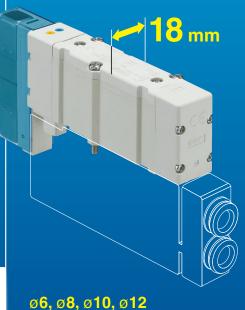

SY7000

Existina Valve size ø50 Possible to drive cylinders

At 300 mm/s

ø**32**

Up to 🛭 💆 (ø80 at 100 mm/s)

Valve size ø63

At 300 mm/s

ø**50**

Possible to drive cylinders Up to \emptyset **63** Page 16 (ø125 at 100 mm/s) Plug-in Sub-plate newly added! SY3000/5000

At 300 mm/s ø63 Ø80

fittings are connectable.

Possible to drive cylinders Up to 🛭 (ø160 at 100 mm/s)

* Values based on comparison with the existing SMC model. For details, refer to page 1.

New The SY7000 newly added Plug-in Sub-plate

- With residual pressure release valve
 With safety slide locking manual override
- D-sub connector [IP67] manifold
 PC wiring (with power supply terminal) manifold

Power consumption * Refer to Features 2.

0.1 w(With power saving circuit) 35 w(Standard)

Rubber seal (Service life: 70 million cycles) Metal seal (Service life; 200 million cycles)


According to SMC life test conditions

Series SY3000/5000/7000




5 Port Solenoid Valve



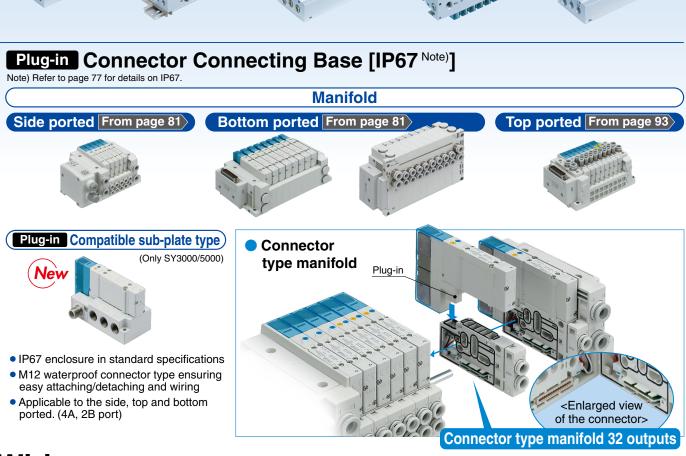

Wiring

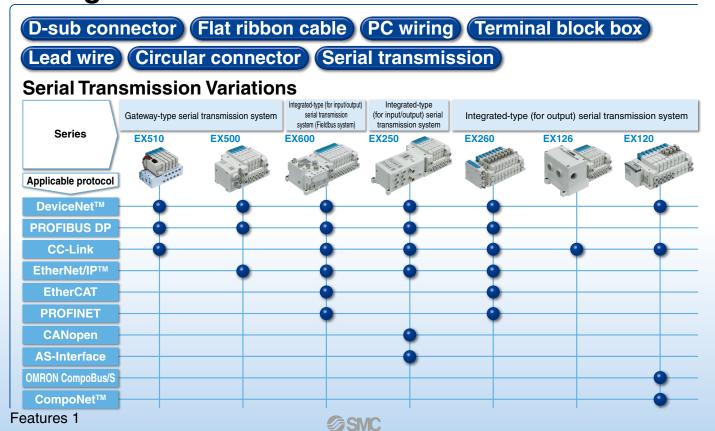


Power saving

With power saving circuit

serial units

Power consumption 0.1 w 0.35 w

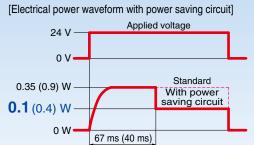


Power consumption is reduced by power saving circuit.

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform as shown on the left.


The value in () are for the quick response and high pressure types.

Space saving/Improved operability

Wiring, piping and operation are integrated on one side. Multiple layer type is available as an option. This saves space in the lateral direction. Wiring Can be operated from the top.

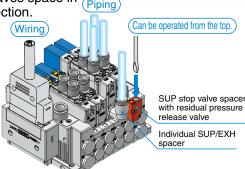


Standard

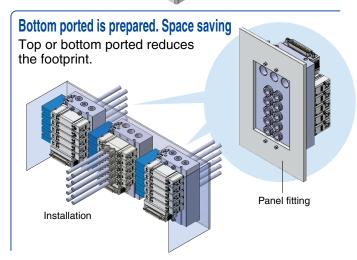

4-position dual 3-port valve available


(Only rubber seal type)

• Two 3-port valves built into one body

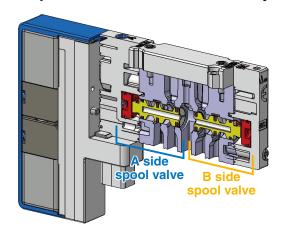

- 3-port valves on the A and B sides can operate independently.
- When used as a 3-port valve, only half the number of stations is required.
- Can also be used as a 4-position, 5-port valve.
- 4-position dual 3-port valve with back pressure check valve is available.
- Combination examples

Series	A side	B side
SY□A ₃ 0	N.C. valve	N.C. valve
SY□B ₃ 0	N.O. valve	N.O. valve
SY□C ₃ 0	N.C. valve	N.O. valve

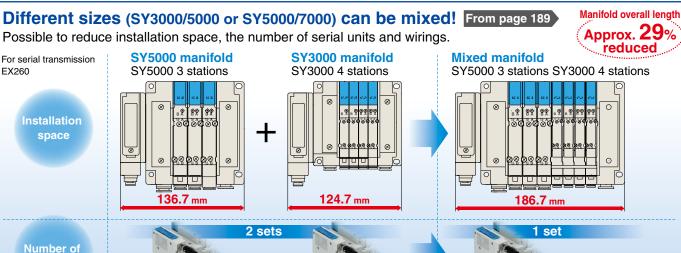


Features 2


5 Port Solenoid Valve

Improved safety

Back pressure check valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.*

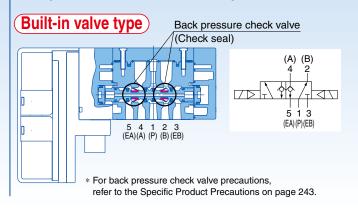

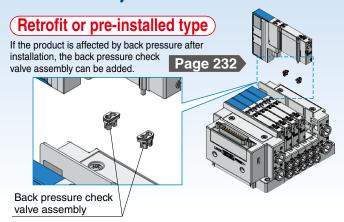


New With residual pressure release valve (Only SY5000)


Page 13

(IP67 compliant)

For residual pressure release of the 3-position closed center valve


- ·The pressure of the 4 (A) and 2 (B) ports is also exhausted automatically at the same when the pressure of the 1 (P) port is exhausted.
- ·The pressure can be visualized using the indicator (red).
- · Since this valve is not a spacer type, the flow rate is equivalent to that of the normal closed center valve.

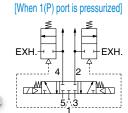


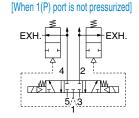


SUP stop valve spacer (With residual pressure release valve) Page 227

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.

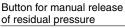


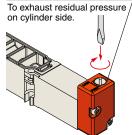

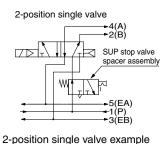


Double check spacer (With residual pressure release valve) Page 227


Long time of intermediate stop and position holding are possible.

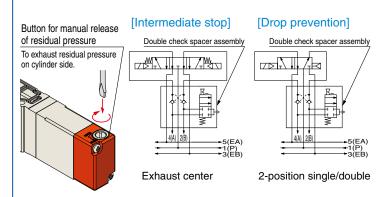

With slide locking manual override

ON/OFF operation and locking can be performed with the manual slide.

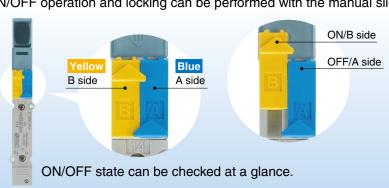

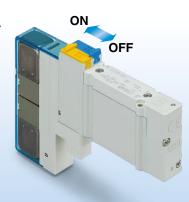

Improved safety


New With safety slide locking manual override SY3000/5000/7000-X13 Page 14

Double action manual override prevents incorrect operation!

Double action operation

Before operation

The slide manual overrides cannot be turned ON with the safety slide cover. (OFF status: Locked)

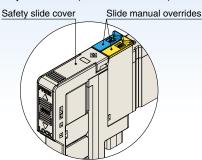


Operation 1

Operates the safety slide cover upward. (Unlocked)




The slide manual overrides can be operated.

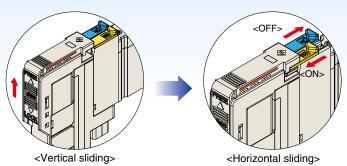


* The safety slide cover cannot be locked when the slide manual override is turned ON.

Visual check

Red lines in three directions can be checked whether the safety slide cover is unlocked (FREE).

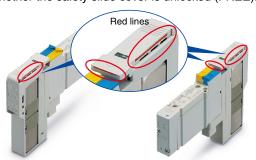


Safety slide covers can be checked from their raised and lowered positions.

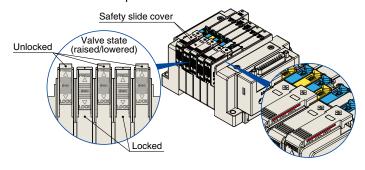


Piping options

To mount the piping on top

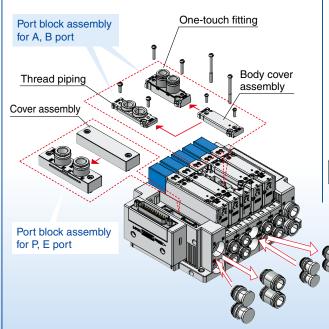

Refer to page 247 for how to change piping types.


To mount the piping on the side

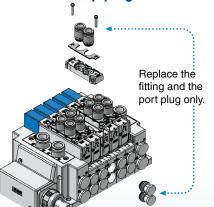

Mixed mounting of top ported and side ported is possible.



It is possible to detect the output of 4(A) and 2(B) port with a pressure switch by mounting the top ported valve onto the side ported or bottom ported manifold. (Pressure switch etc., needs to be ordered separately.)

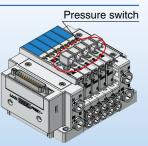

5 Port Solenoid Valve

Variations

										Wir	ing											IV	ani	ifold
								Co		ecti							Com	mon ication						
		Valve Series								S	eria	al tr	ans	mis	ssio	n				spacer	cer	release	release v	
			ţo	ple		pox		ctor	ō								non	non	late		EXH spacer	pressure	oressure	
	Variations	5 ports	D-sub connector	Flat ribbon cable	PC wiring	Terminal block box	Lead wire	Circular connector	M12 connector	EX510	EX500	EX600	EX250	EX260	EX126	EX120	Positive common	Negative common	Blanking plate	Individual SUP	Individual EXF	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	
Plug-in Sub-plate	From page 18	SY3□3□ SY5□3□		_			_		•		_				_	_	•	•	_	_		0	0	
	betrod epicon Type 50 From page 29	SY3□0□ SY5□0□	•		•	_	_	_	_			_	_	_		_	•		0	0	0	0	0	
sase		SY7□0□ SY3□0□	P.29	P.29	P.29					P.57														
Plug-in Metal Base	Type 51 From page 29	SY5□0□ SY7□0□	P.29	P.29	P.29	_	_		_	P.57						_	•	•	0	0	0	0	0	
Plug-i	Type 52 From page 49	SY3□3□ SY5□3□ SY7□3□	P.49	P.49	P.49	_	_			P.67	_					_		•	0	0	0	0		
inecting Base	Display to the page 81 Type page 81	SY3□0□	P.81			P.99	P.109	P.119	_	_	P.129	P.137			P.165			•	0	0	0	0	0	
Plug-in Connector Connecting	Type 11 From page 81	SY5□0□ SY7□0□	P.81	P.81	P.81	P.99	P.109	P.119	_	_	P.129	P.137	P.149	-	P.165		•	•	0	0	0	0	0	
Plug-in Plug-in	Type 12 From page 93	SY3□3□ SY5□3□ SY7□3□	P.93	P.93	P.93	P.105	P.115	P.125	_	_	P.135	P.147	P.155	P.163	P.171	P.179	•	•	0	0	0	0		


Standard ○ Option ▲ Made-to-Order (Refer to page 14.)


Opti	on	s (F	age	es 2	226	to 2	234)					A, B Port Size									Valve Options				ons								
	or	sembly	sembly	disk	disk	installed type)		ction type)									Or	ie-t	ouc	h fi	ttin	gs				ounting	ounting	turbine oil)	cification	es	je J	Sé	
	gulat	ock as	ock as	king	king	ıly (Manifold	fitting	g conne	hite)	late				C2	C3 (N1)		:4 3)		6 17)	C (N		(N		C	12	ed mo	ed mo	signated	re spec	essur	essur	g size	• IP67
	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug (White)	Name plate	M5	1/8	1/4	Straight piping	Straight piping	Straight piping	Elbow piping Note 1)	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67								
													_																				
	0	_		_	_	_				_	_	_			_	_		_	_	_		_				_	_		External Pilot		External Pilot	_	
													_					•		_													
	0	_	_	_	_	_	_	_	0	_	_		•	_	_		_	•	_	•	_		_		_	_	-	▲	External Pilot	Individual SUP	External Pilot		_
													_			<u> </u>				_									- 1100		1 1101		
	0	_	_	_	_	_	_	_	0	_	_						_	•	_	•	_	_	_	_	_	_	_	▲	_	O Individual	_		_
													•			_														SUP			
		_		_	_	_			0		_	<u> </u>								_		_		_						0			
														_	_	_		•		•				•					External Pilot	Individual SUP	External Pilot		
							0											•		_	_	_	_	_			_						Note 2)
	0	0	0	0	0	0		0	0	0	_	_	_	_	_					•	•					P.189			External Pilot	Individual SUP	External Pilot		Note 2)
)	P.193						
	0	0	0	0	0	0	_	0	0	0	_	_	_	_	_		_		_	•	_	_	_	_	_	P.189	_		External Pilot	Individual	External Pilot		Note 2)
																_		•		•						_	P.193		Pilot	SUP	Pilot		
	0	0	0	0		0	_	0	0	_		<u> </u>	_					•	_	<u> </u>	_		_			P.201	-			0			Note 2)
											_	_		_	_	_											P.201		External Pilot	Individual SUP	External Pilot	•	

Note 1) Elbow piping may specify size only in millimeters, depending on the port size. Refer to How to Order Manifold for details. Note 2) Refer to Manifold Specifications on page 77 for details on IP67.

One-touch fittings

Straight piping

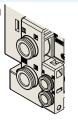

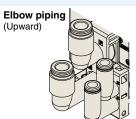


INDEX

Manifold Variations	Features 5	Valve Replacement Parts	Page 11
Optimum Actuation Size Chart	of Air Cylinder Page 1	With Residual Pressure Release Valve ······	Page 13
Valve Specifications(Specifications, Response Time		Made-to-Order for Valve	Page 14
Valve Construction	Page 7		
Sub-plate Plug-in Sub-plate	Page 16	M12 connector	
		ations (M12 Connector)·····	
Plug-in Metal Bas	Se Page 26	Type 50/ Side ported Type 51/ Bottom ported	Type 52/ Top ported
	Type 50/Side Ported	Type 51/Bottom Ported, Type 52/	Top Ported
	Plug-in Metal Base		Page 27
D-sub connector Flat ribbon cable		on Cable, PC Wiring System [IP40]	
Flat Hibboli Cable			Page 29
PC wiring	Type 51/Bottom Ported ····		Page 29
1 5 willing	Type 52/Top Ported ·······		Page 49
	Wiring Specifications		Page 54
EX510	EX510 Gateway-type Serial	Transmission System [IP20]	
	Type 50/Side Ported ······		Page 57
	Type 51/Bottom Ported ····		Page 57

Type 52/Top Ported ------Page 67

Manifold Exploded View [Exploded View, Manifold Parts No.] ----- Page 73



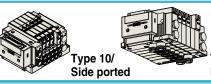





Type 10/Side Ported, Type 11/Bottom Ported, Type 12/Top Ported

D-sub	PC PC	Plug-in Connector Connecting Base	··· Page 77
connector	wiring	D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40/67]	···Page 81
ribbon cabl	e Terminal block box	Terminal Block Box [IP67]	··· Page 99
Lead wire	Circular connector	Lead Wire [IP67]	Page 109
		Circular Connector [IP67]	Page 119
EX500	EX600	EX500 Gateway-type Serial Transmission System [IP67]	Page 129
EX250		EX600 Integrated-type (For Input/Output) Serial Transmission System (Fieldbus System) [IP67] ····	Page 137
	EX260	EX250 Integrated-type (For Input/Output) Serial Transmission System [IP67]	Page 149
EX126		EX260 Integrated type (For Output) Serial Transmission System [IP67]	Page 157
	EX120	EX126 Integrated-type (For Output) Serial Transmission System [IP67]	Page 165
		EX120 Integrated-type (For Output) Serial Transmission System [IP20]	Page 173
		Type 10/Side ported Common Dimensions	
		(External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override)	Page 181
		Type 11/Bottom Ported Common Dimensions	Page 184
		Type 12/Top Ported Common Dimensions	Page 186
Mixed mounting		Plug-in Manifold Mixed Mounting Type	Page 189
		Manifold Exploded View [Exploded View, Manifold Parts No.]	Page 206
		How to Increase Connector Type Manifold	Page 219
One touch Filling	o Divo Assessi	h./Dort No	Done 004
	_	ly/Part No.	_
		Base, Plug-in Connector Connecting Base]	
Specific Product	Precautions		Page 242



Optimum Actuation Size Chart of Air Cylinder

Applicable				Appl	icable cyl	inder		
cylinder speed	Main valve seal type	Series	ø 6	ø 10	ø16	ø 20	ø 25	
		SY3000						
	Rubber seal	SY5000						
100 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
	Rubber seal	SY3000						
		SY5000						
300 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000						
		SY3000						
	Rubber seal	SY5000						
500 mm/s		SY7000						
or less		SY3000						
	Metal seal	SY5000						
		SY7000			 			

[Common conditions]Pressure: 0.5 MPaPiping length: 1 m

• Load ratio: 50%

• Stroke: 200 mm


Connector type manifold (for side and bottom ported type)

* Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.





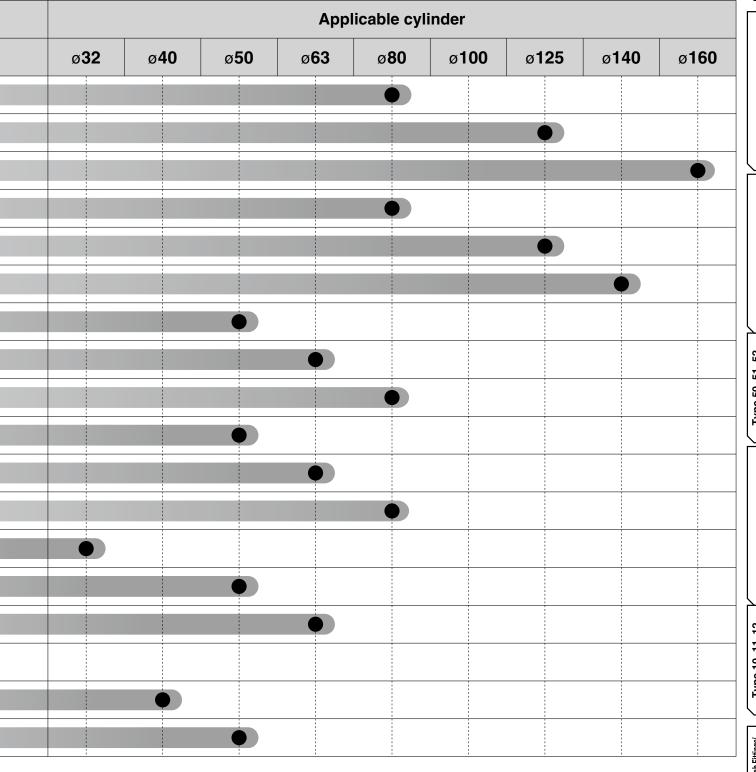

Series SY3000/5000/7000 Valve Specifications

Valve Specifications

V	alve type		Rubber seal	Metal seal			
Fluid			А	ir			
	2-position	single	0.15 to 0.7				
Internal pilot	2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
operating pressure range (MPa)	3-position		0.2 to 0.7				
(iii u)	4-position	dual 3-port valve	0.15 to 0.7	_			
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)			
External pilot	.	2-position single					
operating pressure range	Pilot pressure	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)			
(MPa)	range	3-position					
	9	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_			
Ambient and fluid tempera	ature (°C)		–10 to 50 (N	No freezing)			
	SY3000	2-position single/double	5	20 Note 1)			
	SY5000	4-position dual 3-port valve		,			
Max. operating frequency		3-position	3	10 Note 1)			
(Hz)		2-position single/double	5	10 Note 1)			
	SY7000	4-position dual 3-port valve	3	_			
		3-position	3	10 Note 1)			
				g push type			
Manual override			Push-turn locking slotted type				
			Push-turn lock	• • • • • • • • • • • • • • • • • • • •			
			Slide locking type				
Pilot exhaust type	Internal pi		Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust			
, , , , , , , , , , , , , , , , , , ,	External p	ilot		vidual exhaust			
Lubrication			Not re	quired			
Mounting orientation Note 2)			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.			
Impact/Vibration resistance	e Note 2) (m/s	s²)	150	0/30			
Enclosure			IP67 (Based o	n IEC60529)*			
Coil rated voltage (DC)			24,				
Allowable voltage fluctuat	ion (V)		±10% of rated	•			
	Standard		0.35 (With indi	cator light: 0.4)			
Power consumption (W)		re type, Quick response type	0.9 (With indicate)	ator light: 0.95)			
1 ower consumption (w)	With power	er saving circuit	Standard: 0.1 Note 4) (With indicator light only) [Inrush 0.35, Holding 0.1], High pressure type: 0.4 Note 4) (With indicator light only) [Inrush 0.9, Holding 0.4]				
Surge voltage suppressor			Diode (Varistor for non-polar type)				
Indicator light			LE	ED			

^{*} In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 242).

Note 1) Use below 5 Hz for with the power saving circuit.

Note 3) Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows.

Note 4) For details, refer to page 244.



Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Refer to page 247 for the fixation of DIN rail mounting type manifold.

Response Time

						Response	time (ms)			
				;	Standard		Quick	response ty	ре	
Series	Seal type	Model	Type of actuation	Without light/ surge voltage		nt/surge uppressor	surge voltage voltage s		ht/surge suppressor	
				suppressor	S/Z type	R/U type	suppressor	S/Z type	R/U type	
	Rubber seal	SY31□0	O position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less	
	Metal seal	SY31□1	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less	
	Rubber seal	SY32□0	O position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
SY3000	Metal seal	SY32□1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
	Rubber seal	SY33/4/5□0	O position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less	
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less	
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less	
	Rubber seal	SY51□0	'	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less	
	Metal seal	SY51□1	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less	
	Rubber seal	SY52□0	2 position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
SY5000	Metal seal	SY52□1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
	Rubber seal	SY53/4/5□0	O position	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less	
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less	
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less	
	Rubber seal	SY71□0	O position single	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less	
	Metal seal	SY71□1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less	
	Rubber seal	SY72□0	2-position double	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less	
SY7000	Metal seal	SY72□1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less	
	Rubber seal SY73/4/5 0	2 position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less		
	Metal seal	SY73/4/5□1	3-position	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less	
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less	

Valve Specifications Series SY3000/5000/7000

Valve Weight

Series SY3000

Valve model	Seal type	Тур	oe of actuation	Weight g
		O monition	Single	74
		2-position	Double	83
SY3□00	Rubber seal		Closed center	
31300	Rubber seai	3-position	Exhaust center	87
			Pressure center	
		4-position	Dual 3-port valve	83

Valve model	Seal	Tun	a of actuation	Port size	Weight
valve model	type	Тур	e of actuation	4, 2 (A, B)	g
		0	Single		74
		2-position	Double		83
SY3□30-M5			Closed center	M5 x 0.8	
3 1 3 L 30-1013		3-position	Exhaust center	IVID X U.8	87
			Pressure center		
		4-position	Dual 3-port valve		83
		2-position	Single		82
		2-position	Double	C2	91
SY3□30-C2			Closed center	ø2 One-touch	
3130-02		3-position	Exhaust center		95
			Pressure center	fitting	
		4-position	Dual 3-port valve	- C3	91
		2 position	Single		85
		2-position	Double		94
SY3□30-C3	Rubber		Closed center	ø3.2 One-touch	
313030-03	seal	3-position	Exhaust center	fitting	98
			Pressure center	littirig	
		4-position	Dual 3-port valve		94
		2-position	Single		77
		2-position	Double	C4	86
SY3□30-C4			Closed center	ø4 One-touch	
313030-04		3-position	Exhaust center	fitting	90
			Pressure center	littiig	
		4-position	Dual 3-port valve		86
		2-position	Single		80
		2-position	Double	C6	89
SY3□30-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	93
		1 · -	Pressure center	IIIIIIII	
		4-position	Dual 3-port valve		89

Valve model	Seal type	Тур	Weight g	
		2-position	Single	76
		2-position	Double	86
SY3□01	Metal seal		Closed center	
		3-position	Exhaust center	90
			Pressure center	

Valve model	Seal	Type	of actuation	Port size	Weight
valve model	type	Туре	or actuation	4, 2 (A, B)	g
		2-position	Single		76
		z-position	Double		86
SY3□31-M5			Closed center	M5 x 0.8	
		3-position	Exhaust center		90
			Pressure center		
		2-position	Single		84
		z-position	Double	C2	94
SY3□31-C2			Closed center	ø2 One-touch	
		3-position	Exhaust center	fitting	98
			Pressure center		
	Metal	2-position	Single		87
		2-position	Double	C3	97
SY3□31-C3	seal		Closed center	ø3.2 One-touch	
	Seai	3-position	Exhaust center	fitting	101
			Pressure center		
		2-position	Single		79
		z-position	Double	C4	89
SY3□31-C4			Closed center	ø4 One-touch	
		3-position	Exhaust center	fitting	93
			Pressure center		
		2-position	Single		82
		2-position	Double	C6	92
SY3□31-C6			Closed center	ø6 One-touch	
		I –	Exhaust center	fitting	96
			Pressure center		

Series SY5000

Valve model	Seal type	Type of actuation		Type of actuation Weight of		Weight g
CVE TOO		2-position	Single	82		
			Double	90		
	Rubber seal	3-position	Closed center			
SY5□00			Exhaust center	100		
			Pressure center			
		4-position	Dual 3-port valve	90		

	Seal	Type of actuation		Port size	Weight
Valve model	type			4, 2 (A, B)	g
		2-position	Single		102
		2-005111011	Double		110
SY5□30-01			Closed center	1/8	
3130-01		3-position	Exhaust center	1/6	120
			Pressure center		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		2-005111011	Double	C4	123
SY5□30-C4			Closed center	ø4 One-touch	
313030-04		3-position	Exhaust center		133
			Pressure center	Illing	
	Rubber	4-position	Dual 3-port valve		123
	seal	2-position	Single		110
		2-005111011	Double	C6	118
SY5□30-C6			Closed center	ø6 One-touch	
313030-00		3-position	Exhaust center	fitting	128
			Pressure center	Illing	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		2-position	Double	C8	107
SY5□30-C8			Closed center	ø8 One-touch	
313030-00		3-position	Exhaust center		117
			Pressure center	fitting	
		4-position	Dual 3-port valve		107

Valve model	Seal type	Type of actuation		Weight g
SY5□01		Onssition	Single	91
	Metal seal	2-position	Double	101
		3-position	Closed center	
			Exhaust center	111
			Pressure center	

Valve model	Seal	Type	of actuation	Port size	Weight
valve model	type	Туре	or actuation	4, 2 (A, B)	g
		2-position	Single		111
		2-position	Double		121
SY5□31-01	3-p		Closed center	1/8	
		3-position	Exhaust center		131
			Pressure center		
		2-position	Single		124
	2-positio	z-position	Double	C4	134
SY5□31-C4		3-position	Closed center	ø4 One-touch	
			Exhaust center	fitting	144
	Metal		Pressure center		
	seal	seal 2-position	Single		120
			Double	C6 ø6 One-touch	130
SY5□31-C6			Closed center		
		3-position	Exhaust center	fitting	140
			Pressure center		
		2-position	Single		108
		2-position	Double	C8	118
SY5□31-C8			Closed center	ø8 One-touch	
		3-position	Exhaust center	fitting	128
			Pressure center		



Valve Weight

Series SY7000

Valve model	Seal type	Type of actuation		Weight g
SY7□00		0 :4:	Single	110
		2-position	Double	118
	Rubber seal	3-position	Closed center	
317 🗆 00			Exhaust center	133
			Pressure center	
		4-position	Dual 3-port valve	114

Valve model	Seal	Tun	o of actuation	Port size	Weight
valve model	type	Type of actuation		4, 2 (A, B)	g
		0	Single		125
		2-position	Double	1	133
SY7□30-02			Closed center	1/4	
317 - 30-02		3-position	Exhaust center	1/4	147
			Pressure center		
		4-position	Dual 3-port valve		129
		2-position	Single		163
		2-005111011	Double	C6	171
SY7□30-C6			Closed center	ø6 One-touch	
317 - 30-00		3-position	Exhaust center	fitting	186
			Pressure center	litting	
		4-position	Dual 3-port valve] [167
		2-position	Single	C8	151
		2-position	Double		159
SY7□30-C8	Rubber		Closed center	ø8 One-touch	
317 - 30-00	seal		Exhaust center	fitting	174
			Pressure center	littiig	
		4-position	Dual 3-port valve		155
		2-position	Single		136
		2 position	Double	C10	144
SY7□30-C10			Closed center	ø10 One-touch	
317-30-010		3-position	Exhaust center	fitting	159
			Pressure center	l mung	
		4-position	Dual 3-port valve		140
		2-position	Single		146
		2 Position	Double	C12	154
SY7□30-C12			Closed center	ø12 One-touch	
017 - 00-012		3-position	Exhaust center	fitting	169
			Pressure center	litting	
		4-position	Dual 3-port valve		150

	Valve model	Seal type	Type of actuation		Weight g
			2-position	Single	122
			2-position	Double	133
	SY7□01	Metal seal	3-position	Closed center	
				Exhaust center	150
				Pressure center	


Valve Specifications Series SY3000/5000/7000


	Seal			Port size	Weight
Valve model	type	Type of actuation		4, 2 (A, B)	g
	1,700		Single	7, 2 (A, D)	136
		2-position	Double		148
SY7□31-02	31-02		Closed center	1/4	
0.750.02		3-position	Exhaust center	1	164
			Pressure center	1	
			Single		174
		2-position	Double	. C6	186
SY7□31-C6			Closed center	ø6 One-touch	
		3-position	Exhaust center	fitting	202
			Pressure center	1	
		0	Single		162
	Metal	2-position	Double	C8	174
SY7□31-C8	seal		Closed center	ø8 One-touch	
	Seai	3-position	Exhaust center	fitting	190
			Pressure center	1	
		Onssition	Single		148
		2-position	Double	C10	159
SY7□31-C10			Closed center	ø10 One-touch	
		3-position	Exhaust center	fitting	176
			Pressure center		
		2-position	Single		157
		2-position	Double	C12	169
SY7□31-C12			Closed center	ø12 One-touch	
		3-position	Exhaust center	fitting	185
			Pressure center		


Valve Construction

Rubber Seal


2-position single

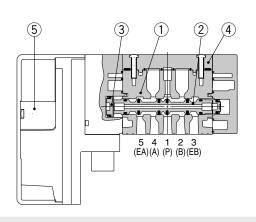


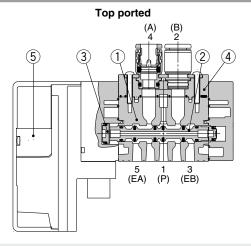

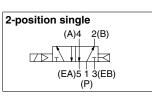



2-position double

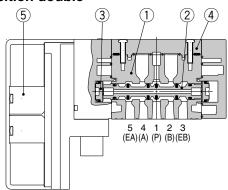


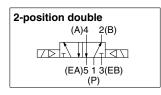


3-position closed center/exhaust center/pressure center

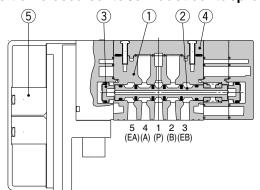

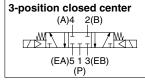

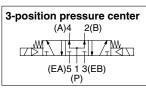

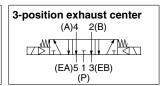


Component Parts


00111	omponent i are					
No.	Description	Material	Note			
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted				
2	Spool valve	Special resin/HNBR (3-position valve: (Aluminum/HNBR)				
3	Piston	Resin				
	Body cover assembly	Resin	For side/bottom ported			
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminum die-casted	For top ported			
5	Pilot valve assembly	_	Refer to page 12.			



Rubber Seal


4-position dual 3-port valve

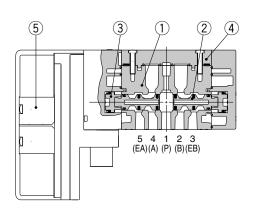


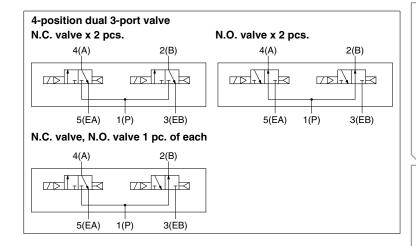

Valve Construction Series SY3000/5000/7000


2-position double with back pressure check valve (Built-in valve type)

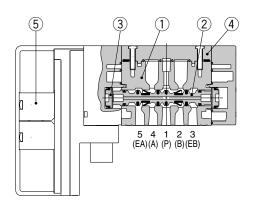


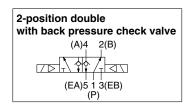

 \ast The built-in valve type back pressure check valve is not available for the SY7000.

4-position dual 3-port valve with back pressure check valve (Built-in valve type)

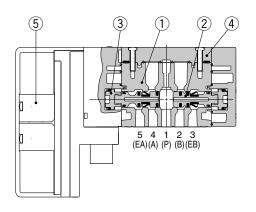


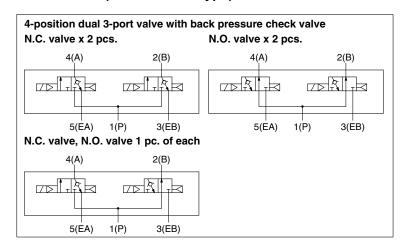



 \ast The built-in valve type back pressure check valve is not available for the SY7000.

Metal Seal


2-position single

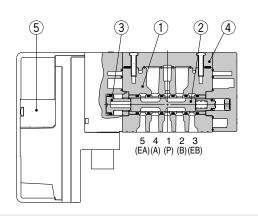


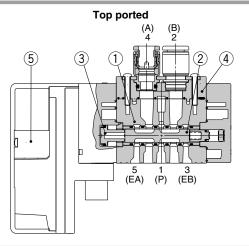

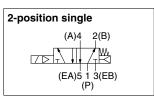



2-position double

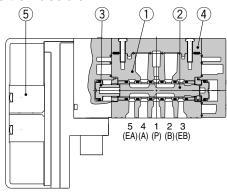


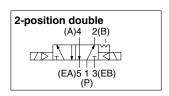


3-position closed center/exhaust center/pressure center

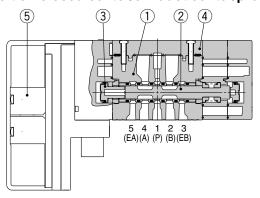

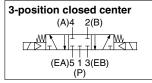

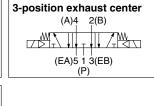

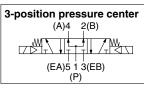


Component Parts

No.	Description	Material	Note				
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminum die-casted					
2	Spool, Sleeve	Stainless steel/HNBR					
3	Piston	Resin					
	Body cover assembly	Resin	For side/bottom ported				
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminum die-casted	For top ported				
5	Pilot valve assembly	_	Refer to page 12.				



Series SY3000/5000/7000 Valve Replacement Parts

How to Order Port Block Assembly

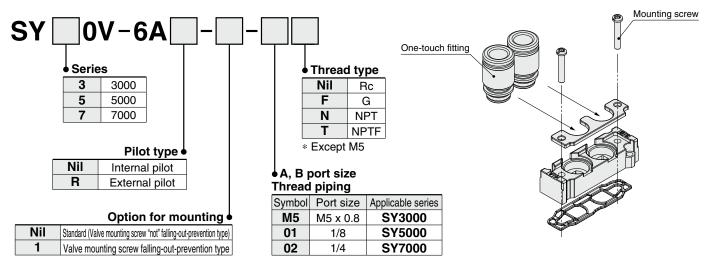

Metric size (One-touch fitting)

MICHIO	wiethe size (One-touch hitting)						
Cumbal	David aire	Applicable series					
Symbol	Port size	SY3000	SY5000	SY7000			
C2	ø2	•	_	_			
C3	ø3.2	•	_				
C4	ø4	•	•	_			
C6	ø6	•	•	•			
C8	ø8	_	•	•			
C10	ø10	_	_	•			
C12	ø12	_	_	•			

Inch size (One-touch fitting)

	3,					
Cumbal	Dowt size	Ар	plicable ser	ies		
Symbol	Port size	SY3000	SY5000	SY7000		
N1	ø1/8"	•		_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"	_	_	•		

Possible to replace only the One-touch fitting.

Port size		SY3000	SY5000	SY7000	
	ø2	VVQ1000-50A-C2	ı	_	
	ø3.2	VVQ1000-50A-C3	ı	_	
	ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	_	
Metric size	ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6	
	ø8	_	VVQ1000-51A-C8	VVQ2000-51A-C8	
	ø10	_	l	VVQ2000-51A-C10	
	ø12	_	1	KQ2H12-17-X899	
	ø1/8"	VVQ1000-50A-N1	1	_	
Inch size	ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_	
	ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7	
	ø5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9	
	ø3/8"	_		VVQ2000-51A-N11	


Refer to pages 247 and 248 for how to replace the port block assembly, One-touch fitting and body cover assembly.



Valve Replacement Parts Series SY3000/5000/7000

Body Cover Assembly


* Used when the top ported is changed to the side or bottom ported.

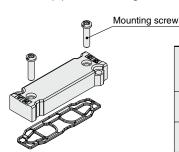

Series		Part no.		
		Standard (Valve mounting screw "not" falling-out-prevention type)	Valve mounting screw falling-out-prevention type	
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1	
313000	External pilot	SY30V-16AR	SY30V-16AR-1	
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1	
	External pilot	SY50V-16AR	SY50V-16AR-1	
SY7000	Internal pilot	SY70V-16A	SY70V-16A-1	
	External pilot	SY70V-16AR	SY70V-16AR-1	

^{*} The part number is not indicated on the product.

How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

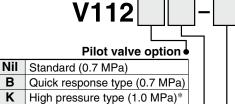

* Only metal seal type is available for the high pressure type. (1.0 MPa)

	Coil type
Nil	Standard
T	With power saving circuit

Rated voltage

ilatea voitage v		
5	24 VDC	
6	12 VDC	


⚠ Caution

В

Κ

- 1. The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- 2. When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.

How to replace pilot valves

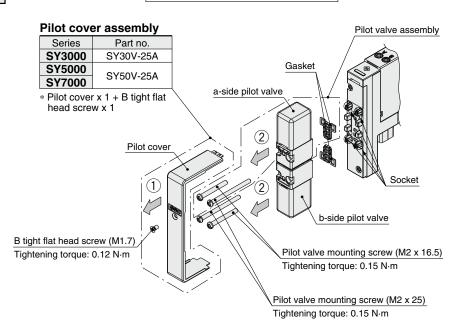


- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow 1.
- Remove the pilot valve mounting screws.
- Remove the pilot valve in the direction indicated by the arrow 2.
- * Assemble by following the removal procedure in reverse.
- Note 1) Ensure the gasket is mounted, and take care not to bend the socket. Note 2) Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.



Series SY5000 With Residual Pressure Release Valve

Mountable manifold SS5Y5-50/51 type manifold SS5Y5-(M)10/11 type manifold Sub-plate single unit

How to Order (With mounting screw)

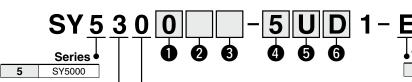

(Top ported is not available.)

Type of actuation

3 3-position closed center*

* Only closed center type is available.

With residual pressure release valve E With residual pressure release valve*

Mounting screw types, hexagon socket head cap screw B and screw falling-outprevention type K, H are not available.

Protective class class II (Mark: (iii))

Λ		_
w	Seal	type

<u> </u>	ai typo
0	Rubber seal
1	Metal seal

Pilot valve option

Nil Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

3 Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Rated voltage

Base mounted

<u> </u>	iou voitugo
5	24 VDC
6	12 VDC


* The applicable rated voltage varies depending on the manifold wiring type. Refer to the "How to Order Manifold" pages.

Light/surge voltage suppressor and common specification

Symbol With light		Surge voltage suppressor	Common specification	
Nil —		_		
R	R —		Non-polar	
U	•			
S	_	•	Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

* Only "Z" and "NZ" types are available for with the power saving circuit.

6 Manual override

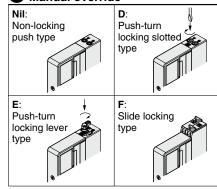

* Refer to page 14 for with the safety slide locking manual override.

Valve Specifications


Valve construction	Rubber seal Metal seal		
valve construction	3-position closed center valve with residual pressure release valve Note 1)		
Fluid	Air		
Operating pressure range MPa Note 2)	0.3 to 0.7	0.3 to 0.7 (High pressure: 0.3 to 1)	
Weight g	117	128	


Note 1) Rubber seal is used for the residual pressure release valve.

Note 2) Internal pilot type only

Note 3) Other specifications are common to the valve specifications on page 3.


Symbol

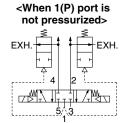

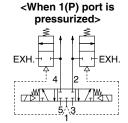

A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3 position closed center valve is exhausted.

Dimensions

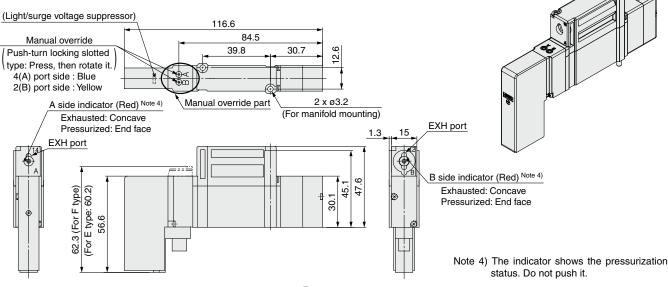

Series SY3000/5000/7000 Made to Order

Please contact SMC for detailed dimensions, specifications and lead times.



1 Main Valve Fluororubber Specification

Symbol -X90

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valves series SY3 \square_3^0 0, SY5 \square_3^0 0, SY7 \square_3^0 0 (Only rubber seal type)


Entry is the same as standard products.

Specifications and performance are the same as standard products.

2 With Safety Slide Locking Manual Override

Symbol -X13

A safety lock is added to the slide locking manual override. (Refer to Features 4.)

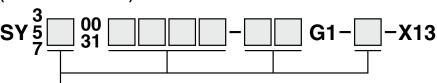

Entry is the same as standard products.


Specifications and performance are the same as standard products.

3 Metal Seal Valve, Main/Pilot Valve Common Exhaust

Symbol

-X16

This is the type where the exhaust method of the pilot valve is integrated into the exhaust port of the main valve.

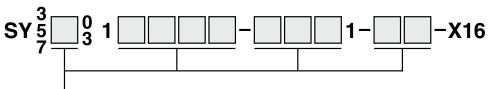

Entry is the same as standard products.

* Note that the response time of the valve becomes slower than standard products.

Please contact SMC for details.

Plug-in Sub-plate Type [IP67 Compliant]



Series **SY3000/5000**

Plug-in Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported, Top ported)

Plug-in Sub-plate Specifications

Manifold type	Plug-in sub-plate				
maimeta type	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side p	orted	
Dining a diagraph of	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom ported		
Piping direction		1(P), 5(EA)/3(EB) port	Side ported		
	Top ported	4(A)/2(B) port	Top p	orted	
SUP/EXH port type		SUP/EXH individual port [5(EA), 3(EB) indiv	/idual]		
Applicable connector		M12 waterproof connector			
Internal wiring		Positive common, Negative common			
	Cido portod	1/D) 5/EA)/2/ED) port 4/A)/2/D) port	SY3000	1/8	
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4	
	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY3000	1/8	
Port size			SY5000	1/4	
		1(P), 5(EA)/3(EB) port	SY3000	1/8	
	Top ported		SY5000	1/4	
		4(A)/2(B) port	Compliant with the valve. Note 1)		
Enclosure (Based on IEC60529)		IP67			
		Side ported	99		
	SY3000	Bottom ported	109		
Weight: W [q] Note 2)		Top ported	104		
vveigitt. vv [g] · · · · · -/		Side ported	150		
	SY5000	Bottom ported	17	2	
		Top ported	159		

Note 1) Refer to page 3 for valve specifications.

Plug-in Sub-plate Flow-rate Characteristics

Rubber Seal

Series	Sub-plate	Fitting port size		1 → 4/2		4/2 → 5/3	
Series	piping location	(P,E)	(A,B)	С	b	C	b
	Side ported	01	01	1.8	0.27	1.7	0.26
SY3000	Bottom ported	01	01	1.7	0.23	1.4	0.27
	Top ported	01	C6	1.3	0.34	1.5	0.27
	Side ported	02	02	4.2	0.21	4.0	0.26
SY5000	Bottom ported	02	02	4.0	0.19	4.0	0.23
	Top ported	02	C8	2.9	0.29	4.1	0.33

 $[\]ast$ Calculation of effective area S and sonic conductance C: S = 5.0 x C Note) The value is for individually operated 2-position type.

Metal Seal


Series	Sub-plate	Fitting port size		1 → 4/2		4/2 → 5/3	
Series	piping location	(P,E)	(A,B)	С	b	С	b
	Side ported	01	01	1.4	0.14	1.3	0.26
SY3000	Bottom ported	01	01	1.3	0.13	1.3	0.22
	Top ported	01	C6	1.2	0.22	1.4	0.29
	Side ported	02	02	3.2	0.13	3.5	0.16
SY5000	Bottom ported	02	02	3.0	0.12	3.2	0.17
	Top ported	02	C8	2.6	0.23	3.2	0.19

Note 2) The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 5.

Manifold Options

How to Order

In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

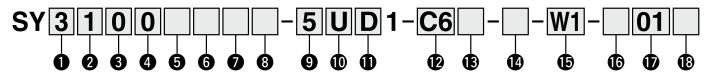

Series

O OCTION				
3	SY3000			
5	SY5000			

2 Type of actuation

1	2-position	Single	
2		Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
A *	4 '''	N.C./N.C.	
B*	4-position dual 3-port	N.O./N.O.	
C*	C* dual 3-poin	N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

Valve piping type

O tarre piping type			
0	Base mounted (Port location: Side, Bottom)		
3	3 Top ported (4A, 2B port location: Top		

4 Seal type

O courtype			
0	Rubber seal		
1	Metal seal		

6 Pilot type

	<i>7</i> 1	
Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

Nil	None	
Н	Built-in	

- * Only rubber seal type
- * The built-in valve type back pressure check valve is not available for the 3-position type.

Pilot valve option

T not valve option		
	Nil	Standard (0.7 MPa)
	В	Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

(A) Coil type

O oon type				
	Nil	Standard		
	T	With power saving circuit (Continuous duty type)		

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page . 244 for details.

Rated voltage


E 041//D0	
5 24 VDC	
6 12 VDC	

Light/surge voltage suppressor and common specification

Symbol	With light	suppressor	specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

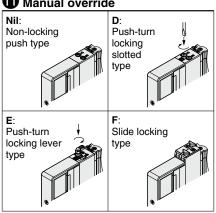

* Refer to page 14 for with the safety slide locking manual override.

A, B port size (*Top ported valve only)

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

Metric size (One-touch fitting)

A, B port	SY3000	SY5000
ø2	•	_
ø3.2	•	
ø4	•	•
ø6	•	•
ø8	_	•
	ø2 ø3.2 ø4 ø6	ø2

Inch size (One-touch fitting)

	(<u> </u>	
Symbol	A, B port	SY3000	SY5000
N1	ø1/8"	•	_
N3	ø5/32"	•	•
N7	ø1/4"	•	•
N9	ø5/16"	_	•

(Top ported valve only)

Nil	Rc	
F	G	
N	NPT	
T	NPTF	

* Only Nil is available for M5.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 19 for part numbers of the base gasket and mounting screw.

* When using an optional spacer assembly, "B" and "H" cannot be selected.

Wiring specifications

WO	Without M12 connector cable	
W1	With M12 connector cable (300 mm)	
W2	With M12 connector cable (500 mm)	
W3	With M12 connector cable (1000 mm)	
W4	With M12 connector cable (2000 mm)	
W7	With M12 connector cable (5000 mm)	

 When ordering a product with M12 connector cable, the connector cable is included.

13 Port location (Sub-plate)

Port location (Sub-plate)	
Nil	Side ported
В	Bottom ported
٧	Top ported (1P. 5EA, 3EB port; Side ported)

Port size

_		
Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000

B Sub-plate thread type

	- 10.0.00
Nil	Rc
F	G
N	NPT
Т	NPTF
F N T	G NPT


Note) When mounting a special order (including Made-to-Order specification) valve on the sub-plate, add the valve part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 19.

Series **SY3000/5000**

How to Order

In the case of Sub-plate (Sub-plate single unit part no.)

* Without valve

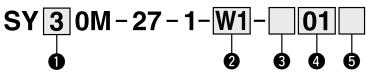

Series

<u> </u>	
3	SY3000
5	SY5000

Wiring specifications

WO	Without M12 connector cable	
W1 With M12 connector cable (300		
W2 With M12 connector cable (500 mm		
W3	With M12 connector cable (1000 mm)	
W4	With M12 connector cable (2000 mm)	
W7	With M12 connector cable (5000 mm)	

Note 1) Refer to the table below for connector cable part numbers.

Note 2) When ordering a product with M12 connector cable, the connector cable is included.

Port location (Sub-plate)

o i ort location (oub plate)		
Nil	Side ported	
В	Bottom ported	
V	Top ported [1(P), 5(EA), 3(EB) port: Side ported]	

4 Port size

Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000

How to Order when mounting a special order (including Made-to-Order specification) valve on the sub-plate (Ordering example: X90)

SY30M-27-1-W1-01·····1 set (Sub-plate single unit part no.)

*SY3200-5U1-X90......1 set (2-position double part no./Main valve fluororubber specification)

5 Sub-plate thread type

Rc


NPT

NPTF

Nil

N

Sub-plate Parts No.

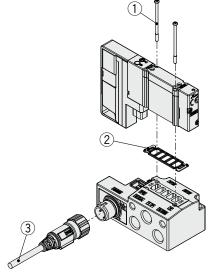

NI.	lo. Description		Par	Mata		
INO.			SY3000 SY5000		- Note	
	Valve mounting screw Hexagon socket head cap screw		SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	Part numbers shown on the left are for 10 valves (20 pcs.).	
(1)			SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)		
2	② Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).	
	3 M12 waterproof connector cable		ZS-37-L		Cable length: 300 mm	
			ZS-3	Cable length: 500 mm		
3			ZS-3	Cable length: 1000 mm		
			ZS-3	37-P	Cable length: 2000 mm	
			ZS-3	37-C	Cable length: 5000 mm	

⚠ Caution


Tightening torque


M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000)

19

Dimensions: Series SY3000



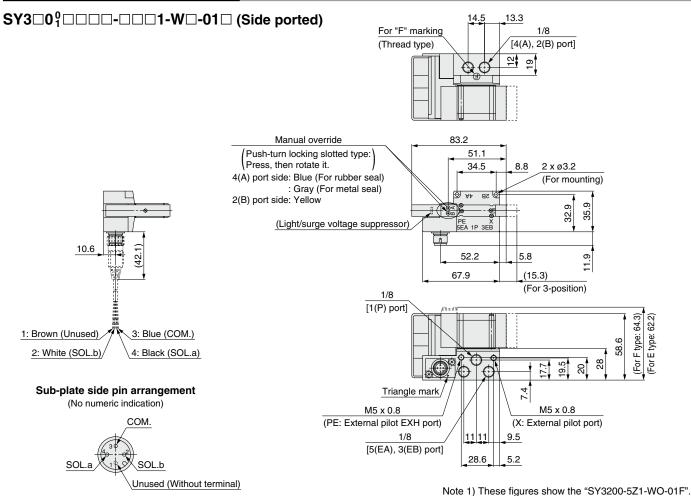

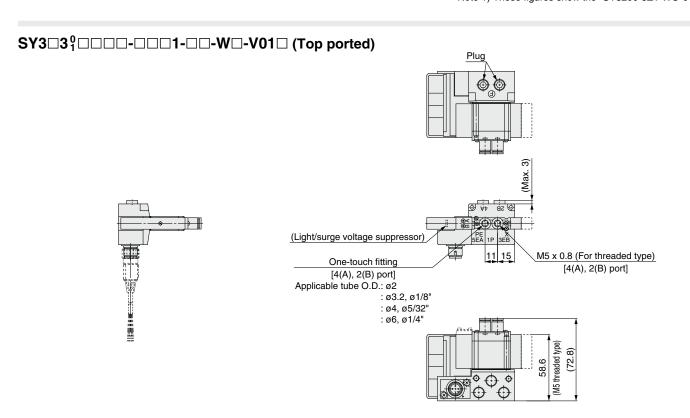


Series **SY3000/5000**

Dimensions: Series SY3000

Plug-in Sub-plate Bottom Ported




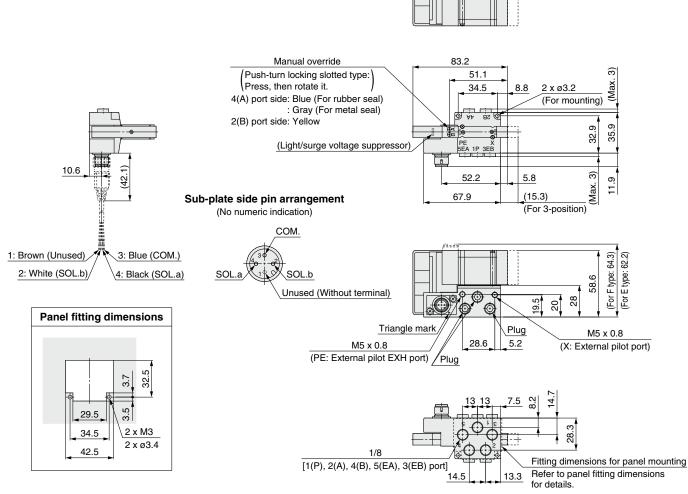


Note) These figures show the "SY3200-5Z1-WO-B01F".

Dimensions: Series SY5000

Plug-in **Side** Ported Sub-plate **Top Ported**

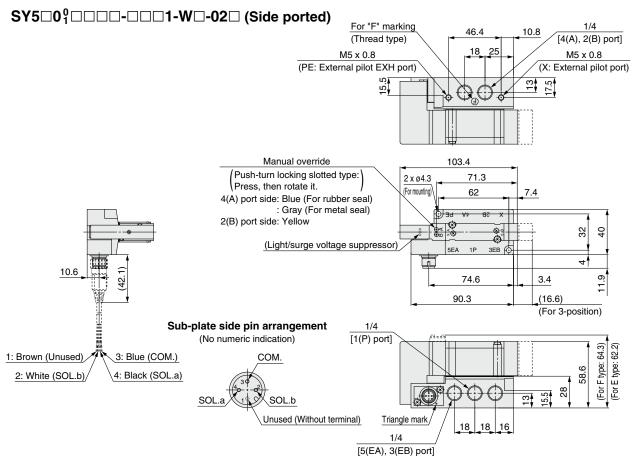

Note 1) These figures show the "SY5200-5Z1-WO-02F".

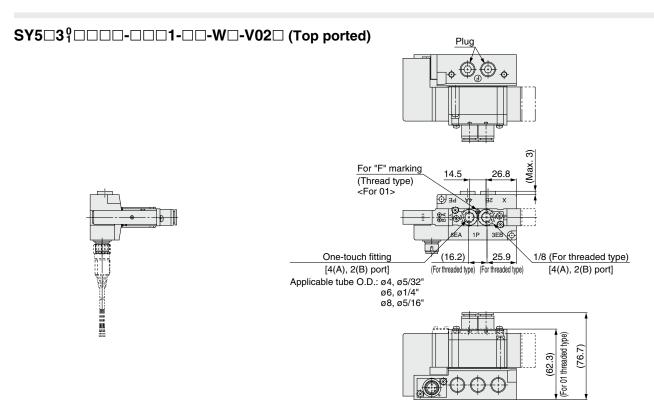


Note 2) These figures show the "SY5230-5Z1-C8-WO-V02F". Note 3) 1 (P), 5 (EA), 3 (EB), X and PE ports are side ported.



Series **SY3000/5000**


Dimensions: Series SY5000



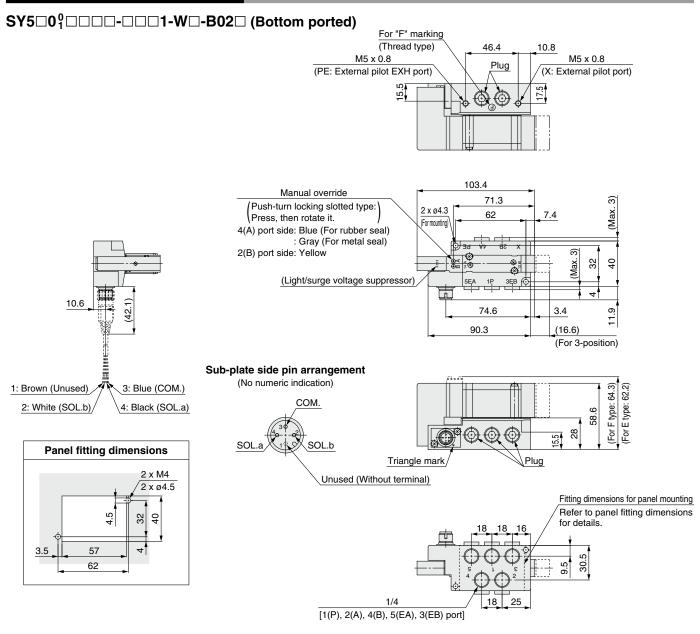

Note) These figures show the "SY5200-5Z1-WO-B02F".

Plug-in Metal Base

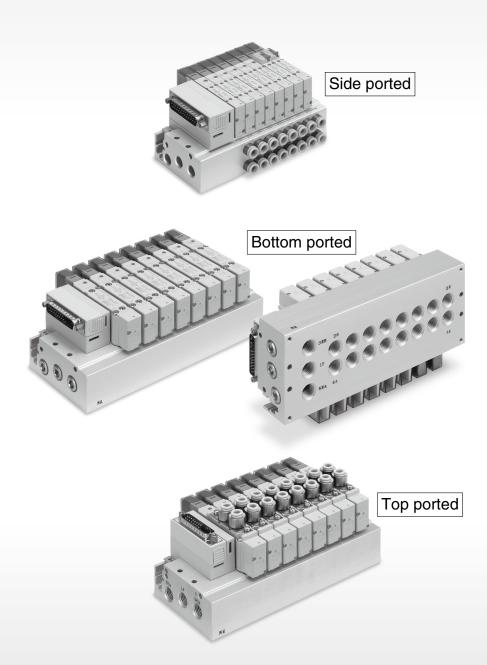

Series SY3000/5000/7000 Type 50, 51, 52 Plug-in Metal Base

Manifold Specifications

			D-sub connector		Flat ribbon cable		Serial wiring		
	Model		F type	P type PG type PH type			S5 type (EX510)		
Manifold typ	e		Plug-in metal base						
SUP/EXH port type					Common SUP/EXH				
Valve station	All double wiring	3	2 to 12 stations		2 to 9 stations (J type: 2 to 8 stations)	2 to 4 stations	2 to 8 stations		
	All single wiring				2 to 12 stations	2 to 8 stations	2 to 12 stations		
Applicable connector			D-sub connector		t ribbon cable connector with strain relief nforming to MIL-C-83503		_		
		JIS-X-5101	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type				
Internal wirir	Internal wiring			Positive common, Negative common					
		SY3000	1/8						
	1(P), 3/5(E) port	SY5000	1/4						
		SY7000	3/8						
Port size	SY3000 Port size 4(A), 2(B) port SY5000		M5 x 0.8, 1/8 ø2 One-touch fitting, ø3.2 One-touch fitting, ø4 One-touch fitting, ø6 One-touch fitting ø1/8" One-touch fitting, ø5/32" One-touch fitting, ø1/4" One-touch fitting						
T OIT SIZE			1/8, 1/4 ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting ø5/32" One-touch fitting, ø1/4" One-touch fitting, ø5/16" One-touch fitting						
		SY7000	1/4 ø6 One-touch fitting, ø8 One-touch fitting, ø10 One-touch fitting, ø12 One-touch fitting ø1/4" One-touch fitting, ø5/16" One-touch fitting, ø3/8" One-touch fitting						
Enclosure (B	Based on IEC60529)	1		IP	40		IP20		

Type 50, 51, 52 Plug-in Metal Base Series SY3000/5000/7000

Manifold Flow-rate Characteristics Note 1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Valve flow-rate characteristics				Weight: W [g] Note 2)	
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)		4/2→5/3 (A/B→E)		(n: stations)	
	(P, EA, EB)	(A, B)	C [dm³/(s·bar)]	b	C [dm ³ /(s·bar)]	b	Fixed: C□	Replaceable: KC□
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	1.1	0.15	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	1.2	0.14	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	1.2	0.20	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	2.6	0.14	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	2.8	0.20	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	3.1	0.13	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	4.0	0.20	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	4.8	0.20	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	4.9	0.24	164n	+ 510

Valve Seal Type: Metal Seal

	Port size		Valve flow-rate characteristics				Weight: W [g] Note 2)	
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)		4/2→5/3 (A/B→E)		(n: stations)	
	(P, EA, EB)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	Fixed: C□	Replaceable: KC□
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	1.0	0.12	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	1.1	0.10	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	1.1	0.14	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	2.3	0.13	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	2.5	0.16	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	2.6	0.12	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	3.5	0.18	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	4.0	0.16	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	3.8	0.18	164n	+ 510

^{*} Calculation of effective area S and sonic conductance C: S = 5.0 x C

Note 1) The value is for manifold base with 5 stations and individually operated 2-position type.

Note 2) Weight: W is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 5 for the appropriate number of stations.


Type 50 Side Ported Type 51 **Bottom Ported**

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

Series SY3000/5000/7000


How to Order Manifold

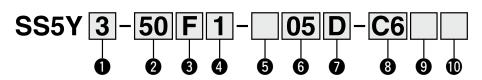

1 Se	ries
3	SY3000
5	SY5000
7	SY7000

2 Туре						
50	Side ported					
51	Bottom ported					
50R	Side ported, External pilot					


* External pilot is not available for the bottom ported type.

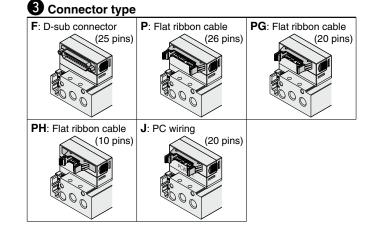

4 Connector entry direction

C COMMISSION CONT.	<i>y</i> a
1: Upward	2: Lateral

How to Order Manifold Assembly

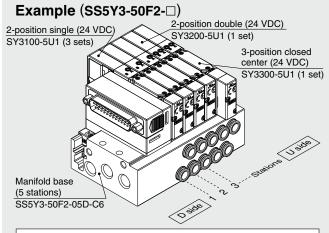

SS5Y3-50F2-05D-C6 ··· 1 set (Type 50 5-station manifold base part no.) *SY3100-5U1----- 3 sets (2-position single part no.) *SY3200-5U1------ 1 set (2-position double part no.) *SY3300-5U1...... 1 set (3-position closed center part no.) The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 50. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

5 Wiring type

NI:I	All alastician Note 1)
INII	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) If a mix of single and double wiring is required, it is supplied as a special order.

Valve stations

Symbol Stations Note Symbol Stations Note Symbol Stations Note								
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	double	:	:	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	single	:	:	single	:	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring

PH:	Flat ribbo	on cable (10 pins)	J : PC	wirin	g (20 pins)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:	:	double
04	4 stations	wiring	08	8 stations	wiring
02	2 stations	All	02	2 stations	All
:	:	single	:	:	single
80	8 stations	wiring	12	12 stations	wiring

* This also includes the number of blanking plate assembly.



7 P, E port entry

U	U side Note 1)	
D	D side Note 1, Note 2)	
В	Both sides	

Note 1) Plugs are mounted on the opposite side of the selected ports.

Note 2) Only D side is available for Type 51 (Bottom ported).

9 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

1 Mounting

Nil	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	0		
:	:	Specify a longer rail than the standard length.		
D12	For 12 stations	The standard length.		

Note 1) Only direct mounting is available for Type 51 (Bottom ported).

Note 2) Refer to page 247 for the fixation of

DIN rail mounting type manifold.

8 A, B port size

Thread piping

Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

One-touch fitting (Metric)

Sy	mbol	A, B port	SY3000	SY5000	SY7000		
	C2	ø2	•	_	_		
	C 3	ø3.2	•	_	_		
eq	C4	ø4	•	•	_		<i>5</i> 0
Fixed	C6	ø6	•	•	_		
	C8	ø8	_	•	•		
	C10	ø10	_	_	•		
	KC2	ø2	•	_	_	Type 50	Type 51
	КС 3	ø3.2	•	_	_	(Side ported)	(Bottom ported)
e e	KC4	ø4	•	•	_	11	
Replaceable	KC6	ø6	•	•	•		
plac	KC8	ø8	_	•	•		
æ	KC10	ø10	_	_	•		
	KC12	ø12	_	_	•		
	M*	Mixed sizes	•	•	•		
P,	E port	t size (Thread piping)	1/8	1/4	3/8		


One-touch fitting (Inch)

Sy	ymbol	A, B port	SY3000	SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
_	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•	_		95
ш.	N9	ø5/16"	_	•	•		
	N11	ø3/8"	_	_	•		,
	KN1	ø1/8"	•	_	_	Type 50	Type 51
<u>e</u>	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
Replaceable	KN7	ø1/4"	•	•	•		
plac	KN9	ø5/16"	_	•	•		
Be	KN11	ø3/8"	_	_	•		
	M*	Mixed sizes	•	•	•		188
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		

* When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

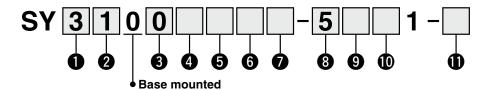

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
A *	4-position	N.C./N.C.		
B*	dual 3-port	N.O./N.O.		
C*		N.C./N.O.		

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

* Only rubber seal type

31

 Back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	эт тапто орион			
Nil	Nil Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K*	High pressure type (1.0 MPa)			

 Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	•	Non-polar
R	_		
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

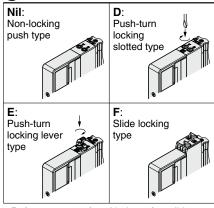

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw


<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 73 for part numbers of the base gasket and mounting screw.

 * "B" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

Dimensions: Series SY3000



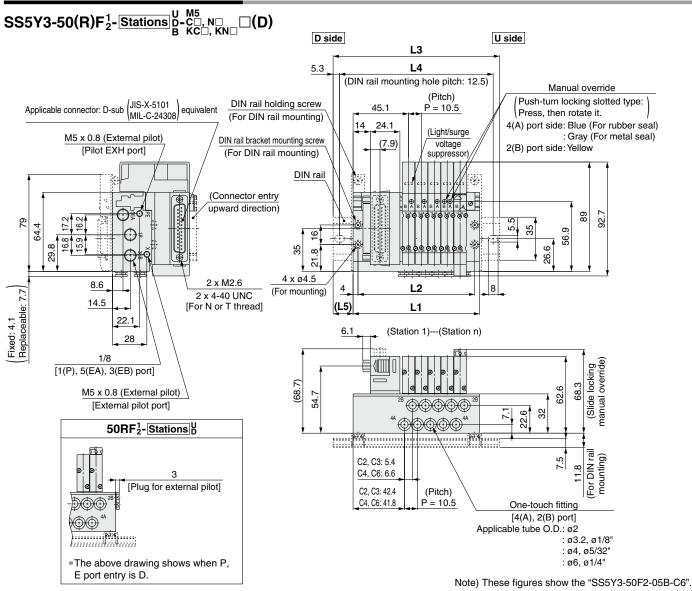

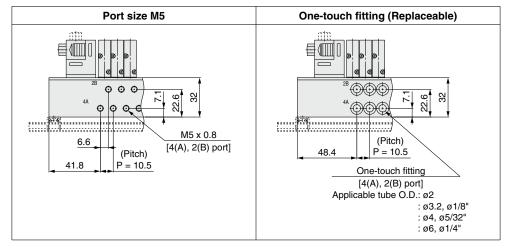

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Dimensions: Series SY3000


Plug-in Type 50/Side Ported

Metal Base D-sub Connector

SS5Y3-50(R) F_2^1 -Stations $\stackrel{\text{U}}{p}$ -01 \square (D)

*The above drawing shows when P,

E port entry is D.

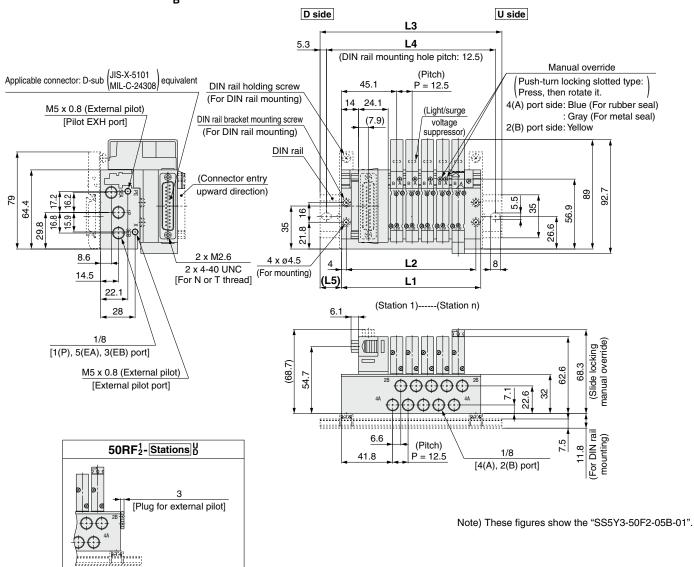



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

Plug-in **Metal Base**

Type 50/Side Ported **D-sub Connector**



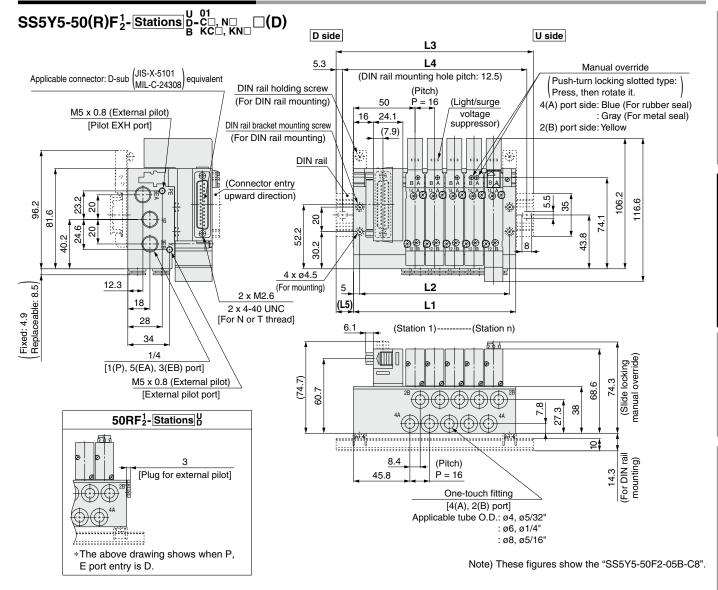

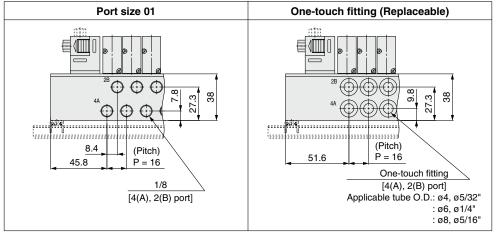


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Plug-in Type 50/Side Ported

Metal Base D-sub Connector

Dimensions: Series SY5000

SS5Y5-50(R) F_2^1 -Stations $\stackrel{\text{U}}{\text{p}}$ -02 \square (D)

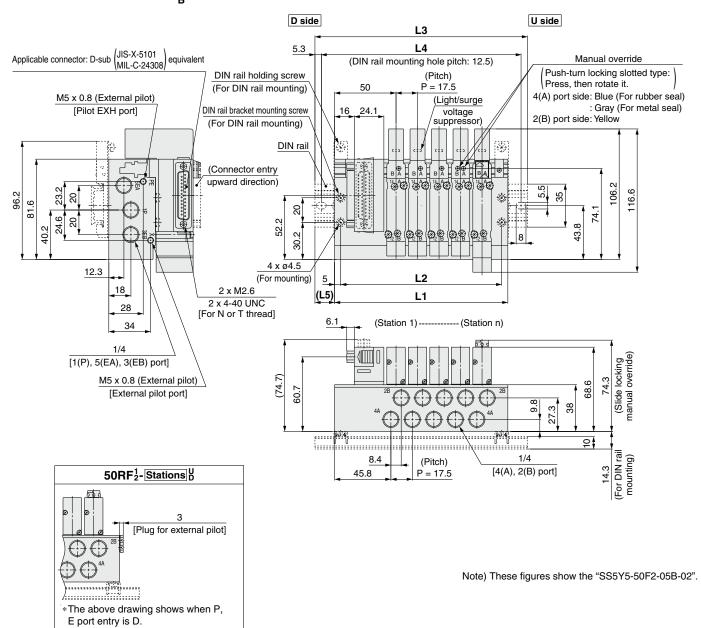


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5




Plug-in Type 50/Side Ported


Metal Base D-sub Connector

Dimensions: Series SY7000

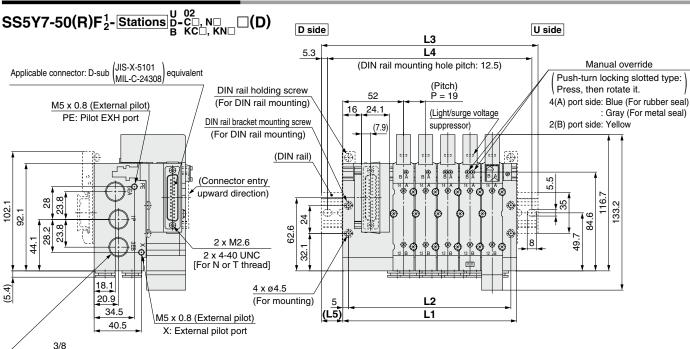


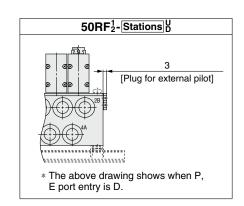

[1(P), 5(EA), 3(EB) port]

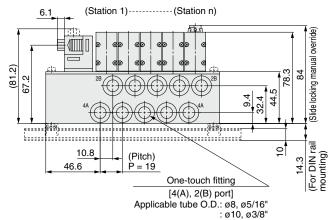

Note) These figures show the "SS5Y7-50F2-05B-C10".

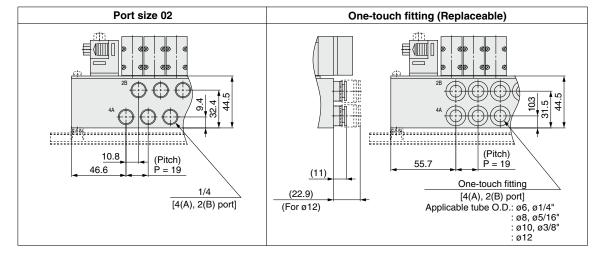



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Plug-in Metal Base Type 50/Side Ported


Flat Ribbon Cable

Dimensions: Series SY 3000

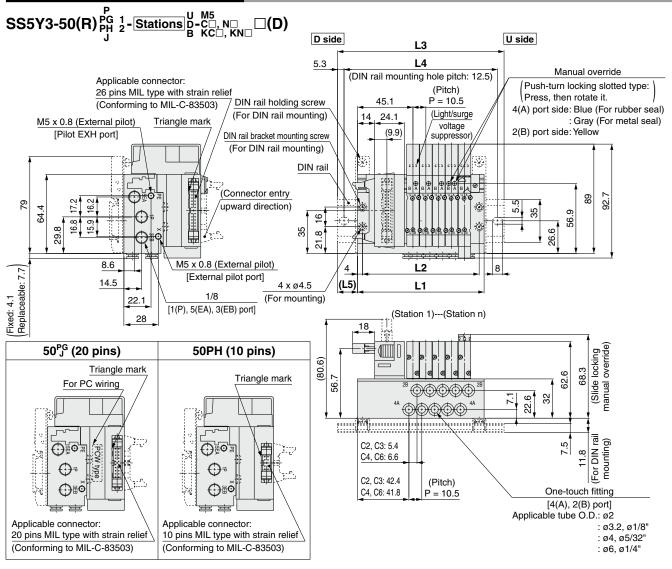

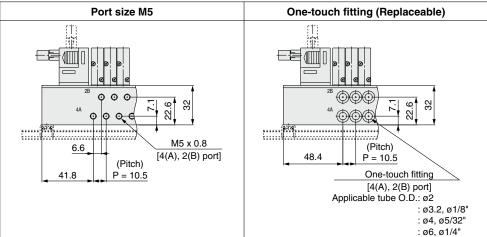

Note 1) These figures show the "SS5Y3-50P2-05B-C6". Note 2) Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.

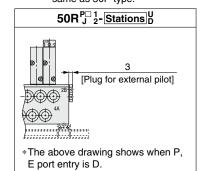


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Plug-in Metal Base

Type 50/Side Ported Flat Ribbon Cable


SS5Y3-50(R) $_{PH}^{PG}$ 1-Stations $_{B}^{U}$ -01 \square (D)

Dimensions: Series SY3000

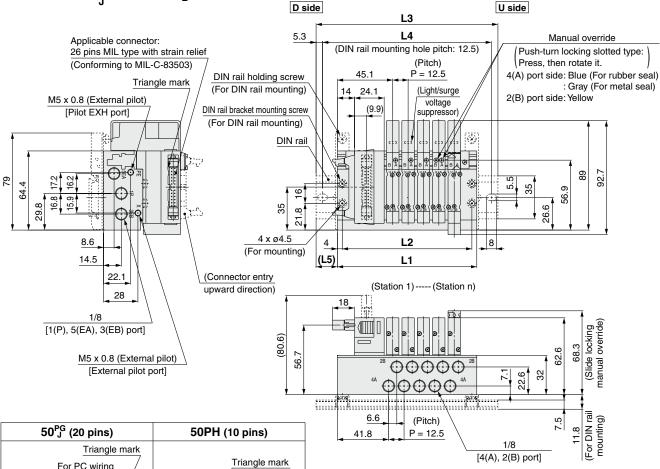

For PC wiring Applicable connector: Applicable connector: 20 pins MIL type with strain relief 10 pins MIL type with strain relief (Conforming to MIL-C-83503) (Conforming to MIL-C-83503)

Note 1) These figures show the "SS5Y3-50P2-05B-01". Note 2) Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type.

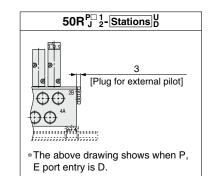



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5


Dimensions: Series SY5000

Plug-in Type 50/Side Ported

Metal Base Flat Ribbon Cable

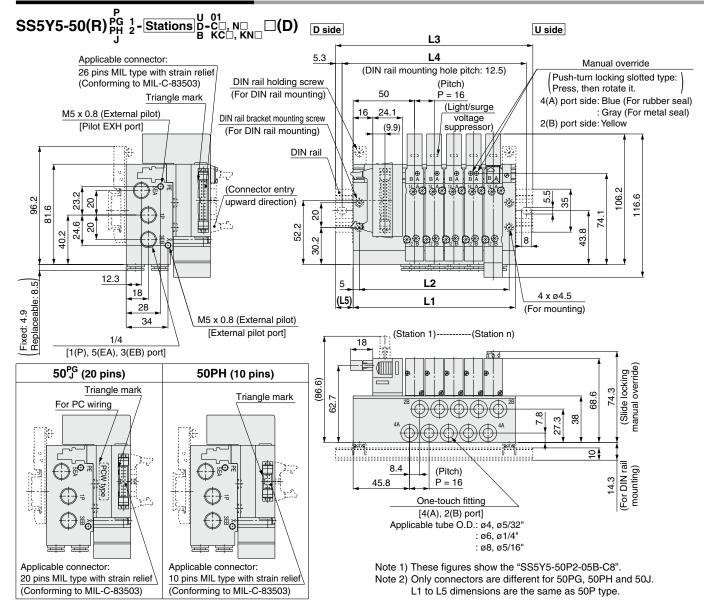

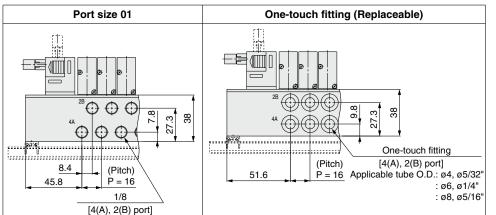

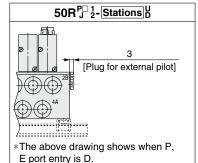

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Plug-in Metal Base Type 50/Side Ported Flat Ribbon Cable


Dimensions: Series SY5000


20 pins MIL type with strain relief

(Conforming to MIL-C-83503)

10 pins MIL type with strain relief (Conforming to MIL-C-83503)

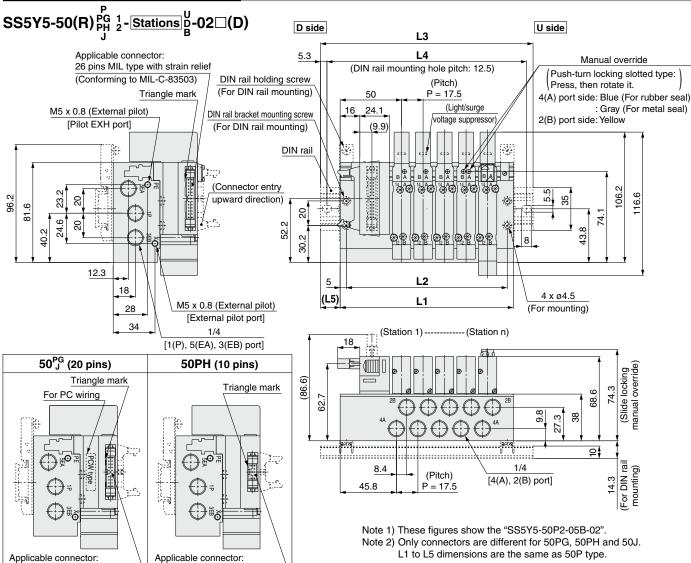

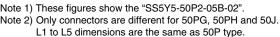

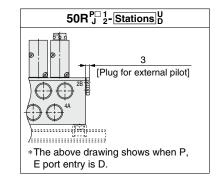



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5


Plug-in Metal Base Type 50/Side Ported

Flat Ribbon Cable

Dimensions: Series SY7000

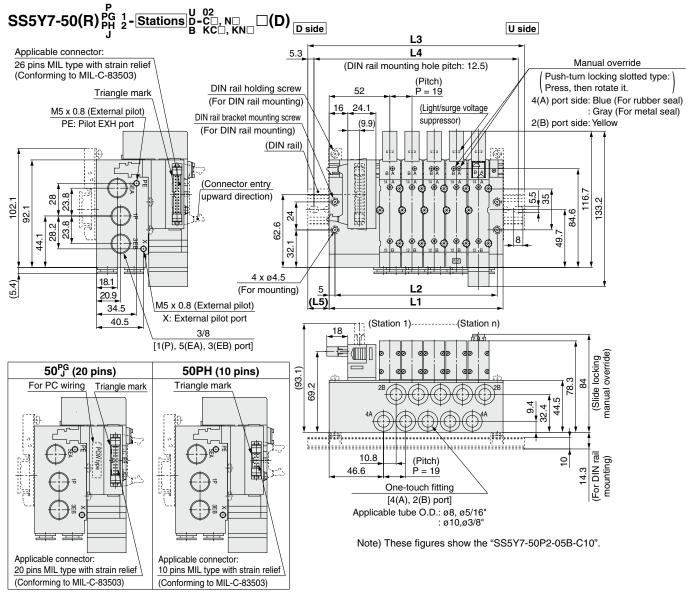

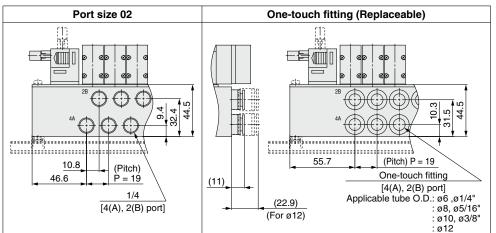

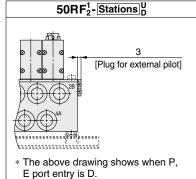


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Plug-in Metal Base

Type 51/Bottom Ported

D-sub Connector

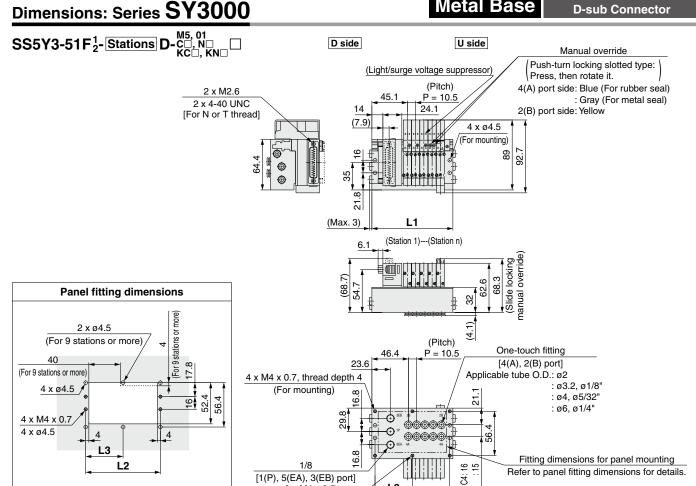


L3

සු

C,2 C,6

2 x M4 x 0.7

(For 9 stations or more)

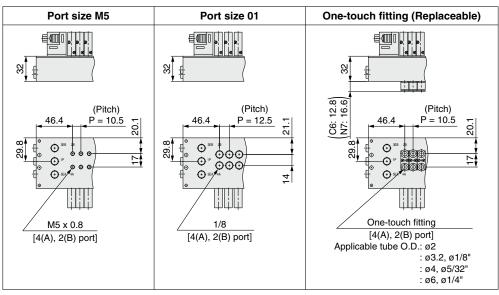

Note) These figures show the "SS5Y3-51F2-05D-C6".

Port Size M5, C□, N□, KC□, KN□

	•	-	ס	0	/	8	9	10	11	12
L1 71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2 63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3 —	_	_	_	_	_	_	68.5	73.8	79	84.3

Port Size 01


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
13	_	_	_	_	_	_	_	77.8	84	90.3	96.5


Plug-in Metal Base Type 51/Bottom Ported

D-sub Connector

Dimensions: Series SY5000

SS5Y5-51F₂-Stations D

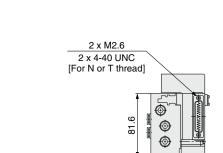


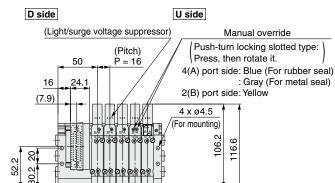


(Slide locking manual override)


11

(Station 1)----(Station n)

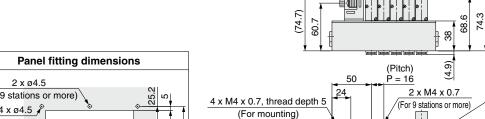

(Max. 3)

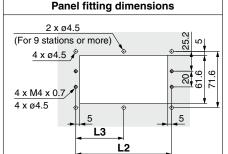

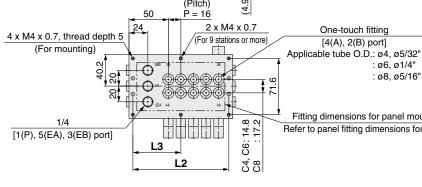

Fitting dimensions for panel mounting Refer to panel fitting dimensions for details.

One-touch fitting

[4(A), 2(B) port]

: ø6, ø1/4"

: ø8, ø5/16"

Port size 01	Port size 02	One-touch fitting (Replaceable)
88	88	88
(Pitch) P = 16 1/8 [4(A), 2(B) port]	(Pitch) 50 P = 17.5 O O O O O O O O O O O O O O O O O O O	(Pitch) P = 16 One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: ø4, ø5/32" : ø6, ø1/4" : ø8, ø5/16"

Note) These figures show the "SS5Y5-51F2-05D-C8".

Port Size 01, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117


Port Size 02


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8


Dimensions: Series SY7000





SS5Y7-51(R)F $_2^1$ -Stations D- $_{\text{KC}}^{02}$, N $_{\text{KC}}$

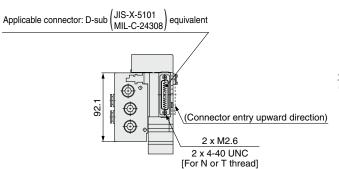


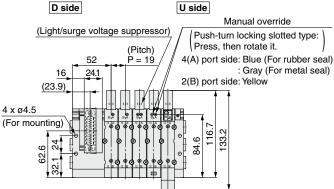

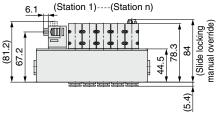


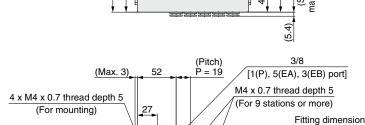

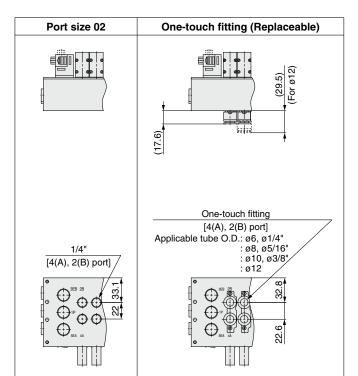

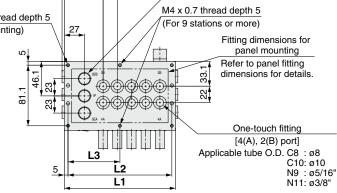

Note) These figures show the "SS5Y7-51F2-05D-C10".

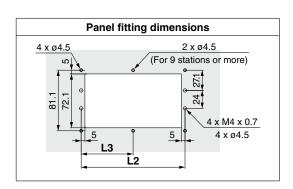



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136



Plug-in Type 51/Bottom Ported

Metal Base Flat Ribbon Cable

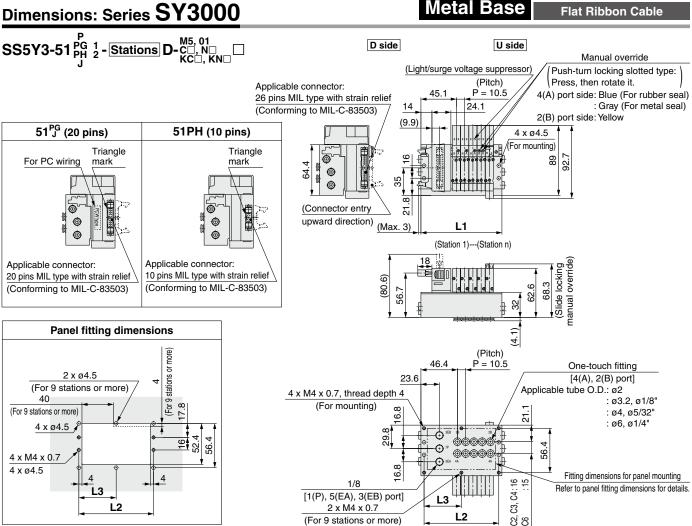

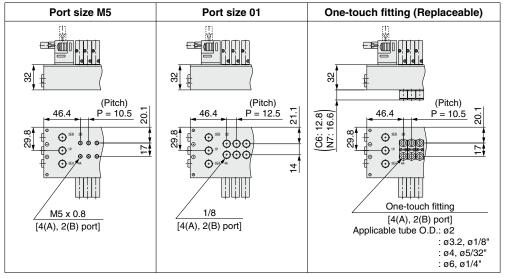

Note) These figures show the "SS5Y3-51P2-05D-C6".

Port Size	M5.	$C \sqcup . N \sqcup .$. KC∐.	. KN⊔

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3

Port Size 01


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5


Plug-in Metal Base

13

Type 51/Bottom Ported

Flat Ribbon Cable

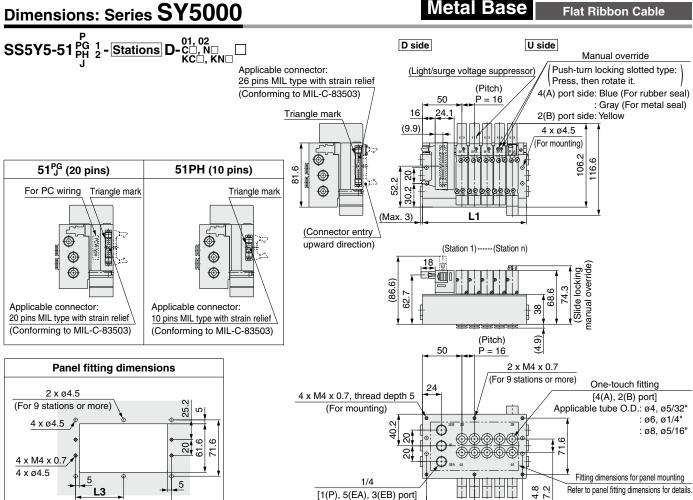

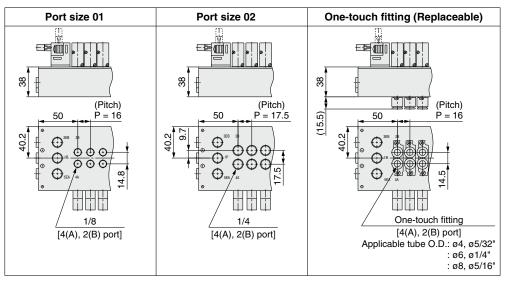

Note) These figures show the "SS5Y5-51P2-05D-C8".

. G 2,8

Port Size 01, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117

Port Size 02


	011 0120 02														
n: Stations	2	3	4	5	6	7	8	9	10	11	12				
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5				
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5				
L3	_		_	_	_	_	_	100.5	109.3	118	126.8				


Dimensions: Series SY7000


Plug-in Metal Base Type 51/Bottom Ported


Flat Ribbon Cable




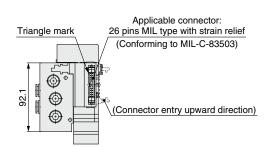


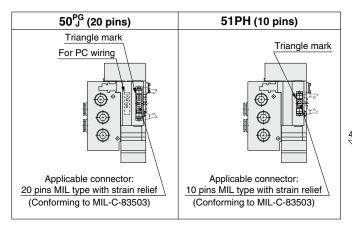

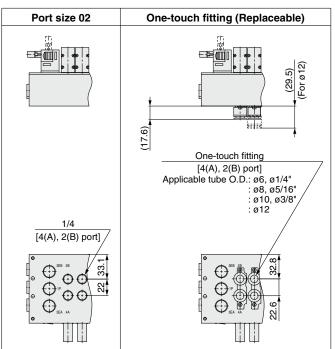


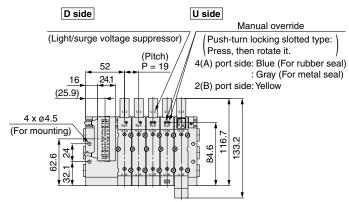

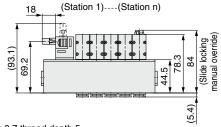

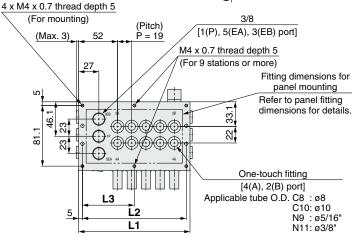

Note) These figures show the "SS5Y7-51P2-05D-C10".

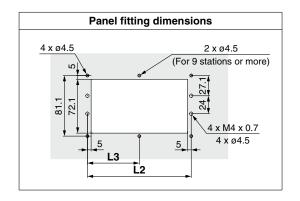

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136

Plug-in Metal Base


D-sub Connector Flat Ribbon Cable PC Wiring

Type 52 Top Ported

Series SY3000/5000/7000




How to Order Manifold

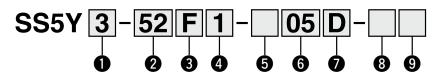

Series SY3000 SY5000 SY7000

2 Type 52 Top ported **52R** Top ported, External pilot

4 Connector entry direction

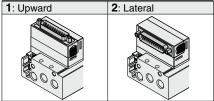

5 Wiring type


Nil	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) If a mix of single and double wiring is required, it is supplied as a

How to Order Manifold Assembly

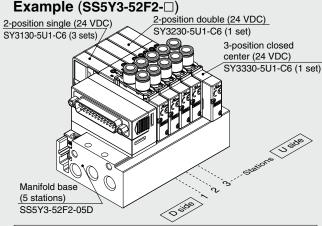


SS5Y3-52F2-05D 1 set (Type 52 5-station manifold base part no.) *SY3130-5U1-C6...... 3 sets (2-position single part no.) *SY3230-5U1-C6...... 1 set (2-position double part no.) *SY3330-5U1-C6------ 1 set (3-position closed center part no.) The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Connector type

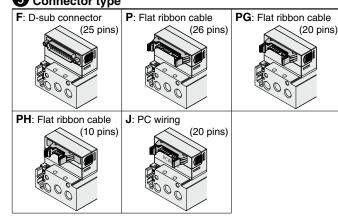

6 Valve stations

F : D-s	sub con	nector (25 pins	P : F	at ribbon	cable (26 pins)	PG:	Flat ribbo	on cable (20 pins)
Symbol	Stations	Note	Symb	ol Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	double	:	:	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	single	÷	:	single	:	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring

PH: Flat ribbon cable (10 pins) J: PC wiring (20 pins) Symbol Stations Note Symbol Stations Note **02** 2 stations 02 2 stations double double wiring wiring 04 08 8 stations 4 stations 02 2 stations 2 stations ΑII ΑII single single 8 stations wiring **12** 12 stations wiring

* This also includes the number of blanking plate assembly.

P, E port entry

U	U side Note)
D	D side Note)
В	Both sides

Note) Plugs are mounted on the opposite side of the selected ports.

8 Thread type

Nil Rc 00F G 00N NPT				
00N NPT	Nil	Rc		
	00F	G		
	00N	NPT		
00T NPTF	00T	NPTF		


9 Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Consider a law your wail them	
:	:	Specify a longer rail than the standard length.	
D12	For 12 stations	the standard length.	

Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

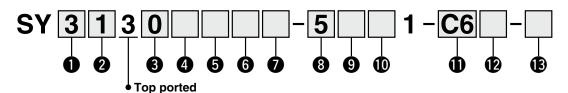

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	O nonition	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
A *	4-position	N.C./N.C.	
B*	dual	N.O./N.O.	
C* 3-port		N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type
- Back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	Nil	Standard (0.7 MPa)
	В	Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

• con type				
Nil	Standard			
т	With power saving circuit			
•	(Continuous duty type)			

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

 Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

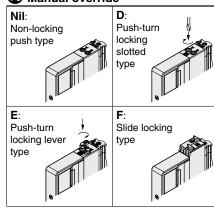

* Refer to page 14 for with the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3 C4	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

	one reason many								
A, B port	SY3000	SY5000	SY7000						
ø1/8"	•	_	_						
ø5/32"	•	•	_						
ø1/4"	•	•	•						
ø5/16"	_	•	•						
ø3/8"	_	_	•						
	ø1/8" ø5/32" ø1/4" ø5/16"	ø1/8"	Ø1/8"						

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.


Type of mounting screw

<u> </u>	oc or mounting ooren
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 73 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

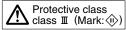



Dimensions: Series SY3000


Plug-in **Metal** Base Type 52/Top Ported

D-sub Connector, Flat Ribbon Cable

SS5Y3-52(R) $\stackrel{F}{\underset{PH}{P}}_{\stackrel{H}{U}}^{1}$ -Stations $\stackrel{U}{\underset{B}{D}}$ - \square (D)


*The above drawing shows when P,

E port entry is D.

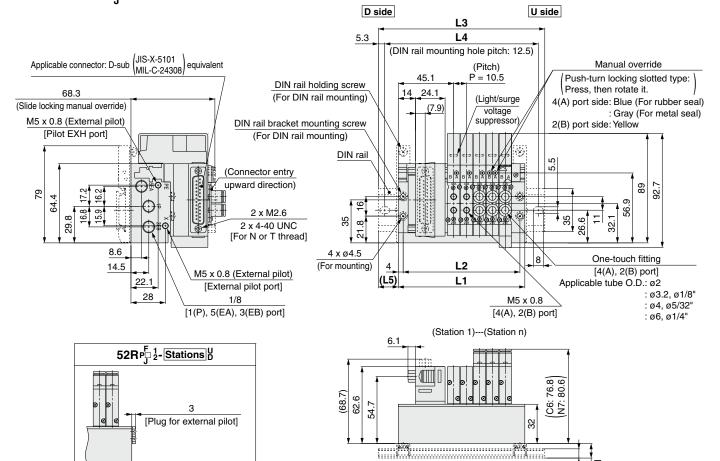

Note) These figures show the "SS5Y3-52F2-05B".

(For DIN rail mounting)

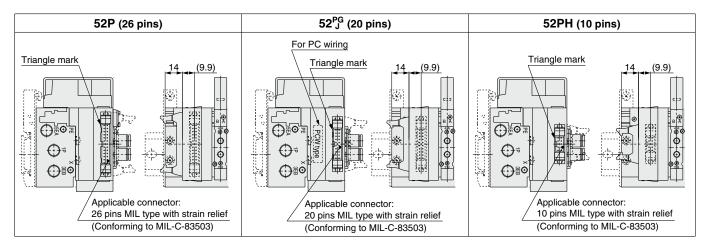



n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Plug-in **Metal** Base Type 52/Top Ported


D-sub Connector, Flat Ribbon Cable




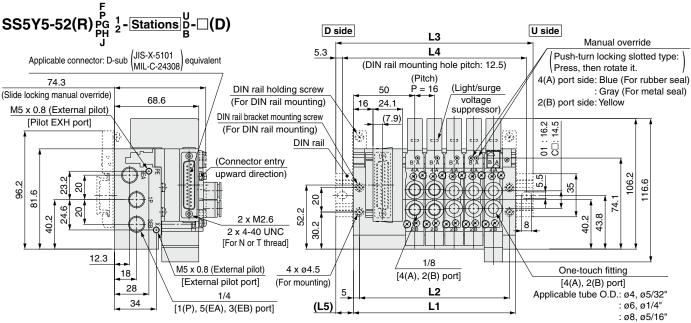

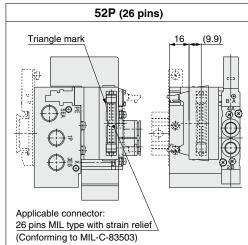

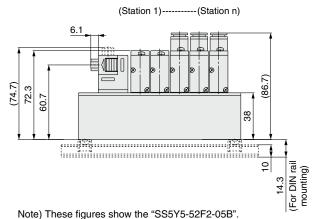


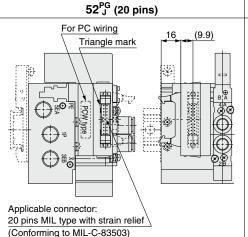

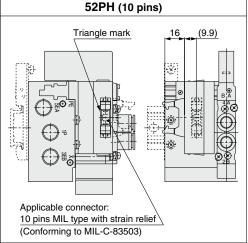

52RÞg ₂-Stations b
[Plug for external pilot]
*The above drawing shows when P, E port entry is D.

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

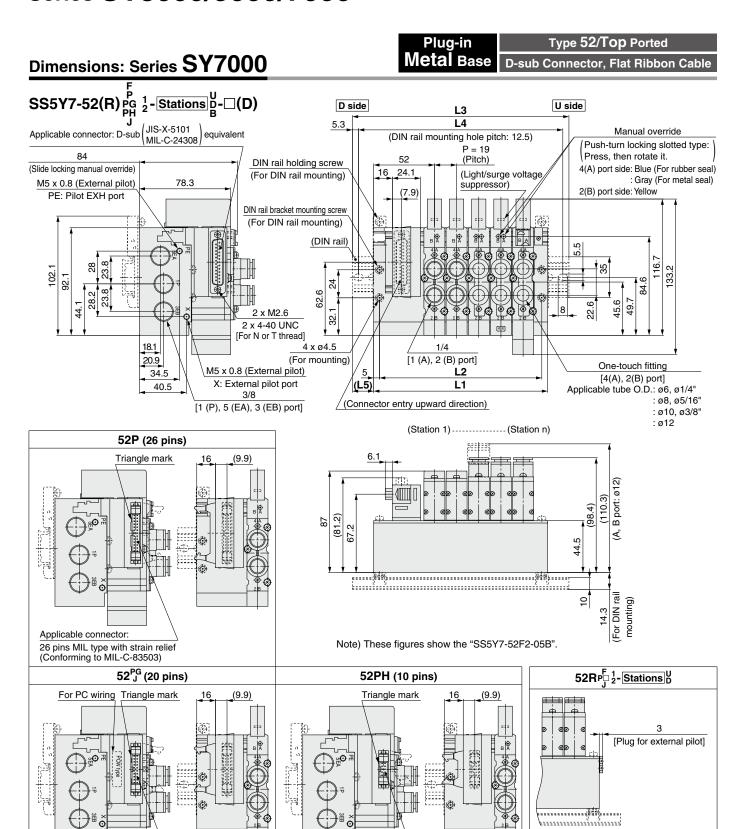

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Applicable connector:

10 pins MIL type with strain relief

(Conforming to MIL-C-83503)


* The above drawing shows when P,

E port entry is D.

Applicable connector: 20 pins MIL type with strain relief

(Conforming to MIL-C-83503)

Electrical Wiring Specifications

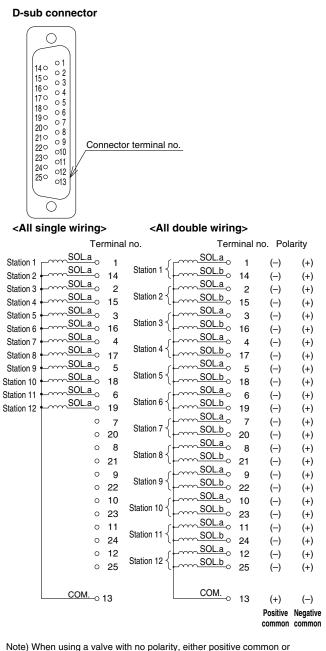


negative common can be used.

Cable Assembly

AXT100-DS25-030 (N) [IP40 compliant]

Nil: Metric size N: Inch size

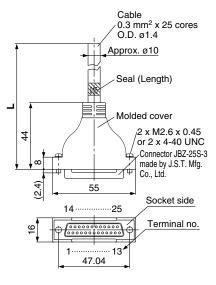

Lead wire color for D-sub connector cable assembly by terminal number

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	0-61-
3 m		Cable 0.3 mm ² x 25 cores
5 m	AXT100-DS25-050	0.0 IIIII X 20 00103

- * When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.
- * Cannot be used for movable wiring.
- * Lengths other than the above are also available. Please contact SMC for details.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the D-sub connector cable is 20 mm.

Connector Manufacturers' Example


- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- · Hirose Electric Co., Ltd.

One-touch Fittings/ Plug Assembly Part No

54



Electrical Wiring Specifications

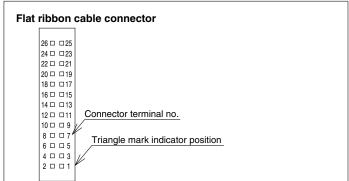


All single wiring> All double wiring> Terminal no. Terminal no. Terminal no. Terminal no. Polarity Station 1 SOLa 2 1 (+) (+) Station 3 SoLa 3 SoLa 3 (-) (+) Station 4 SoLa 3 SoLb 3 (-) (+) Station 5 SoLa 6 (-) (+) SoLb 4 (-) (+) Station 6 SoLa 6 (-) (+) SoLb 6 (-) (+) Station 7 Station 8 SoLb 8 (-) (+) Station 10 SoLa 9 (-) (+) Station 11 Sola 9 (-) (+) Station 10 Solb 10 (-) (+) Station 11 Sola 12 (-) (+) Station 12 Station 15 Station 16 (-) (+) Sola 15	I	P: Flat ril	bbon ca	ble (26 pir	าร)		
Station 1	<all single="" th="" wir<=""><th>ring></th><th><all d<="" th=""><th>ouble wiri</th><th>ng></th><th>-</th><th></th></all></th></all>	ring>	<all d<="" th=""><th>ouble wiri</th><th>ng></th><th>-</th><th></th></all>	ouble wiri	ng>	-	
Station 2	Te	erminal no		Term	ninal n	o. Pol	arity
COIN. 26 (1) ()	Station 1 Sol. Sol. Station 2 Sol. Sol. Station 3 Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol. Sol.	erminal no. a	tation 1 { tation 2 { tation 3 { tation 4 { tation 5 { tation 6 { tation 7 { tation 9 { tation 10 { tation 11 { }	SOL a SOL b	ninal n 1 2 3 4 5 6 7 8 9 10 111 112 113 114 115 116 117 118 119 22 112 22 3 22 4		. (+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
					۲	ositive	Negative

	PG: Fla	t ribbon cable (2	20 pins)		
<all single<="" th=""><th>wiring></th><th><all double<="" th=""><th>wiring></th><th></th><th></th></all></th></all>	wiring>	<all double<="" th=""><th>wiring></th><th></th><th></th></all>	wiring>		
	Terminal		Terminal no	. Pola	arity
Station 1 Station 2 Station 3	SOL.a 2 SOL.a 3 SOL.a 4	Station 1 {SO	La ₀ 3	(-) (-) (-)	(+) (+) (+)
Station 4 Station 5 Station 6 Station 7	SOL.a 5 SOL.a 6 SOL.a 7	Station 3 {	La _o 5	(-) (-)	(+) (+) (+) (+)
Station 8	SOL.a 8	Station 4 { SO SO	L.b 8 L.a 9	(-)	(+) (+)
Station 10 Station 11	SOL.a 10	Station 5 {SO		(-)	(+) (+)
Station 12	SOL.a • 12 • 13	Station 6 {SO	L.b ○ 12 L.a ○ 13	(-)	(+) (+)
	o 14 o 15	Station 7 { LSO	L.b ○ 14 L.a ○ 15	((+) (+)
	o 16 o 17	Station 8 { LSO	L.b • 16 L.a • 17	(-)	(+) (+)
	∘ 18	Station 9 { SO	L.b 18	(-)	(+)
	COM. ○ 19 COM. ○ 20	CC	o 19	(+) (+)	(–) (–)
				ositive mmon	Negative common

Note) When using a valve with no polarity, either positive common or negative common can be used.

Cable Assembly

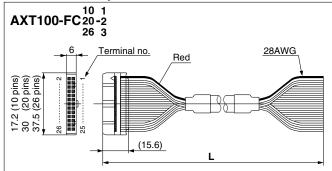

Flat ribbon cable connector assembly

Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- * When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- * Cannot be used for movable wiring.
- * Lengths other than the above are also available. Please contact SMC for details.

Connector Manufacturers' Example

- Hirose Electric Co., Ltd.
 - Japan Aviation Electronics Industry, Ltd.
- Sumitomo 3M Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu, Ltd.
- Oki Electric Cable Co., Ltd.

PH: Fla	t ribbon cable (10 pins)							
<all single="" wiring=""></all>	<all single="" wiring=""> <all double="" wiring=""></all></all>							
Termina								
Station 1 SOLa 2 Station 2 SoLa 2 SoLa 3 SoLa 4 Station 4 Station 6 Station 7 Station 8 COM. 9 COM. 10 10 10 10 10 10 10 1	Station 1 {							
<u> </u>	Positive Negative							

J: Flat ribbe	on cable (20 pins) PC w	iring	
<all single="" wiring=""></all>	<all double="" th="" wiring<=""><th>j></th><th></th></all>	j>	
Termina		no. Pola	rity
Station 1 SOLa 20 SOLa 18 Station 2 SOLa 16 SOLa 17 Station 10 SOLa 17 Station 11 Station 12 SOLa 17 SOLa 17 SOLa 18 SOLa 19 SOLa 17 SOLa 17 SOLa 18 SOLa 19 SOLa 17 SOLa 18 SOLa 19 SOLa 17 SOLa 18 SOLa 19 SOL	Station 1 {		(+) (+) (+) (+) (+) (+) (+) (+) (+) (+)
		Positive common	Negative common


common common

Plug-in Metal Base EX510

Series SY3000/5000/7000

 ϵ

How to Order Manifold

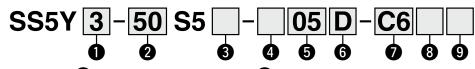

Series

3	SY3000
5	SY5000
7	SY7000

3 SI unit output polarity

<u> </u>	arme output polarity
Nil	Positive common
N	Negative common

2 Type

50	Side ported
51	Bottom ported
50R	Side ported, External pilot

* External pilot is not available for the bottom ported type.

5 Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
:	:		•	:	wiring
80	8 stations	wiring	12	12 stations	wiring

Note 1) Plugs are mounted on the opposite

Note 2) Only D side is available for Type 51

side of the selected ports

(Bottom ported).

* This also includes the number of blanking plate assembly.

4 Wiring type

	0 71
Nil	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) If a mix of single and double wiring is required, it is supplied as a special order.

A, B port size

6 P, E port entry

Thread piping

В

Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8	•	_	_
01	1/8	•	•	_
02	1/4	_	•	•

U side Note 1)

D side Note 1) Note 2)

Both sides

One-touch fitting (Metric)


Sy	mbol	A, B port	SY3000	SY5000	SY7000		
	C2	ø2	•	_	_		
	СЗ	ø3.2	•	_	_		
Fixed	C4	ø4	•	•	_		50
ιĚ	C6	ø6	•	•	_		
	C8	ø8	_	•	•		
	C10	ø10	_	_	•		
	KC2	ø2	•	_	_	Type 50	Type 51
	КС 3	ø3.2	•	_	_	(Side ported)	(Bottom ported)
əe	KC4	ø4	•	•	_		
Replaceable	KC6	ø6	•	•	•		-
plac	KC8	ø8	_	•	•		
Be	KC10	ø10	_	_	•		
	KC12	ø12	_	_	•		
	M*	Mixed sizes	•	•	•		
P,	E port s	size (Thread piping)	1/8	1/4	3/8		

One-touch fitting (Inch)

Symbol		A, B port	SY3000	SY5000	SY7000		
	N1	ø1/8"	•	_	_		//
_	N3	ø5/32"	•	•	_		
Fixed	N7	ø1/4"	•	•	_		
ш	N9	ø5/16"	_	•	•		
	N11	ø3/8"	_	_	•		
	KN1	ø1/8"	•	_	_	Type 50	Type 51
e	KN3	ø5/32"	•	•	_	(Side ported)	(Bottom ported)
eplaceable	KN7	ø1/4"	•	•	•		
plac	KN9	ø5/16"	_	•	•		
Re	KN11	ø3/8"	_	_	•		
	M*	Mixed sizes	•	•	•		
P, E port size (Thread piping) 1/8 1/4 3/8							

* When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

How to Order Manifold Assembly

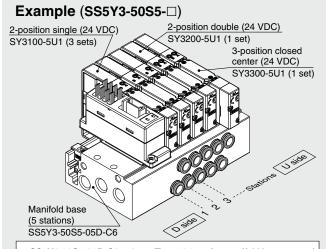

SS5Y3-50S5-05D-C6

SS5Y3-50S5-05D-C6 — 1 set (Type 50 5-station manifold base part no.)

*SY3100-5U1 — 3 sets (2-position single part no.)

*SY3200-5U1 — 1 set (2-position double part no.)

*SY3300-5U1 — 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

- \bullet The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 68.

In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.



8 Thread type

• Imeas type		
Nil	Rc	
F	G	
N	NPT	
Т	NPTF	

9 Mounting

	Nil	Direct mounting	
DIN rail mounting (With DIN rail)		DIN rail mounting (With DIN rail)	
	D0	DIN rail mounting (Without DIN rail)	
	D3	For 3 stations	Charify a langer rail than
	:	:	Specify a longer rail than the standard length.
	D12	For 12 stations	the standard length.


Note 1) Only direct mounting is available for Type 51 (Bottom ported).

Note 2) Refer to page 247 for the fixation of DIN rail mounting type manifold.

For details about the EX510 Gateway-type Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. Please download the Operation Manual via SMC website, http://www.smcworld.com

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

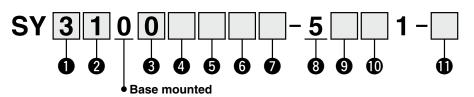

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	O position	Single	
2	2-position	Double	
3		Closed center	
4	3-position	Exhaust center	
5		Pressure center	
A *	4 position	N.C./N.C.	
B*	4-position dual 3-port	N.O./N.O.	
C*		N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

	u, po
0	Rubber seal
1	Motal spal

A Pilot type

•	or typo
Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

	71 - 7
Nil	None
Н	Built-in

- * Only rubber seal type
- * Back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

	, p-0
Nil	Standard
T	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage

5 24 VDC


Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_		Positive common
Z	•	•	
NS	_		Negative common
NZ	•		INEGALIVE COILLION

* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is Nil (positive common).

Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).

Manual override

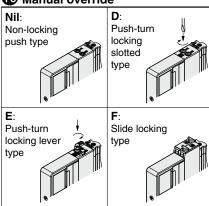

* Refer to page 14 for with the safety slide locking manual override.


Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- *For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 73 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

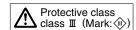


Dimensions: Series SY3000

Plug-in Type 50/Side Ported
Metal Base EX510



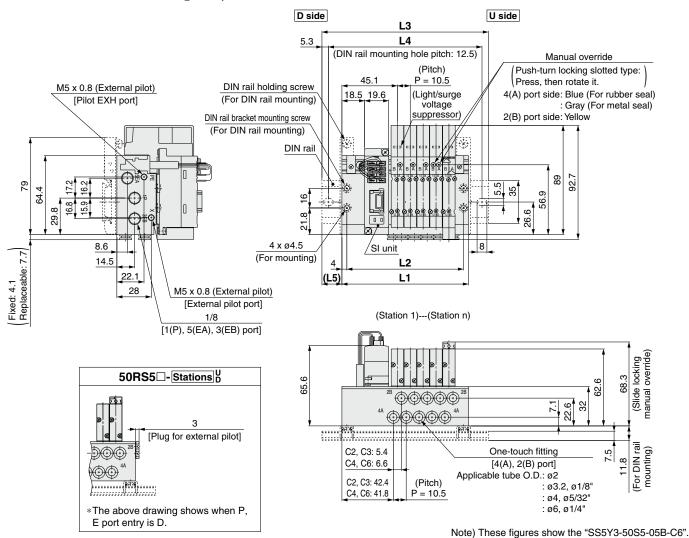

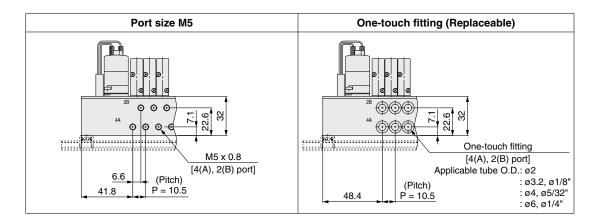


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


Plug-in Type 50/Side Ported


Metal Base Ex510

Dimensions: Series **SY3000**

SS5Y3-50(R)S5 \square -Stations $\stackrel{\mathsf{U}}{\mathbb{P}}$ -01 \square (D)

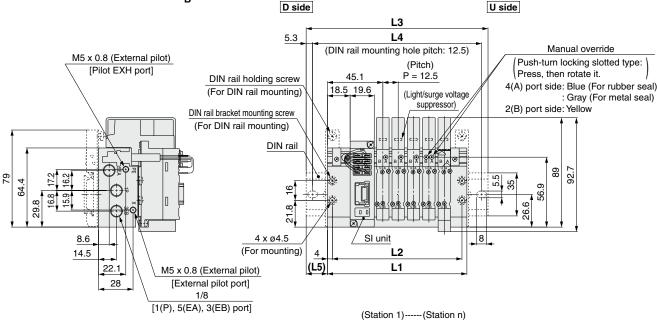

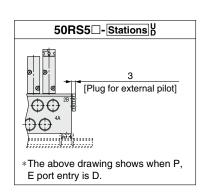

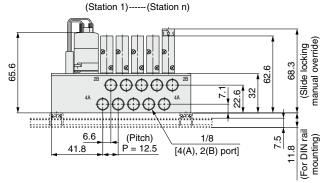


Note) These figures show the "SS5Y3-50S5-05B-01".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

Dimensions: Series SY5000

Plug-in Type 50/Side Ported
Metal Base EX510

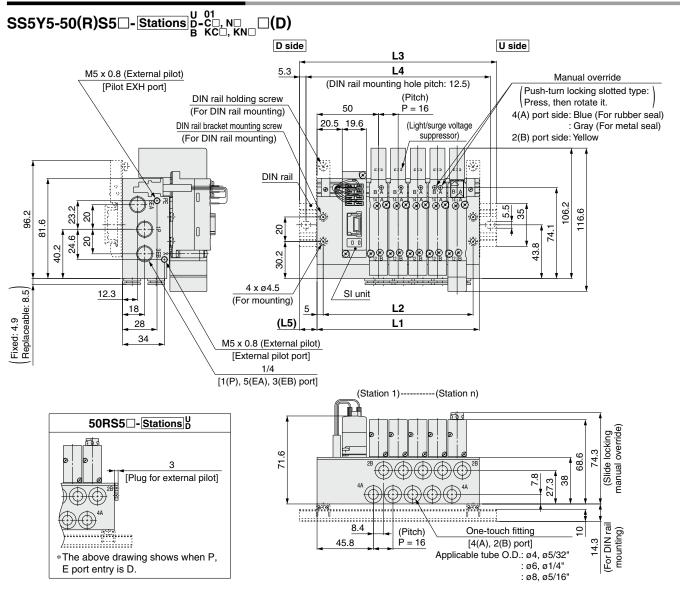


Note) These figures show the "SS5Y5-50S5-05B-C8".

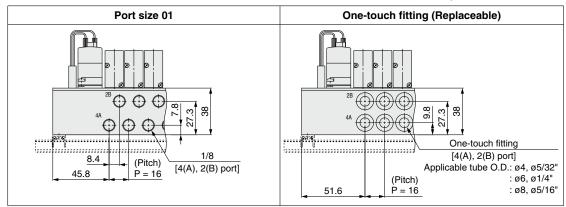

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Dimensions: Series SY5000


Type 50/Side Ported EX510

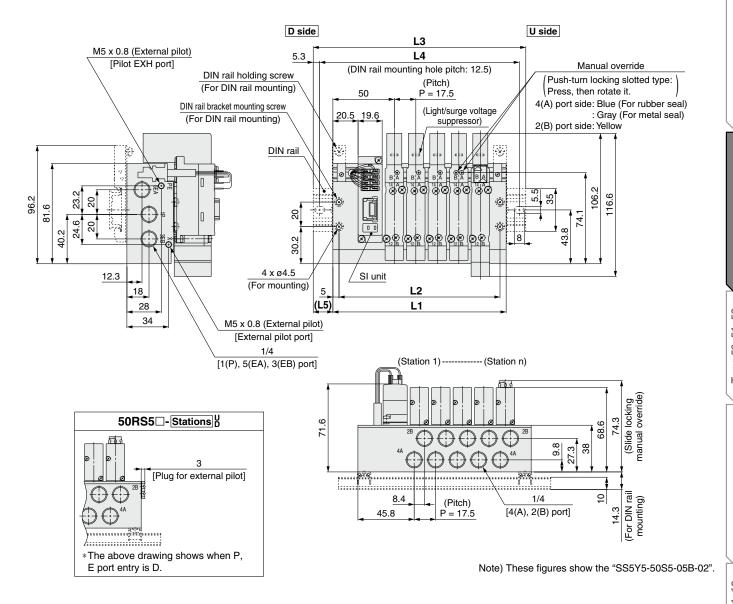


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

Dimensions: Series SY7000

Plug-in Type 50/Side Ported Metal Base Ex510

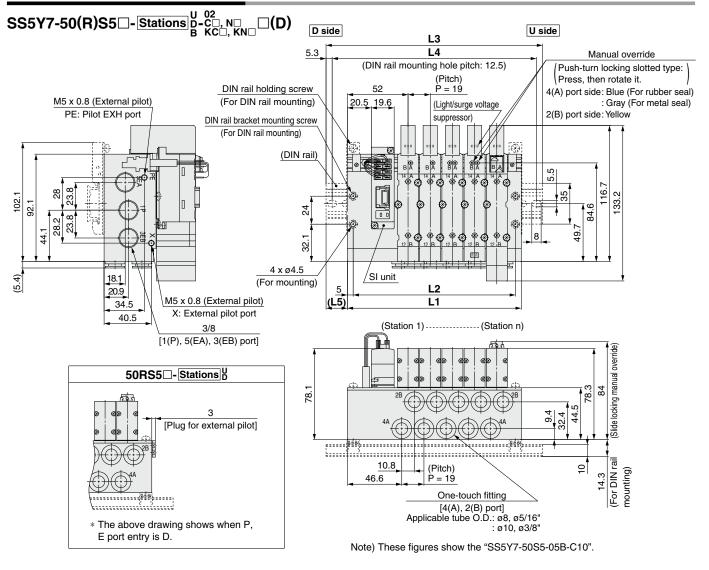

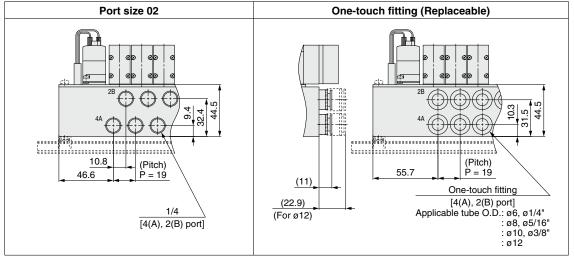

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

One-touch Fittings/ Plug Assembly Part No.


Manifold Options


Plug-in **Metal Base**

Type 51/Bottom Ported **EX510**


Dimensions: Series SY3000




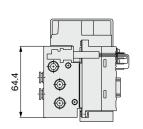


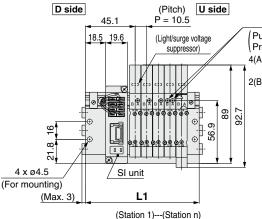

Manual override Push-turn locking slotted type: Press, then rotate it. 4(A) port side: Blue (For rubber seal) : Gray (For metal seal) 2(B) port side: Yellow

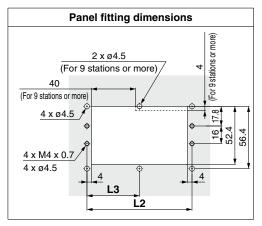

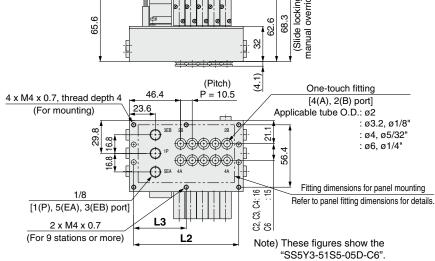

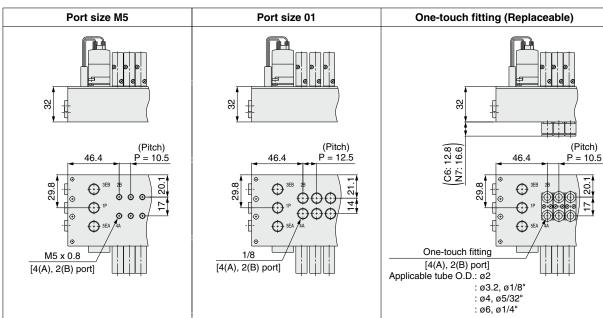

				-	
Port Size	M5.	C∐. r	۷⊔. K	CU.	KN□


		.0, 0	_,	_,	<i>-</i> _, .,						
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	_	_	_	_	_	_	_	68.5	73.8	79	84.3


Port S	Port Size 01										
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	_	_	_	_	_	_	_	77.8	84	90.3	96.5

Dimensions: Series SY5000

Plug-in **Metal** Base Type 51/Bottom Ported

EX510

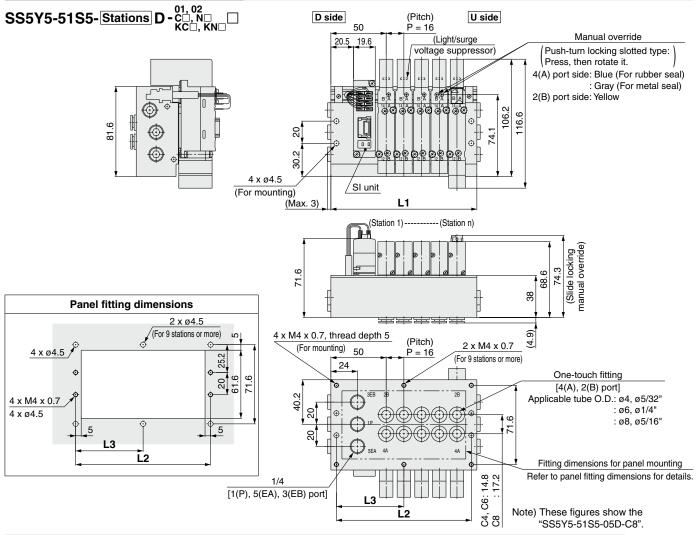

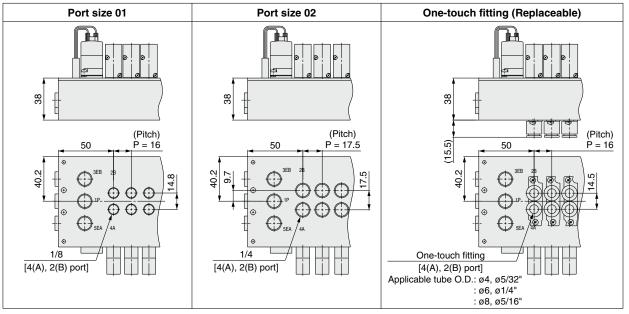

Port Size 01, C□, N□, KC□, KN□											
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	_	_	_	_	_	_	_	93	101	109	117


Port S	ize u	2									
n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_	_	_	_	_	_	100.5	109.3	118	126.8


Plug-in Metal Base


Type 51/Bottom Ported **EX510**


SS5Y7-51(R)S5 - Stations D- C, NC C, KNC C, KNC


Dimensions: Series SY7000

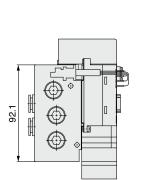


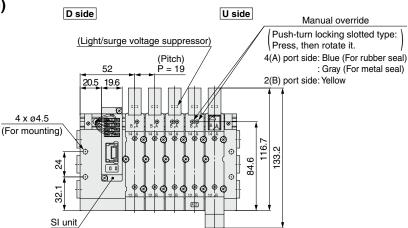

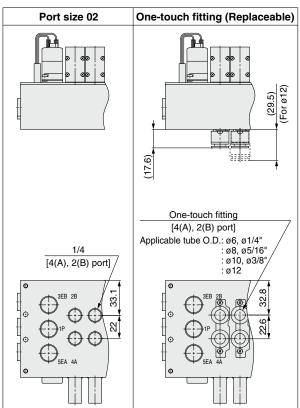

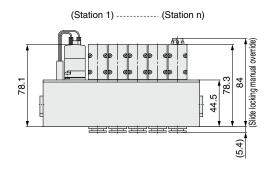

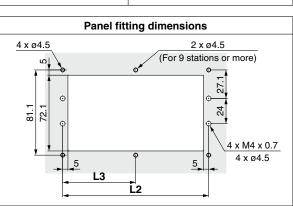

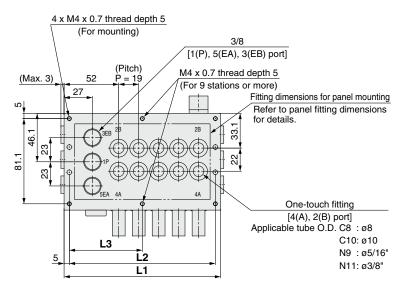

Note) These figures show the "SS5Y7-51S5-05D-C10".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	_	_	_	_	_	_	107.5	117	126.5	136




Plug-in Metal Base EX510

Series SY3000/5000/7000

 ϵ

How to Order Manifold

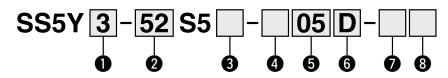

Series

3	SY3000
5	SY5000
7	SY7000

2 Туре

- 71		
52		Top ported
	52R	Top ported External pilot

3 SI unit output polarity

Nil	Positive common
N	Negative common

4 Wiring type

Nil	All double wiring Note 1)
S	All single wiring Note 2)

Note 1) All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Note 2) All single wiring: Available only for the manifold which has 2-position single for all stations.

Note that 2-position double, 3- or 4-position valves cannot be used.

Note 3) If a mix of single and double wiring is required, it is supplied as a special order.

5 Valve stations

Symbol	Stations	Note
02	2 stations	All double
:	:	wiring
08	8 stations	wiiiig
02	2 stations	All aingle
:	:	All single wiring
12	12 stations	wiring


* This also includes the number of blanking plate assembly.

6 P, E port entry

U	U side Note)
D	D side Note)
В	Both sides

Note) Plugs are mounted on the opposite side of the selected ports.

How to Order Manifold Assembly

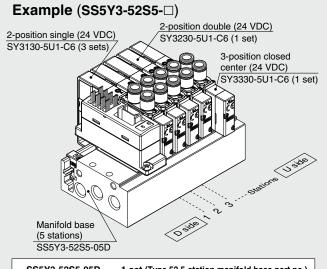

SS5Y3-52S5-05D ······ 1 set (Type 52 5-station manifold base part no.)
*SY3130-5U1-C6 ······· 3 sets (2-position single part no.)
*SY3230-5U1-C6 ······ 1 set (2-position double part no.)
*SY3330-5U1-C6 ······ 1 set (3-position closed center part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification shock.

Thread type

Nil	Rc
00F	G
00N	NPT
00T	NPTF

8 Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Charify a langer rail than	
÷	:	Specify a longer rail than the standard length.	
D12	For 12 stations		

Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.


For details on the EX510 Gateway-type Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual.

Please download the Operation Manual via SMC website, http://www.smcworld.com



Refer to page 3 for valve specifications.

How to Order Valves (With mounting screw)

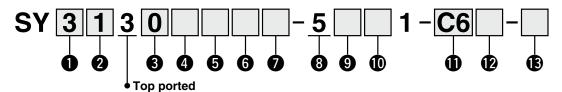

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *	4-position	N.C./N.C.
B*	dual 3-port	N.O./N.O.
C*		N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

Ocal type		ai type	ii type	
	0	Rubber seal	ı	
	1	Metal seal		

4 Pilot type

Nil	Internal pilot External pilot	
R		

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type
- * Back pressure check valve is not available for the 3-position type and the SY7000.

Pilot valve option

T not valve option						
Nil	Standard (0.7 MPa)					
В	Quick response type (0.7 MPa)					
K*	High pressure type (1.0 MPa)					

Only metal seal type is available for the high pressure type.

Coil type

O con type								
Nil	Standard							
Т	With power saving circuit (Continuous duty type)							

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.


8 Rated voltage

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI unit polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).

Manual override

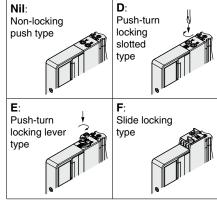

* Refer to page 14 for with the safety slide locking manual override.

SMC

A, B port size

Thread piping

	p-p-1-3	
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10			•
C12	ø12	_	_	•

One-touch fitting (Inch)

0110	One-touch fitting (inch)									
Symbol	A, B port	SY3000	SY5000	SY7000						
N1	ø1/8"	•	_	_						
N3	ø5/32"	•	•	_						
N7	ø1/4"	•	•	•						
N9	ø5/16"	_	•	•						
N11	ø3/8"	_	_	•						

12 Thread type


Nil	Rc						
F	G						
N	NPT						
Т	NPTF						

* Only Nil is available for M5.

13 Type of mounting screw

- / /					
Nil Round head combination screw					
B Hexagon socket head cap screw					
K Round head combination screw (Falling-out-prevention					
Н	Hexagon socket head cap screw (Falling-out-prevention type)				

- *For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 73 for part numbers of the base gasket and mounting screw.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

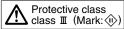




Dimensions: Series SY3000

Plug-in **Metal** Base Type 52/Top Ported

EX510

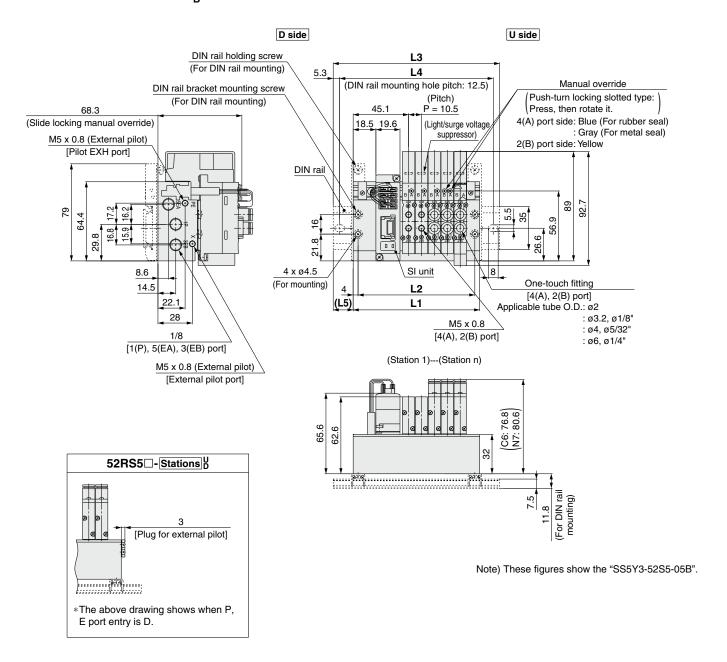

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Note) These figures show the "SS5Y5-52S5-05B".

Plug-in Metal Base


Type 52/Top Ported EX510

Dimensions: Series **SY5000**

 $SS5Y5-52(R)S5 \square - \underline{Stations} \overset{U}{\underset{B}{\stackrel{}{\triangleright}}} - \square(D)$

E port entry is D.

*The above drawing shows when P,

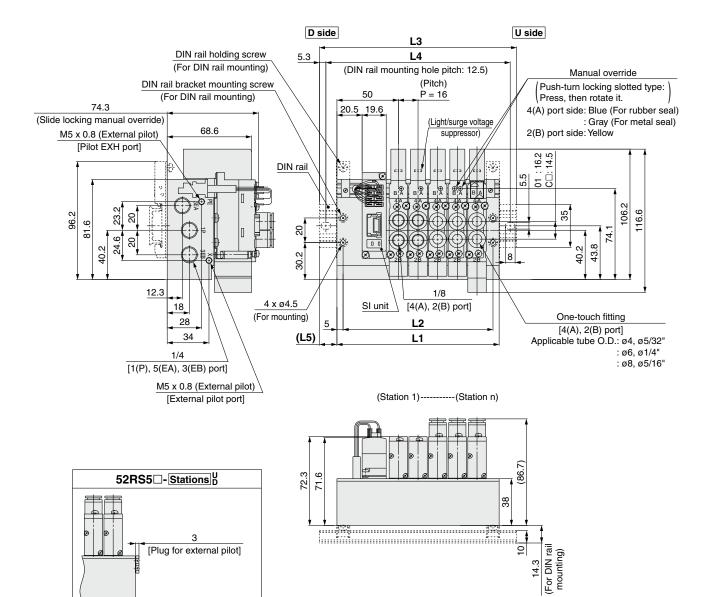


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5


Dimensions: Series SY7000


Plug-in **Metal** Base Type 52/Top Ported

EX510

SS5Y7-52(R)S5 \square -Stations $\stackrel{\text{U}}{\stackrel{\text{P}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}{\stackrel{\text{D}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}\stackrel{\text{D}}{\stackrel{\text{D}}}}}{\stackrel{\text{D}}}\stackrel{\text{D}$

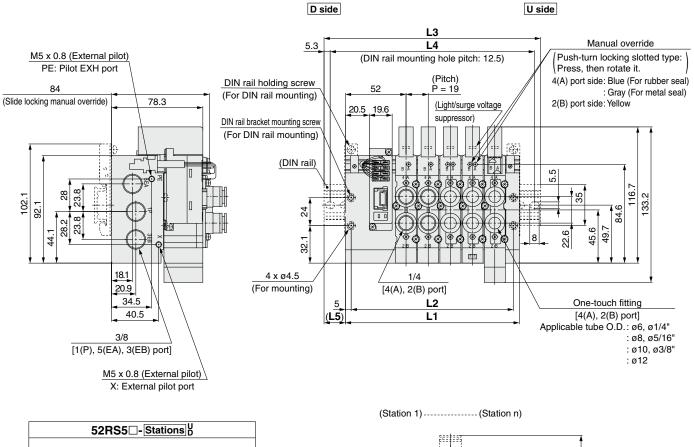

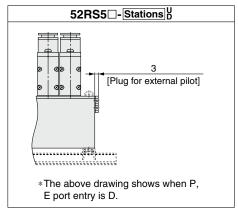


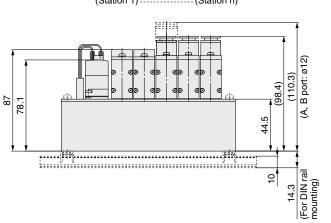

Note) These figures show the "SS5Y7-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

Series SY3000/5000/7000 Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

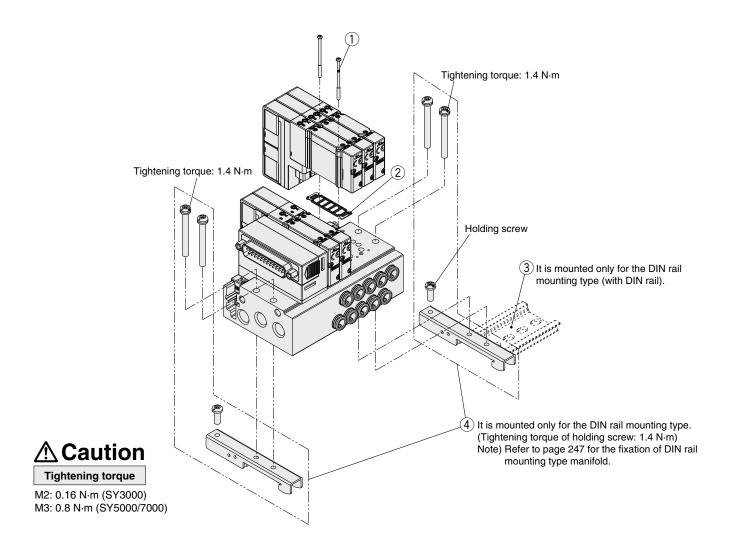

Manifold Parts No.


No.	. Description			Part no.	Note		
INO.	Des	scription	SY3000 SY5000 SY		SY7000	Note	
(1)	Valve mounting	Round head combination screw	SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.). (30 pcs. for the SY7000)	
	screw	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)		
2	Base gasket (for plug-in metal base and sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).	
3	3 DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 225.	
4	Clamp bracket assembly (for plug-in metal base)		SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).	

Manifold Parts No.

■Blanking plate assembly (With mounting screw)

Used when expecting valve additions, or for maintenance.


A structure to prevent screws falling out is in place on the blanking plate, making it much harder for the mounting screws to fall out.

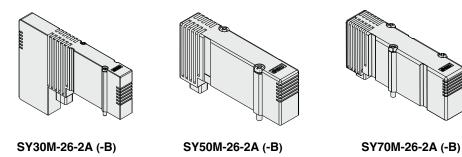


Refer to pages 236, 238, 240 for dimensions.

Refer to pages 226 to 230 for individual SUP/EXH and other options.

How to Order Blanking Plate Assembly

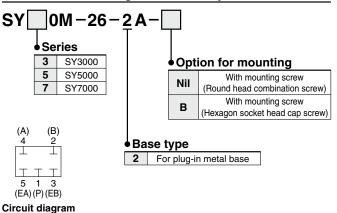

Plug-in Connector Connecting Base

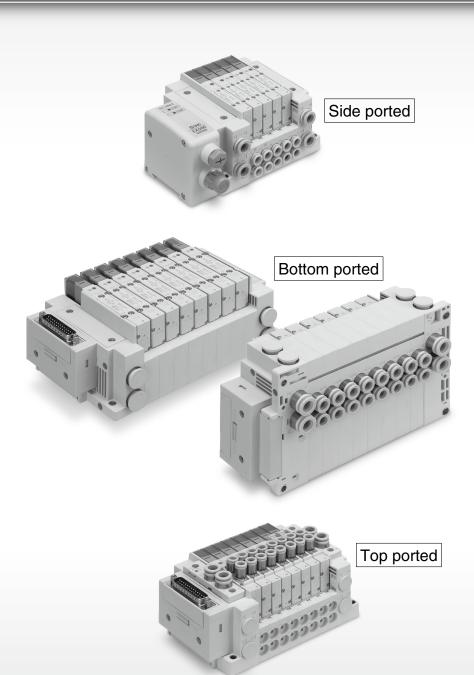



Series SY3000/5000/7000 Type 10, 11, 12 Plug-in Connector Connecting Base

Manifold Specifications

				sub lector	Fla	t ribbon ca	able	Terminal block box	Lead wire	Circular connector		Serial	wiring	
	Model		F type	FW type	P type	PG type J type G type	PH type	T type	L type	M type	S6□ type (EX600)	SA2 type (EX500) S4□ type (EX126)	S□ type (EX250) (EX260)	S3□ type (EX120)
Manifol	d type			Plug-in connector connecting base										
SUP/EX	H port type					C	Common S	UP/EXH (Common	for 3/5 por	t)			
Valve stations			2 t	to 24 static	ns	2 to 18 stations (J/G type: 2 to 16 stations)	2 to 8 stations	2 to 20 stations	2 t	o 24 static	ons	2 to 16 stations	2 to 24 stations	2 to 16 stations
Applicable connector			D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 95.)	Dedicated connector (Refer to page 95.)	wit Conform (Ref Socket: 26 pins	on cable control on the strain resident in the strain resident resident in the strain resident resident in the strain resident resid	lief -C-83503 97.) Socket: 10 pins							
Internal	wiring			Positive common, Negative common										
		SY3000	ø8 One-touch fitting ø5/16" One-touch fitting											
	1(P), 3/5(E) port	SY5000		ø10 One-touch fitting ø3/8" One-touch fitting										
		SY7000							ouch fitting	,				
Port size						1 600			touch fittin					
Size		SY3000		02		•		•	•		ig, ø6 One One-touch		ng	
	4(A), 2(B)	CVEOCO			Q	ø4 One-to	uch fitting,	ø6 One-to	ouch fitting	, ø8 One-t	touch fitting	9		
	port	SY5000			ø5/32	" One-touc	ch fitting, ø	1/4" One-	touch fittin	g, ø5/16"	One-touch	fitting		
		SY7000		ø6	One-touc	h fitting, ø	8 One-tou	ch fitting,	ø10 One-t	ouch fitting	g, ø12 One	-touch fitti	ng	
	SY7000				ø1/4"	One-touc	h fitting, ø	5/16" One	-touch fitti	ng, ø3/8" (One-touch	fitting		
Enclosu	re (Based on I	EC60529)	IP40	IP67*		IP40			IP67*		IP67* I/O unit: partially IP40	IP67* EX500 gateway unit, input unit: IP65	IP67* (Partially IP40)	IP20

^{*} In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 242).

Type 10, 11, 12 Plug-in Connector Connecting Base Series SY3000/5000/7000

Manifold Flow-rate Characteristics Note 1)/Manifold Weight

Valve Seal Type: Rubber Seal

	Port size		Val	ve flow-rate			
Model	1, 3/5	4, 2	1→4/2 (P→	A/B)	4/2→5/3 (A/E	3→E)	Weight: W [g] Note 2) (n: stations)
	(P, E)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	(II. Stations)
SS5Y3-10 (Side ported)	C8	C6	1.4	0.30	1.6	0.19	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.29	1.3	0.19	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	3.3	0.30	3.6	0.17	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	3.3	0.29	4.2	0.26	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.8	0.27	3.8	0.23	66.3n + 417
SS5Y7-10 (Side ported)	C12	C12	6.2	0.23	5.9	0.20	106.6n + 496
SS5Y7-11 (Bottom ported)	C12	C12	6.2	0.25	6.6	0.21	117.9n + 532
SS5Y7-12 (Top ported)	C12	C12	5.6	0.31	5.7	0.24	84.1n + 519

Valve Seal Type: Metal Seal

71	Port size		Val	ve flow-rate			
Model	1, 3/5	4, 2	1→4/2 (P→A/B)		4/2→5/3 (A/B→E)		Weight: W [g] Note 2) (n: stations)
	(P, E)	(A, B)	C [dm ³ /(s·bar)]	b	C [dm ³ /(s·bar)]	b	(II. Stations)
SS5Y3-10 (Side ported)	C8	C6	1.2	0.19	1.3	0.18	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.16	1.3	0.18	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	2.7	0.24	3.1	0.17	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	2.8	0.25	3.5	0.15	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.6	0.18	3.0	0.16	66.3n + 417
SS5Y7-10 (Side ported)	C12	C12	4.4	0.14	4.4	0.17	106.6n + 496
SS5Y7-11 (Bottom ported)	C12	C12	4.6	0.16	4.7	0.18	117.9n + 532
SS5Y7-12 (Top ported)	C12	C12	3.9	0.21	4.1	0.14	84.1n + 519

^{*} Calculation of effective area S and sonic conductance C: S = 5.0 x C

Note 1) The value is for manifold base with 5 stations and individually operated 2-position type.


Note 2) Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.


To obtain the weight with valves attached, add the valve weights given on page 5 for the appropriate number of stations.

Connector Wiring Layout

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring)

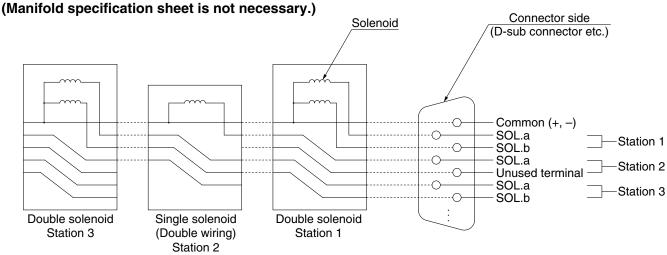

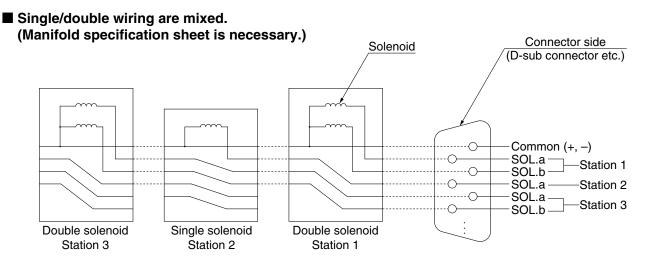

Note) These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.

Type 10 **Side Ported** Type 11 **Bottom Ported**


Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable | PC Wiring |

Series SY3000/5000/7000

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

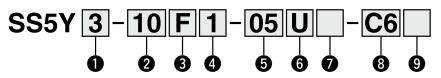


Series SY3000 3 5 SY5000 SY7000

② Typ	ре
10	Side ported
11	Bottom ported*


* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

4 Connector entry direction

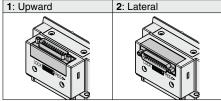


The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 208) separately.

Connector type

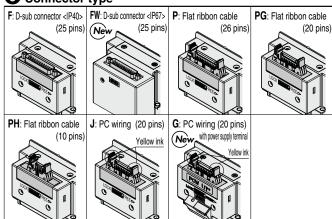

How to Order Manifold Assembly

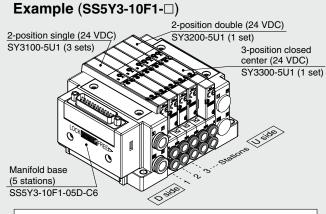

SS5Y3-10F1-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1------3 sets (2-position single part no.) *SY3200-5U1------ 1 set (2-position double part no.) *SY3300-5U1------1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 94. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B

Valve stations

F/FV	F/FW: D-sub connector (25 pins)							
Symbol	Stations	Note						
02	2 stations							
:	:	Double wiring Note 1						
12	12 stations							
02	2 stations	Specified layout Note 2)						
:	:	(Available up to						
24	24 stations	24 solenoids)						

	02	2 SIGILIONS	
Double wiring Note 1)	:	:	Double wiring Note 1)
	12	12 stations	
specified layout Note 2)	02	2 stations	Specified layout Note 2)
(Available up to	:	:	(Available up to
24 solenoids)	24	24 stations	24 solenoids)

Symbol Stations

PG: Flat ribbon cable (20 pins) **PH**: Flat ribbon cable (10 pins)

		\ ' '			
Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
09	9 stations				
02	2 stations	Specified layout Note 2)			
:	:	(Available up to			
18	18 stations	18 solenoids)			

J/G:	J/G: PC wiring (20 pins)							
Symbol	Stations	Note						
02	2 stations							
:	1	Double wiring Note 1)						
08	8 stations							
02	2 stations	Specified layout Note 2)						
:	:	(Available up to						
16	16 stations	16 solenoids)						

	I II. I lat hibbor cable (To pins)							
Symbol	Stations	Note						
02	2 stations							
:	:	Double wiring Note 1)						
04	4 stations							
02	2 stations	Specified layout Note 2)						
:	:	(Available up to						
08	8 stations	8 solenoids)						

P: Flat ribbon cable (26 pins)

Note

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this

is not desired, order with a specified layout. Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4position valves cannot be used where single wiring has been specified.) Note 3) This also includes the number of blanking plate assembly.

port on base side.



6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

SUP/EXH block assembly

	, = , and and a decention ,	
Nil	Nil Internal pilot	
s	Internal pilot,	
	Built-in silencer	
R	External pilot	

* 3/5(E) port is plugged for the built-in silencer type.

Mounting and Option

o mounting and option					
Symbol	Mounting	Option			
	INIOUTILITIE	Name plate	Station number		
Nil	Divers	_	_		
AA	Direct mounting	•	•		
BA	inounting	•	_		
D□	DIM well		_		
A□	DIN rail mounting	•	•		
В□	inounting	•	_		

DIN Rail Option

Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations Specify a longer rail				
:	than the total lengt				
24	For 24 stations	of specified stations.			

Note 1) Enter the number of stations inside \square when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

<u>8</u>	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	g)	
Symbol		A, B port					Type 11/Bo SY5000		
C2			ø2	•	_	_	_	_	
СЗ	İ		ø3.2	•	_	_	_	-	
C4	l		ø4	•	•	_	•		
C6	ig		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0,		ø10	_	_	•	_	•	9 9 9 9
C12			ø12	_	_	•	_	•	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_		
L6		5	ø6	•	•	•	_		
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12	(£)		ø12	_	_	•	_		o late
B4	Elbow Note)	_	ø4	•	•	_	_	_	
B6	<u>8</u>	Downward	ø6	•	•	•	_	_	
B8	ш	VI.	ø8	_	•	•	_	_	
B10		Do	ø10		_	•	_	_	
B12			ø12	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)

0		A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11			ø3/8"		_	•	_	•	o Shi
CM*		Straiç	ght port, mixed sizes	•	•	•	•	•	
LN3		_	ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		g	ø5/16"		•	_	_	_	
LN11	(e)		ø3/8"		_	•	_	_	el Breeze
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_	
BN7	<u>6</u>	Downward	ø1/4"	•	•	_	_	_	
BN9	ш	ow.	ø5/16"		•	_	_	_	
BN11			ø3/8"	_	_	•	_		
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"			

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).


* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.



How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

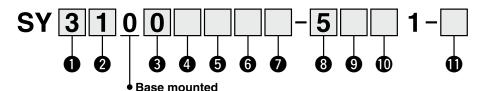

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

	Type of actuation				
1	2-position	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
A *	4-position	N.C./N.C.			
B *	dual 3-port	N.O./N.O.			
C*		N.C./N.O.			

* Only rubber seal type is available for the 4-position dual 3-port valve.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)


 Only metal seal type is available for the high pressure type.

Coil type

900	ii typo
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Manual override

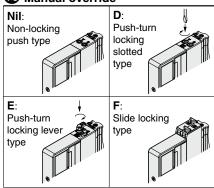

 Refer to page 14 for with the safety slide locking manual override.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	1 71 7
Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

8 Rated voltage

5	24 VDC
6	12 VDC

 Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 VDC.

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S			Positive
Z	•	_	common
NS			Negative
NZ	•		common

- * Only "Z" and "NZ" types are available for with the power saving circuit.
- the power saving circuit.

 * For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

Type of mounting screw

<u> </u>	oo or mounting coron
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 220 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Plug-in Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)

SS5Y3-10F $_2^1$ -Stations $_{D-C4, N3}^{C2}$ (D)

Dimensions: Series SY3000

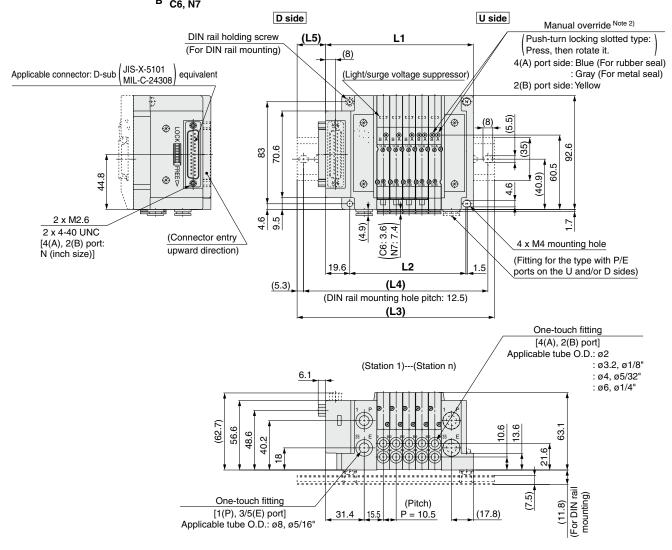

Note 1) These figures show the "SS5Y3-10F2-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5




Dimensions: Series SY5000


Plug-in
Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP40)

SS5Y5-10F₂-Stations D-C6, N7 (D)

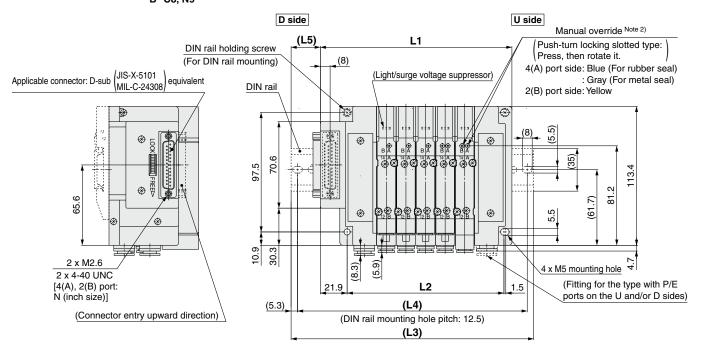

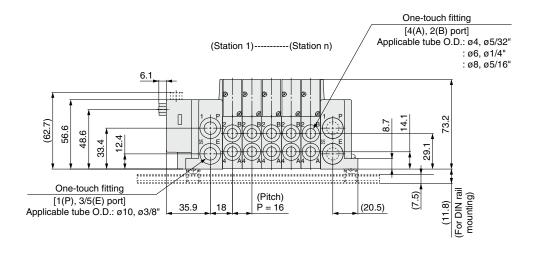

Note 1) These figures show the "SS5Y5-10F2-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22





Dimensions: Series SY7000

Plug-in Connector Connecting Base

D-sub Connector (IP40)

SS5Y7-10F₂¹-Stations B-C₁₀, N₁₁(D)

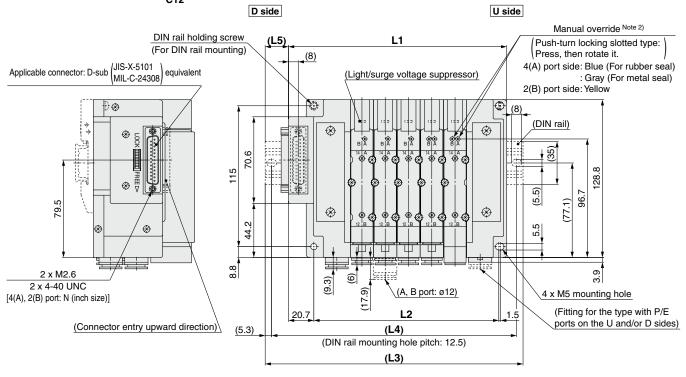

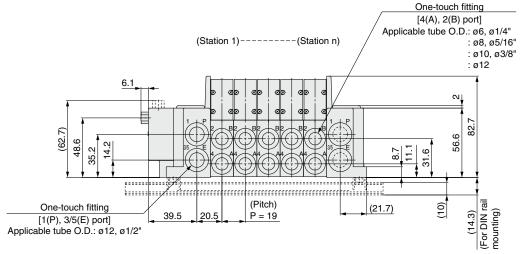

Note 1) These figures show the "SS5Y7-10F2-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

Dimensions: Series SY3000

Plug-in
Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP67)

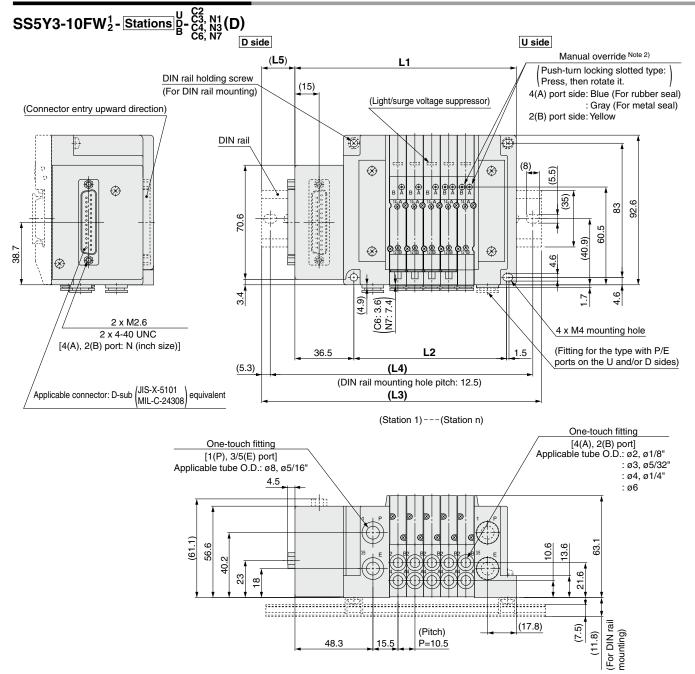

Note 1) These figures show the "SS5Y3-10FW2-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5



Dimensions: Series SY5000

Plug-in Connector Connecting Base

Type 10/Side Ported D-sub Connector (IP67)

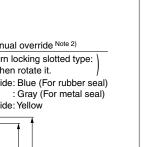


Plug-in Metal Base

Valve

Plug-in Sub-plate

Type 50, 51, 52 Manifold Exploded View

SS5Y5-10FW₂¹-Stations D-C6, N7 (D) D side U side Manual override Note 2) / Push-turn locking slotted type: (L5)L1 Press, then rotate it. DIN rail holding screw (15) 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) (Light/surge voltage suppressor) (Connector entry upward direction) 2(B) port side: Yellow DIN rail <u>(2</u>) ◈ **(X)** 32) 70.6 97.5 113.4 81.2 59.5 ◈ (61 24.2 (8.3) 2 x M2.6 (5.9)2 x 4-40 UNC 4 x M5 mounting hole [4(A), 2(B) port: 36 1.5 (Fitting for the type with P/E (5.3)(L4) N (inch size)] ports on the U and/or D sides) (DIN rail mounting hole pitch: 12.5) Applicable connector: D-sub (JIS-X-5101 MIL-C-24308 equivalent (L3)

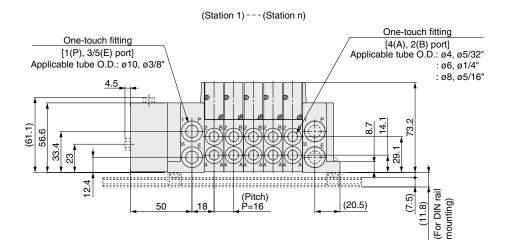

Note 1) These figures show the "SS5Y5-10FW2-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5




Dimensions: Series SY7000


Plug-in Connector Connecting Base

Type 10/Side Ported

D-sub Connector (IP67)

. __________ C6, N7

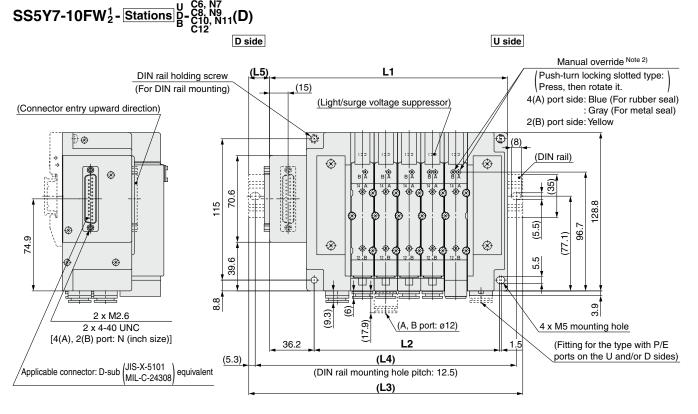

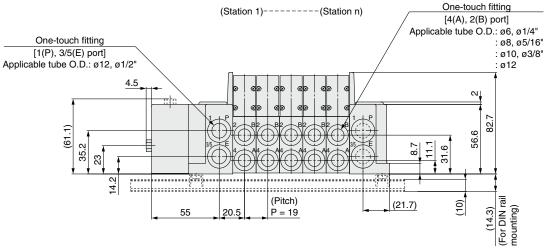

Note 1) These figures show the "SS5Y7-10FW2-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5



Dimensions: Series SY3000

Plug-in Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

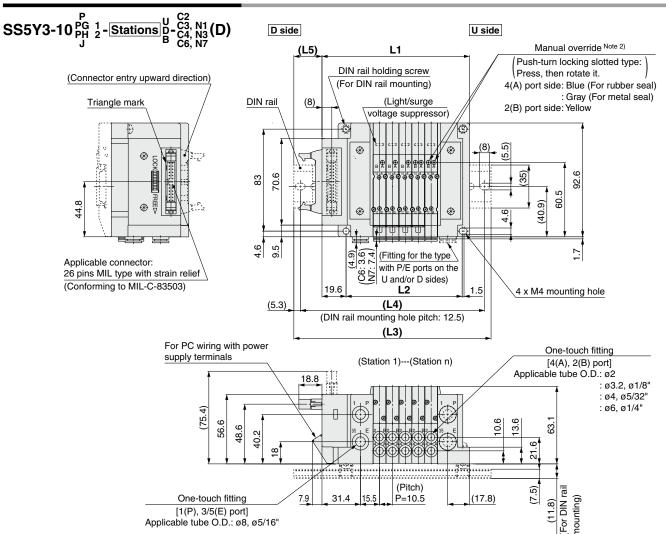


Note 1) These figures show the "SS5Y3-10P2-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

Note 4) Only connectors are different for 10PG, 10PH, 10J and 10G. L1 to L5 dimensions are the same as 10P type.

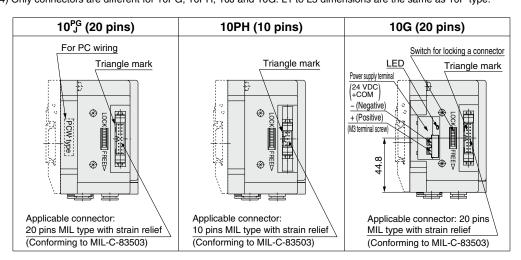


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

Dimensions: Series SY5000


Plug-in Connector Connecting Base

Type 10/Side Ported

Flat Ribbon Cable

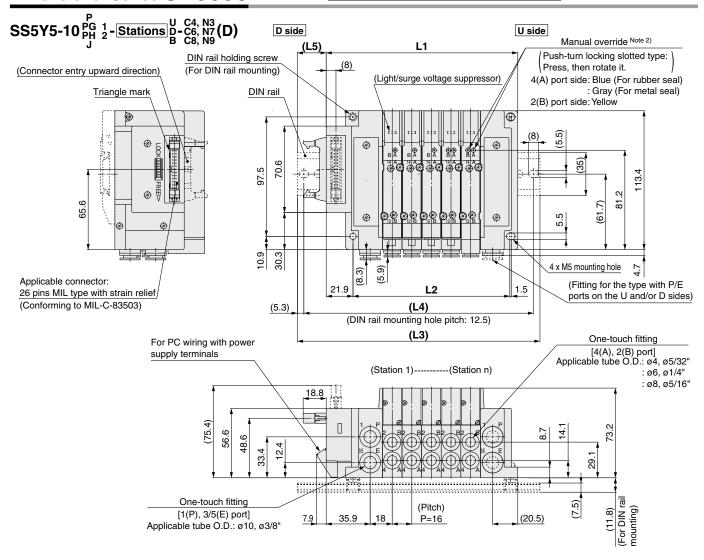


- Note 1) These figures show the "SS5Y5-10P2-05D-C8".
- Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- Note 3) Refer to page 187 for dimensions of A or B port top-ported type.
- Note 4) Only connectors are different for 10PG, 10PH and 10J. L1 to L5 dimensions are the same as 10P type.

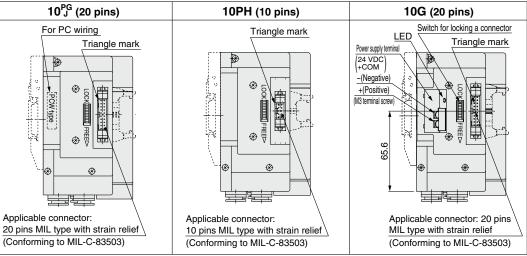


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

Plug-in
Connector Connecting Base

Type 10/Side Ported
Flat Ribbon Cable

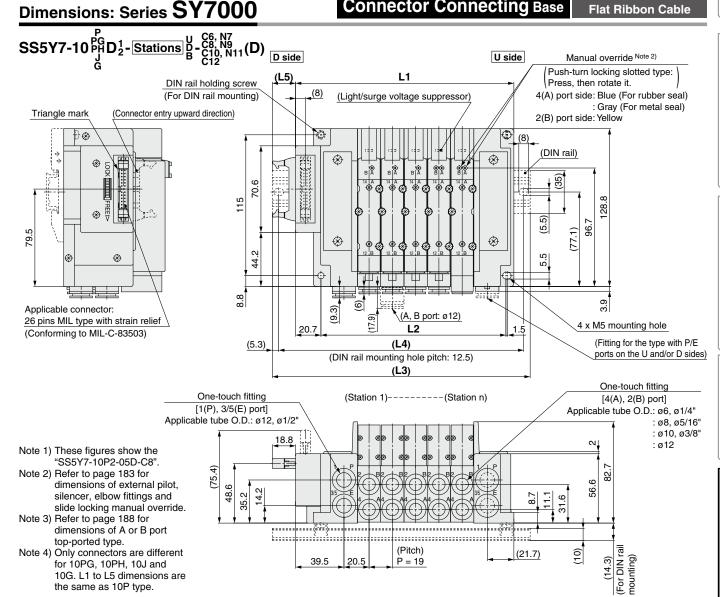

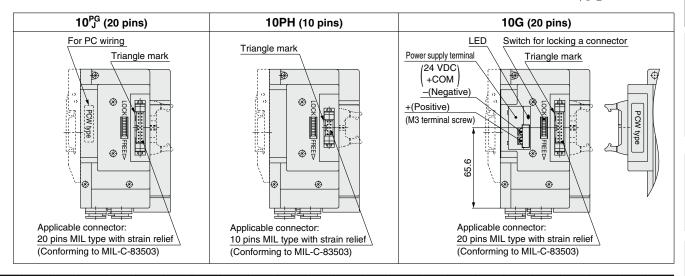

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20


Plug-in Connector Connecting Base

D-sub Connector | Flat Ribbon Cable | PC Wiring |

Type 12 Top Ported

Series SY3000/5000/7000


How to Order Manifold

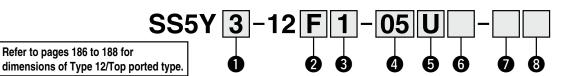

Series

3	SY3000
5	SY5000
7	SY7000

2 Connector type

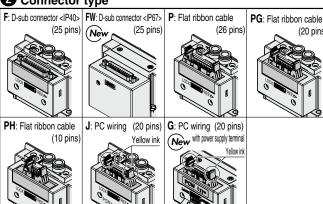


5 P, E port entry

	U Note)	U side (2 to 10 stations)
	D Note)	D side (2 to 10 stations)
	В	Both sides (2 to 24 stations)

Note) 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

How to Order Manifold Assembly

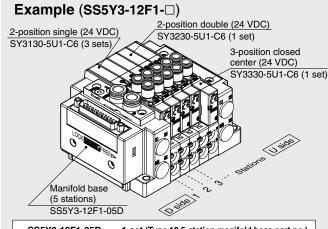

SS5Y3-12F1-05D 1 set (Type 12 5-station manifold base part no.)

*SY3130-5U1-C6 3 sets (2-position single part no.) *SY3230-5U1-C6 1 set (2-position double part no.)

*SY3330-5U1-C6 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

3 Connector entry direction



The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 208) sepa-

4 Valve stations

F/FW: D-sub connector (25 pins) **P**: Flat ribbon cable (26 pins)

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:		Double wiring Note 1)	:	:	Double wiring Note 1)
12	12 stations		12	12 stations	
02	2 stations	Specified layout Note 2)	02	2 stations	Specified layout Note 2)
	:	(Available up to	:	:	(Available up to
24	24 stations	24 solenoids)	24	24 stations	24 solenoids)

PG: Flat ribbon cable (20 pins)

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
09	9 stations					
02	2 stations	Specified layout Note 2)				
:	:	(Available up to				
18	18 stations	18 solenoids)				

J/G: PC wiring (20 pins)

		<u> </u>
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Specified layout Note 2)
:	:	(Available up to
16	16 stations	16 solenoids)

Double wiring Note 1) **04** 4 stations **02** 2 stations Specified layout Note 2) (Available up to 8 solenoids) O8 8 stations Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single

PH: Flat ribbon cable (10 pins)

Symbol Stations 02 2 stations

solenoid will result in an unused control signal. If this is not desired, order with a specified layout. Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single

wiring has been specified.) Note 3) This also includes the number of blanking plate assembly.

6 SUP/EXH block assembly

Nil	Internal pilot
s	Internal pilot, Built-in silencer
R	External pilot

* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)


8 Mounting

<u> </u>						
Nil	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a longer				
	rail than the					
D24	For 24 stations	standard length.				

Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.

P. E port size (One-touch fittings)

T ; E port oizo (ono todon ntango)					
Symbol	SY3000	SY5000	SY7000		
Nil	ø8	ø10	ø12		
N	ø5/16"	ø3/8"	ø1/2"		

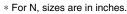




One-touch Fittings/

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

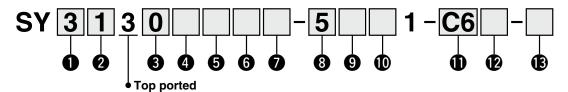

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single			
2	2-position	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
A *	4-position	N.C./N.C.			
B *	dual	N.O./N.O.			
C*	3-port	N.C./N.O.			

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	•
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard With power saving circuit (Continuous duty type)	
T		

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Rated voltage

O mai	ieu voitage
5	24 VDC
6	12 VDC


* Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 VDC.

9 Light/surge voltage suppressor and common specification

With light	Surge voltage suppressor	Common specification	
_			
_		Non-polar	
•			
_		Positive	
•	_	common	
_		Negative	
•		common	
	With light	With light S	

- * Only "Z" and "NZ" types are available for with the power saving circuit.
- * For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

Manual override

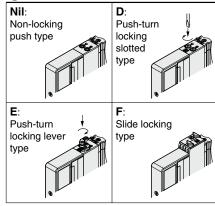

* Refer to page 14 for with safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	
C3 C4	ø3.2	•	_	
	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

•	one reach many			
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•
	•	•		

12 Thread type

	7 1
Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.


13 Type of mounting screw


Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 220 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

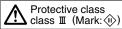

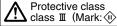


Electrical Wiring Specifications

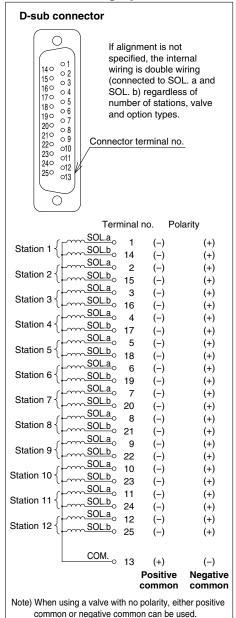

Specified Layout


COM.

(25 pins)

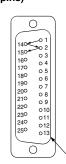

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

Cable Assembly

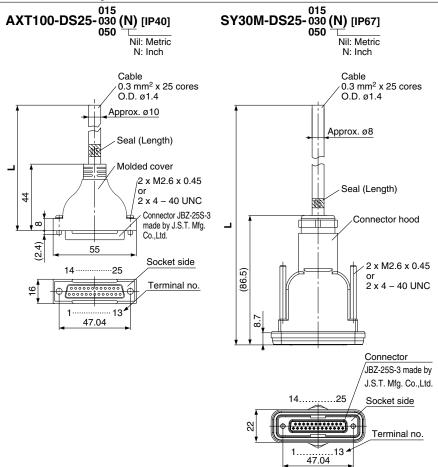

D-sub connector cable assembly [IP40]

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	0-1-1-
3 m	AXT100-DS25-030	Cable 0.3 mm ² x 25 cores
5 m	AXT100-DS25-050	0.011111 1 20 00163

- * When using a standard commercial connector, use a 25-pin type female connector conforming to MIL-C-24308.

 * Cannot be used for movable wiring.
- * Lengths other than the above are also available. Please contact SMC for details.

D-sub connector cable assembly [IP67]

Cable length (L)	Assembly part no.	Note
1.5 m	SY30M-DS25-015	0.11
3 m	SY30M-DS25-030	Cable 0.3 mm ² x 25 cores
5 m	SY30M-DS25-050	0.5 11111 × 25 00165

- * Be sure to use the connector cable assembly in the table, to satisfy enclosure
- * Cannot be used for movable wiring.

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the D-sub connector cable is 20 mm.


Electrical characteristics | Connector Manufacturers' Example

- · Fuiitsu. Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- · Hirose Electric Co., Ltd.

D-sub connector cable assembly terminal numbers

Terminal no.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
Lead wire color	Black	Brown	Red	Orange	Yellow	Pink	Blue	Purple	Gray	White	White	Yellow	Orange	Yellow	Pink	Blue	Purple	Gray	Orange	Red	Brown	Pink	Gray	Black	White
Dot marking	None	None	None	None	None	None	None	White	Black	Black	Red	Red	Red	Black	Black	White	None	None	Black	White	White	Red	Red	White	None



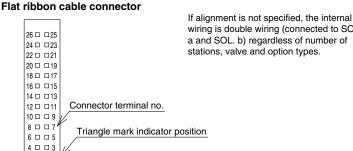

2 🗆 🗆 1

wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

P: Flat ribbon cable (26 pins) <Double wiring> Terminal no. Polarity SOL.a SOL.b o Station 1 -(-)(+)SOL.a 3 (-) (-) (+)Station 2 SOL.b 4 (+)SOL.a (-) (-) 5 (+)SOL.b Station 3 -6 (+)SOL.a (-) (-) 7 (+) Station 4 < SOL.b 8 (+)SOL.a (-) (-) 9 (+)SOL.b Station 5 -10 (+)SOL.a 11 (-) (+) Station 6 < SOL.b o (-)12 (+)SOL.a (-) (-) 13 (+)Station 7 SOL.b 14 (+)SOL.a (-) (-) 15 (+)Station 8 SOL.b o 16 (+)SOL.a (-) (-) 17 Station 9 SOL.b 18 (+)SOL.a 19 (-)(+)Station 10 < SOL.b o (-) 20 (+)SOL.a 21 (+)Station 11 SOL.b (-)22 (+)SOL.a 23 (-)(+)Station 12 { SOL.b 24 (-)(+)COM. 25 (+) COM. 26 (+) Positive Negative common common

Station 1 Solub Solub
Station 1 {
Station 1 SOL.b 2 (-) (+)
Positive Negative

PG: Flat ribbon cable (20 nins)

PC wiring (with power supply terminal) Terminal no. SOL.a 20 20 19 SOL.b Station 1 18 SOL.a 16 SOL.b Station 2 14 SOL.a 12 Station 3 SOL.b_ 16 15 10 SOL.a R Station 4 SOL.b 6 SOL.a_ 19 Station 5 SOL.b 17 12 11 SOL.a 15 SOL.b Station 6 13 SOL.a 11 SOL.b Station 7 9 8 7 SOL.a 7 Station 8 SOL.b 5 6 5 4 3 2 3.4 Triangle mark 1,2 24 VDC 🕒 Power supply terminal

G: Flat ribbon cable (20 pins)

PH: Flat ribbon cable (10 pins) Double wiring

<pre><double wiring=""></double></pre>	ı
Terminal no. Polarity	
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	
COM 9 (+) (-)	
□ 10 (+) (−)	
Positive Negative	
common common	

Note) When using a valve with no polarity, either positive common or negative common can be used.

J: Flat ribbon cable (20 pins) PC wiring <Double wiring>

SOL.a

Terminal no. Polarity

20 (-)

Station 1 <	SOL.b	20 (-)	(+)
	SOL.a	18 (–)	(+)
04-11 0		16 (–)	(+)
Station 2 {	SOL.b_o	14 (–)	(+)
(SOL.a	12 (–)	(+)
Station 3 <	SOL.b	` '	٠,,
	SOL.a	- ()	(+)
Station 4	SOL.b	8 (–)	(+)
Cidion	-m	6 (-)	(+)
04-4 5	SOL.a	19 (-)	(+)
Station 5 {	SOL.b	17 (–)	(+)
(SOL.a_o	15 (-)	(+)
Station 6 <	SOL.b	,	٠,,
	SOL.a	- ()	(+)
Station 7 ≺	SOL.b	11 (–)	(+)
(P * * * * C	9 (–)	(+)
Station 8 ₹	SOL.a	7 (-)	(+)
SIGNOIT O Z	SUL.D	5 (–)	(+)
		- ()	
		4 (–)	(+)
		3 (-)	(+)
	COM.	2 (+)	(-)

1 (+) (-)Positive Negative common common

2 (+)

Note 1) This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20 \rightarrow 18 \rightarrow 16 \rightarrow 14 without skipping or leaving any connectors remaining.

COM.


Note 2) For details on PC wiring system, refer to the WEB catalog or the Best Pneumatics No. 1.

Note 1) This circuits are for the specifications with up to 8 stations of 2-position double, 3-position and 4-position dual 3 port valve. There should be wired in order 20 \rightarrow 18 \rightarrow 16 \rightarrow 14 without skipping or leaving any connectors remaining.

Note 2) For details on PC wiring system, refer to the WEB catalog or the Best Pneumatics No. 1.

Flat Ribbon Cable Assembly

AXT100-FC 20-2 26 3

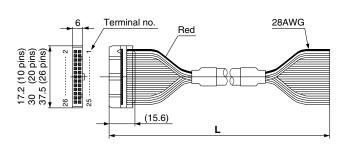

Flat ribbon cable connector assembly


Cable		Assembly part no.	
length (L)	26 pins	20 pins	10 pins
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3

- * When using a standard commercial connector, use a 26-pin, 20-pin or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- * Cannot be used for movable wiring.
- * Lengths other than the above are also available. Please contact SMC for details.

Connector Manufacturers' Example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Specified Layout

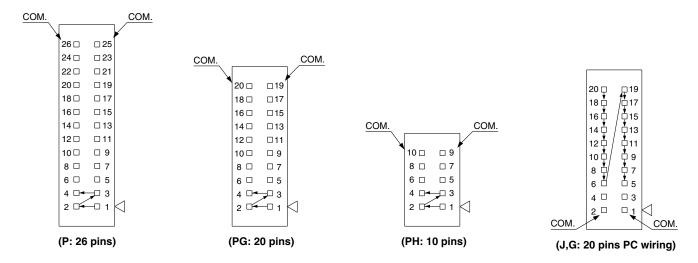

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, 8 or less for PH, and 16 or less for J/G. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.



Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base


Terminal Block Box

Series SY3000/5000/7000

(E RoHS

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

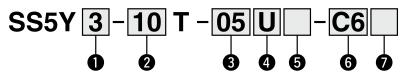

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Туре

<u> </u>	
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

3 Valve stations

Symbol	Stations	Note		
02	2 stations			
:	:	Double wiring Note 1)		
10	10 stations			
02	2 stations	Consisted Invent Note 2)		
:	:	Specified layout Note 2) (Available up to 20 solenoids)		
20	20 stations	(Available up to 20 soleriolus)		

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 P, E port entry

• ,	_ p = ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for **6**.

Mounting and Option

		•		
Symbol	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Divo et	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A□	mounting	•	•	
B□	Inidulting	•	_	

Note 1) Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)


Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

Nil	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations	Charify a langer roll than the	
:	:	Specify a longer rail than the	
24	For 24 stations	total length of specified station	

How to Order Manifold Assembly

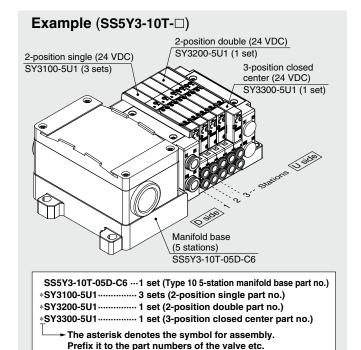

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

• The valve arrangement is numbered as the 1st station from the D side.

Note) When mixing top ported configurations, select from page 106.
In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.



Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Protective class class II (Mark: (ii))

6	Α, Ι	Вр	ort size	(Metri	c/One	-touch	fitting	g)	
				Type ⁻	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	
C4			ø4	•	•	_	•	_	
C6	Straight		ø6	•	•	•	•	•	
C8	Stra		ø8	_	•	•	•	•	
C10			ø10	_	_	•	_	•	9 9 9 5 5
C12			ø12	_	_	•	_	•	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		ırd	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		\supset	ø10	_	_	•	_	_	
L12	jte)		ø12	_	_	•	_		عاملات المعالمة
B4	Elbow Note)	_	ø4	•	•	_	_	_	
B6	<u>6</u>	Downward	ø6	•	•	•	_	_	
B8	ш	W	ø8	_	•	•	_	_	
B10		Do	ø10	_		•	_		
B12			ø12	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

А, В	port siz	e (ind	cn/One-touch fittin	<u>g)</u>
			Type 10/Side ported	Тур

0	A D		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	0 1535
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		횩	ø5/16"	_	•	_	_	_	
LN11	te)		ø3/8"	_	_	•	_	_	ol sassass
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_	
BN7	bov	Downward	ø1/4"	•	•		_	_	
BN9	⊞	Š	ø5/16"		•		_	_	
BN11		٥	ø3/8"	_	_	•	-		To the second se
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)		ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

(One-touch fittings)


Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

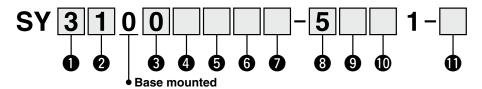

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation			
1	2-position	Single	
2	2-position	Double	
3	3-position	Closed center	
4		Exhaust center	
5		Pressure center	
A *	4-position dual 3-port	N.C./N.C.	
B *		N.O./N.O.	
C*	duai o-port	N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	<u> </u>				
Nil	Standard (0.7 MPa)				
В	Quick response type (0.7 MPa)				
K*	High pressure type (1.0 MPa)				

 Only metal seal type is available for the high pressure type.

Coil type

	, -
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
Nil	_	_				
R	_		Non-polar			
U	•					
S	_		Positive			
Z	•	_	common			
NS	_		Negative			
NZ	•		common			

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

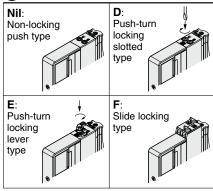

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw							
В	Hexagon socket head cap screw							
K	Round head combination screw (Falling-out-prevention type)							
Н	Hexagon socket head cap screw (Falling-out-prevention type)							

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

Valve


Plug-in Sub-plate


Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Dimensions: Series **SY3000**

SS5Y3-10T-Stations D - C3, N1 (D)

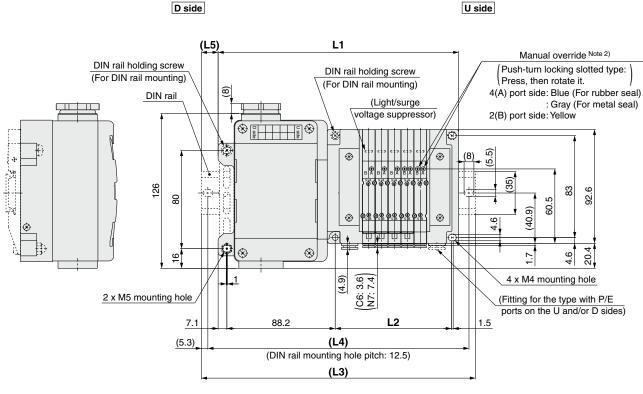

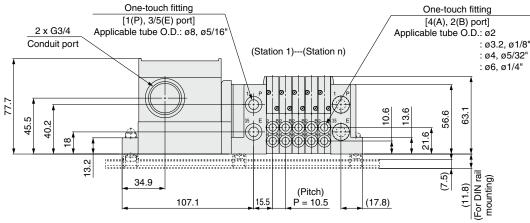

Note 1) These figures show the "SS5Y3-10T-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16





Dimensions: Series SY5000

Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

SS5Y5-10T-Stations D-C6, N7 (D)

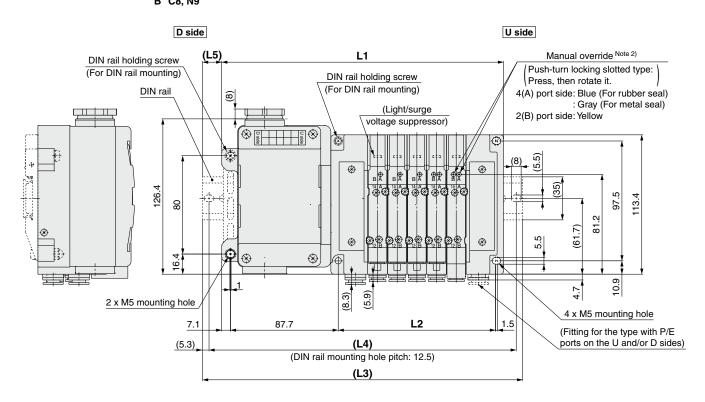

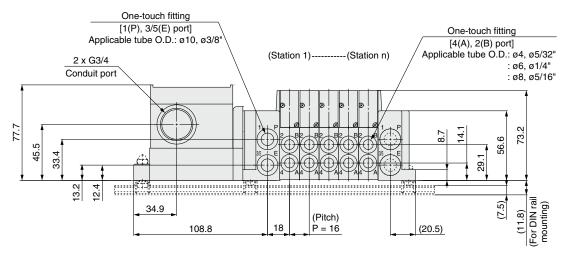

- Note 1) These figures show the "SS5Y5-10T-05D-C8".
- Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5





Plug-in
Connector Connecting Base

Type 10/Side Ported
Terminal Block Box

Dimensions: Series SY7000

SS5Y7-10T-Stations D-C68, N9 C10, N11(D)

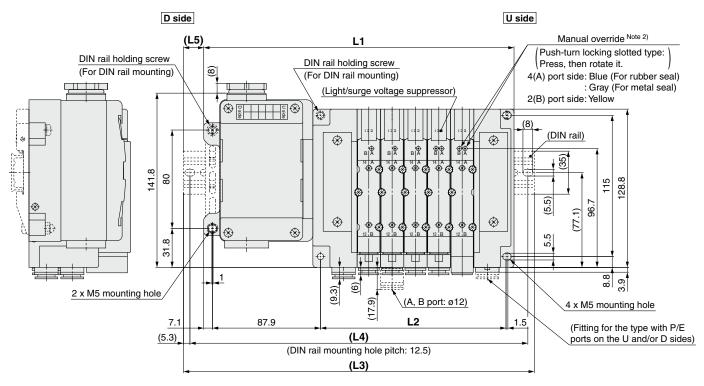

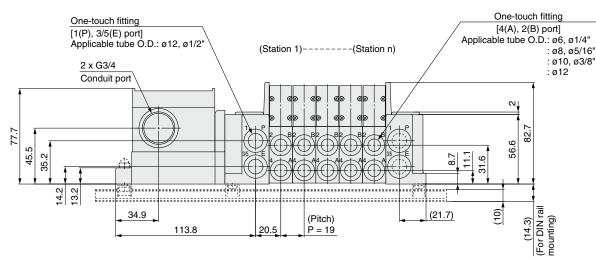

Note 1) These figures show the "SS5Y7-10T-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18



Plug-in Connector Connecting Base


Terminal Block Box

Type 12
Top Ported

Series SY3000/5000/7000



How to Order Manifold

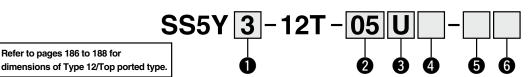

Series

3	SY3000
5	SY5000
7	SY7000

3 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

Note) 4 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

2 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
10	10 stations	-
02	2 stations	Consisted Invest Note 2)
:	:	Specified layout Note 2) (Available up to 20 solenoids)
20	20 stations	(Available up to 20 soleriolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot


- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

	(one todain manage)										
Symbol	SY3000	SY5000	SY7000								
Nil	ø8	ø10	ø12								
N	ø5/16"	ø3/8"	ø1/2"								

* For N, sizes are in inches.

How to Order Manifold Assembly

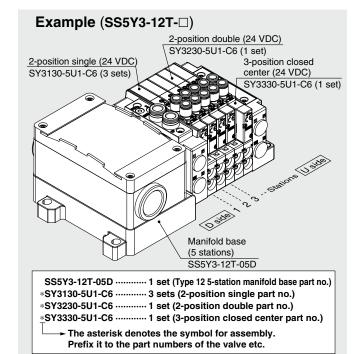

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet

6 Mounting


Nil		Direct mounting							
D		DIN rail mounting							
U		(With DIN rail)							
DO	DIN rail mounting								
D0		(Without DIN rail)							
D3	For 3 stations	Specify a longer rail than							
•	:	the standard length.							
D20	For 20 stations	and diamagna forigin.							

Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.



How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

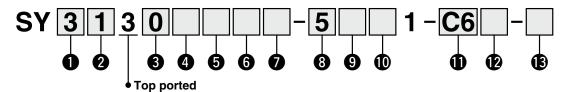

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

2 position	Single			
2-position	Double			
	Closed center			
3-position	Exhaust center			
	Pressure center			
4	N.C./N.C.			
dual 3-port	N.O./N.O.			
	N.C./N.O.			
	2-position 3-position 4-position			

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

* Only metal seal type is available for the high pressure type.

Coil type

Con type		
Nil Standard		
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page . 244 for details.

Rated voltage

5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_	•	Positive	
Z	•		common	
NS	_		Negative	
NZ	•		common	

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

<u> </u>	-
Nil: Non-locking push type	D: Push-turn locking slotted type
E: Push-turn locking lever type	F: Slide locking type

* Refer to page 14 for with the safety slide locking manual override.

多SMC

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
С3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10 C12	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

•	10 00011 111111119 (11	,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF


* Only Nil is available for M5.


13 Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 220 for part numbers of the
- base gasket and mounting screw. * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or

interface regulator.

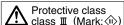


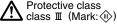

Terminal Block Connection


Step 1. Removing the terminal block cover

Loosen the 4 mounting screws (M4) to remove the terminal block cover.

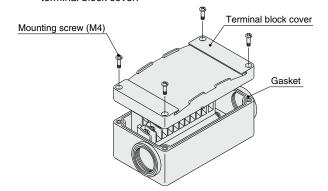

Step 2. The below diagram shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

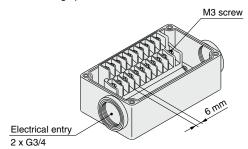


Step 3. Mounting the terminal block cover

Securely tighten the screws to the torque shown in the below table only after confirming that the gasket is installed correctly.

Proper tightening torque N·m
0.7 to 1.2


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G3/4): AXT100-B06A

Electrical Wiring Specifications (IP67 compatible)

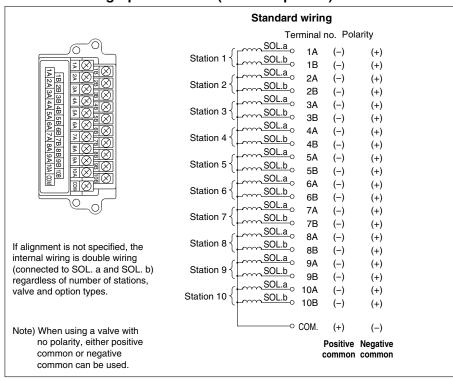

Specified Layout

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

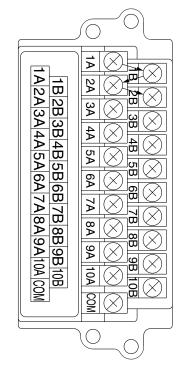

Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base


Lead Wire

Series SY3000/5000/7000

(E RoHS

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

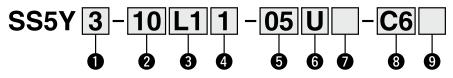

Series

3	SY3000
5	SY5000
7	SY7000

Number of cores (Lead wire)

	uu
L1	34 cores
L2	17 cores
L3	9 cores

2 Туре

<u> </u>	
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

4 Lead wire length

Lead wife leftgui	
1	0.6 m
2	1.5 m
3	3 m

5 Valve stations

<u>(LIL</u>	_)	
Symbol	Stations	Note
02	2 stations	
i	:	Double wiring Note 1)
16	16 stations	
02	2 stations	Specified layout Note 2)
:	:	(Available up to
24	24 stations	32 solenoids)

(L3[□)	
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
04	4 stations	
02	2 stations	Specified layout Note 2)
:	:	(Available up to
08	8 stations	8 solenoids)

(L2□)

<u> </u>	- <i>,</i>	
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	Specified layout Note 2)
:		(Available up to
16	16 stations	16 solenoids)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control


signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Example (SS5Y3-10L11)

How to Order Manifold Assembly

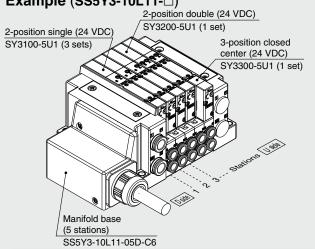

SS5Y3-10L11-05D-C6 \cdots 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1 \cdots 3 sets (2-position single part no.)

The asterisk denotes the symbol for assembly.

Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 116.

In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

6 P. E port entry

<u> </u>	_ p ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.



Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

A. B port size (Metric/One-touch fitting)

<u>U</u>	н,	Р	ort size	(wetri	c/One	-touch	Hund	3)	
Cumbal	nbol A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_	
C3			ø3.2	•	_	_	_	_	
C4			ø4	•	•	_	•	_	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
C6	ight		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0,		ø10	_		•	_	•	
C12			ø12	_		•	_	•	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•		_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		J	ø10	_	_	•	_	_	
L12	(e)		ø12	_	_	•	_	_	Je 158
B4	Elbow Note)		ø4	•	•	_	_	_	
B6	bov	Downward	ø6	•	•	•	_	_	
B8	Ш	N N	ø8	_	•	•	_	_	
B10)o	ø10	_	_	•	_	_	
B12		_	ø12	_		•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

A, B po	rt size (Inch/One-	touch f	itting)

<u>~, -</u>	b port size (inch/one-todon inting)								
Cumbal	A. D. mont		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	
CM*		Straig	tht port, mixed sizes	•	•	•	•	•	
LN3		_	ø5/32"	•	_	_	_	_	
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9			ø5/16"	_	•	_	_	_	
LN11	te)		ø3/8"	_	_	•	_	_	el Basse
BN3	Elbow Note)	5	ø5/32"	•	I	ı	-	_	
BN7	bov	wa	ø1/4"	•	•	l	-	_	
BN9	⊞	Downward	ø5/16"	_	•		_	_	
BN11		۵	ø3/8"		_	•	_	_	To the second
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
			rt size h fittings)	ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

Mounting and Option

		•		
Symbol	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Divoct	_	_	
AA	Direct mounting	•	•	
BA		•	_	
D□	DIN well	_	_	
A□	DIN rail mounting	•	•	
B□		•	_	

DIN Rail Option

Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations Specify a longer rail than the				
:	Example 1 is stations in total length of specified stations.				
24					


Note 1) Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported). Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

^{*} The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

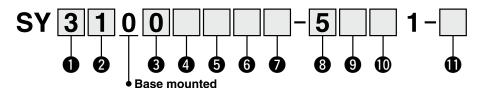

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

ועי	Je oi actuati	OII							
1	O position	Single							
2	2-position	Double							
3		Closed center							
4	3-position	Exhaust center							
5		Pressure center							
A *	4 manitina	N.C./N.C.							
B* C*	4-position dual 3-port	N.O./N.O.							
	addi o-port	N.C./N.O.							

* Only rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	- 7 1	
Nil	Internal pilot	
R	External pilot	

Back pressure check valve
 (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

 Only metal seal type is available for the high pressure type.

Coil type

	ii typo
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
Nil	_	_					
R	_		Non-polar				
U	•						
S	_		Positive				
Z	•		common				
NS	_		Negative				
NZ	•		common				

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

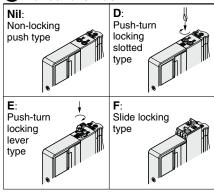

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.


Manifold Options


Plug-in
Connector Connecting Base

Type 10/Side Ported **Lead Wire**

Dimensions: Series SY3000

SS5Y3-10L $_{3}^{1}$ - Stations $_{D}^{U}$ - $_{C4, N3}^{C2}$ (D)

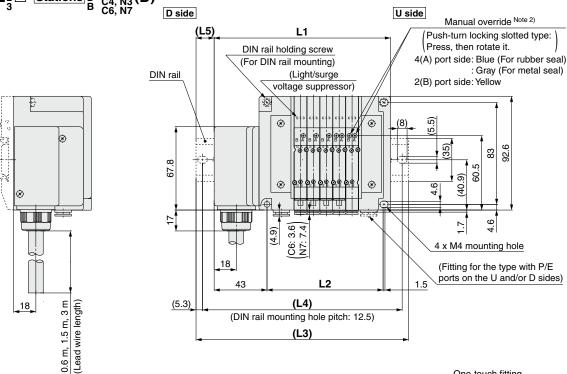

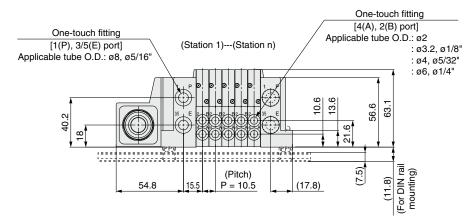

Note 1) These figures show the "SS5Y3-10L1□-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15


Dimensions: Series SY5000

Plug-in
Connector Connecting Base

Type 10/Side Ported
Lead Wire

 $\textbf{SS5Y5-10L}_{3}^{1} \square \textbf{-} \underbrace{\textbf{Stations}}_{\substack{\textbf{D} - \textbf{C6}, \, \textbf{N7} \\ \textbf{D} \in \textbf{C8}, \, \textbf{N9}}}^{\textbf{C4}, \, \textbf{N3}} \textbf{(D)}$

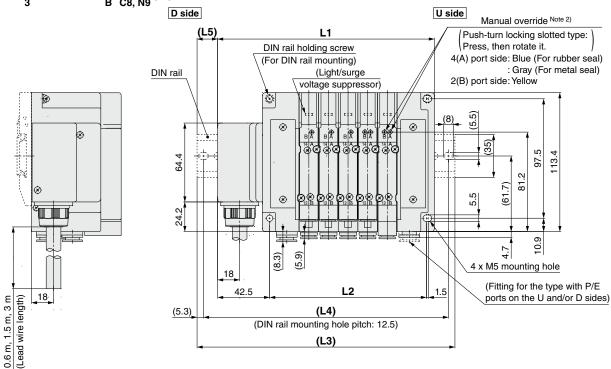

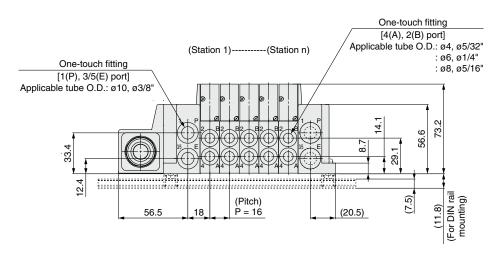

Note 1) These figures show the "SS5Y5-10L1□-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15




Dimensions: Series SY7000

Plug-in
Connector Connecting Base

SS5Y7-10L $_{3}^{1}$ \square -Stations $\bigcup_{\substack{D \ C10,\ N10\ C12}}^{C6,\ N7}$ (D)

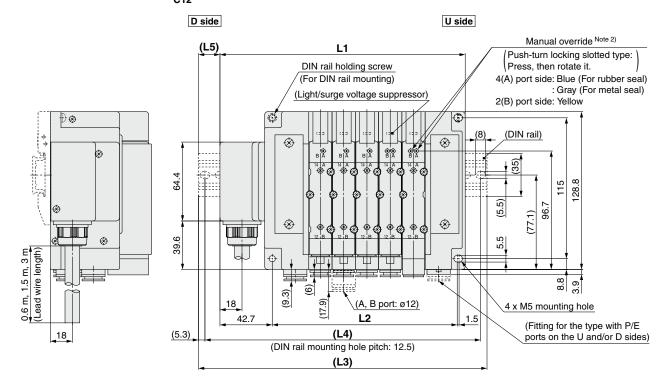

(Station 1)----(Station n)

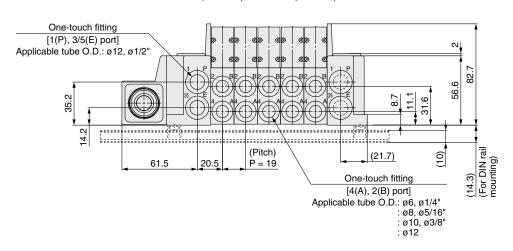

Note 1) These figures show the "SS5Y7-10L1□-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



Plug-in Connector Connecting Base


Lead Wire

Type 12 Top Ported

Series SY3000/5000/7000



How to Order Manifold

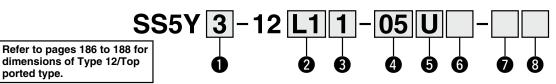

Series

3	SY3000
5	SY5000
7	SY7000

2 Number of cores (Lead wire)

L1	34 cores
L2	17 cores
L3	9 cores

3 Lead wire length


1	0.6 m
2	1.5 m
3	3 m

6 P. E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

How to Order Manifold Assembly

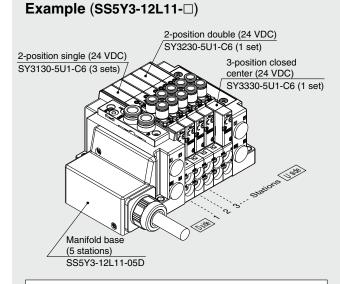

SS5Y3-12L11-05D ··· 1 set (Type 12 5-station manifold base part no.)

*SY3130-5U1-C6 3 sets (2-position single part no.) *SY3230-5U1-C6 1 set (2-position double part no.)

*SY3330-5U1-C6 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Valve stations

(L1□)						
Symbol	Stations	Note] [
02	2 stations		1			
:	:	Double wiring Note 1)				
16	16 stations					
02	2 stations	Specified layout Note 2)				
:	:	(Available up to				
24	24 stations	32 solenoids)				

(L3□)				
Symbol	Stations	Note		
02	2 stations			
:	:	Double wiring Note 1)		
04	4 stations			
02	2 stations	Specified layout Note 2)		
:	:	(Available up to		
08	8 stations	8 solenoids)		

(I 2 🗆)

<u> </u>	<u> </u>				
Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
08	8 stations				
02	2 stations	Specified layout Note 2)			
:	:	(Available up to			
16	16 stations	16 solenoids)			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been

Note 3) This also includes the number of blanking plate assembly.

6 SUP/EXH block assembly

	,,
Nil Internal pilot	
S Internal pilot, Built-in silence	
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000
Nil	ø8	ø10	ø12
N	ø5/16"	ø3/8"	ø1/2"



* For N, sizes are in inches.


Mounting

• mounting				
Nil		Direct mounting		
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	Specify a longer rail than		
:	:	the standard length.		
D24	For 24 stations	ine standard length.		

Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

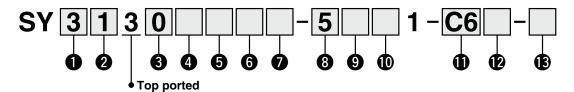

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>			
1	2-position	Single	
2		Double	
3	3-position	Closed center	
4		ion Exhaust center	
5		Pressure center	
A *	4 manikina	N.C./N.C.	
B *	4-position dual 3-port	N.O./N.O.	
C*		N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light Surge voltage suppressor		Common specification	
Nil	_	_		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

 Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

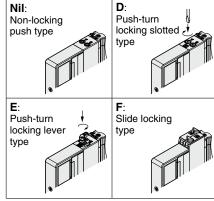

* Refer to page 14 for with the safety slide locking manual override.

1 A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
С3	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

000
UUU
_
_
•
)
)

12 Thread type

	<i>7</i> I
Nil	Rc
F	G
N	NPT
Т	NPTF


* Only Nil is available for M5.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.

 * "R" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

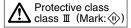

Electrical Wiring Specifications

Lead wire

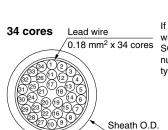

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option

			Lead wire	Printed n (Both sid	
	Lead wire no.	Polarity	color	Type	Color
Station 1 {	SOL.a 1 (- SOL.b 2 (-		Orange	_	Red Black
Station 2	SOL.a 3 (- SOL.b 4 (-	, ,	Light gray	_	Red Black
Station 3	SOL.a 5 (- SOL.b 6 (-		White	_	Red Black
Station 4	SOL.a 7 (- SOL.b 8 (-		Yellow	_	Red Black
Station 5	SOL.a 9 (- SOL.b 10 (-	, ,	Pink	_	Red Black
Station 6	SOL.a 11 (- SOL.b 12 (-		Orange		Red Black
Station 7	SOL.a 13 (- SOL.b 14 (-		Light gray		Red Black
Station 8	SOL.a 15 (- SOL.b 16 (-	, ,	White		Red Black
Station 9	SOL.a 17 (- SOL.b 18 (-		Yellow		Red Black
Station 10	SOL.a 19 (- SOL.b 20 (-		Pink		Red Black
Station 11	SOL.a 21 (- SOL.b 22 (-		Orange		Red Black
Station 12	SOL.a 23 (- SOL.b 24 (-	, ,	Light gray		Red Black
Station 13	SOL.a 25 (- SOL.b 26 (-	, ,	White		Red Black
Station 14	SOL.a 27 (- SOL.b 28 (-		Yellow		Red Black
Station 15	SOL.a 29 (- SOL.b 30 (-		Pink		Red Black
Station 16	SOL.a 31 (- SOL.b 32 (-	, ,	Orange		Red Black
	COM. ○ 33 (+ COM. ○ 34 (+		Light gray		Red Black

Approx. ø8.8

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20°C	10 or more

Note) Cannot be used for movable wiring. The minimum bending radius of the cable is 55 mm.


Specified Layout

Note) For negative common specification, a valve for negative common or a valve without polarity should be used.

Positive Negative common common

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.



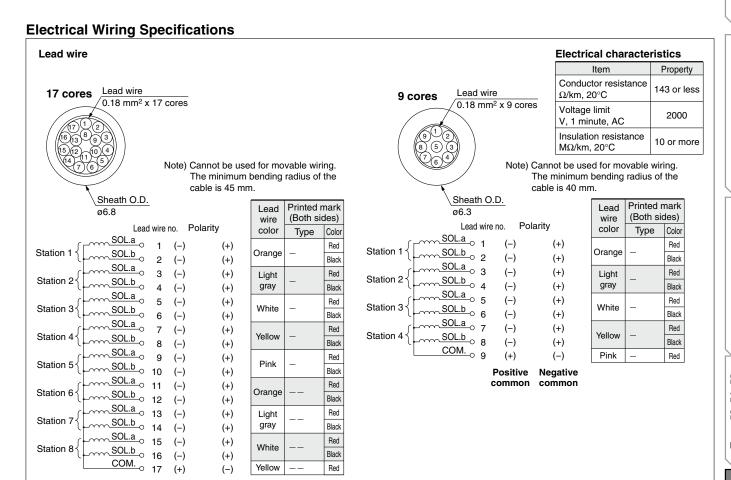

Note) For negative common specification, a valve for negative common or a valve without polarity should be used.

Positive common

Negative

common

Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base

Circular Connector

Series SY3000/5000/7000

((RoHS)

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

1 Series

3	SY3000					
5	SY5000					
7	SY7000					

2 Туре

<u> </u>	30
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

3 Valve stations

Symbol	Stations	Note						
02	2 stations							
:	:	Double wiring Note 1)						
12	12 stations							
02	2 stations	Considered Invested Note 2)						
:	:	Specified layout Note 2) (Available up to 24 solenoids)						
24	24 stations	(Available up to 24 soleriolus)						


Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

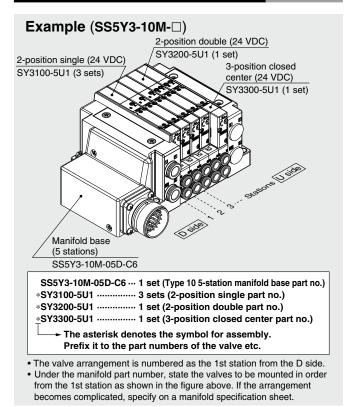

Note) When mixing top ported configurations, select from page 126. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

5 SUP/EXH block assembly

_	
Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for **6**.

Mounting and Option

U IVIO	woulding and option							
Symbol	Mounting	Option						
Symbol	wounting	Name plate	Station number					
Nil	Direct	_	_					
AA	Direct mounting	•	•					
BA	mounting	•	_					
D□	DIN sell	_	_					
A□	DIN rail mounting	•	•					
B□		•	_					

Note 1) Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

Nil		Direct mounting						
0	With	Without DIN rail (with bracket)						
3	For 3 stations	Charles a languar rail than the						
:	:	Specify a longer rail than the						
24	For 24 stations	total length of specified stations.						



6 A, B port size (Metric/One-touch fitting)

Cumbal		^	Dunant	Type ⁻	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		Α,	B port	SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
СЗ			ø3.2	•	_	_	_			
C4			ø4	•	•	_	•	_		
C6	igh		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•	2 19	
C10	"		ø10	_	_	•	_	•	Service Control of the Control of th	
C12			ø12	_	_	•	_	•		
CM*		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		5	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_			
L10	1		5	ø10	_	_	•	_		
L12			ø12	_	_	•	_	_	Jelsen Jelsen	
B4	Elbow Note)		ø4	•	•	_	_	1		
B6	bo	arc	ø6	•	•	•	_	_		
B8	ѿ	Downward	ø8	_	•	•	_			
B10		Do	ø10	_	_	•	_	1		
B12			ø12	_	_	•	_			
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)

Cumbal		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol		Α,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	أ		ø5/32"	•	•	_	•	_	
N7	igh		ø1/4"	•	•	•	•	•	
N9	Straight		ø5/16"		•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	0 593
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7	- 1	Jpward	ø1/4"	•	•	_	_	_	
LN9		鱼	ø5/16"	_	•	_	_	_	
LN11	(e)	_	ø3/8"	_	_	•	_	_	019055
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_	
BN7	bov	wa	ø1/4"	•	•	_	_	_	
BN9	ᇳ	Downward	ø5/16"	_	•	_	_	_	
BN11		۵	ø3/8"	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).


* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting

SMC

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

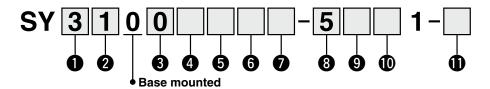

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

	Je oi actuati	OH						
1	2-position	Single						
2	2-008111011	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
A *	4iti	N.C./N.C.						
B* C*	4-position dual 3-port	N.O./N.O.						
	duai o-port	N.C./N.O.						

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

	ıı type
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


-		-
	5	24 VDC
	6	12 VDC

9 Light/surge voltage suppressor and common specification

			-				
Symbol	With light	Surge voltage suppressor	Common specification				
Nil	_	_					
R			Non-polar				
U	•						
S			Positive				
Z	•		common				
NS			Negative				
NZ	•		common				

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

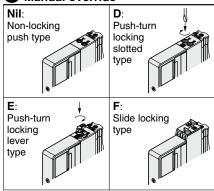

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 220 for part numbers of the
- base gasket and mounting screw.

 * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release




Plug-in
Connector Connecting Base

Type 10/Side Ported
Circular Connector

Dimensions: Series SY3000

SS5Y3-10M-<u>Stations</u> D C3, N1 (D)

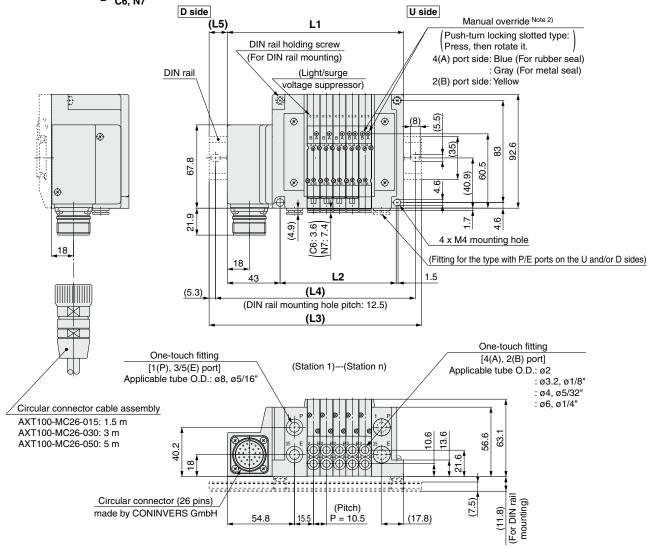

Note 1) These figures show the "SS5Y3-10M-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15

Dimensions: Series SY5000

Plug-in
Connector Connecting Base

Type 10/Side Ported **Circular Connector**

SS5Y5-10M-<u>Stations</u> D-C6, N7 (D) D side U side Manual override Note 2) (L5) Push-turn locking slotted type: Press, then rotate it. DIN rail holding screw 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) : Gray (For metal seal) DIN rail (Light/surge voltage suppressor) 2(B) port side: Yellow (8) ⊗ 32) 97.5 113.4 64.4 81.2 6 24.2 10.9 (8.3) 4 x M5 mounting hole 18 L2 1.5 42.5 (Fitting for the type with P/E ports on the U and/or D sides) (L4) (5.3)(DIN rail mounting hole pitch: 12.5) (L3) Circular connector cable assembly AXT100-MC26-015: 1.5 m AXT100-MC26-030: 3 m AXT100-MC26-050: 5 m One-touch fitting [4(A), 2(B) port] Applicable tube O.D.: ø4, ø5/32" (Station 1)----(Station n) : ø6, ø1/4" One-touch fitting : ø8, ø5/16" [1(P), 3/5(E) port] Applicable tube O.D.: ø10, ø3/8' 56.6 59. (11.8) (For DIN rail mounting) (7.5)Circular connector (26 pins) (Pitch)

Note 1) These figures show the "SS5Y5-10M-05D-C8".

made by CONINVERS GmbH

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

P = 16

(20.5)

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

56.5

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15




Plug-in
Connector Connecting Base

Type 10/Side Ported
Circular Connector

Dimensions: Series SY7000

SS5Y7-10M-Stations D - C8, N9 C10, N11 (D)

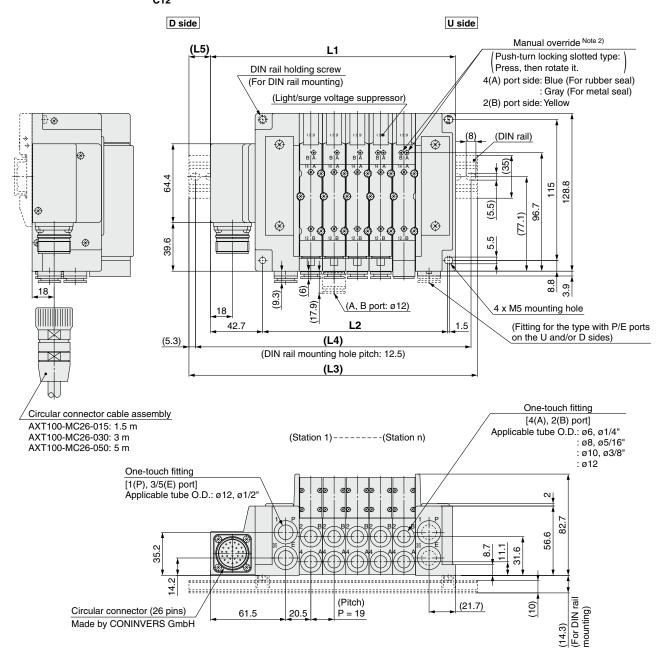

Note 1) These figures show the "SS5Y7-10M-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12




Plug-in Connector Connecting Base

Circular Connector

Type 12 Top Ported

Series SY3000/5000/7000

How to Order Manifold

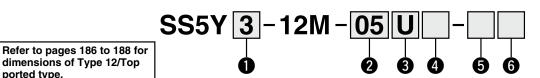

dimensions of Type 12/Top ported type.

Series

3	SY3000
5	SY5000
7	SY7000

Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
12	12 stations	
02	2 stations	Cracified Invent Note 2)
:	:	Specified layout Note 2) (Available up to 24 solenoids)
24	24 stations	(Available up to 24 soleholds)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

P. E port entry

• ,	_ por on y
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


Note) 4 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

4 SUP/EXH block assembly

_	
Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

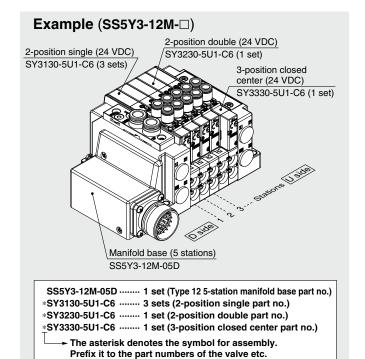

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement

becomes complicated, specify on a manifold specification sheet.

5 P. E port size (One-touch fittings)

<u> </u>	- p - 1 - 1 - 1	10		_
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

^{*} For N, sizes are in inches.

6 Mounting


Nil		Direct mounting
D		DIN rail mounting (With DIN rail)
D0		DIN rail mounting (Without DIN rail)
D3	For 3 station	S Chaoify a langer rail than
:	:	Specify a longer rail than the standard length.
D24	For 24 statio	ns startaard terrigitt.

Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.



How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

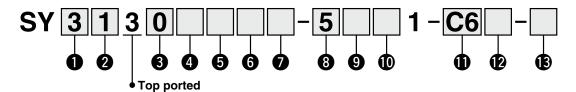

Series

3	SY3000
5	SY5000
7	SY7000

2	Туре	of	actuation
---	------	----	-----------

<u> </u>				
1	O manitian	Single		
2	2-position	Double		
3		Closed center		
4	3-position	Exhaust center		
5		Pressure center		
A *	4iti	N.C./N.C.		
B*	4-position dual 3-port	N.O./N.O.		
C*	duai 3-port	N.C./N.O.		

* Only rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

	71-
0	Rubber seal
1	Metal seal

4 Pilot type

	<i>7</i> 1	
Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

	<u>, , , </u>
Nil	None
Н	Ruilt-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa) B Quick response type (0.7 MF	

* Only metal seal type is available for the high pressure type.

Coil type

	Con type		
Nil	Standard		
Т	With power saving circuit (Continuous duty type)		

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Rated voltage


5	24 VDC	
6	12 VDC	

Use Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil		_	
R	_		Non-polar
U	•		
S	_		Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

* Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

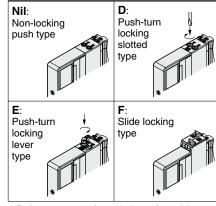

* Refer to page 14 for with the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
М5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

A, B port	SY3000	SY5000	SY7000
ø2	•	_	_
ø3.2	•	_	_
ø4	•	•	_
ø6	•	•	•
ø8	_	•	•
ø10	_	_	•
ø12	_	_	•
	ø2 ø3.2 ø4 ø6 ø8 ø10	ø2	ø2

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type


	<u> </u>
Nil	Rc
F	G
N	NPT
Т	NPTF


* Only Nil is available for M5.

13 Type of mounting screw


		<u> </u>
	Nil	Round head combination screw
B Hexagon socke		Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to page 220 for part numbers of the
- base gasket and mounting screw. * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

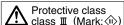

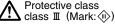


Electrical Wiring Specifications

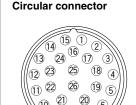

98

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

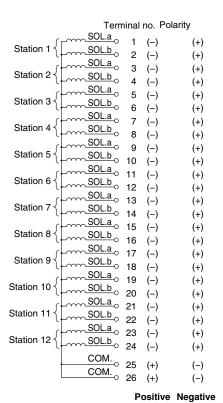


Note) When using a valve with no polarity, either positive common or negative common can be used.

common common

Specified Layout

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

Cable Assembly

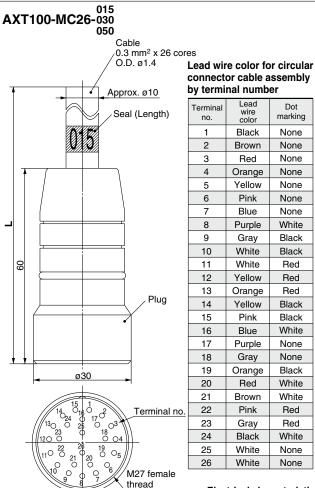

Circular connector cable assembly

Circular Commodici Cabic accombi		
Cable	Assembly part no.	
length (L)	26 pins	
1.5 m	AXT100-MC26-015	
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

- * Cannot be used for movable wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

Electrical characteristics

	Item	Property
	Conductor resistance Ω/km, 20°C	65 or less
	Voltage limit V, 1 minute, AC	1000
	Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the circular connector cable is 20 mm.



Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base


EX500

Series SY3000/5000/7000

(RoHS

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

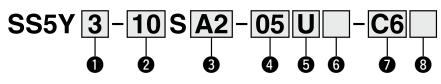

Series

	3	SY3000
	5	SY5000
	7	SY7000

2 Туре

У туре		
10	Side ported	
11	Bottom ported*	

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

SI unit

Davis a NatTM/DDOCIDUS DD/
DeviceNet [™] /PROFIBUS DP/ EtherNet/IP™
(Positive common)
DeviceNet™/PROFIBUS DP/
A2N EtherNet/IP™
(Negative common)

Note) Ensure a match with the common specification of the valve to be used.

4 Valve stations

<u> </u>					
Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
08	8 stations				
02	2 stations	Considered Invested Note 2)			
:	:	Specified layout Note 2) (Available up to 16 solenoids)			
16	16 stations	(Available up to 10 solellolus)			

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

5 P, E port entry


U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

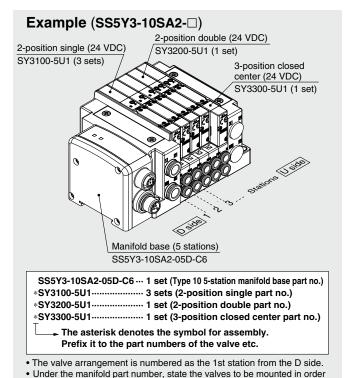

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 136.
In this case, use caution as there is also output on the A and B port on base side.
Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

For details about the EX500 Gateway-type Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 212 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



A, B port size (Metric/One-touch fitting)

	T .		Type	10/Side	nortod	Type 11/Re	ttom ported			
Symbol	A, B port									
-,		, , b port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
СЗ			ø3.2	•	_		_			
C4	_		ø4	•	•	_	•	_		
C6	ig		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•		
C10	0,		ø10	_	_	•	_	•	O GARLES	
C12			ø12	_	_	•	_	•		
CM*		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		5	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10		J	ø10	_	_	•	_	_		
L12	(e)		ø12	_	_	•	_	_	9 9 9 9 9	
B4	Elbow Note)		. _	ø4	•	•		_		
B6	ò	ard	ø6	•	•	•	_			
B8	ѿ	Downward	ø8	_	•	•	_	_		
B10		Do	ø10	_	_	•	_			
B12			ø12	_	_	•	_			
LM*		(Incli	v port, mixed sizes uding upward and wnward piping)	•	•	•	_			
	P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)

	2 port oils (mony one todon many)								
Cumbal	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_	
N3	_		ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	o Sisse
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		鱼	ø5/16"	_	•	_	_	_	
LN11	te)	_	ø3/8"	_	_	•	_	_	0 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
BN3	No.	гd	ø5/32"	•	_	_	_	_	
BN7	Elbow Note)	wa	ø1/4"	•	•	_	_	_	
BN9	Ш	Jownward	ø5/16"	_	•	_	_	_	
BN11		△	ø3/8"	_	_	•	_	_	Toll Toll
LM*		(Incl	w port, mixed sizes uding upward and wwnward piping)	•	•	•	_	_	
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

8 Mounting and Option

U	• mounting and option						
Symbol	Mounting	Option					
Syllibol	wounting	Name plate	Station number				
Nil	Divoct	_	_				
AA	Direct mounting	•	•				
BA	mounting	•	_				
D□	DIN well	_	_				
A□	DIN rail mounting	•	•				
B□	mounting	•	_				

Note 1) Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)


Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option


Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations Specify a longer r				
:	:	than the total length of			
16	specified stations.				

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 225 for part numbers of DIN rail.)

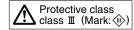

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

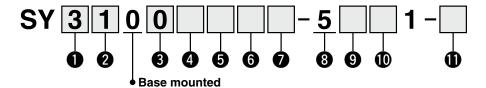

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

Type of actuation					
1	2-position	Single			
2	2-008111011	Double			
3		Closed center			
4	3-position	Exhaust center			
5		Pressure center			
A *	4-position	N.C./N.C.			
B*	dual 3-port	N.O./N.O.			
C*	addi o-port	N.C./N.O.			

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	71 /
Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Oon type									
	Nil	Standard							
	Т	With power saving circuit (Continuous duty type)							

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
R	_		Non-polar			
U	•		Non-polar			
S	_		Positive			
Z	•	_	common			
NS	_		Negative			
NZ	•		common			

* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI unit specification is A2N (negative common).

Manual override

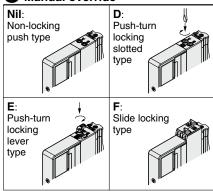

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.





Manifold Options

Plug-in
Connector Connecting Base

SS5Y3-10SA2-Stations

Dimensions: Series SY3000

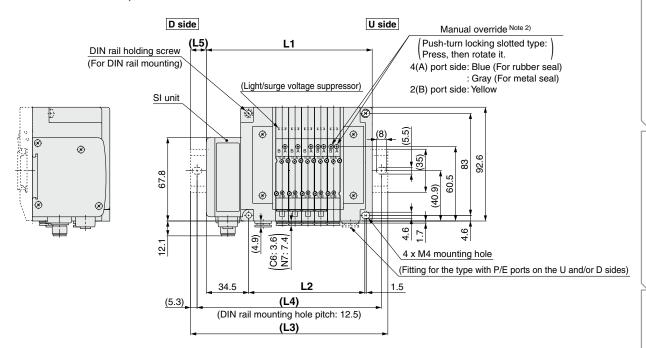

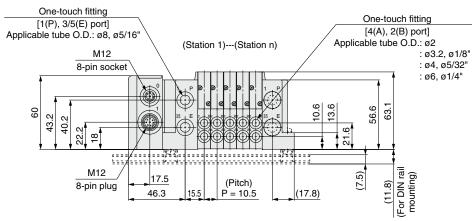

Note 1) These figures show the "SS5Y3-10SA2-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5


Dimensions: Series SY5000


Plug-in
Connector Connecting Base

Type 10/Side Ported

EX500

SS5Y5-10SA2-<u>Stations</u> D - C6, N7 (D)

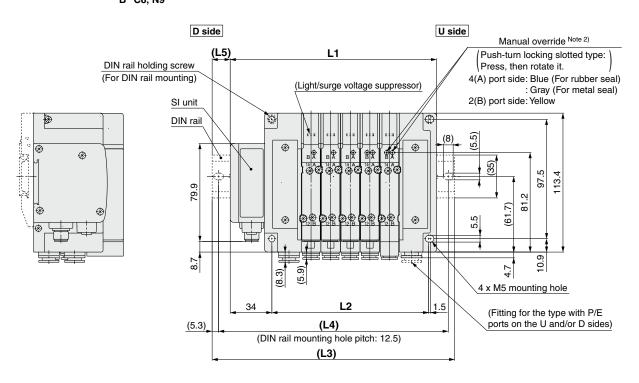

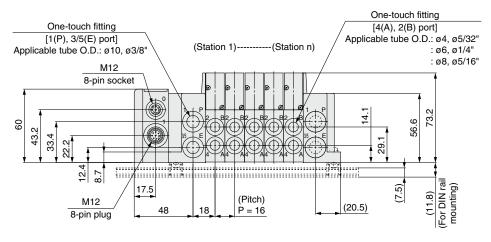

Note 1) These figures show the "SS5Y5-10SA2-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5





Plug-in
Connector Connecting Base


Type 10/Side Ported EX500

SS5Y7-10SA2-<u>Stations</u> D = C68, N9 C10, N11 (D)

Dimensions: Series SY7000

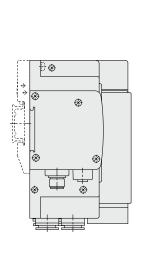

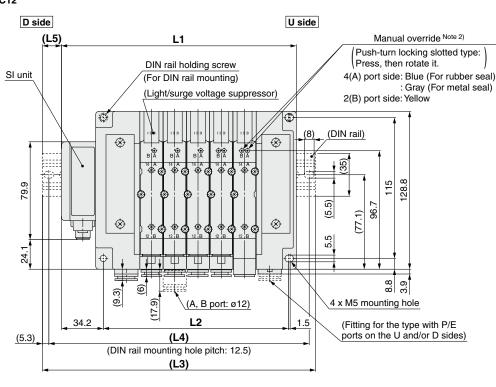

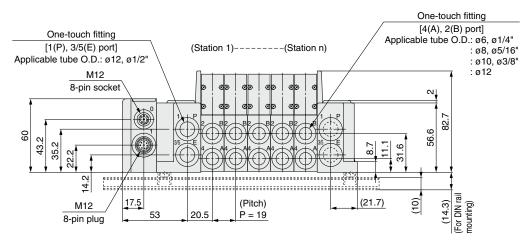

Note 1) These figures show the "SS5Y7-10SA2-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

Plug-in Connector Connecting Base

EX500

Type 12
Top Ported

Series SY3000/5000/7000

(RoHS

How to Order Manifold



ported type.

Series

3	SY3000
5	SY5000
7	SY7000

2 SI unit

0	0 Without SI unit	
	DeviceNet™/PROFIBUS DP/	
A2	EtherNet/IP™	
	(Positive common)	
	DeviceNet™/PROFIBUS DP/	
A2N	EtherNet/IP™	
	(Negative common)	

Note) Ensure a match with the common specification of the valve to be used.

4 P, E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

Note) **5** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

Nil	Internal pilot	
S	Internal pilot/Built-in silencer	
R	External pilot	


- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

3 Valve stations

_	1 411 1 0 1 411 1 1 1 1		
Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring Note 1)	
08	8 stations	-	
02	2 stations	O 'E' LL L'Note 9\	
:	:	Specified layout ^{Note 2)} (Available up to 16 solenoids)	
16	16 stations		

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

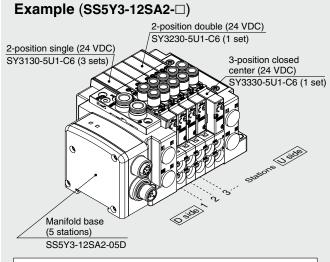


SS5Y3-12SA2-05D ··· 1 set (Type 12 5-station manifold base part no.)
*SY3130-5U1-C6 ······· 3 sets (2-position single part no.)
*SY3230-5U1-C6 ······ 1 set (2-position double part no.)
*SY3330-5U1-C6 ····· 1 set (3-position closed center part no.)

→ The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

6 P, E port size (One-touch fittings)

o i , E port size (one-todon intiligs)				
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

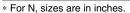

Mounting

Wilding			
Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:	:		
D16	For 16 stations		

Note 1) When mounted on the DIN rail without the SI unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 225 for the DIN rail part number.)

Note 2) Refer to page 247 for the fixation of DIN rail mounting type manifold.


For details about the EX500 Gateway-type Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 212 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



Manifold Options

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

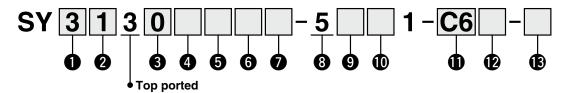

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed center
4 5		Exhaust center
		Pressure center
A *	A* B* 4-position dual 3-port	N.C./N.C.
B*		N.O./N.O.
C*		N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

O i not raise opinosi	
Nil Standard (0.7 MPa)	
B Quick response type (0.7 MPa)	
K* High pressure type (1.0 MPa)	

* Only metal seal type is available for the high pressure type.

Coil type

	, -
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

R Pated voltage


O nai	eu voitage	
5	24 VDC	

Light/surge voltage suppressor and common specification

With light		Common specification
_		Non-polar
•		11011 polai
_		Positive
•	_	common
_		Negative
•		common
	With light — — — — — — — — — — —	With light Surge voltage suppressor

* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, $\dot{\text{U}}$, S or Z when the SI unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI unit specification is A2N (negative common).

Manual override

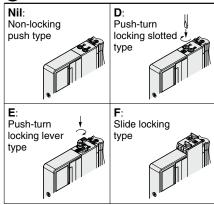

* Refer to page 14 for with the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

	g ()				
Symbol	A, B port	SY3000	SY5000	SY7000	
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	
C4	ø4	•	•	_	
C6	ø6	•	•	•	
C8	ø8	_	•	•	
C10	ø10	_	_	•	
C12	ø12	_	_	•	
				•	

One-touch fitting (Inch)

		one-toden numg (men)					
A, B port	SY3000	SY5000	SY7000				
ø1/8"	•	_					
ø5/32"	•	•					
ø1/4"	•	•	•				
ø5/16"	_	•	•				
ø3/8"	_	_	•				
	ø1/8" ø5/32" ø1/4" ø5/16"	ø1/8" ● ø5/32" ● ø1/4" ● ø5/16" —	Ø1/8"				

12 Thread type


Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

13 Type of mounting screw

Nil Round head combination scre	
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

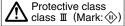



Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base

EX600

Series SY3000/5000/7000

(E RoHS

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

SS5Y3-10S6Q 2-05U-C6 0 0 0 0 0 0

Series

3	SY3000
5	SY5000
7	SY7000

2 Type

10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

3 SI unit

0	Without SI unit
Q	DeviceNet™
N	PROFIBUS DP
٧	CC-Link
ZE	EtherNet/IP™
D EtherCAT F PROFINET	

Note 1) I/O unit cannot be mounted without SI unit.

Note 2) Valve plate which connects manifold and SI unit is not mounted to a valve without SI unit. Refer to the EX600 catalog (CAT.E02-24) for mounting.

4 SI unit output polarity, end plate type

SI unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI unit	Nil	
SI unit positive common	2	3
SI unit negative common	4	5

Note 1) Ensure a match with the common specification of the valve to be used. Note 2) Without SI unit, the symbol is nil.

5 I/O unit stations

Nil	None
1	1 station
:	:
9	9 stations

Note 1) Without SI unit, the symbol is nil. Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by users.

Refer to the attached operation manual for mounting.

6 Valve stations

Symbol	Stations	Note		
02	2 stations			
•	:	Double wiring Note 1)		
16	16 stations			
02	2 stations	Specified layout Note 2) (Available up to 32 solenoids)		
:	:			
24	24 stations	(Available up to 32 solenoids)		

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Mounting and Option

Symbol	Mounting	Option		
Symbol	Woulding	Name plate	Station number	
Nil	Direct	_	_	
AA	mounting	•	•	
BA	mounting	•	_	
D□	DIN rail	_	_	
A	mounting	•	•	
B□	mounting	•	_	

Note 1) Enter the number of stations inside when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

- · · · · · · · · · · · · · · · · · · ·					
Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail than the			
÷	:	total length of specified stations.			
24	For 24 stations	total length of specified stations.			

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 225 for the DIN rail part number.)

P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

* 3/5(E) port is plugged for the built-in silencer type.

* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to pages 213 and 214 in this catalog. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via SMC website, http://www.smcworld.com



<u>8</u>	A, B	port size	(Metric/One-touch	fitting)

-	_								
Cumhal	A D		Type ⁻	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000	
C2			ø2	•	_	_	_	_	_
СЗ			ø3.2	•	_	_	_	_	
C 4			ø4	•	•	_	•	_	
C6	ight		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	2 3 19
C10	0,		ø10	_	_	•	_	•	0000000
C12			ø12	_	_	•	_	•	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		2	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		⋾	ø10	_	_	•	_	_	
L12	(e)		ø12	_	_	•	_	_	ol Same
B4	Elbow Note)		ø4	•	•	_	_		
B6	Poo	Downward	ø6	•	•	•	_	_	
B8	Ш	Š	ø8	_	•	•	_	_	
B10)	õ	ø10	_	_	•	_	_	
B12	2		ø12	_	_	•	_	_	
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		


A, B port size (Inch/One-touch fitting)

_	÷						<u> </u>		1
Cumbal		A, B port		, .	10/Side	•	,,		
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3	_		ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	o Sisse
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		췹	ø5/16"	_	•	_	_	_	
LN11	(e)	_	ø3/8"	_	_	•	_	_	de Sussession
BN3	Š >	rd	ø5/32"	•	_	-	-		
BN7	Elbow Note)	Downward	ø1/4"	•	•		_	_	
BN9		Ш	Š	ø5/16"	_	•	_	_	_
BN11		△	ø3/8"	_	_	•	_	_	Toll Toll
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_			
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".


How to Order Manifold Assembly

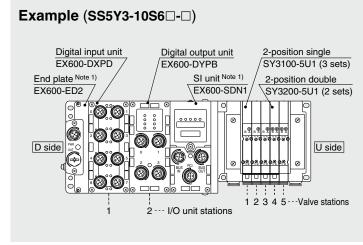

- - The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted, then the I/O units in order from the 1st station as shown in the figure above.
 If the arrangement becomes complicated, specify on a manifold specification sheet.
- Note 1) Do not enter the SI unit part number and the end plate part number together.
- Note 2) When mixing top ported configurations, select from page 148.

 In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

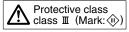




^{*} The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

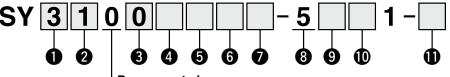

Base mounted

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 ""	Single			
2	2-position	Double			
3	3-position	Closed center			
4		Exhaust center			
5		Pressure center			
A *	4-position dual 3-port	N.C./N.C.			
B*		N.O./N.O.			
C*	duai o-port	N.C./N.O.			

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	эт тапто оршон
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

 Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	<u> </u>		Non-polar
S	_	•	Positive
Z	•	_	common
NS	_		Negative
NZ	•		common

- * Select a valve from R, U, S or Z when the SI unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- *Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

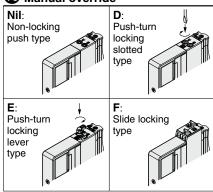

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

	· · · · · · · · · · · · · · · · · · ·
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Manifold Options

Plug-in
Connector Connecting Base

Type 10/Side Ported EX600 (M12 Connector)

Dimensions: Series SY3000

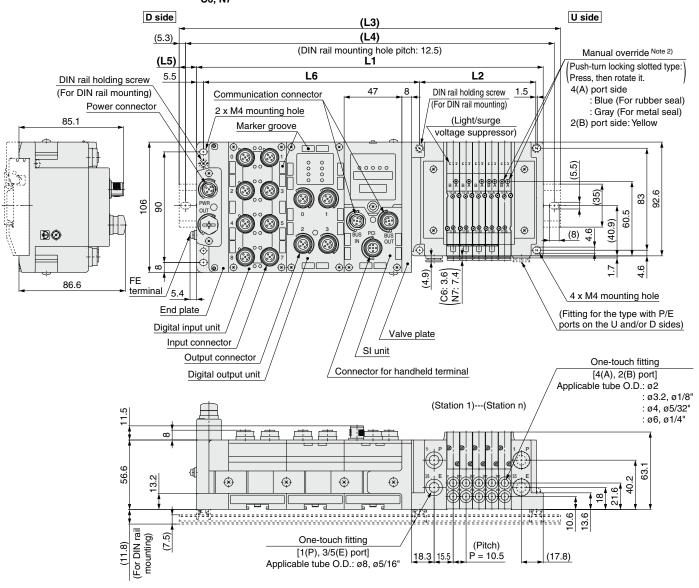

 $L1 = 10.5 \times n1 + 135.5 + 47 \times n2$

 $L2 = 10.5 \times n1 + 42$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 47 \times n2 + 82$ n1: Valve stations n2: I/O unit stations Note 1) These figures show the "SS5Y3-10S6Q22-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


Note 3) Refer to page 186 for dimensions of A or B port top-ported type.


L3: DIN Rail Overall Length

LO. DIIV III	411 O 1	Ciuii	-011	<i>,</i>																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798
9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5

Dimensions: Series SY3000

Plug-in Type 10/Side Ported
Connector Connecting Base Ex600 (7/8 Inch Connector)

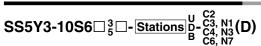

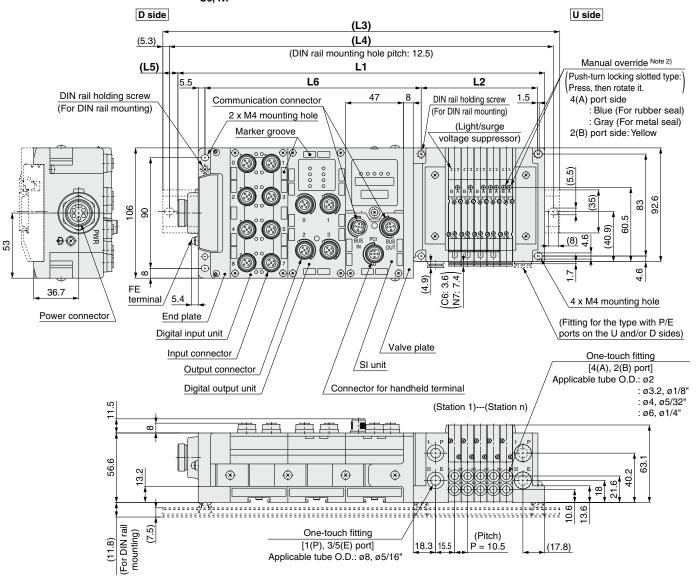

 $L1 = 10.5 \times n1 + 152 + 47 \times n2$

 $L2 = 10.5 \times n1 + 42$

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 82$

n1: Valve stations n2: I/O unit stations Note 1) These figures show the "SS5Y3-10S6Q32-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.


I 3. DIN Rail Overall Length

L3: DIN Ra	all Ov	eran	reni	jui																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5

Plug-in
Connector Connecting Base

Type 10/Side Ported EX600 (M12 Connector)

Dimensions: Series SY5000

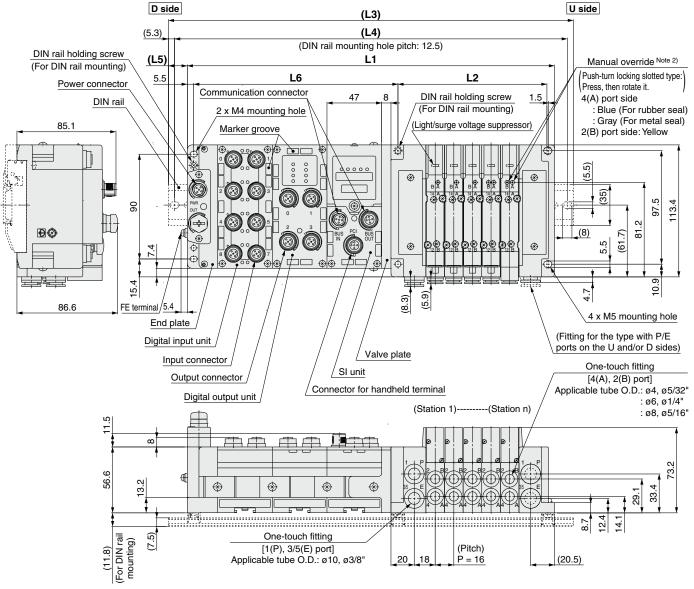

L1 = 16 x n1 + 141.5 + 47 x n2

 $L2 = 16 \times n1 + 48$

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 81.5$

n1: Valve stations n2: I/O unit stations Note 1) These figures show the "SS5Y5-10S6Q22-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.


L3: DIN Rail Overall Length

Lo. Diit iii	• •	O. a	=0	, · · ·																			
Valve stations (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973

Dimensions: Series SY5000

Plug-in Type 10/Side Ported
Connector Connecting Base Ex600 (7/8 Inch Connector)

SS5Y5-10S6 $\square_5^3\square$ -Stations DCC4, N3 (D)

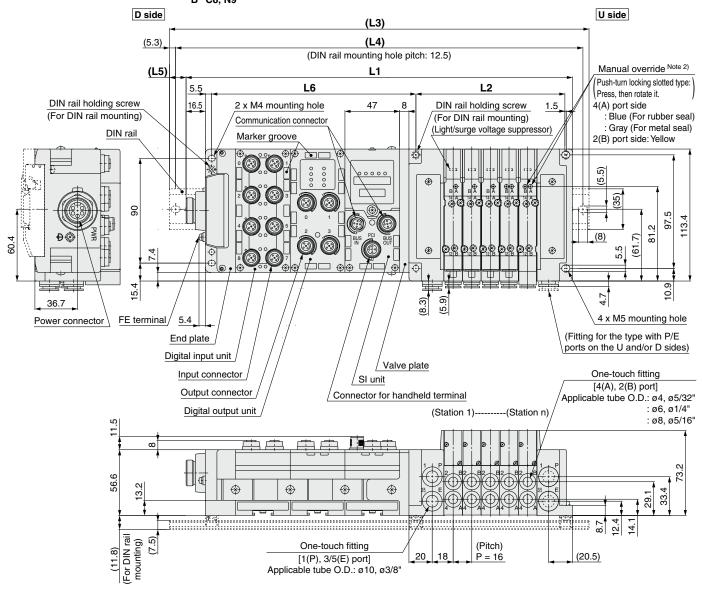

 $L1 = 16 \times n1 + 158 + 47 \times n2$ $L2 = 16 \times n1 + 48$

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 81.5$

n1: Valve stations n2: I/O unit stations Note 1) These figures show the "SS5Y5-10S6Q32-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.


1.2. DIN Pail Overall Length

L3: DIN R	all Ov	eran	Lenç	jtn																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	_

Plug-in Connector Connecting Base

Type 10/Side Ported EX600 (M12 Connector)

Dimensions: Series SY7000

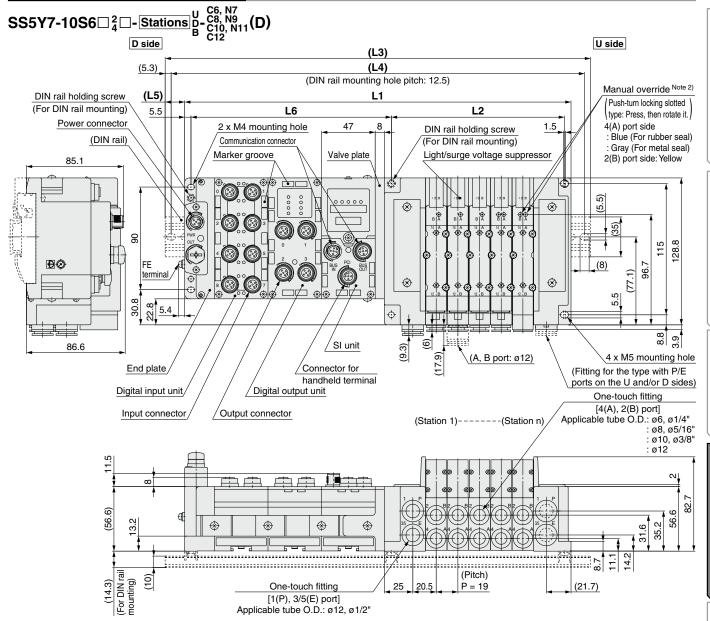

 $L1 = 19 \times n1 + 149.7 + 47 \times n2$

L2 = 19 x n1 + 56

L3 = DIN rail dimension

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 81.7$

n1: Valve stations

n1: Valve stations n2: I/O unit stations

L3: DIN Rail Overall Length

LJ. DIN I	ian C	VCIO	311 LC	znigu																			
Valve I/O stations unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
8	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	_	_	_	_

Note 1) These figures show the "SS5Y7-10S6Q22-05D-C10".

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.


Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual


Dimensions: Series SY7000

Plug-in Connector Connecting Base

Type 10/Side Ported

EX600 (7/8 Inch Connector)

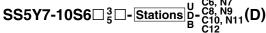

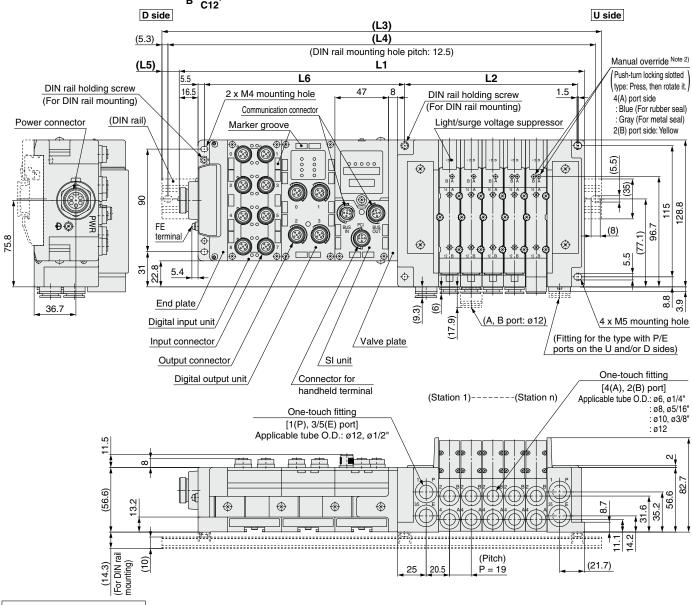

 $L1 = 19 \times n1 + 166.2 + 47 \times n2$

 $L2 = 19 \times n1 + 56$

L4 = L3 - 10.5

L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 81.7$

n1: Valve stationsn2: I/O unit stations

Note 1) These figures show the "SS5Y7-10S6Q32-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length

LO: DIN N		Cian	Leni	gui																			
Valve stations (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	_	_	_	_

Plug-in Connector Connecting Base

EX600

Type 12
Top Ported

Series SY3000/5000/7000 CE

How to Order Manifold

SS5Y 3-12S6 Q 2-05 U-

Refer to pages 186 to 188 for dimensions of Type 12/Top ported type.

3 SY3000 5 SY5000

7 SY7000 2 SI unit

Without SI unit
DeviceNet™
PROFIBUS DP
CC-Link
EtherNet/IP™
EtherCAT
PROFINET

Note 1) I/O unit cannot be mounted without SI unit.

Note 2) Valve plate which connects manifold and SI unit is not mounted to a valve without SI unit. Refer to the EX600 catalog (CAT.E02-24) for mounting.

3 SI unit output polarity, end plate type

SI unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector
Without SI unit	Nil	
SI unit positive common	2	3
SI unit negative common	4	5

Note 1) Without SI unit, the symbol is nil. Note 2) Ensure a match with the common specification of the valve to be used.

4 I/O unit stations

Nil	None
1	1 stations
•	:
9	9 stations

Note 1) Without SI unit, the symbol is nil. Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by users.

Refer to the attached operation manual for mounting.

5 Valve stations

<u> </u>	v aiv c	, stations	
Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring Note 1)	
16	16 stations		
02	2 stations	Creatified Invest Note 2)	
:	:	Specified layout Note 2) (Available up to 32 solenoids)	
24	24 stations	(Available up to 32 soleriolus)	


Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

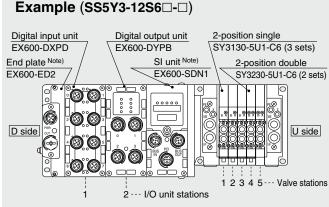

SS5Y3-	12S6Q42-05B 1 set (Type 12 5-station manifold base part no.)
*SY313	0-5U1-C6 3 sets (2-position single part no.)
*SY323	0-5U1-C62 sets (2-position double part no.)
*EX600	-DXPD 1 set I/O unit part number (Station 1)
*EX600	-DYPB 1 set I/O unit part number (Station 2)
I L⊸t	he asterisk denotes the symbol for assembly.
F	Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted, then
 the I/O units in order from the 1st station as shown in the figure above.
 If the arrangement becomes complicated, specify on a manifold specification
 sheet.

Note) Do not enter the SI unit part number and the end plate part number together.

6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C Note)	G
D side (2 to 10 stations)	D	E Note)	Н
Both sides (2 to 24 stations)	В	_	J

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Note) For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N, sizes are in inches.

8 Mounting

Nil	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations	Specify a longer rail
:	:	than the standard length.
D24	For 24 stations	than the standard length.

Note 1) When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 225 for part numbers of DIN rail.)


Note 2) Refer to page 247 for the fixation of DIN rail mounting type manifold.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to pages 213 and 214 in this catalog. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via SMC website, http://www.smcworld.com



How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

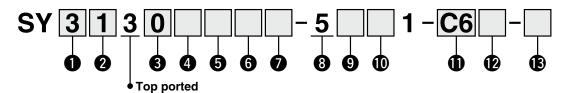

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• Type of detadlien		
1	O manition	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *	4-position dual 3-port	N.C./N.C.
B*		N.O./N.O.
C*		N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

	-···y
Nil	Internal pilot
R	External pilot

5 Back pressure check valve

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

 Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
T	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage

5	24 VDC


Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•	•	
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- * Select a valve from R, U, S or Z when the SI unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI unit output polarity is negative common.
- output polarity is negative common.

 * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

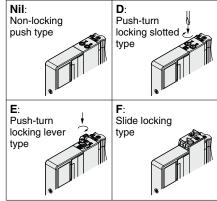

* Refer to page 14 for with the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

A, B port	SY3000	SY5000	SY7000
ø2	•	_	_
ø3.2	•	_	_
ø4	•	•	_
ø6	•	•	•
ø8	_	•	•
ø10	_	_	•
ø12	_	_	•
	Ø2 Ø3.2 Ø4 Ø6 Ø8	ø2	02

One-touch fitting (Inch)

3()				
Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

Only Nil is available for M5.


Type of mounting screw

Nil	Round head combination screw
B Hexagon socket head cap scre	
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 220 for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

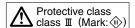

Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base

EX250

Series SY3000/5000/7000

 ϵ

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

SS5Y3-10SQ -05U-C6 0 0 0 0 0 0

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type

<u> </u>	•
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

4 Input block stations

Nil	None		
1	1 station		
:	:		
8	8 stations		

Note) Without SI unit, the symbol is nil. The maximum number of stations is limited for the AS-Interface applicable SI unit.

3 SI unit

0	Without SI unit					
Q		DeviceNet™ (Negative common)				
N	PROFIB	US DP (Negative common)			
V		CC-Link (Positive common)				
TA		supply systems 1 power	8 in/8 out, 31 slave modes			
ТВ	AS-Interface		4 in/4 out, 31 slave modes			
TC	(Negative common)		8 in/8 out, 31 slave modes			
TD	- Commony	supply systems	4 in/4 out, 31 slave modes			
Y	CANopen (Negative common)					
ZE	EtherNe	EtherNet/IP™ (Negative common)				

Note 1) Ensure a match with the common specification of the valve to be used.

Note 2) Input block cannot be mounted without SI unit.

Note 3) The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

5 Input block type

O III par bioon	, 60	
	PNP input NPN inp	
	(Positive common)	(Negative common)
Without input block	Nil	
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

Note) Without SI unit, the symbol is nil.

6 Valve stations

_		, ottation				
Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
16	16 stations					
02	2 stations	Considered Invested Note 2)				
:	;	Specified layout Note 2) (Available up to 32 solenoids)				
24	24 stations					

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)


When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.

- SI unit specification is as follows.

 8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids Note 3) This also includes the number of blanking plate assembly.

Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

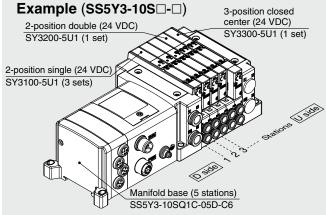

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 156. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B not on base side. P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 215 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



3 A. B port size (Metric/One-touch fitting)

<u> </u>	A, b port size			1110111	o, Onc	touci		<i>)</i>	
Symbol		A, B port			10/Side				
Syllibol	А, Б роп		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	-	_		
СЗ			ø3.2	•	_	_	_	_	08
C4			ø4	•	•	_	•	_	
C6	igh		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	200
C10			ø10	_	_	•	_	•	955
C12			ø12	_	_	•	_	•	- W
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•		_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		5	ø10	_	_	•	_	_	
L12	æ		ø12	_	_	•	_		O D DE PROPERTO
B4	Elbow Note)		ø4	•	•	-	_	1	
B6	ρ	/arc	ø6	•	•	•	_		
B8	Ш	Downward	ø8	_	•	•	_		
B10		õ	ø10	_	_	•	_		
B12			ø12	_	_	•	_	_	The state of the s
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	-	
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)

			0.20 (<u> </u>		
Cumbal		A B nort		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol	A, B port		B port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			ø1/8"	•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	0 1500
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		췹	ø5/16"	_	•	_	_	_	
LN11	(e)	_	ø3/8"	_	_	•	_	_	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_	
BN7	bov	Downward	ø1/4"	•	•	_	_	_	
BN9	Ш	JWC	ø5/16"	_	•	_	_	_	
BN11		۵	ø3/8"	_		•	_		
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

9 Mounting and Option

Symbol	Mounting	Option		
Syllibol	wounting	Name plate	Station number	
Nil	Direct mounting	_	_	
AA		•	•	
BA		•	_	
D□	DIN	_	_	
A□	DIN rail mounting	•	•	
B□		•	_	

DIN Rail Option


Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer			
:	:	rail than the total length of specified			
24	For 24 stations stations.				

Note 1) Enter the number of stations inside \square when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).


Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 225 for part numbers of DIN rail.)

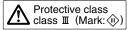

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

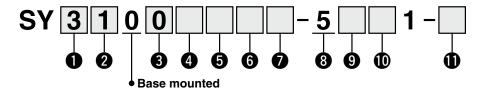

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

G 'y	Je oi actuati	Oli						
1	0 141	Single						
2	2-position	Double						
3		Closed center						
4	3-position	Exhaust center						
5		Pressure center						
A*	4	N.C./N.C.						
B*	4-position dual 3-port	N.O./N.O.						
C*	duai o-port	N.C./N.O.						

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

O FIII	ot valve option
Nil	Standard (0.7 MPa)
	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

	ii type
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
R	_		Non-polar				
U	•		14011-polai				
S		•	Positive common				
Z	•	_					
NS	_		Negative				
NZ	•		common				

- * "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

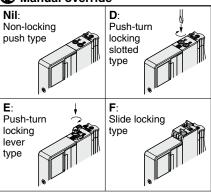

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 220 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




Plug-in Connecting Base

Type 10/Side Ported

Dimensions: Series SY3000 $SS5Y3-10S \square \square - \underline{Stations} \overset{U}{\underset{B}{\text{p}}}$

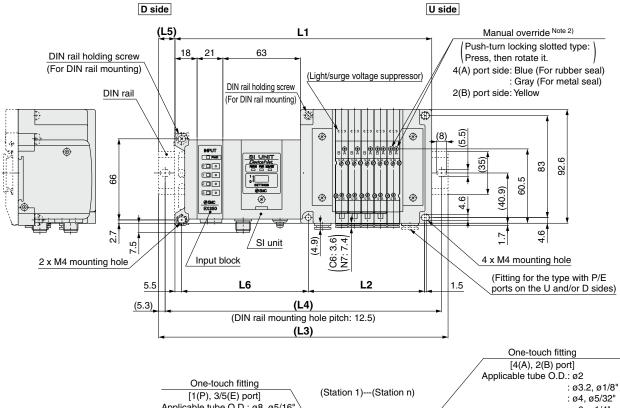

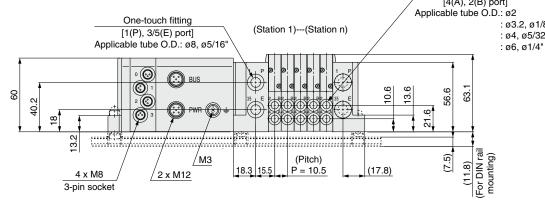

L1 = 10.5 x n1 + 135.5 + 21 x n2

 $L2 = 10.5 \times n1 + 42$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 82$

n1: Valve stations n2: Input block stations

Note 1) These figures show the "SS5Y3-10SQ1A-05D-C6". Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

L3: DIN Ra	ail Ov	erall	Leng	gth																			
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5

Valve

Plug-in Sub-plate

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base


Dimensions: Series SY5000

Plug-in
Connector Connecting Base

Type 10/Side Ported

EX250

SS5Y5-10S - Stations D - C6, N7 (D)

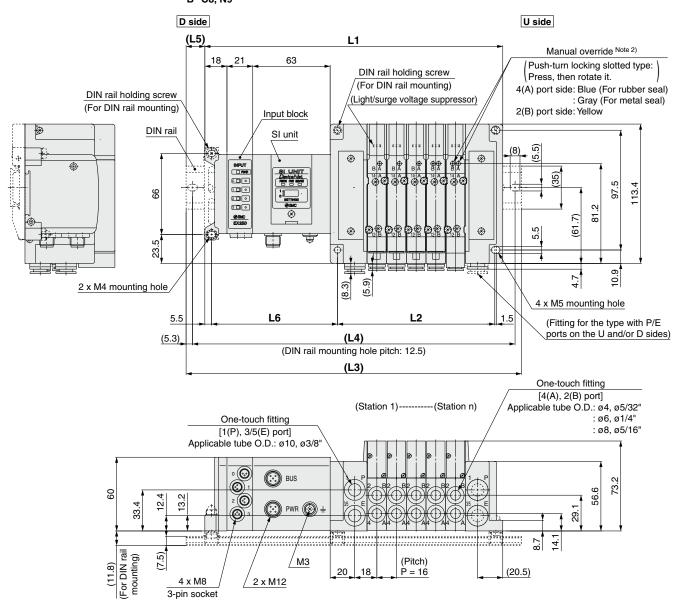

 $L1 = 16 \times n1 + 141.5 + 21 \times n2$

 $L2 = 16 \times n1 + 48$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 81.5$

n1: Valve stations

n2: Input block stations

Note 1) These figures	show the	"SS5Y5-10SQ1A-05D-C8".	

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

L3: DIN Ra	ail Ov	erall	Leng	gth																			
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623
4	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698
8	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5	673	685.5	710.5	723

: ø8, ø5/16"

: ø10, ø3/8"


: ø12


Plug-in Connecting Base

Type 10/Side Ported EX250

 $SS5Y7-10S \square \square - \underline{Stations} \overset{U}{\overset{}{\overset{}{D}}}$

Dimensions: Series SY7000

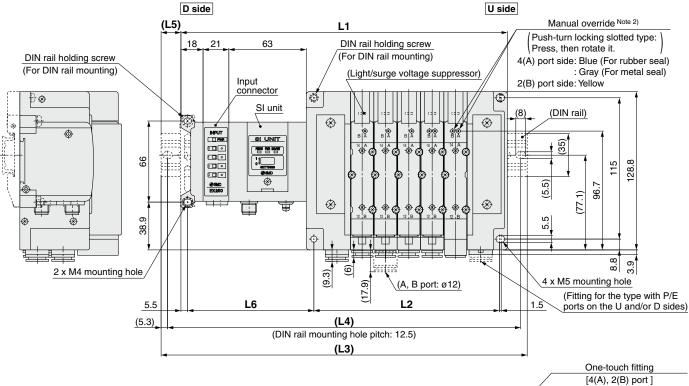

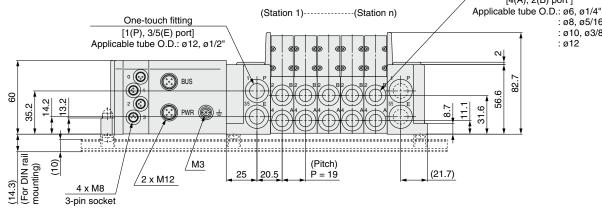

 $L1 = 19 \times n1 + 149.7 + 21 \times n2$

 $L2 = 19 \times n1 + 56$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = 21 \times n2 + 81.7$

n1: Valve stations n2: Input block stations Note 1) These figures show the "SS5Y7-10SQ1A-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

L3: DIN Rail Overall Length

Valve stations (n1)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
stations (n2)																							
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798




Plug-in Connector Connecting Base

Type 12 Top Ported

Series SY3000/5000/7000 < €

How to Order Manifold

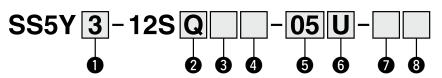

Refer to pages 186 to 188 for dimensions of Type 12/Top ported type.

Series 3

SY3000 SY5000 SY7000

1 Input block stations

Nil	None
1	1 station
:	:
8	8 stations

Note) Without SI unit, the symbol is nil. The maximum number of stations is limited for the AS-Interface applicable SI unit.

4 Input block type

	<i>7</i> 1	
	PNP input	NPN input
	(Positive common)	(Negative common)
Without input block	N	il
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

Note) Without SI unit, the symbol is nil.

2 SI unit

0	Without SI unit					
Q	DeviceNet™ (Negative common)					
N	PROFIB	PROFIBUS DP (Negative common)				
V	CC-I	CC-Link (Positive common)				
TA	AS-Interface	2 power	8 in/8 out, 31 slave modes			
TB		supply	4 in/4 out, 31 slave modes			
TC	(Negative common)	1 power	8 in/8 out, 31 slave modes			
TD]	supply systems	4 in/4 out, 31 slave modes			
Υ	CANopen (Negative common)					
ZE	EtherNe	EtherNet/IP™ (Negative common)				


- Note 1) Ensure a match with the common specification of the valve to be used
- Note 2) Input block cannot be mounted without SI unit.
- Note 3) The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

5 Valve stations

$\overline{}$, o tax ii o i i o
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	-
02	2 stations	O:#:
:	:	Specified layout Note 2)
24	24 stations	(Available up to 32 solenoids)

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
 - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows.
 - 8 in/8 out specification: Max. 8 solenoids 4 in/4 out specification: Max. 4 solenoids
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

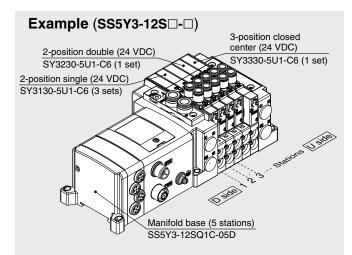

 $\ensuremath{\mathsf{SS5Y3\text{-}12SQ1C\text{-}05D}}$ \cdots 1 set (Type 12 5-station manifold base part no.) *SY3130-5U1-C6------ 3 sets (2-position single part no.) *SY3230-5U1-C6------ 1 set (2-position double part no.) *SY3330-5U1-C6------ 1 set (3-position closed center part no.) The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

· Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C Note)	G
D side (2 to 10 stations)	D	E Note)	Н
Both sides (2 to 24 stations)	В	_	J

- For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry.
- (Example: When the P, E port entry is D side, the silencer exhaust port is U side.) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

 Note) For SUP/EXH block assembly specifications, built-in silencer types will have P

P. E port size (One-touch fittings)

			<u> </u>	
Symbol	SY3000	SY5000	SY7000	D
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

standard length.

* For N, sizes are in inches.

For 24 stations

D24

Nil Direct mounting DIN rail mounting (With DIN rail) D DIN rail mounting (Without DIN rail) D₀ D3 For 3 stations Specify a longer rail than the

Note 1) If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 225 for the DIN rail part number.)
Refer to page 247 for the fixation


of DIN rail mounting type

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 215 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

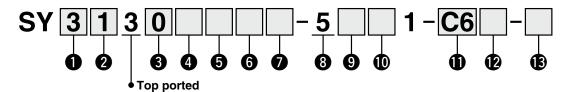

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• ',	o oi aotaati	VII.
1	0	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *	4 manikina	N.C./N.C.
B*	4-position dual 3-port	N.O./N.O.
C*	duai 5-port	N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Metal seal
1	Rubber seal

4 Pilot type

Nil	Rubber seal	
R	Metal seal	

Back pressure check valve (Built-in valve type)

	<u>, , , </u>
Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

	• con type		
Nil Standard		Standard	
T With power saving circuit (Continuous duty		With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		
S	_	•	Positive
Z	•	•	common
NS	_		Negative
NZ	•		common

- * "R" and "U" are applicable for every SI unit. However, "S" and "Z" can be used only for CC-Link applicable unit and "NS" and "NZ" are for units which are not CC-Link applicable.
- * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

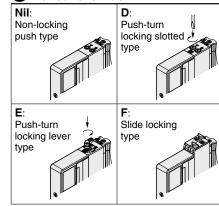

* Refer to page 14 for with the safety slide locking manual override.

多SMC

A, B port size

Thread piping

Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

	one reach many					
Symbol	A, B port	SY3000	SY5000	SY7000		
C2	ø2	•	_	_		
C3	ø3.2	•	_	_		
C4	ø4	•	•	_		
C6	ø6	•	•	•		
C8	ø8	_	•	•		
C10	ø10	_	_	•		
C12	ø12	_	_	•		
				•		

One-touch fitting (Inch)

	3 ()					
Symbol	A, B port	SY3000	SY5000	SY7000		
N1	ø1/8"	•	_	_		
N3	ø5/32"	•	•	_		
N7	ø1/4"	•	•	•		
N9	ø5/16"	_	•	•		
N11	ø3/8"	_	_	•		

Thread type


Nil	Rc
F	G
N	NPT
T	NPTF

* Only Nil is available for M5.

13 Type of mounting screw

<u> </u>	
Nil Round head combination scre	
B Hexagon socket head cap screv	
K Round head combination screw (Falling-out-prever	
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

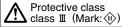

Type 10
Side Ported
Type 11
Bottom Ported

Plug-in Connector Connecting Base


EX260

Series SY3000/5000/7000

((RoHS)

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

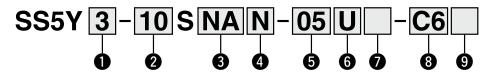

Series

3	SY3000
5	SY5000
7	SY7000

2 Type

G IN	<i>)</i>
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Type Manifold" (from page 189).

3 SI unit specifications

Of anit specifications					
Symbol	Protocol	Number of outputs	Communication connector		
0	Without SI unit				
QA	DeviceNet™	32	M40		
QB	Devicemet	16	M12		
NA		32	M12		
NB	PROFIBUS	16	IVI I Z		
NC	DP	32	D-sub Note)		
ND		16	D-Sub (1919)		
VA	CC-Link	32	M12		
VB	CC-LINK	16	IVI I Z		
DA	Ethan CAT	32	M12		
DB	EtherCAT	16	IVI I Z		
FA	PROFINET	32	M12		
FB	PROFINET	16	IVI I Z		
EA	EtherNet/IP™	32	M10		
EB	Eulenvel/IP***	16	M12		

Note) IP40 for the D-sub applicable communication connector specification. DIN rail cannot be mounted without SI unit.

4 SI unit output polarity

Nil	Positive common (NPN)
N	Negative common (PNP)

Note 1) Ensure a match with the common specification of the valve to be used.

Note 2) Without SI unit, the symbol is nil.

5 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
16	16 stations	-				
02	2 stations	On a sifing all leaves at Note 2)				
:	÷	Specified layout Note 2)				
24	24 stations	(Available up to 32 solenoids)				

In the case of the 16-output SI unit

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
08	8 stations	· ·				
02	2 stations	Q (f) II (Note 2)				
:	:	Specified layout Note 2)				
16	16 stations	(Available up to 16 solenoids)				

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet.
(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 8.

Mounting and Option

Symbol Mounting Option Name plate Station number AA DD DIN rail mounting DIN rail mounting

Note 1) Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

 $B\square$

Nil	Standard length						
0	With	Without DIN rail (with bracket)					
3	For 3 stations	Charify a langer rail than the					
:		Specify a longer rail than the					
24	For 24 stations	total length of specified stations.					

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 225 for part numbers of DIN rail.)

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 216 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



8 A, B port size (Metric/One-touch fitting)

				•						
Cumbal	A D mout		Type ⁻	10/Side	ported	Type 11/Bo	ttom ported			
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
СЗ			ø3.2	•	_	_	_	_		
C4			ø4	•	•	_	•	_		
C6	ight		ø6	•	•	•	•	•		
C8	Straight		ø8	_	•	•	•	•	2 19	
C10	0,		ø10	_	_	•	_	•	O S S	
C12			ø12	_	_	•	_	•	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	
CM*		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6		2	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10	1		⋾	ø10	_	_	•	_	_	
L12	(e)		ø12	_	_	•	_	_	Jej San	
B4	Elbow Note)		ø4	•	•	_	_	_		
B6	ò	ard	ø6	•	•	•	_	_		
B8	ѿ	Downward	ø8	_	•	•	_	_		
B10		0	ø10	_	_	•	_		300	
B12			ø12	_	_	•	_			
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12				


A, B port size (Inch/One-touch fitting)

		_	<u> </u>				<u> </u>		
Cumbal	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_	
N3	_		ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	ol Sassas
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_	_	
LN7		Jpward	ø1/4"	•	•	_	_	_	
LN9		췹	ø5/16"	_	•	_	_	_	
LN11	(e)	_	ø3/8"	_	_	•	_	_	019055
BN3	Elbow Note)	гd	ø5/32"	•	_	_	_	_	
BN7	bov	Downward	ø1/4"	•	•	_	_	_	
BN9	Ш	JWC	ø5/16"	_	•	_	_	_	
BN11		ŏ	ø3/8"	_	_	•	_	_	To be
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".


How to Order Manifold Assembly

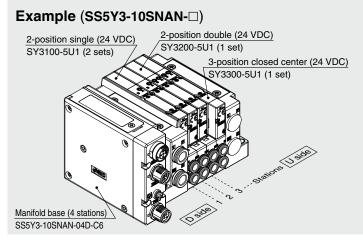

- SS5Y3-10SNAN-04D-C6···1 set (Type 10 4-station manifold base part no.)
 *SY3100-5U1··········2 sets (2-position single part no.)
 *SY3200-5U1··········1 set (2-position double part no.)
- *SY3200-5U1------1 set (2-position double part no.)
 *SY3300-5U1------1 set (3-position closed center part no.)
 - →The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above.
 If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 164.

Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

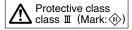




^{*} The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

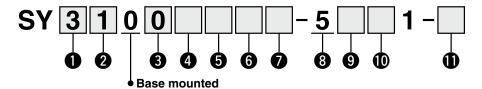

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

ועי 😎	Je oi actuati	UII
1	2-position	Single
2	2-008111011	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *	4iti	N.C./N.C.
B*	4-position dual 3-port	N.O./N.O.
C*		N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	эт тапто орион
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

 Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Tion polar
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- * Select a valve from R, U, S or Z when the SI unit output polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).
- * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

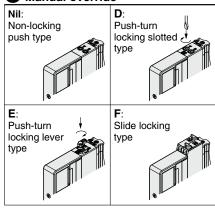

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
н	Hexagon socket head cap screw (Falling-out-prevention type)


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.


Plug-in
Connector Connecting Base


Type 10/Side Ported EX260


Dimensions: Series SY3000

SS5Y3-10S \square -Stations $\stackrel{\mathsf{U}}{\mathsf{P}}$ - $\stackrel{\mathsf{C2}}{\overset{\mathsf{C3}}{\overset{\mathsf{N1}}{\overset{\mathsf{N1}}{\overset{\mathsf{C2}}{\overset{\mathsf{N1}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}}{\overset{\mathsf{N}}}}}$

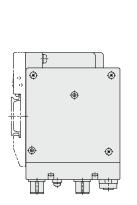

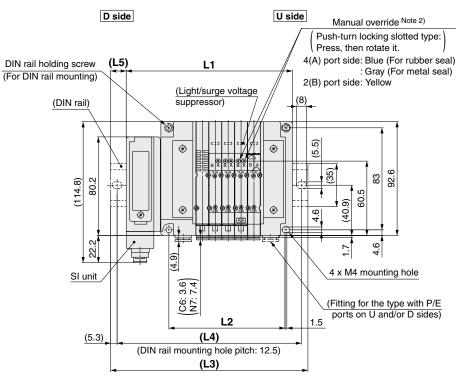

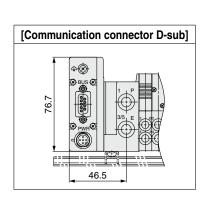

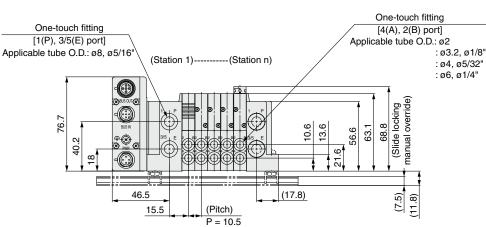

Note 1) These figures show the "SS5Y3-10SQA-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12

n: Stations	18	19	20	21	22	23	24
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	231	241.5	252	262.5	273	283.5	294
L3	298	310.5	323	335.5	348	348	360.5
L4	287.5	300	312.5	325	337.5	337.5	350
L5	13	14	15	16	17	12	13





Dimensions: Series SY5000


Plug-in
Connector Connecting Base

Type 10/Side Ported

EX260

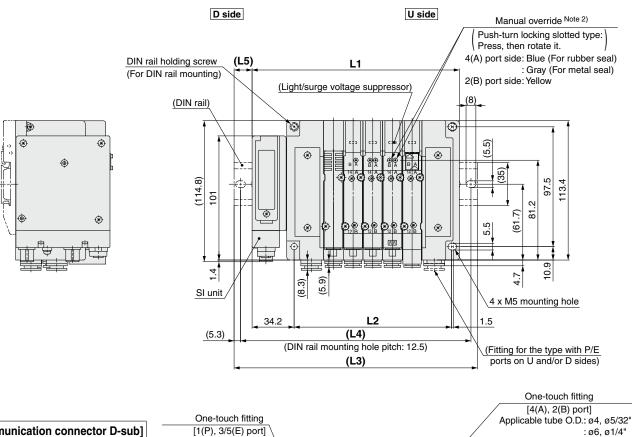

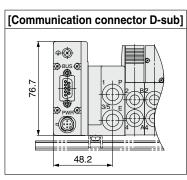

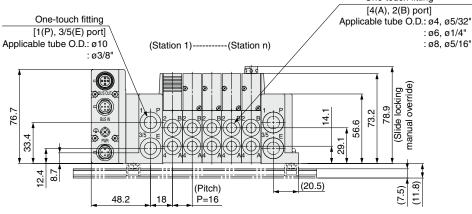

- Note 1) These figures show the "SS5Y5-10SQA-05D-C8".
- Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.
- Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

n: Stations	18	19	20	21	22	23	24
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	336	352	368	384	400	416	432
L3	410.5	423	435.5	448	473	485.5	498
L4	400	412.5	425	437.5	462.5	475	487.5
L5	17	15	13.5	11.5	16	14.5	12.5


Manifold Options


Plug-in Connector Connecting Base

Type 10/Side Ported

Dimensions: Series SY7000

SS5Y7-10S - Stations D - C10, N11 (D)

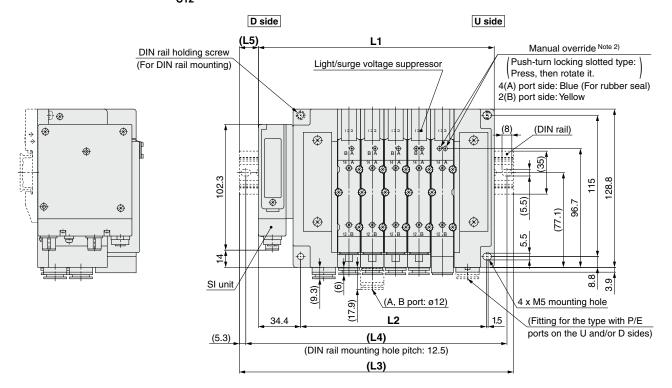

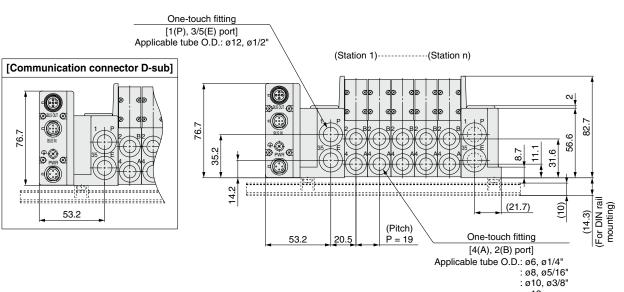

Note 1) These figures show the "SS5Y7-10SQA-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

Plug-in Connector Connecting Base

EX260

Type 12
Top Ported

Series SY3000/5000/7000 €

How to Order Manifold

Refer to pages 186 to 188 for Type 12/Top ported dimensions.

Series

3	SY3000
5	SY5000
7	SY7000

SI unit specifications

Symbol	Protocol	Number of outputs	Communication connector
0	٧	Vithout SI un	nit
QA	DeviceNet™	32	M12
QB	Devicemet	16	IVIIZ
NA		32	M12
NB	PROFIBUS DP	16	IVIIZ
NC		32	Dl- Note)
ND		16	D-sub Note)
VA	CC-Link	32	M12
VB	CC-LINK	16	IVI I Z
DA	EtharCAT	32	M12
DB	EtherCAT	16	IVI I Z
FA	DDOEINET	32	M12
FB	PROFINET	16	IVI I Z
EA	EtherNet/IP™	32	M12
EB	Euletive/IP***	16	IVI I Z

Note) IP40 for the D-sub applicable communication connector specification.

DIN rail cannot be mounted without SI unit.

3 SI unit output polarity

Nil	Positive common (NPN)
N	Negative common (PNP)

Note 1) Ensure a match with the common specification of the valve to be used. Note 2) Without SI unit, the symbol is nil.

4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	_
02	2 stations	O 'F' II I Note 2\
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	

In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
80	8 stations	_
02	2 stations	On a sitilat Laurant Note 2)
:	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet.

(Note that 2-position double, 3-position and 4-position valves cannot be used

where single wiring has been specified.)

Note 3) This also includes the number of blanking
plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry

• 1, 2 port ontry	
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) **6** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

6 SUP/EXH block assembly

	Nil	Internal pilot		
	S	Internal pilot, Built-in silencer		
	R	External pilot		

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N, sizes are in inches.

8 Mounting


Nil	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations	0
:	:	Specify a longer rail than the standard length.
D24	For 24 stations	the standard length.

Note 1) When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 225 for part numbers of DIN rail.

Note 2) Refer to page 247 for the fixation of DIN rail mounting type manifold.

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 216 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

How to Order Manifold Assembly

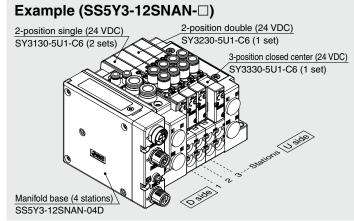


The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above.
 If the arrangement becomes complicated, specify on a manifold specification sheet.

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

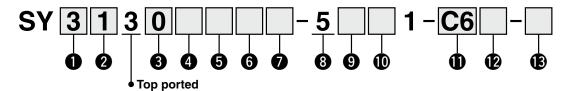

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>		
1	2-position	Single
2		Double
3	3-position	Closed center
4		Exhaust center
5		Pressure center
A *	4-position dual 3-port	N.C./N.C.
B* C*		N.O./N.O.
C*		N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

	<i>,</i> ,
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil None	
H Built-in	

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil Standard (0.7 MPa)			
	В	Quick response type (0.7 MPa)	
	K*	High pressure type (1.0 MPa)	

* Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC
J	24 100

9 Light/surge voltage suppressor and common specification

Symbol With light		Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polar
S	_		Positive
Z		common	
NS	_		Negative
NZ	•		common

- * Select a valve from R, U, S or Z when the SI unit output polarity is Nil (positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (negative common).
- * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

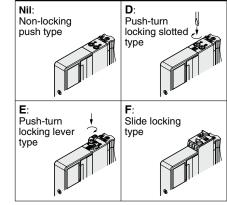

* Refer to page 14 for with the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

	· · · · · · · · · · · · · · · · · · ·			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

	<u> </u>				
Symbol	A, B port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	T —	•	•	
N11	ø3/8"	I —	_	•	
IN I I	03/8				

Thread type


Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

Type of mounting screw

<u> </u>	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

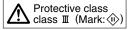



Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base

EX126

Series SY3000/5000/7000

(RoHS

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

SS5Y	3 -	10 S	4 V -	05	U	- C6
	0	2	8	4	6 6	7 8

Series

3	SY3000	
5	SY5000	
7	SY7000	

2 Type

<u> </u>	,
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

3 SI unit

0 Without SI unit			
V	CC-Link (Positive common NPN)		

 Only a terminal block plate is mounted for the valve without SI unit.

4 Valve stations


Symbol	Stations	Note					
02	2 stations	11010					
:	:	Double wiring Note 1)					
08	8 stations						
02	2 stations	Considered Invested Note 2)					
:	:	Specified layout Note 2) (Available up to 16 solenoids)					
16	16 stations	(Available up to 16 soleholds)					

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

How to Order Manifold Assembly

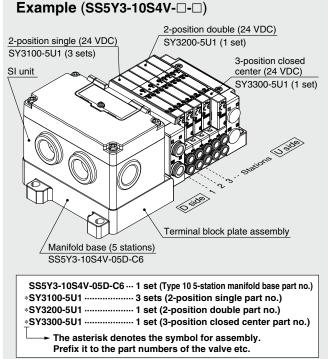

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 172. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side

5 P, E port entry

	_ port ontry
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 217 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



A, B port size (Metric/One-touch fitting)

<u> </u>	٠,	- r	JUIT SIZE	1	0, 0		;	<i>)</i>	
Cumbal		A D nort			10/Side				
Symbol	A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_	
СЗ			ø3.2	•	_	_	_	_	
C4			ø4	•	•	_	•	_	
C6	ight		ø6	•	•	•	•	•	
C8	Straight		ø8	_	•	•	•	•	
C10	0)		ø10	_	_	•	_	•	08
C12			ø12	_	_	•	_	•	-
СМ*		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			ø4	•	•	_	_	_	
L6		5	ø6	•	•	•	_	_	
L8		Upward	ø8	_	•	•	_	_	
L10		J	ø10	_	_	•	_	_	
L12	(e)		ø12	_	_	•	_	_	9 je 1500
B4	Elbow Note)		ø4	•	•	_	_	_	_
В6	pow	ard	ø6	•	•	•	_	_	
B8	Ш	N V	ø8	_	•	•	_	_	
B10		Downward	ø10	_	_	•	_	_	
B12			ø12	_	_	•	_	_	Jelle De la constitución de la c
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_		
	P, E port size (One-touch fittings)		ø8	ø10	ø12	ø10	ø12		

A, B port size (Inch/One-touch fitting)

<u>, -</u>		•	3120 (1110	, •			<u> </u>		
Curahal		A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported	
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000	
N1		ø1/8"		•	_	_	_	_	
N3			ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	1		ø3/8"	_	_	•	_	•	o Shirt
CM*		Straiç	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_		
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9		鱼	ø5/16"	_	•	_	_	_	
LN11	(e)	_	ø3/8"	_	_	•	_	_	0 5000
BN3	Elbow Note)	5	ø5/32"	•	_	_	_	_	
BN7	bov	wa	ø1/4"	•	•		_	_	
BN9	Ш	Downward	ø5/16"	_	•	_	_	_	
BN11		ă	ø3/8"	_	_	•	_	_	Toll Page 1
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

8 Mounting and Option

Symbol	Mounting	Option		
Syllibol	wounting	Name plate	Station number	
Nil	Direct	_	_	
AA	Direct mounting	•	•	
BA	mounting	•	_	
D□	DIN wait	_	_	
A□	DIN rail mounting	•	•	
B□	mounting	•	_	

Note 1) Enter the number of stations inside when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

Note 2) Only direct mounting is available for Type 11 (Bottom ported).


Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail			
:	:	than the total length			
16	For 16 stations				

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

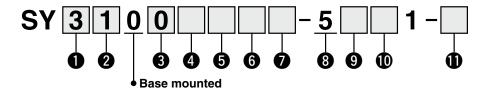

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

	oc or actuali	011
1	2-position	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *	4-position dual 3-port	N.C./N.C.
B *		N.O./N.O.
C*		N.C./N.O.

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	and me tunite type,
Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	эт тапто орион
Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

 Only metal seal type is available for the high pressure type.

Coil type

<u> </u>	ii type
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Rated voltage


_		
5 24 VDC	5	24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	<u> </u>		Non-polar
S	_	•	Positive
Z	•		common

* Only "Z" type is available for with the power saving circuit.

Manual override

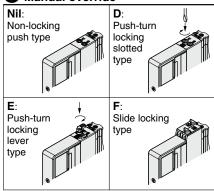

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw


Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



Plug-in Type
Connector Connecting Base

Dimensions: Series **SY3000**SS5Y3-10S4V-Stations D-C3, N1 (D)

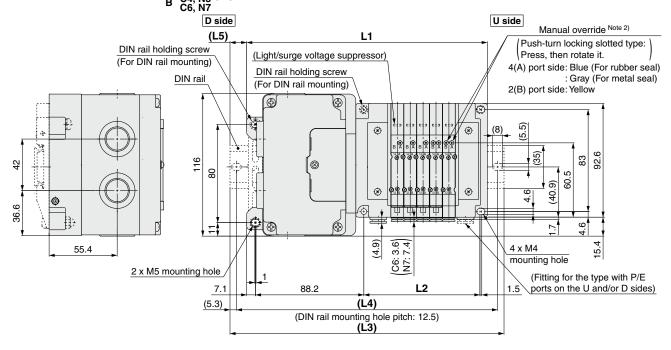

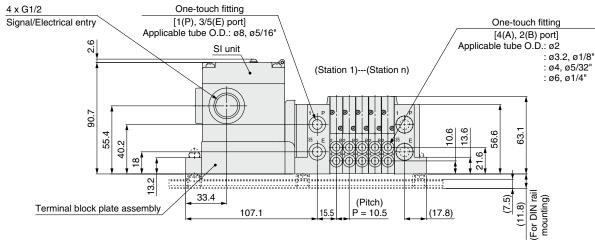

Note 1) These figures show the "SS5Y3-10S4V-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12


Dimensions: Series SY5000


Plug-in
Connector Connecting Base

Type 10/Side Ported

EX126

SS5Y5-10S4V - Stations D - C6, N7 (D)

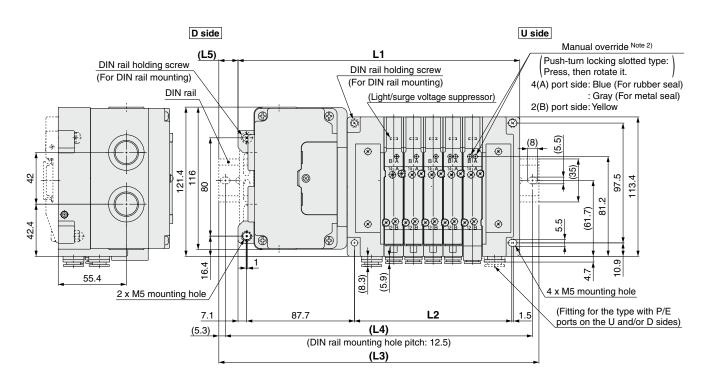

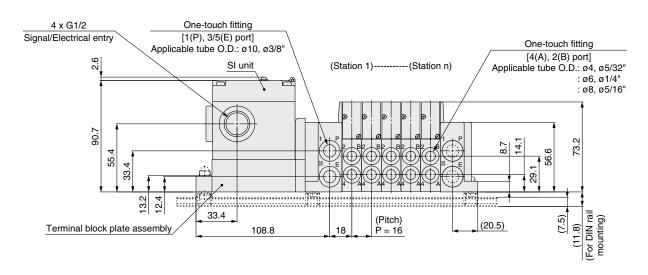

Note 1) These figures show the "SS5Y5-10S4V-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15




Plug-in Connector Connecting Base

Type 10/Side Ported

Dimensions: Series SY7000

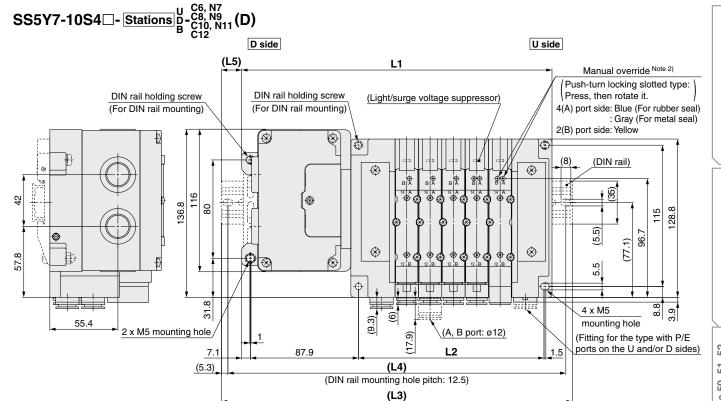

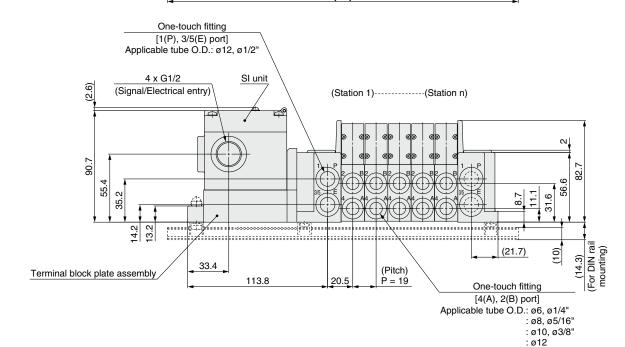

Note 1) These figures show the "SS5Y7-10S4V-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12



Plug-in Connector Connecting Base

EX126

Type 12 Top Ported

Series SY3000/5000/7000

How to Order Manifold

Refer to pages 186 to 188 for dimensions of Type 12/Top ported type.

SS5Y 3 - 12S4

Series

3	SY3000
5	SY5000
7	SY7000

2 SI unit

0	Without SI unit
V	CC-Link (Positive common NPN)

* Only a terminal block plate is mounted for the valve without SI unit.

3 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	-
02	2 stations	Consisted Invent Note 2)
:	:	Specified layout ^{Note 2)} (Available up to 16 solenoids)
16	16 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 P. E port entry

	_ por on y
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


Note) 5 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

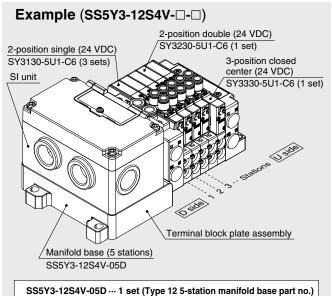

*SY3130-5U1-C6...... 3 sets (2-position single part no.)

*SY3230-5U1-C6...... 1 set (2-position double part no.) *SY3330-5U1-C6...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

6 P. E port size (One-touch fittings)

• ; = port oile (ene teaen numge)				
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N, sizes are in inches.

Mounting

Nil	Direct mounting	
D	DIN rail moun	ting (With DIN rail)
D0	DIN rail mounti	ng (Without DIN rail)
D3	For 3 stations	Specify a longer rail
:	:	than the standard
D16	For 16 stations	length.


Note) Refer to page 247 for the fixation of DIN rail mounting type manifold.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalog or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 217 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



Refer to page 3 for valve specifications.

How to Order Valves (With mounting screw)

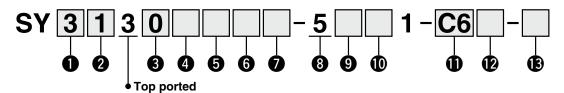

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

2-position	Single
	Double
3-position	Closed center
	Exhaust center
	Pressure center
4-position dual 3-port	N.C./N.C.
	N.O./N.O.
	N.C./N.O.
	3-position 4-position

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

O com type	
0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

Nil	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)
_	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC
9	24 100

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Non-polai
S	_	_	Positive
Z	•		common

* Only "Z" type is available for with the power saving circuit.

Manual override

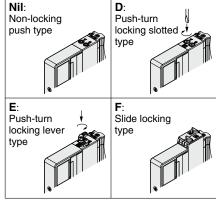

* Refer to page 14 for with the safety slide locking manual override.

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	
СЗ	ø3.2	•	_	_
C4	ø4	•	•	
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

* Only Nil is available for M5.


13 Type of mounting screw

	• ,,	
	Nil	Round head combination screw
	В	Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
Г	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 220 for part numbers of base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

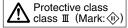

Type 10
Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base


EX120

Series SY3000/5000/7000

(RoHS

How to Order Manifold

Refer to pages 184 (SY5000) and 185 (SY7000) for dimensions of Type 11/Bottom ported type.

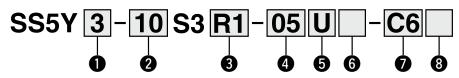

1 Series

3	SY3000
5	SY5000
7	SY7000

2 Туре

	<i>,</i>
10	Side ported
11	Bottom ported*

* The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 189).

3 SI unit

0	Without SI unit		
Q	DeviceNet™ (Positive common NPN)		
R1	OMRON CompoBus/S 16 outputs		
R2	(Positive common NPN)	8 outputs	
V	CC-Link (Positive common NPN)		
ZB Note 2)		Positive common NPN	
ZBN Note 2)		Negative common PNP	

Note 1) Ensure a match with the common specification of the valve to be used.

Note 2) The communication connector (for the opposite side) is not provided. Please order it separately.

4 Valve stations

_		, o tax ii o i i o
Symbol	Stations	Note
02	2 stations	Double wiring Note 1)
÷	:	
08	8 stations	
02	2 stations	O:#:# Note 2\
÷	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

single wiring has been specified.)
Note 3) This also includes the number of blanking plate assembly.

Note 4) Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

 3/5(E) port is plugged for the built-in silencer type.

How to Order Manifold Assembly

Example (SS5Y3-10S3V- 2-position double (24 VDC)
2)(2)(2) = 111 (2)
SY3100-5U1 (3 sets) 3-position closed
center (24 VDC)
SY3300-5U1 (1 set)
Manifold base (5 stations)
SS5Y3-10S3V-05D-C6
000.0 10001 002 00
SS5Y3-10S3V-05D-C6 ··· 1 set (Type 10 5-station manifold base part no.)
*SY3100-5U1 3 sets (2-position single part no.)
*SY3200-5U11 set (2-position double part no.)
*SY3300-5U1 ······· 1 set (3-position closed center part no.)
→ The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 180. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 218 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com

For details about the EX120 Integrated-type (For Output)



A, B port size (Metric/One-touch fitting)

<u> </u>	ъ,	- r	JUIT SIZE	1	0, 0		;	<i>)</i>		
Cumbal		A, B port			10/Side					
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000		
C2			ø2	•	_	_	_	_		
СЗ			ø3.2	•	_	_	_	_		
C4	l		ø4	•	•	_	•	_		
C6	Straight		ø6	•	•	•	•	•		
C8	stra		ø8	_	•	•	•	•		
C10	0,		ø10	_	_	•	_	•	08	
C12			ø12	_	_	•	_	•	-	
СМ*		Straig	ht port, mixed sizes	•	•	•	•	•		
L4			ø4	•	•	_	_	_		
L6	1	5	ø6	•	•	•	_	_		
L8		Upward	ø8	_	•	•	_	_		
L10	5		J	ø10	_	_	•	_	_	
L12	(e)	(e)	ø12	_	_	•	_	_	e 1500	
B4	Elbow Note)	ž –	ø4	•	•	_	_	_	_	
В6	δ	ard	ø6	•	•	•	_	_		
B8	Ш	N V	ø8	_	•	•	_	_		
B10	-	Downward	ø10	_	_	•	_	_		
B12			ø12	_	_	•	_	_	Jelle De la constitución de la c	
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_				
P, E port size (One-touch fittings)			ø8	ø10	ø12	ø10	ø12			

A, B port size (Inch/One-touch fitting)

A, B port size (monyone todon niting)									
Cumhal	A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			ø1/8"	•	_	_	_	_	
N3	_		ø5/32"	•	•	_	•	_	
N7	Straight		ø1/4"	•	•	•	•	•	
N9	Stra		ø5/16"	_	•	•	•	•	
N11	0,		ø3/8"	_	_	•	_	•	0 1555
CM*		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			ø5/32"	•	_	_	_		
LN7		Upward	ø1/4"	•	•	_	_	_	
LN9		췹	ø5/16"	_	•	_	_	_	
LN11	(e)	_	ø3/8"	_	_	•	_	_	ol Sassan
BN3	Elbow Note)	rd	ø5/32"	•	1	-	_		
BN7	ò	Wa	ø1/4"	•	•		_	_	
BN9	Ш	Downward	ø5/16"	_	•	_	_	_	
BN11		Ď	ø3/8"			•	_	_	Tole Tole
LM*	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø1/2"	ø3/8"	ø1/2"		

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228).

* Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

* The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

8 Mounting and Option

Symbol	Mounting	Option		
Symbol	Mounting	Name plate	Station number	
Nil	Direct	_	_	
AA	mounting	•	•	
BA	mounting	•	_	
D□	DIN wait	_	_	
A□	DIN rail mounting	•	•	
B□		•	_	

Note 1) Enter the number of stations inside when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)


Note 2) Only direct mounting is available for Type 11 (Bottom ported).

Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

DIN Rail Option


Nil	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail			
:	:	than the total length			
16	For 16 stations	of specified stations			

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 225 for part numbers of DIN rail.)

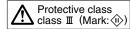

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

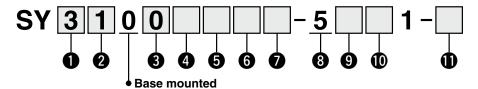

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

• 1) 0 1 1 1 1 1 1 1 1 1			
1	2-position	Single	
2		Double	
3	3 4 3-position 5	Closed center	
4		Exhaust center	
5		Pressure center	
A*	4-position dual 3-port	N.C./N.C.	
B *		N.O./N.O.	
C*		N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

	71 /
Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

o i not vaive option			
Nil	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
K*	High pressure type (1.0 MPa)		

 Only metal seal type is available for the high pressure type.

Coil type

U Coll type									
Nil	Standard								
Т	With power saving circuit (Continuous duty type)								

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U	•		Non-polai
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- * Select a valve from R, U, S or Z when the SI unit specification is positive common. Select a valve from R, U, NS or NZ when the SI unit specification is ZBN (negative common).
- * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

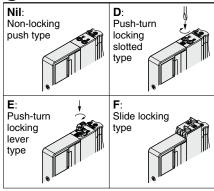

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

Nil	Round head combination screw					
B Hexagon socket head cap screw						
K	Round head combination screw (Falling-out-prevention type)					
Н	Hexagon socket head cap screw (Falling-out-prevention type)					

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- base gasket and mounting screw.


 * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



Plug-in Type 10/Side Ported
Connector Connecting Base EX120

Dimensions: Series SY3000

SS5Y3-10S3 \square -Stations $\stackrel{\mathsf{U}}{\underset{\mathsf{B}}{\overset{\mathsf{C2}}{\bigcirc}}}$, $\stackrel{\mathsf{C2}}{\underset{\mathsf{C3},\ \mathsf{N1}}{\overset{\mathsf{N1}}{\bigcirc}}}$ (D)

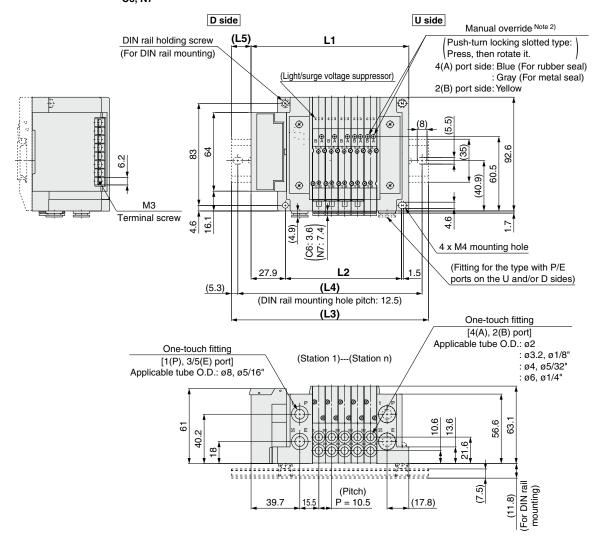

Note 1) These figures show the "SS5Y3-10S3V-05D-C6".

Note 2) Refer to page 181 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 186 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5


Dimensions: Series SY5000


Plug-in
Connector Connecting Base

Type 10/Side Ported

EX120

SS5Y5-10S3 - Stations D - C6, N7 (D)

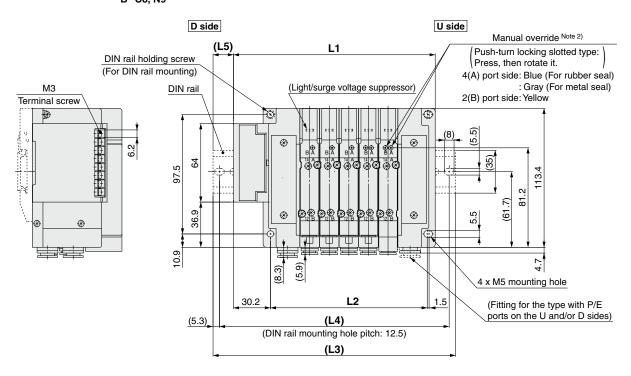

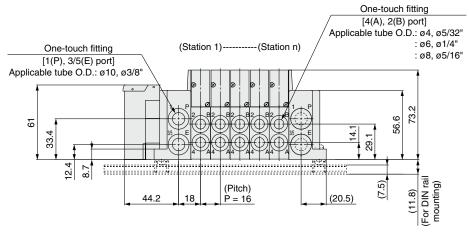

Note 1) These figures show the "SS5Y5-10S3V-05D-C8".

Note 2) Refer to page 182 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 187 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16





Dimensions: Series SY7000

Plug-in
Connector Connecting Base

EX120

SS5Y7-10S3 - Stations D - C6, N7 C8, N9 C10, N11 (D)

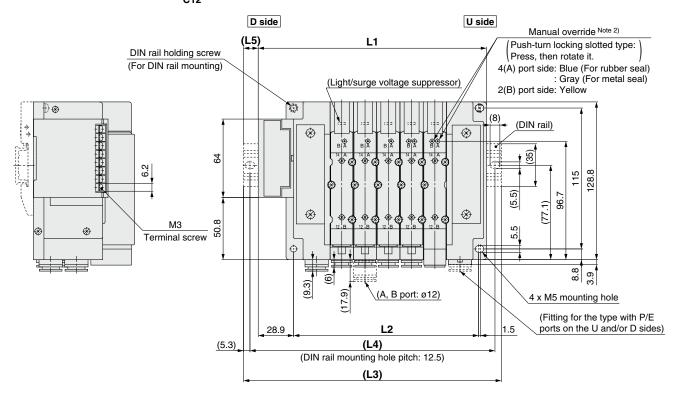

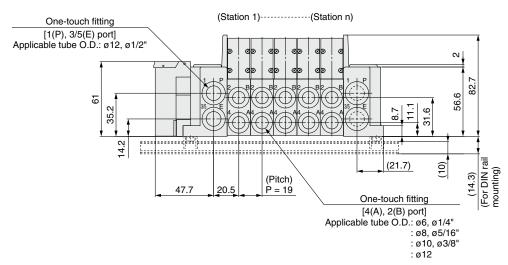

Note 1) These figures show the "SS5Y7-10S3V-05D-C10".

Note 2) Refer to page 183 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

Note 3) Refer to page 188 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14

Plug-in Connector Connecting Base

EX120

Type 12
Top Ported

Series SY3000/5000/7000

(RoHS

How to Order Manifold

Refer to pages 186 to 188 for dimensions of Type 12/Top ported type.

Series

3	SY3000
5	SY5000
7	SY7000

SI unit

0	Without SI unit							
Q	DeviceNet™ (Positive common NPN)							
R1	OMRON CompoBus/S	16 outputs						
R2	(Positive common NPN)	8 outputs						
V	CC-Link (Positiv	e common NPN)						
ZB Note 2)		Positive common NPN						
ZBN Note 2)	Componer	Negative common PNP						

Note 1) Ensure a match with the common specification of the valve to be used.

Note 2) The communication connector (for the opposite side) is not provided. Please order it separately.

3 Valve stations

Symbol	Stations	Note
02	2 stations	
:		Double wiring Note 1)
08	8 stations	
02	2 stations	Consisted Invent Note 2)
:		Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolus)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

4 P, E port entry

<u> </u>	= port ontry
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


Note) **⑤** For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

5 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

How to Order Manifold Assembly

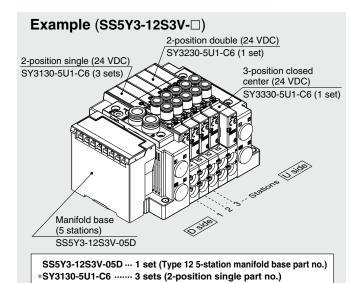

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Prefix it to the part numbers of the valve etc.

6 P, E port size (One-touch fittings)

	_	•		_
Symbol	SY3000	SY5000	SY7000	
Nil	ø8	ø10	ø12	
N	ø5/16"	ø3/8"	ø1/2"	

* For N. sizes are in inches.

7 Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a longer rai		
÷	:	than the standard length.	
D16	For 16 stations		

Note 1) When mounted on the DIN rail without the SI unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 225 for the DIN rail part number.)


Note 2) Refer to page 247 for the fixation of DIN rail mounting type manifold.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to **the WEB catalog** or the Best Pneumatics No. 1 and the Operation Manual. For details about part numbers of SI units to be mounted, refer to page 218 in this catalog. Please download the Operation Manual via SMC website, http://www.smcworld.com



How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

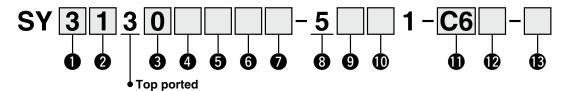

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

<u> </u>			
1	O manition	Single	
2-position	Double		
3		Closed center	
4 3-position 5	Exhaust center		
		Pressure center	
\mathbf{A}^*	A* 4-position dual 3-port	N.C./N.C.	
B *		N.O./N.O.	
C*		N.C./N.O.	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	<u> </u>		
Nil	Nil Standard (0.7 MPa)		
B Quick response type (0.7 MPa)			
K*	High pressure type (1.0 MPa)		

* Only metal seal type is available for the high pressure type.

Coil type

Con type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage


5	24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R U	_		Non-polar
S	_	•	Positive
Z	•		common
NS			Negative
NZ	•		common

- * Select a valve from R, U, S or Z when the SI unit specification is positive common. Select a valve from R, U, NS or NZ when the SI unit specification is ZBN (negative common).
- * Only "Z" and "NZ" types are available for with the power saving circuit.

Manual override

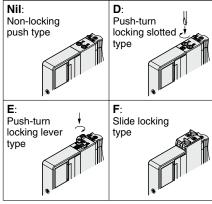

* Refer to page 14 for with the safety slide locking manual override.

多SMC

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	
СЗ	ø3.2	•	_	_
C4	ø4	•	•	
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

one todon nitting (mon)					
A, B port	SY3000	SY5000	SY7000		
ø1/8"	•	_	_		
ø5/32"	•	•			
ø1/4"	•	•	•		
ø5/16"		•	•		
ø3/8"	_	_	•		
	ø1/8" ø5/32" ø1/4" ø5/16"	ø1/8"	ø1/8"		

Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.


B Type of mounting screw

Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 220 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

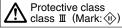


Series SY3000/5000/7000 **Common Dimensions**


Plug-in Series SY3000 Connector Connecting Base Type 10/Side Ported

External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

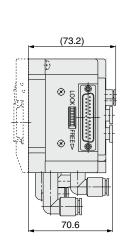


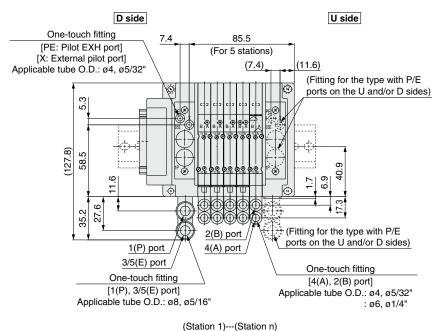


External pilot for straight piping P, E port entry: D 85.5 (For 5 stations) (37.5)78.6 One-touch fitting [PE: Pilot EXH port] 82.3 [X: External pilot port] Applicable tube O.D.: ø4, ø5/32"

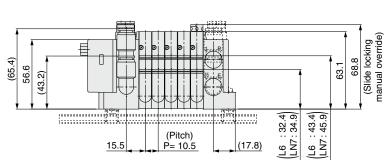

Note) These figures show the "SS5Y3-10F2-05DR-L6".

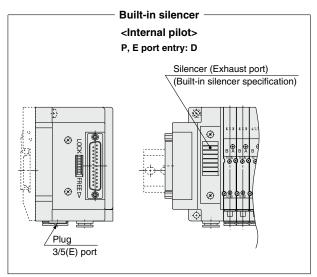

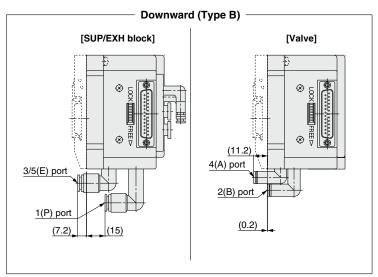



Plug-in Sub-plate

Valve

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View


Plug-in


Series SY5000


Plug-in


Connector Connecting Base

External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override

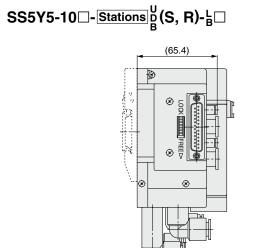


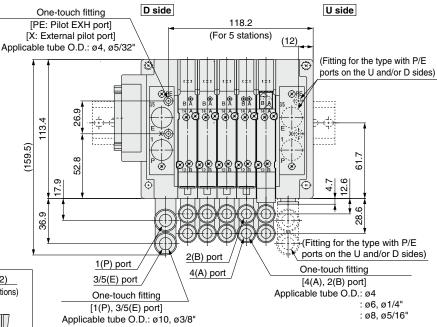

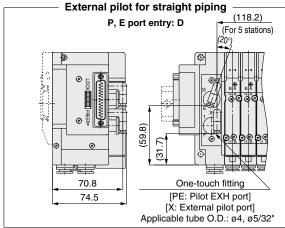


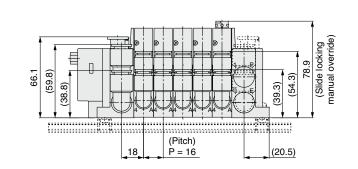


(Station 1)-----(Station n)

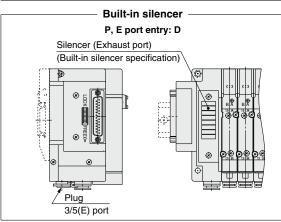

Note) These figures show the "SS5Y5-10F2-05DR-L8".

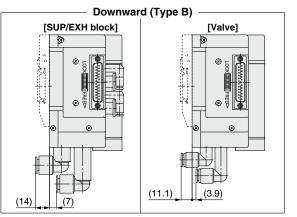

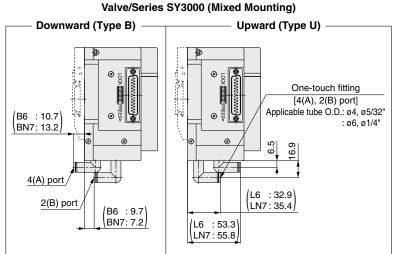


182


SMC


Plug-in Series SY7000 Connector Connecting Base External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override


Type 10/Side Ported

SS5Y7-10 \square -Stations $_{B}^{U}$ (S, R)- $_{B}^{L}\square$

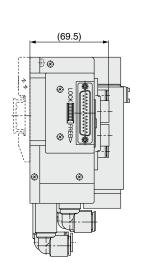

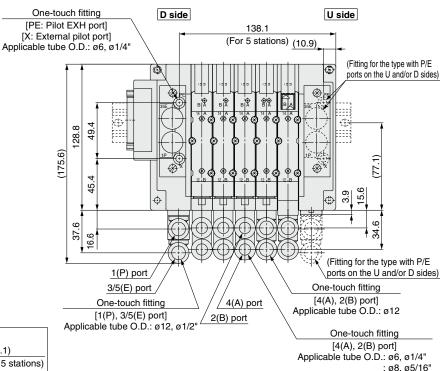


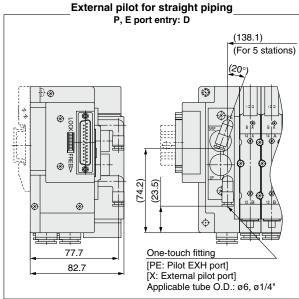


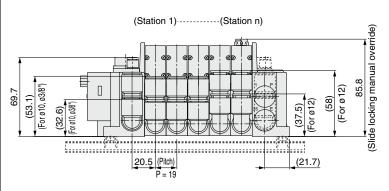

Note) These figures show the "SS5Y7-10F2-05DR-LM".

: ø10, ø3/8"

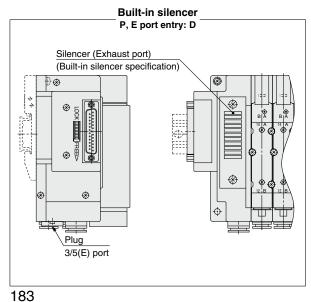

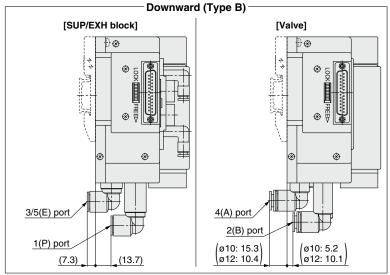


Plug-in Connector Connecting Base


Type 11/Bottom Ported


All Wirings





Series SY5000

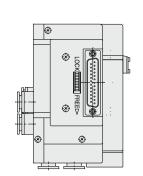


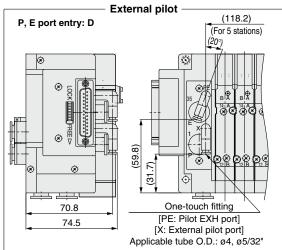


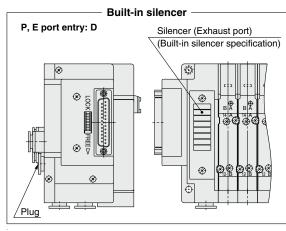

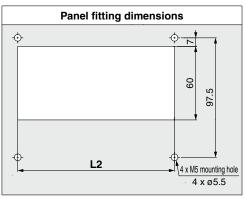

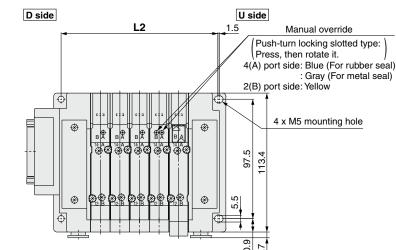

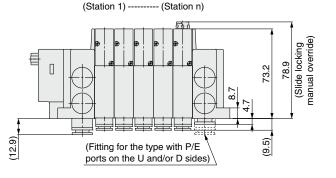

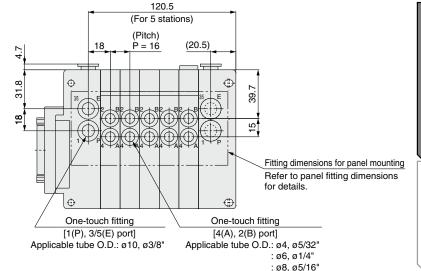

Note 1) These figures show the "SS5Y5-11F2-05D-C8".

Note 2) Refer to the below pages for L2 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 85 D-sub connector <IP67>: P. 88 Flat ribbon cable : P. 91 Terminal block box : P. 103 : P. 113 Lead wire Circular connector : P. 123 FX500 : P. 133 EX600 : P. 142, 143 EX250 : P. 153 EX260 : P. 161 : P. 169 FX126 EX120 : P. 177

Plug-in Connector Connecting Base Series SY7000 **All Wirings** SS5Y7-11 - Stations D L2 D side U side Manual override Push-turn locking slotted type: Press, then rotate it. 4(A) port side: Blue (For rubber seal) Gray (For metal seal) 2(B) port side: Yellow ⊗ \otimes \otimes \otimes External pilot (138.1)4 x M5 mounting hole P, E port entry: D (For 5 stations) 40.1 (Station 1)----(Station n) locking manual override ⊗ 82.8 82.7 56.6 8.7 (Slide I (74.2)⊗ 9.1 12) (14.5)(A, B port: ø12) (Fitting for the type with P/E ports on the U and/or D sides) One-touch fitting 77.7 117 [PE: Pilot EXH port] (For 5 stations) 82.7 [X: External pilot port] (Pitch) P = 19 Applicable tube O.D.: ø6, ø1/4" 39.5 20.5 (21.7)**Built-in silencer** P, E port entry: D Silencer (Exhaust port) Φ Ф (Built-in silencer specification) 39. 48. ⊗ 19.5 Fitting dimensions for panel mounting Refer to panel fitting dimensions ⊗ for details. Plug/1 One-touch fitting One-touch fitting Φ [1(P), 3/5(E) port] Applicable tube O.D.: ø12, ø1/2" [4(A), 2(B) port] Applicable tube O.D.: ø6, ø1/4" : ø8, ø5/16" : ø10, ø3/8" Panel fitting dimensions Note 1) These figures show the "SS5Y7-11F2-05D-C10". Φ Note 2) Refer to the below pages for L2 dimensions and other dimensions that are not specified in each wiring specification. D-sub connector <IP40>: P. 86 D-sub connector <IP67>: P. 89 8 Flat ribbon cable : P. 92 Terminal block box : P. 104 : P. 114 Lead wire Circular connector : P. 124 : P. 134 FX500 EX600 : P. 144, 145 EX250 : P. 154 EX260 : P. 162 4 x M5 L2 : P. 170 FX126 mounting hole : P. 178 4×055 EX120 185

SMC

Type 11/Bottom Ported


Plug-in Ty Connector Connecting Base

Common Dimensions Series SY3000/5000/7000


Type 12/Top Ported

All Wirings

Series SY3000

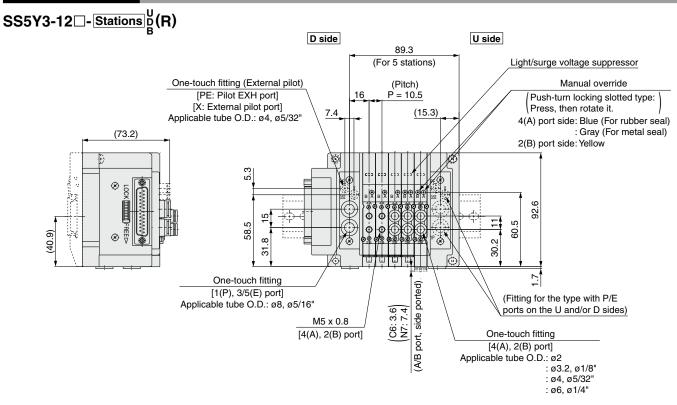

(Station 1)---(Station n)

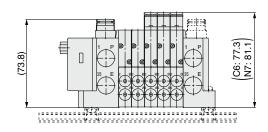

Note 1) These figures show the "SS5Y3-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 181 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 84 D-sub connector <IP67>: P. 87 Flat ribbon cable : P. 90 Terminal block box : P. 102 Lead wire : P. 112 : P. 122 Circular connector : P. 132 EX500 EX600 : P. 140, 141 EX250 : P. 152 EX260 : P. 160 : P. 168 EX126 EX120 : P. 176




Series SY5000

Plug-in
Connector Connecting Base


Type 12/Top Ported

All Wirings

SS5Y5-12 \square -Stations $\stackrel{\mathsf{U}}{\mathsf{p}}(\mathsf{R})$

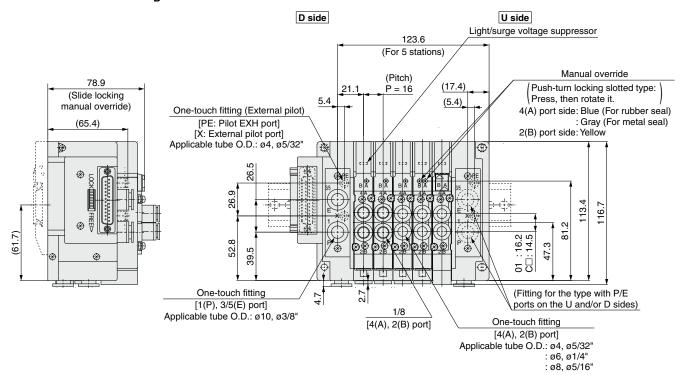

(Station 1)----(Station n)

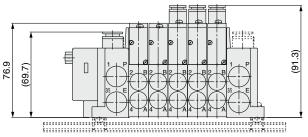

Note 1) These figures show the "SS5Y5-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 182 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 85 D-sub connector <IP67>: P. 88 Flat ribbon cable : P. 91 Terminal block box : P. 103 : P. 113 Lead wire : P. 123 Circular connector : P. 133 EX500 : P. 142, 143 EX600 EX250 : P. 153 EX260 : P. 161 : P. 169 EX126 : P. 177 EX120




Plug-in Connecting Base


Common Dimensions Series SY3000/5000/7000

Type 12/Top Ported
All Wirings

Series SY7000

SS5Y7-12□-Stations ^U_B(R)

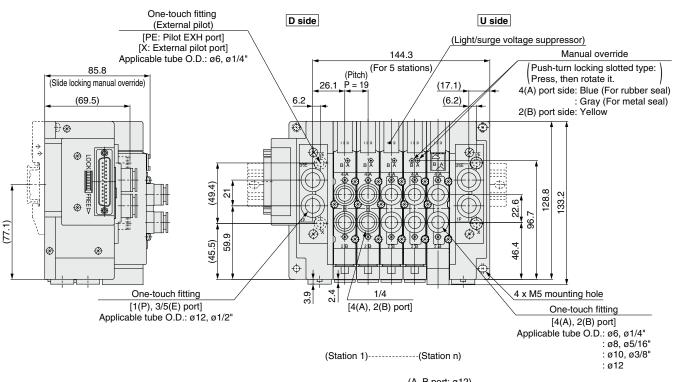

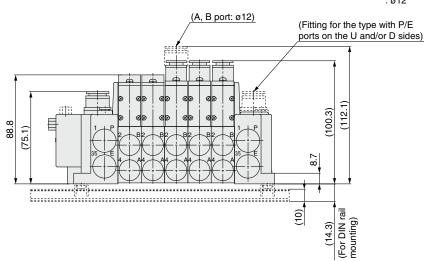

Note 1) These figures show the "SS5Y7-12F2-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 183 for dimensions of silencer.

Note 3) Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 86 D-sub connector <IP67>: P. 89 Flat ribbon cable : P. 92 Terminal block box : P. 104 : P. 114 Lead wire Circular connector : P. 124 EX500 : P. 134 EX600 : P. 144, 145 EX250 : P. 154 : P. 162 EX260 : P. 170 EX126 EX120 : P. 178

Type 10 Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) (EX260 (IP67) (EX126 (IP67) (EX120

Series SY3000/5000

The SY3000 can be mounted onto the SY5000 size manifold.

How to Order Manifold

Refer to page 198 for dimensions of Type 11/Bottom ported type.

It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part ③ in the order code. However, the manifold block width should be 12.5 mm.

Type 1

10	Side ported
11	Bottom ported

Connector type

9 00	inector type		
Symbol	Type		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	
PG	Flat ribbon cable	20 pins	81
PH		10 pins	
J	PC wiring	_	
G	(20 pins)	With power supply terminal	
Т	Terminal blo	ck box	99
L1		34 cores	
L2	Lead wire	17 cores	109
L3		9 cores	
M	Circular cor	nector	119
S□		EX500	129
S6□		EX600	137
S□	Serial	EX250	149
S□	transmission	EX260	157
S4□		EX126	165
S3□		EX120	173
. D-f		and the second of the	

 Refer to the pages shown in the table above for details.

8

With Lead wire

Lead wire length

1	0.6 m
2	1.5 m
3	3 m

 With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

Connector entry direction

1	Upward
2	Lateral

* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

4 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
÷	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
	_

* Refer to page 137 for the EX600 and **7** on page 149 for the EX250.

6 SUP/EXH block assembly

	· · — · · · · · · · · · · · · · · · · ·
Nil	Internal pilot
s	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * Refer to page 137 for the EX600 and **7** on page 149 for the EX250.

7 Fitting type: One-touch fitting

Symbol	A, B port		
С		Stra	ight
L	Metric size	E11	Upward Note)
В		Elbow	Downward Note)
N	Inch size	Stra	ight
LN		Elbow	Upward Note)
BN		⊏ibow	Downward Note)
CM*	Mixed sizes	Stra	ight
LM*		Elbow (Including upward a	and downward piping) ^{Note)}

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228). Elbow fittings are not available for Type 11 (Bottom ported).

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction
- * Elbow fittings: ø2, ø3.2 and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8" and ø5/32" are not available for the SY5000 series



8 SY5000: A, B port size

(Metric/One-touch fitting)

<u>. </u>	- · · · · · · · · · · · · · · · · · · ·
Symbol	Port size
4	ø4
6	ø6
8	ø8
Nil	For all stations of SY3000

(Inc	(inch/One-louch filling)		
Syr	nbol	Port size	
	3	ø5/32"	
•	7	ø1/4"	
	9	ø5/16"	
N	lil	For all stations of SY3000	

* No symbol needs to be specified when fitting type "CM", "LM" is selected.

9 SY3000: A, B port size

(Metric/One-touch fitting)

Symbol	Port size
2	ø2
3	ø3.2
4	ø4
6	ø6
^	a Natal

(Inch/One-touch fitting)

	Symbol	Port size
	1	ø1/8"
1	3	ø5/32"
	7	ø1/4"
	9	ø5/16" ^{Note)}
٦		

Note) The valve pitch is the same as the SY5000.

* No symbol needs to be specified when fitting type "CM", "LM" is selected


Mounting

Nil	Direct mounting DIN rail mounting (With DIN rail)		
D			
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a longer rail than the standard length		
:	:	[The SY5000 valve is now at a mountable length ations (manifold block length of 16 mm).]	
D24	For 24 stations		

- Note 1) Only direct mounting is available for Type 11 (Bottom ported).

 Note 2) Refer to page 196 to determine the L3 using "Calculation formula" for the DIN rail length.
- Note 3) Refer to page 247 for the fixation of DIN rail mounting type manifold.

How to Order Manifold Assembly

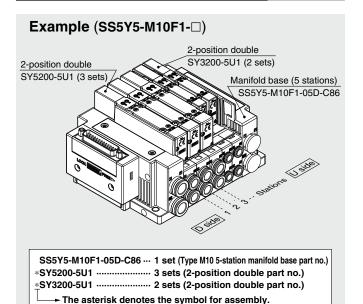


The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order

Prefix it to the part numbers of the valve etc.

 Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 202. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

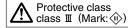




Series **SY3000/5000**

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

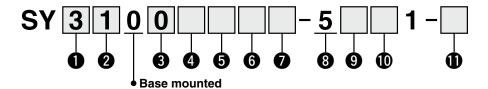

1 Series

3	SY3000
5	SY5000

2 Type of actuation

2-position	Single
	Double
3	Closed center
3-position	Exhaust center
	Pressure center
4 manitina	N.C./N.C.
dual 3-port	N.O./N.O.
	N.C./N.O.
	2-position 3-position 4-position

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	71-7
Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

	Filot valve option		
Nil Standard (0.7 MPa)		Standard (0.7 MPa)	
B Quick response type (0.7 MF		Quick response type (0.7 MPa)	
K* High pressure ty		High pressure type (1.0 MPa)	

* Only metal seal type is available for the high pressure type.

Coil type

• oon type		
Nil	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

8 Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.


 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•		
S	_	•	Positive
Z	•		common
NS	_		Negative
NZ	•		common

- * "Nil" is not available for the SI unit manifold.
- * Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.

 EX500: P. 131 EX600: P. 139 EX250: P. 151 EX260: P. 159 EX126: P. 167 EX120: P. 175

Manual override

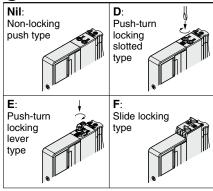

* Refer to page 14 for with the safety slide locking manual override.

Type of mounting screw

•		
	Nil	Round head combination screw
	В	Hexagon socket head cap screw
		Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release

Type 10 Side Ported

Type 11
Bottom Ported

Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120

Series SY5000/7000

The SY5000 can be mounted onto the SY7000 size manifold.

How to Order Manifold

Refer to page 199 for dimensions of Type 11/Bottom ported type.

SS5Y7 - M 10 F 1 - 05 U - C 10 8 Mixed Mounting Type 0 2 3 4 5 6 7 8 9 0

It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part 3 in the order code. However, the manifold block width should be 19 mm.

1 Type

10	Side ported
11	Bottom ported

2 Connector type

L3 9 cores M Circular connector 119		D
FW (25 pins) IP67		Page
P	Г	
PG	FW	1
PH	Р]
J PC wiring	PG	81
G (20 pins) With power supply terminal T Terminal block box 99	PH	
T Terminal block box 99	J	
L1 34 cores L2 Lead wire 17 cores L3 9 cores M Circular connector 119	G	
L2 Lead wire 17 cores 109 L3 9 cores M Circular connector 119	Т	99
L3 9 cores M Circular connector 119	L1	
M Circular connector 119	L2	109
	L3	
C	M	119
3 L EX300 128	S□	129
S6 □ EX600 137	S6 □	137
S □ Serial EX250 149	S□	149
S □ transmission EX260 157	S□	157
S4 □ EX126 165	S4□	165
S3 □ EX120 173	S3□	173

 Refer to the pages shown in the table above for details.

8

With Lead wire

Lead wire length

1	0.6 m
2	1.5 m
3	3 m

 With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

Connector entry direction

1	Upward
2	Lateral

* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

4 Valve stations

Symbol	Stations	Note			
02	2 stations	Some connectors have a limitation			
÷	:	on the number of stations. Refer to the pages shown in the table			
24	24 stations	"Connector type" for details.			

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
	_

* Refer to page 137 for the EX600 and **3** on page 149 for the EX250.

6 SUP/EXH block assembly

	<u> </u>	
Nil	Internal pilot	
s	Internal pilot, Built-in silencer	
R	External pilot	

- * 3/5(E) port is plugged for the built-in silencer type.
- * Refer to page 137 for the EX600 and **7** on page 149 for the EX250.

7 Fitting type: One-touch fitting

Symbol		A, B port			
С		Straight			
L	Metric size	Elbow	Upward Note)		
В		⊏ibow	Downward Note)		
N		Straight			
LN	Inch size	Elbow	Upward Note)		
BN		⊏ibow	Downward Note)		
CM*	Mixed sizes	Straight Elbow (Including upward and downward piping) Note)			
LM*	iviixeu Sizes				

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 226 to 228). Elbow fittings are not available for Type 11 (Bottom ported).

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction
- * Elbow fittings: $\emptyset 1/4$ " and $\emptyset 5/16$ " are not available.



8 SY7000: A, B port size

(Metric/One-touch fitting)

Port size		
ø6		
ø8		
ø10		
ø12		
For all stations of SY5000		

(Inch/One-touch fitting)

	Symbol	Port size
	7	ø1/4"
	9	ø5/16"
	11	ø3/8"
	Nil	For all stations of SY5000
)		

* No symbol needs to be specified when fitting type "CM", "LM" is

9 SY5000: A, B port size

(Metric/One-touch fitting)

(Inch/Or	ne-touch fitting
Symbol	Port si

Symbol	Port size	Symbol	Port siz
6	ø6	7	ø1/4"
8	ø8	9	ø5/16"
10	ø10	11	ø3/8"
12	ø12	,	

Note) The valve pitch is 19 mm, the same as the SY7000.

* No symbol needs to be specified when fitting type "CM", "LM" is

Mounting and Option


1		
Option		
ation number		
_		
•		
_		
_		
•		
_		

DIN Rail Option

Nil	Direct mounting			
0	Without DIN rail (with brad			
3	For 3 stations	Specify a longer rail		
:	:	than the total length		
24	For 24 stations	of specified stations.		

- Note 1) Enter the number of stations inside \square when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- Note 2) Only direct mounting is available for Type 11 (Bottom ported). Note 3) Refer to page 196 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)
- Note 4) The manifold block width is 19 mm for both the SY5000 and SY7000 sizes.
- Note 5) Refer to page 247 for the fixation of DIN rail mounting type manifold.


How to Order Manifold Assembly

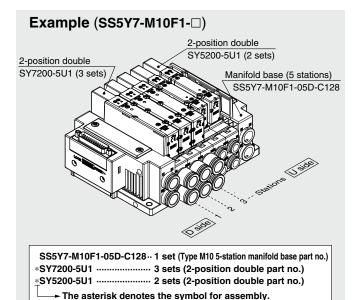

- Prefix it to the part numbers of the valve etc. • The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 202. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

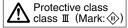




Series **SY5000/7000**

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

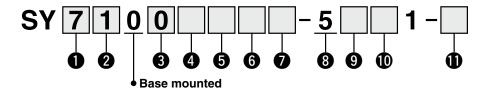

Series

5	SY5000
7	SY7000

2 Type of actuation

2-position	Single		
	Double		
	Closed center		
3-position	Exhaust center		
	Pressure center		
4 manitina	N.C./N.C.		
- dual 3-port	N.O./N.O.		
	N.C./N.O.		
	2-position 3-position 4-position		

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if back pressure check valve is required for the valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option


O FIII	Filot valve option	
Nil	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K*	High pressure type (1.0 MPa)	

 Only metal seal type is available for the high pressure type.

Coil type

C Con type		ii type	
Nil		Standard	
	Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type when the valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

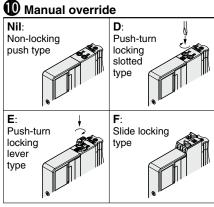

* Refer to page 14 for with the safety slide locking manual override.

8 Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
Nil	_	_			
R	_	-	Non-polar		
U	•				
S	_		Positive		
Z	•	•	common		
NS	_		Negative		
NZ	•]	common		

- * "Nil" is not available for the SI unit manifold.
- * Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details. EX500: P. 131 EX600: P. 139 EX250: P. 151 EX260: P. 159 EX126: P. 167 EX120: P. 175

Type of mounting screw

	- 71	
	Round head combination screw	
B Hexagon socket head cap sc		Hexagon socket head cap screw
K Round head combination screw (Falling-out-prevent		Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 220 for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve




Note) Refer to pages 181 and 182 for

dimensions of external pilot, built-in silencer and elbow fittings.

Dimensions: Series SY3000/5000

Plug-in **Connector Connecting Base**

Type 10/Side Ported **Mixed Mounting Type**

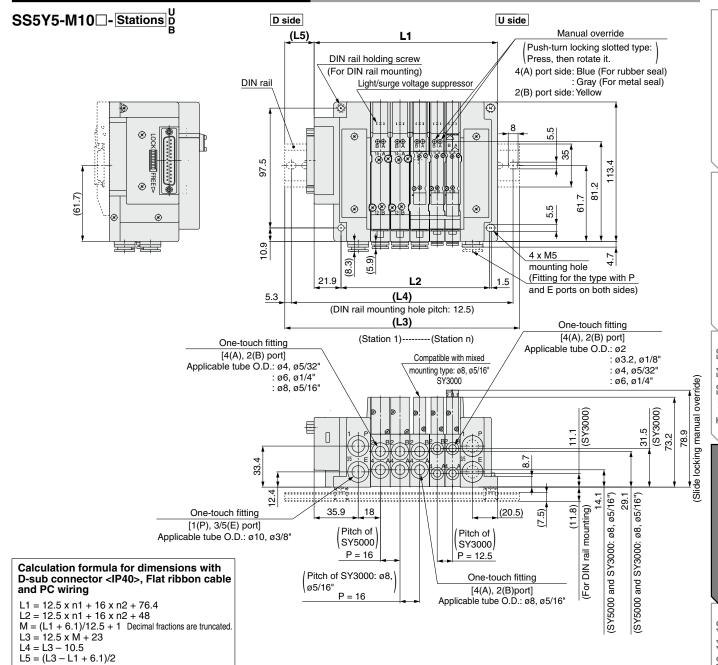

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø8, Ø5/16")

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission


 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ $L2 = 12.5 \times n1 + 16 \times n2 \times 48$ M = L1/12.5 + 1 Decimal fractions are truncated. L3 = 12.5 x M + 23 L4 = L3 - 10.5 L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: ø8, ø5/16")

n3: Number of I/O units or input block stations Note) Refer to pages 142 to 143 for dimensions of the EX600 serial transmission with I/O unit and page 153 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.


Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7		

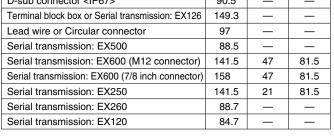

Dimensions: Series SY5000/7000

Plug-in Type 10/Side Ported Connector Connecting Base Mixed Mounting Type

SS5Y7-M10 - Stations D

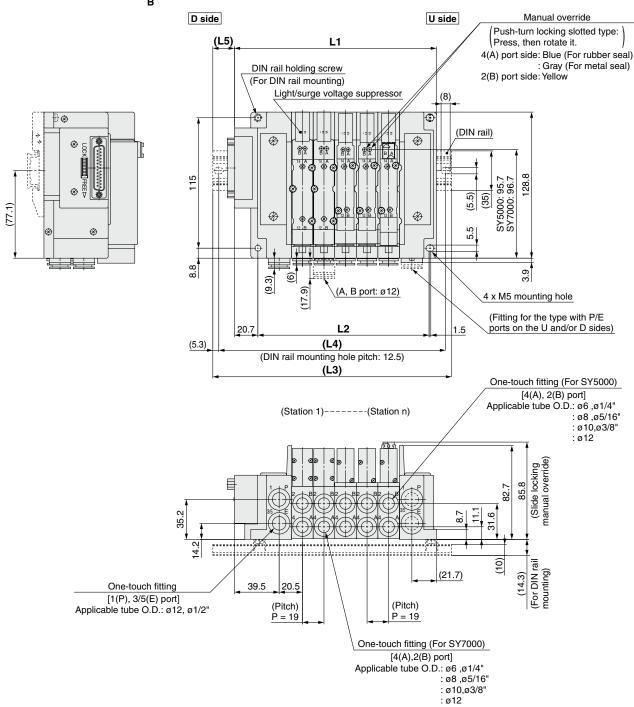

Note 1) Refer to page 183 for dimensions of external pilots and built-in silencers.

Note 2) Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <IP40>: P. 86 D-sub connector <IP67>: P. 89 Flat ribbon cable : P. 92 : P. 104 Terminal block box : P. 114 Lead wire Circular connector : P. 124 : P. 134 EX500 EX600 : P. 144, 145 : P. 154 EX250 : P. 162 EX260 EX126 : P. 170 EX120 : P. 178




Plug-in Connector Connecting Base

Type 11/Bottom Ported

Mixed Mounting Type

SS5Y5-M11 - Stations D

Dimensions: Series SY3000/5000

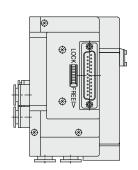

D side U side Manual override Push-turn locking slotted type: Press, then rotate it. 4(A) port side: Blue (For rubber seal) 4 x M5 mounting hole : Gray (For metal seal) 2(B) port side: Yellow 8 8 `∂\@ 113.4 97. 21.9 1.5

Compatible with mixed mounting type: ø8, ø5/16" SY3000

(Fitting for the type with P and E ports on both sides)

(Pitch of SY3000: ø8, ø5/16")

P=16

(Pitch of SY5000)

P=16

 \oplus

35.9


(Station 1)-----(Station n)

Calculation formula for dimensions

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$ $L2 = 12.5 \times n1 + 16 \times n2 + 48$ $L6 = b \times n3 + c$

- n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000
- (Including the stations of the SY3000: ø8, ø5/16") n3: Number of I/O units or input block stations

Note) Refer to pages 142 and 143 for dimensions of the EX600 serial transmission with I/O unit and page 153 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

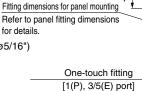

[1(P), 3/5(E) port]
Applicable tube O.D.: ø10, ø3/8"

One-touch fitting

[4(A), 2(B) port]

Applicable tube O.D.: ø4, ø5/32"

: ø6, ø1/4"

8

One-touch fitting

[4(A), 2(B) port]

Applicable tube O.D.: ø2

: Ø3.2, Ø1/8"

Ø8, Ø5/16"

One-touch fitting

[4(A), 2(B) port]

: Ø4, Ø5/32"

: Ø4, Ø5/32"

: Ø6, Ø1/4"

[4(A), 2(B) port]

Applicable tube O.D.: Ø8, Ø5/16"

(Pitch of SY3000)

P=12.5

(H)

(20.5)

39.

5

SY5000 and

(SY3000)

Coefficient	а	b	С
00011010110	а	D	C
D-sub connector <ip40>, Flat ribbon cable or PC wiring</ip40>	76.4	_	_
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5	_	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_

Note) Refer to page 184 for dimensions of external pilots and built-in silencers.


Dimensions: Series SY5000/7000


Plug-in Connecting Base


Type 11/Bottom Ported


Mixed Mounting Type


SS5Y7-M11 \square -Stations $\stackrel{\mathsf{U}}{\square}$

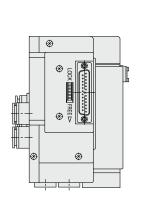

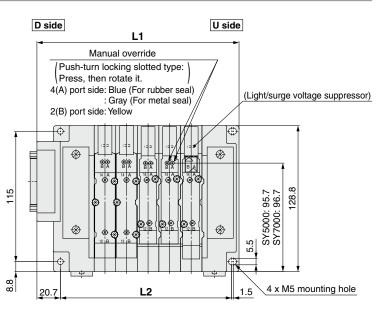

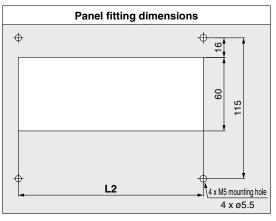

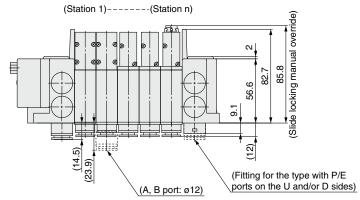

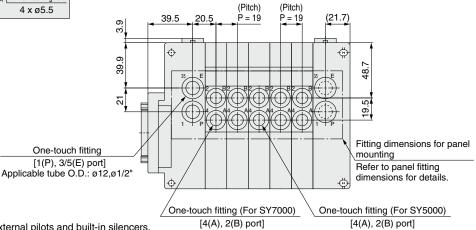

Note 1) Refer to page 185 for dimensions of external pilots and built-in silencers. Note 2) Refer to the below pages for L1, L2 dimensions and other dimensions

: P. 178

that are not specified in each wiring specification.

Dimensions of Type 11/Bottom ported: P. 185 : P. 86 D-sub connector <IP40> : P. 89 D-sub connector <IP67> Flat ribbon cable : P. 92 Terminal block box : P. 104 : P. 114 Lead wire : P. 124 Circular connector : P. 134 EX500 EX600 : P. 144, 145 EX250 : P. 154 EX260 : P. 162 : P. 170 EX126

Applicable tube O.D.: ø6 ,ø1/4" : ø8 ,ø5/16" : ø10,ø3/8" : ø12 [4(A), 2(B) port]
Applicable tube O.D.: ø6 ,ø1/4"
: ø8 ,ø5/16"
: ø10,ø3/8"

: ø12

EX120

Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold

D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67)

Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67)

EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120


Type 12 Top Ported

Series **SY3000/5000/7000** ∈ €

For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold. For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold.

How to Order Manifold

Refer to pages 187 and 188 for dimensions of Type 12/Top ported type.

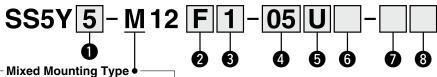

For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for ø8 or ø5/16" One-touch fitting)

Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series.

Series

<u> </u>		
5	SY5000	
7	SY7000	

With Lead wire Lead wire length

_oaa mio iongiii		
1	0.6 m	
2	1.5 m	
3	3 m	

• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring

Connector entry direction

1	Upward
2	Lateral

* It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

Connector type

Symbol	Type		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	
PG	Flat ribbon cable	20 pins	93
PH		10 pins	
J	PC wiring	_	
G	(20 pins)	With power supply terminal	
Т	Terminal block box		105
L1		34 cores	
L2	Lead wire	17 cores	115
L3		9 cores	
M	Circular connector		125
S□		EX500	135
S6 □		EX600	147
S□	Serial	EX250	155
S□	transmission	EX260	163
S4□		EX126	171
S3□		EX120	179
* Refer to the pages shown in the table above			

 Refer to the pages shown in the table above for details.

4 Valve stations

_			
Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
	:	on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

6 P. E port entry

U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

* Refer to page 147 for the EX600 and 6 on page 155 for the EX250.

Note) For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * Refer to page 147 for the EX600 and 6 on page 155 for the EX250.

How to Order Manifold Assembly

Example (SS5Y5-M12F1) 2-position double 2-position double SY3230-5U1-C6 (2 sets) SY5230-5U1-C8 (3 sets) Manifold base (5 stations) SS5Y5-M12F1-05D

SS5Y5-M12F1-05D ··· 1 set (Type M12 5-station manifold base part no.) *SY5230-5U1-C8 3 sets (2-position double part no.)

*SY3230-5U1-C6 2 sets (2-position double part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

· Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

P, E port size (One-touch fittings)

(One todon intingo)			
Symbol	SY5000	SY7000	Note
Nil	ø10	ø12	Metric size
N	ø3/8"	ø1/2"	Inch size

8 Mounting

Nil	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length. [For the SS5Y5-M12, the SY5000 valve is now at a mountable length (manifold block length of 16 mm).]	
:	:		
D24	For 24 stations		


Note 1) Refer to page 203 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)

Note 2) Refer to page 247 for the fixation of DIN rail mounting type manifold.

Manifold Options

How to Order Valves (With mounting screw)

Refer to page 3 for valve specifications.

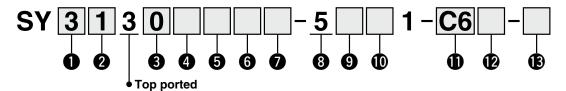

Series

	<u> </u>	
3	SY3000	
5	SY5000	
7	SY7000	

Type of actuation

1	O maniting	Single
2	2-position	Double
3		Closed center
4	3-position	Exhaust center
5		Pressure center
A *	4-position dual 3-port	N.C./N.C.
B*		N.O./N.O.
C*	duai o-port	N.C./N.O.

Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

<u> </u>		71
	0	Rubber seal
	1	Metal seal

Pilot type

Nil	Internal pilot	
R	External pilot	

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 232 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

6 Pilot valve option

	Nil	Standard (0.7 MPa)
	В	Quick response type (0.7 MPa)
	K*	High pressure type (1.0 MPa)

* Only metal seal type is available for the high pressure type.

Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Be careful of the energizing time when the power saving circuit is selected. Refer to page 244 for details.

Rated voltage

* Only 24 VDC is available for the serial transmission type.


9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
Nil	_	_	
R	_		Non-polar
U	•	•	
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common

- * "Nil" is not available for the SI unit manifold.
- * Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details.

EX500: P. 136 EX600: P. 148 EX250: P. 156 EX260: P. 164 EX126: P. 172 EX120: P. 180

Manual override

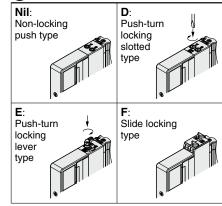

* Refer to page 14 for with the safety slide locking manual override.

SMC

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
СЗ	ø3.2	•	_	_
C4	ø4	•	•	
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

12 Thread type

	7 I
Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.


13) Type of mounting screw


Type of incurring core		
Nil Round head combination		Round head combination screw
	В	Hexagon socket head cap screw
	K	Round head combination screw (Falling-out-prevention type)
	Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 220 for part numbers of the base gasket and mounting screw.


* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

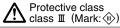

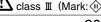

Dimensions: Series SY5000

Plug-in Type 12/Top Ported
Connector Connecting Base Mixed Mounting Type

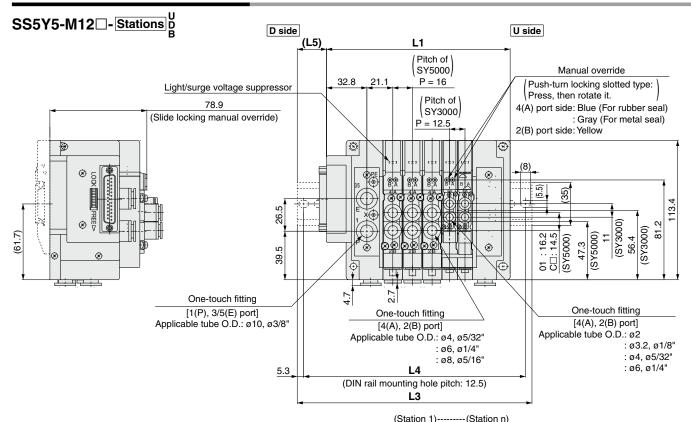

Calculation formula for dimensions with D-sub connector <IP40>, Flat ribbon cable and PC wiring

 $L1 = 12.5 \times n1 + 16 \times n2 + 76.4$ $L2 = 12.5 \times n1 + 16 \times n2 + 48$

M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$

L4 = L3 - 10.5

L5 = (L3 - L1 + 6.1)/2

n1: Number of valve stations of the SY3000

n2: Number of valve stations of the SY5000

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission

 $L1 = 12.5 \times n1 + 16 \times n2 + a + b \times n3$

 $L2 = 12.5 \times n1 + 16 \times n2 \times 48$

M = L1/12.5 + 1 Decimal fractions are truncated.

 $L3 = 12.5 \times M + 23$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

 $L6 = b \times n3 + c$

- n1: Number of valve stations of the SY3000
- n2: Number of valve stations of the SY5000
- n3: Number of I/O units or input block stations

Note) Refer to pages 142 and 143 for dimensions of the EX600 serial transmission with I/O unit and page 153 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.

(Station 1)(Station n)	
(SY5000) (69.7) (69.7)	(87.4) (SY3000)
(4.7.)	(11.8) (For DIN rail mounting)

Note) Refer to page 182 for dimensions of external pilot and elbow fittings.

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box or Serial transmission: EX126	149.3	_	_
Lead wire or Circular connector	97	_	_
Serial transmission: EX500	88.5		_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7		_
Serial transmission: EX120	84.7	_	_




Manifold Options

Plug-in Type 12/Top Ported
Connector Connecting Base Mixed Mounting Type

Dimensions: Series SY7000

SS5Y7-M12□-Stations D

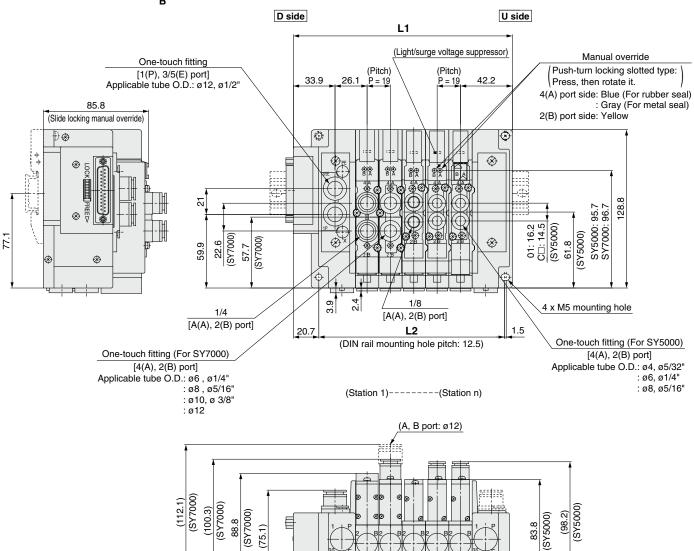

<u>'</u>


Note 1) Refer to page 183 for dimensions of external pilot and elbow fittings. Note 2) Refer to the below pages for L1, L2, L3, L4 dimensions and other


dimensions that are not specified in each wiring specification. Dimensions of Type 12/Top ported: P. 188


D-sub connector <IP40> : P. 86 D-sub connector <IP67> : P. 89 Flat ribbon cable : P. 92 : P. 104 Terminal block box : P. 114 Lead wire Circular connector : P. 124 : P. 134 EX500 EX600 : P. 144, 145 EX250 : P. 154 EX260 : P. 162 EX126 : P. 170 EX120 : P. 178




Series SY3000/5000/7000 Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

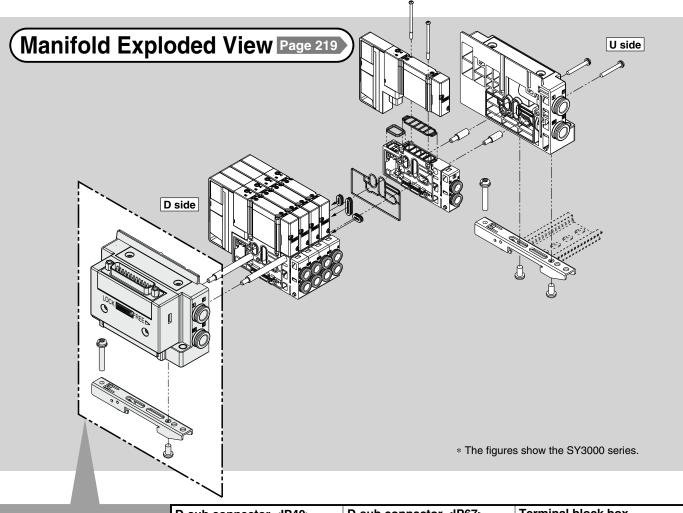

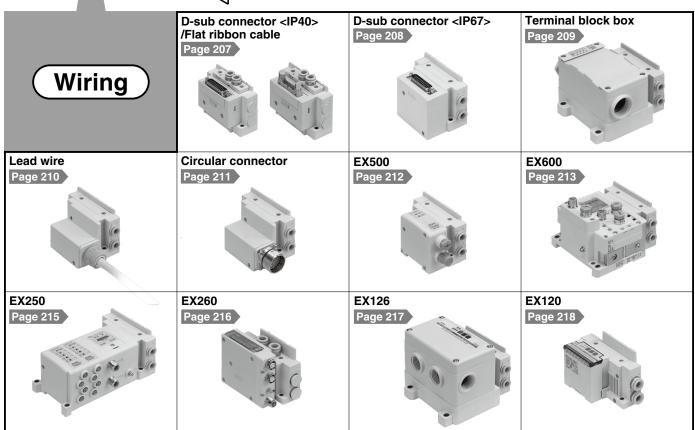

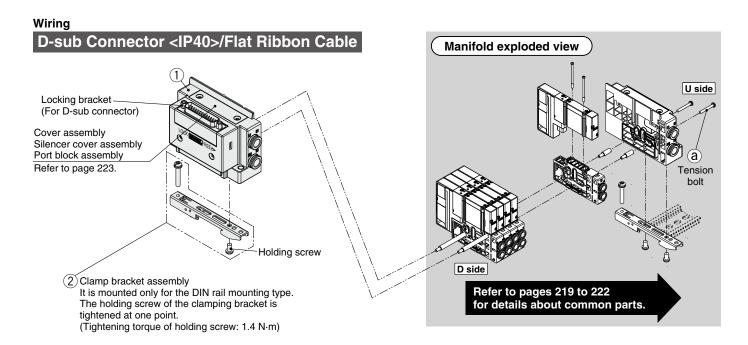

Manifold Parts No.

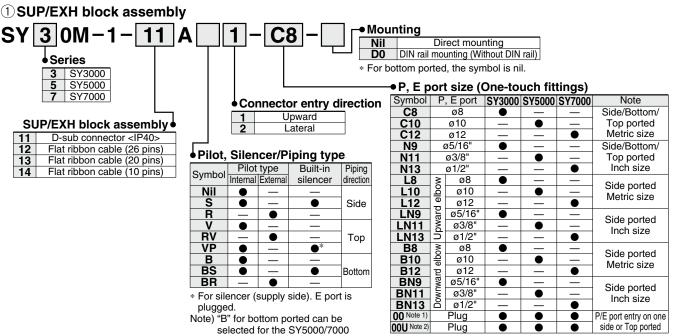

SUP/EXH block assembly (D side) accessories and the number of accessories


Accessories	SY3000	SY5000 SY7000
a Tension bolt	None Note)	3 pcs.

Note) Since the nuts are embedded in the SUP/EXH block.

② Clamp bracket assembly

Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	

^{*} Part number is for one assembly.

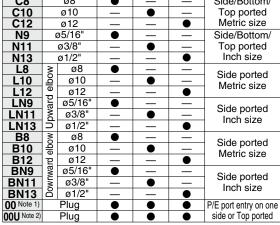

Note 1) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Note 2) "00U" is available only for the D-sub connector type and it has an inch size locking bracket.

Wiring **D-sub Connector <IP67>** Manifold exploded view U side (a) Lockina Tension bracket bolt Mounting screw-(Tightening torque: 0.8 N·m) D side Holding screw


Manifold Parts No.

(3) Clamp bracket assembly

tightened at two points.

It is mounted only for the DIN rail mounting type. The holding screws of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)

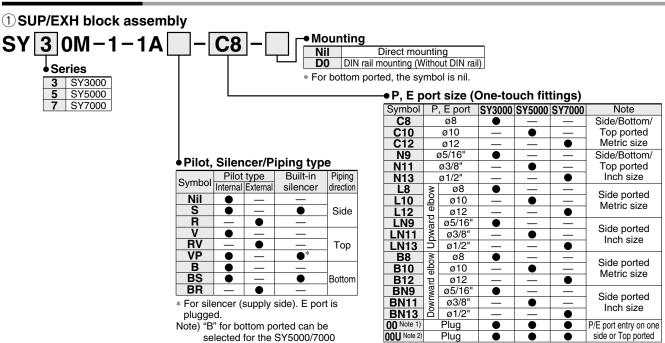

selected for the SY5000/7000 series

SUP/EXH block assembly (D side) cessories and the number of accessories

acceptance and the number of acceptance			
Accessories	SY3000	SY5000 SY7000	
a Tension bolt	None Note)	3 pcs.	

Note) Since the nuts are embedded in the SUP/EXH block.

2 D-sub connector block assembly <IP67>

Part no.	Connector direction	Locking bracket
SY30M-14-9A1	Тор	Matria sina
SY30M-14-9A2	Side	Metric size
SY30M-14-9A1U	Тор	la ala aima
SY30M-14-9A2U	Side	Inch size

3 Clamp bracket assembly

<u>-</u>	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A


Note 1) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Note 2) "00U" has an inch size locking bracket.


Refer to pages 219 to 222

for details about common parts.

^{*} Part number is for one assembly.

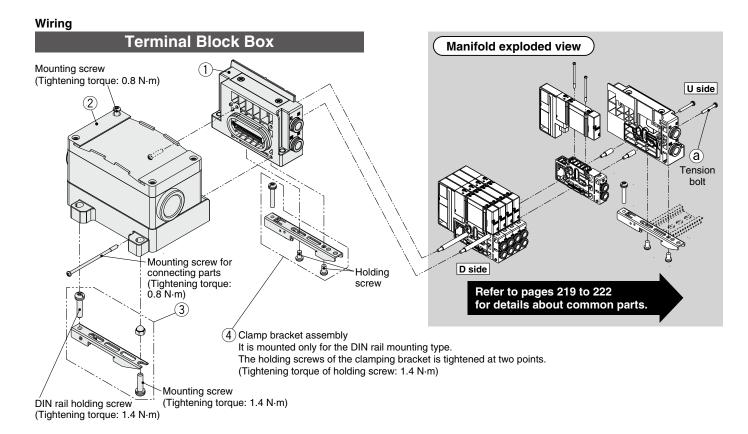

Manifold Parts No.

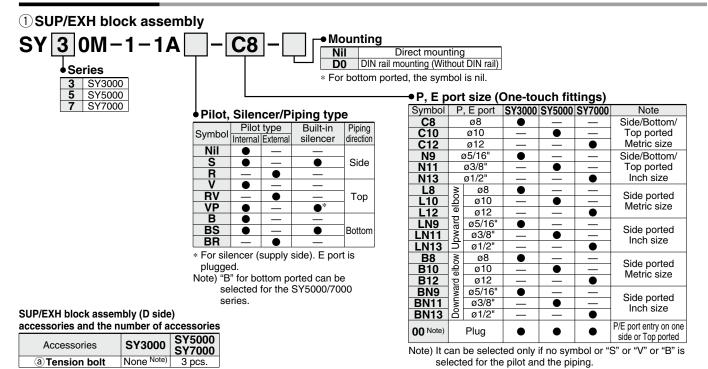

Note) Since the nuts are embedded in the SUP/EXH block.

2 Terminal block box housing assembly

VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

SY30M-15-4A

* Part number is for one assembly.

4 Clamp bracket assembly

Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	

^{*} Part number is for one assembly.

Side ported


Inch size

P/E port entry on one

side or Top ported

Wiring **Lead Wire** Manifold exploded view U side (a) Tension bolt Mounting screw (Tightening torque: 0.8 N·m) D side Refer to pages 219 to 222 for Holding screw details about common parts.

Manifold Parts No.

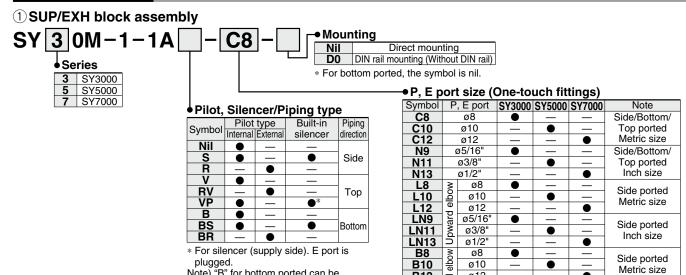

ø12

ø5/16"

ø3/8'

ø1/2'

Note) It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

Plug

BN9

BN11

BN13

00 Note)

Note) "B" for bottom ported can be

(3) Clamp bracket assembly

tightened at two points.

It is mounted only for the DIN rail mounting type. The holding screws of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)


selected for the SY5000/7000 series.

SUP/EXH block assembly (D side) accessories and the number of accessories

acceptance and the number of acceptance		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None Note)	3 pcs.

Note) Since the nuts are embedded in the SUP/EXH block.

2 Lead wire connector block assembly

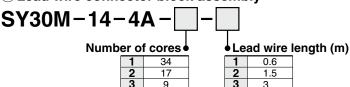


③ Clamp bracket assembly


<u> </u>	
Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.



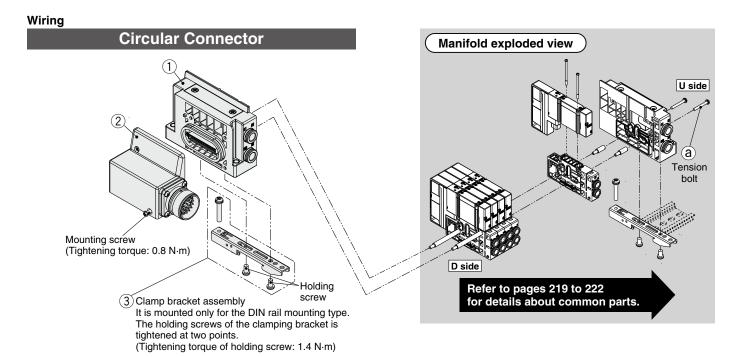

Manifold Parts No.

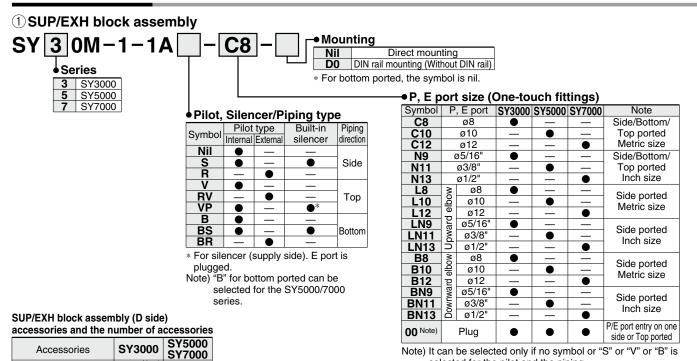

selected for the pilot and the piping.

None Note) 3 pcs. Note) Since the nuts are embedded in the SUP/EXH block.

2 Circular connector block assembly

SY30M-14-5A

a Tension bolt

* 26 pins


③ Clamp bracket assembly

Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	


^{*} Part number is for one assembly.

Note) It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

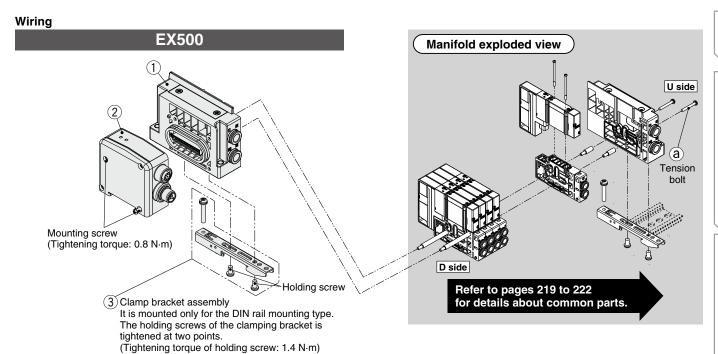


Manifold Parts No.

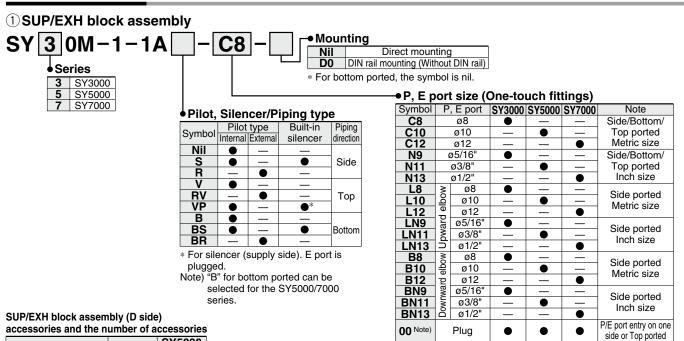

SY3000 None Note) a Tension bolt Note) Since the nuts are embedded in the SUP/EXH block.

2 EX500 SI unit

Accessories

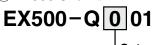

Output specifications

SY5000

SY7000

 NPN (Positive common) PNP (Negative common)

(3) Clamp bracket assembly


<u> </u>		
Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	

^{*} Part number is for one assembly.




212

^{*} Compatible with DeviceNet™, PROFIBUS DP, EtherNet/IP™

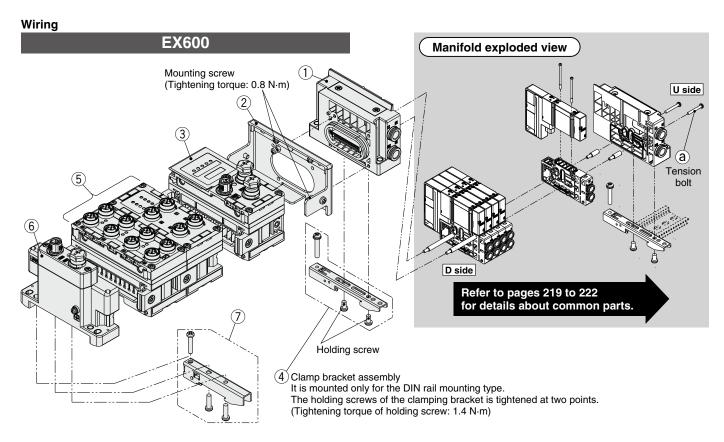

Manifold Parts No.

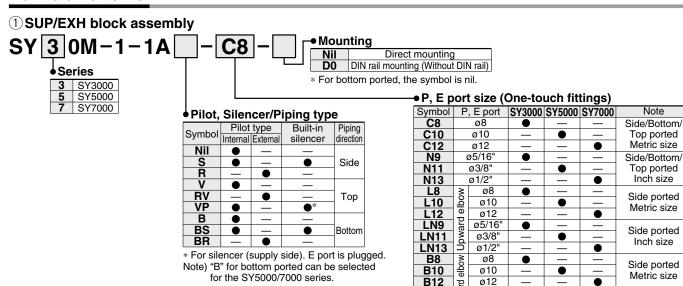

SUP/EXH block assembly (D side)

accessories and the number of accessories

Accessories	SY3000	SY5000 SY7000
Tension bolt	None Note)	3 pcs.

Note) Since the nuts are embedded in the SUP/EXH block.

③ EX600 SI unit

EX600-ZMV2

2 Valve plate

* With mounting screws (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

4 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.

	FIOLOCOI	
Symbol Description		
PR	PROFIBUS DP	
DN	DN DeviceNet™	
MJ CC-Link		
EN	EtherNet/IP ^{TM Note)}	
EC	EtherCAT Note)	
PN	PROFINET Note)	

EX600-S|PR||1

Note) Cannot be communicated with the EX600-HT1-□.

Versi	on
Symbol	Description
Nil	When MJ, EN, EC or PN is selected
Α	When PR or DN is selected

ø5/16

ø3/8'

ø1/2

Note) It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping

Plug

Side ported

Inch size

P/E port entry on one

side or Top ported

Output type

Symbol	Description	
1	PNP (Negative common)	
2	2 NPN (Positive common	

BN9

BN11

00 Note)

BN13




Manifold Parts No.

5 EX600 digital input unit

EX600-DX P B

Number of inputs, open circuit detection, and connector

at type •	•	• Number of inputs, open circuit detection, and connector			
escription	5	Symbol	Number of inputs	Open circuit detection	Connector
PNP		В	8	No	M12 connector (5 pins) 4 pcs.
NPN		С	8	No	M8 connector (3 pins) 8 pcs.
		C1	8	Yes	M8 connector (3 pins) 8 pcs.
		D	16	No	M12 connector (5 pins) 8 pcs.
		Е	16		D-sub connector (25 pins) Note 1) 2)
		F	16	No	Spring type terminal block (32 pins) Note 1) 2)

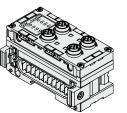

5 EX600 digital output unit

EX600-DY|P|B

Number of outputs and connector

- Out	put type •
Symbol	Description
Р	PNP
N	NPN

Symbol	nbol Number of outputs Connector	
В	8	M12 connector (5 pins) 4 pcs.
E	16	D-sub connector (25 pins) Note 1) 2)
F	16	Spring type terminal block (32 pins) Note 1) 2)



EX600-DM|P

Input/Output type

Number of inputs/outputs and connector

 	,	
Symbol	Description	Symb
Р	PNP	Ε
N	NPN	F

Symbol	Number of inputs	Number of outputs	
E	8	8	D-sub connector (25 pins) Note 1) 2)
F	8	8	Spring type terminal block (32 pins) Note 1) 2)

5 EX600 analog input/output unit

EX600-

A	Analog input/output		
	Symbol	Description	
	AX	Analog input	
	AY	Analog output	

Number of input channels and connector

Symbol	Number of input channels	Connector
Α	2 channels	M12 connector (5 pins) 2 pcs.*

^{*} Refer to Notes 1) and 2) below for AY.

5 EX600 analog input/output unit

EX600-AMB

Analog input/output

-Number of inputoutput channels and connector									
Symbol	Number of input channels	Number of output channels	Connector						
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs. Note 1) 2)						

6 EX600 end plate



Power connector

Symbol	Connector
2	M12 (5 pins)
3	7/8 inch (5 pins)

♦ Mounting

Symbol	Description
Nil	Without DIN rail mounting bracket
3	With DIN rail mounting bracket


⑦ Clamp bracket for EX600


EX600-ZMA3


Enclosed parts


Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.




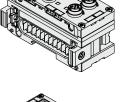


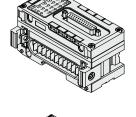


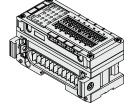

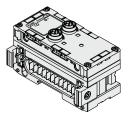


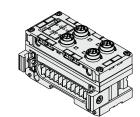


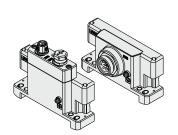

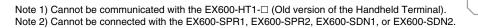



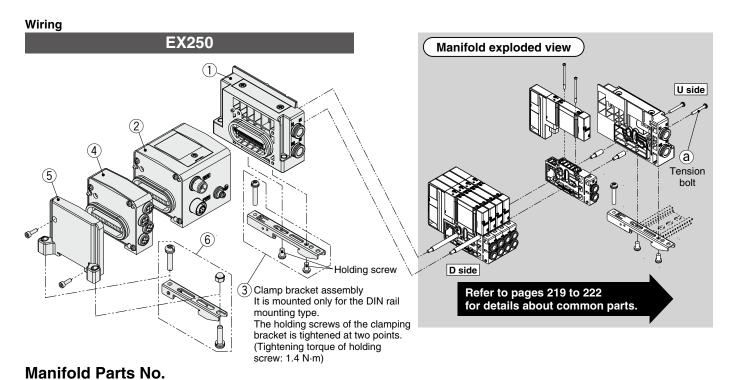

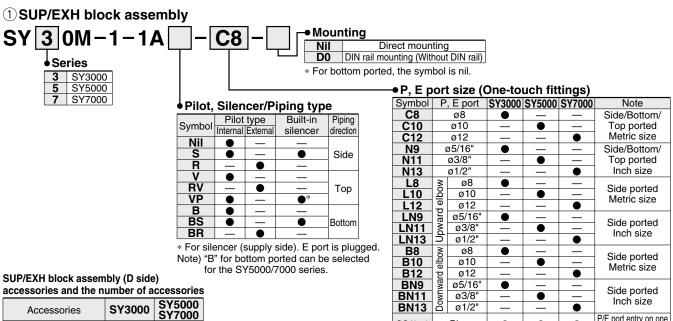

Note) Since the nuts are embedded in the SUP/EXH block.

(a) Tension bolt None Note) 3 pcs.

2 EX250 SI unit

EX250-S DN1

Communication protocol

- 00111	Communication protocol							
	DeviceNet™ (Negative common)							
PR1	PROFIBUS DP (Negative common)							
MJ2	CC-Link (Positive common)							
AS3	AS-Interface (8 in/8 out, 31 slave modes, 2 isolated common type) (Negative common)							
AS5	AS-Interface (4 in/4 out, 31 slave modes, 2 isolated common type) (Negative common)							
AS7	AS-Interface (8 in/8 out, 31 slave modes, 1 common type) (Negative common)							
AS9	AS-Interface (4 in/4 out, 31 slave modes, 1 common type) (Negative common)							
CA1A	CANopen (Negative common)							
EN1	EtherNet/IP™ (Negative common)							

③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.

N11	ø3/8" ø1/2"		_		_	Top ported
N13			_	_	•	Inch size
L8	>	ø8	•	_	_	Side ported
L10	elbow	ø10	_		_	Metric size
L12		ø12	_	_	•	IVIELLIC SIZE
LN9	Upward	ø5/16"	•	_		Cido portod
LN11	<u> </u>	ø3/8"	_	•	_	Side ported Inch size
LN13		ø1/2"	_	_	•	IIICH SIZE
B8	elbow	ø8	•	_	_	Cido portod
B10 ĕ	ø10	_	•	_	Side ported Metric size	
B12		ø12	_	_	•	IVIELLIC SIZE
BN9	Downward	ø5/16"	•	_	_	Cido portod
BN11	Ĭ	ø3/8"	_	•		Side ported Inch size
BN13	2	ø1/2"	_	_	•	IIICH SIZE
00 Note)		Plug	•	•	•	P/E port entry on one side or Top ported

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

4 Input block

EX250-IE 1

Block type

	<u> </u>
1	M12 connector, 2 inputs
2	M12 connector, 4 inputs
3	M8 connector, 4 inputs

5 EX250 end plate assembly

EX250-EA1

* With mounting screws (2 pcs. of M3 x 10)

6 Clamp bracket assembly for EX250 SI unit

SY30M-15-3A

* Part number is for one assembly.




side or Top ported

Wiring **EX260** Manifold exploded view U side (a) Tension bolt Holding screw (3) Clamp bracket assembly It is mounted only for the DIN rail mounting type. D side Refer to pages 219 to 222 The holding screws of the clamping bracket is tightened for details about common parts. at two points. (Tightening torque of holding screw: 1.4 N·m)

Manifold Parts No.



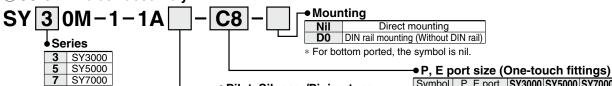

Pilot, Silencer/Piping type Pilot type Built-in Piping

Cumbal		-71		
Symbol	Internal	External	silencer	direction
Nil	•	_		
S	•	_	•	Side
R	_	•	_	
V	•			
RV	_	•		Top
VP	•	_	•*	
В	•		_	
BS	•		•	Bottom
BR	_	•	_	
	-			

^{*} For silencer (supply side). E port is plugged.

Note) "B" for bottom ported can be selected for the SY5000/7000 series.

Symbol	Р	, E port	SY3000	SY5000	SY7000	Note
C8	ø8		•	_	_	Side/Bottom/
C10	ø10		_	•	_	Top ported
C12		ø12	_	_	•	Metric size
N9	Q	ø5/16"	•	_	_	Side/Bottom/
N11		ø3/8"	_	•	_	Top ported
N13		ø1/2"	_	_		Inch size
L8	W	ø8	•	_	_	Side ported
L10	elbow	ø10	_	•	_	Metric size
L12	e	ø12		_		Wethe Size
LN9	Upward	ø5/16"		_	_	Cido portod
LN11	Š	ø3/8"	_	•	_	Side ported Inch size
LN13		ø1/2"	_	_	•	111011 3120
B8	8	ø8		_	_	Side ported
B10	elbow	ø10	_	•	_	Metric size
B12	힏	ø12	_	_	•	Wiethic Size
BN9	wa	ø5/16"	•	_	_	Side ported
BN11	Downward	ø3/8"	_		_	Inch size
BN13	മ്	ø1/2"	_	_	•	IIICII SIZE
OO Note)		Plua				P/E port entry on one

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

SUP/EXH block. 2 EX260 SI unit

Accessories

Tension bolt

EX260-S PR1

SUP/EXH block assembly (D side) accessories and the number of accessories

Note) Since the nuts are embedded in the

Con	Communication protocol										
Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
DN1		32	Source/PNP (Negative common)		QAN	EC1		32	Source/PNP (Negative common)		DAN
DN2	DeviceNet™		Sink/NPN (Positive common)	N440	QA	EC2	C3 EllierCA1	32	Sink/NPN (Positive common)	M12	DA
DN3	Devicemet	10	Source/PNP (Negative common)	M12	QBN	EC3		1 16	Source/PNP (Negative common)		DBN
DN4		16	Sink/NPN (Positive common)		QB	EC4			Sink/NPN (Positive common)		DB
PR1		32	Source/PNP (Negative common)		NAN	PN1		32	Source/PNP (Negative common)		FAN
PR2		32	Sink/NPN (Positive common)	N440	NA	PN2	PROFINET	32	Sink/NPN (Positive common)	N440	FA
PR3		16	Source/PNP (Negative common)	M12	NBN	PN3	PHOFINE	16	Source/PNP (Negative common)	M12	FBN
PR4 PR5	PROFIBUS DP	16	Sink/NPN (Positive common)		NB	PN4		16	Sink/NPN (Positive common)]	FB
PR5	PROFIBUS DP	I	Source/PNP (Negative common)		NCN	EN1		32 16	Source/PNP (Negative common)	M12	EAN
PR6		32	Sink/NPN (Positive common)	D-sub Note)	NC	EN2	EtherNet/IP™		Sink/NPN (Positive common)		EA
PR7	1 -	16	Source/PNP (Negative common)	D-Sub Note	NDN	EN3 EN4	Einenvei/IP····		Source/PNP (Negative common)		EBN
PR8		16	Sink/NPN (Positive common)		ND				Sink/NPN (Positive common)		EB
MJ1		32	Source/PNP (Negative common)		VAN						
MJ2	CC Link	32	Sink/NPN (Positive common)	Mag	VA						
MID	CC-Link		Source/PNP (Negative common)	M12	VRN						

VBN

00 Note)

Note) Enclosure is IP40 when the communication connector is D-sub.

Source/PNP (Negative common)

Sink/NPN (Positive common)

SY5000

SY7000

3 pcs.

SY3000

None Note)


③ Clamp bracket assembly

16


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.



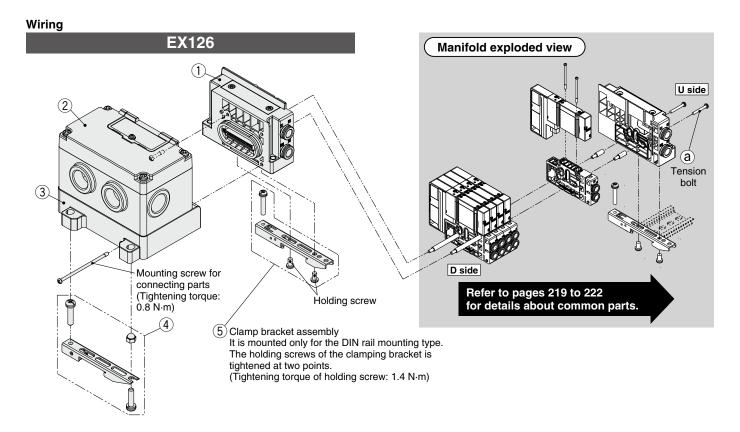

Manifold Parts No.

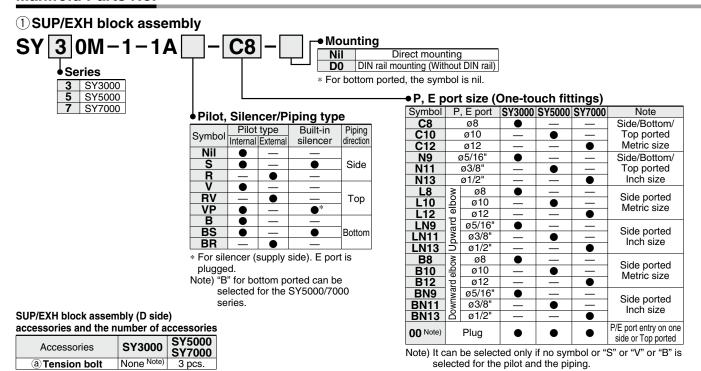

Note) Since the nuts are embedded in the SUP/EXH block.

② EX126 SI unit

EX126D-SMJ1

* CC-Link (Positive common)

③ Terminal block plate assembly

VVQC1000-74A-2

* Part number is for one assembly.

5 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.



Note

Side/Bottom/

Top ported

Metric size

Side/Bottom/ Top ported Inch size Side ported Metric size

P/E port entry on one

side or Top ported

•

Wiring **EX120** Manifold exploded view U side (a) Tension bolt D side Refer to pages 219 to 222 Holding screw

Manifold Parts No.




(3) Clamp bracket assembly

tightened at one point.

It is mounted only for the DIN rail mounting type. The holding screw of the clamping bracket is

(Tightening torque of holding screw: 1.4 N·m)

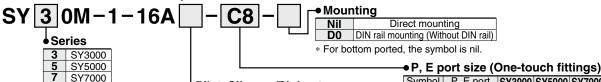

◆ Pilot, Silencer/Piping type							
Cumbal	Pilot	type	Built-in	Piping			
Symbol	Internal	External	silencer	direction			
Nil	•		_				
S	•		•	Side			
R	_		_]			
V	•		_				
RV	_	•	_	Top			
VP	•	_	●*	1 '			
В	•		_				
BS	•		•	Bottom			
BR	_		_				

C12		ø12	_	_
N9		ø5/16"	•	_
N11		ø3/8"	_	•
N13		ø1/2"	_	_
L8	Š	ø8		_
L10	elbow	ø10	_	•
1 12	Φ	α10		

Plug

ø8

ø10

C8

00 Note)

Symbol P, E port | SY3000 | SY5000 | SY7000

LN9 Upward ø5/16" Side ported ø3/8" Inch size LN13 ø1/2" elbow **B8** ø8 Side ported B10 ø10 Metric size ø12 BN9 ø5/16" Side ported BN11 ø3/8' Inch size BN13 ø1/2'

for details about common parts.

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

SUP/EXH block assembly (D side)

accessories and the number of accessories

	Accessories	SY3000	SY5000 SY7000
ſ	a Tension bolt	None Note)	3 pcs.

Note) Since the nuts are embedded in the SUP/EXH block.

2 EX120 SI unit

EX120-S DN1

Communication protocol

DN1	DeviceNet™ (Positive common)
CS1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)
MJ1	CC-Link (Positive common)
CM1	CompoNet™ NPN (Positive common)
CM3	CompoNet™ PNP (Negative common)


③ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

^{*} Part number is for one assembly.



Manifold Exploded View (Common Parts)

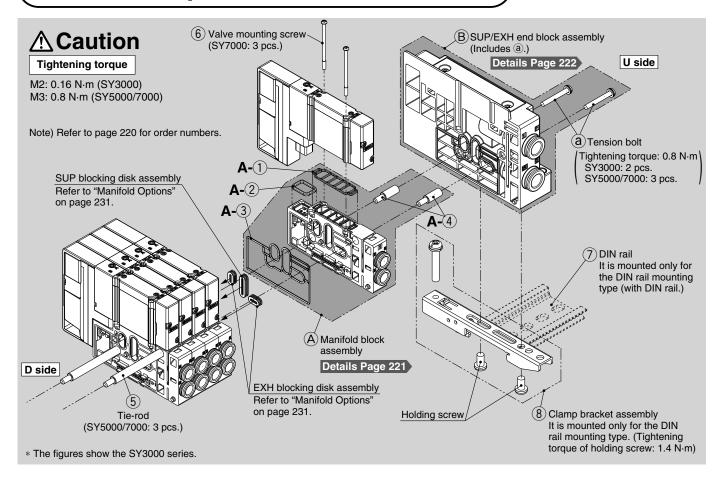

Type 10, 11, 12: How to Increase Connector Type Manifold

- 1 Loosen the U-side tension bolt ⓐ, and remove the ® SUP/EXH end block assembly.
- 2 Screw in ④ tie-rods for additional stations to the ⑤ tie-rod of the manifold.


Screw them in until there is no gap between the tie-rods.

3 Connect the (A) manifold block assembly and (B) SUP/EXH end block assembly to be added, and tighten the tension bolt (a).

Tightening torque for tension bolt @ (M3): 0.8 N·m

⚠ Caution

- Be sure to shut off the power and air supplies before disassembly.
 - Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the tension bolt is inadequate.

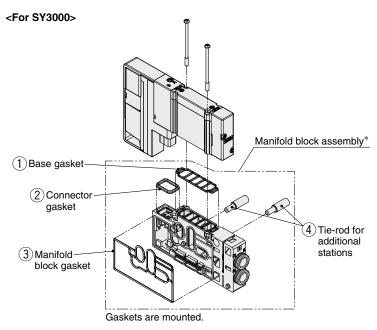

* Manifold block assembly

No.	Description	Q'ty	Note					
123	Gasket	3	For base, connector and manifold block					
Tie-rod for additional stations		SY3000 2 pcs. SY5000 3 pcs. SY7000 3 pcs.						

Refer to page 220 for ordering single unit.




For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.	Description		SY3000	SY5000	SY7000	Note						
A- ①	bly	Base gasket ≥ (for connector connecting base)		SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)					
A- ②	embly	Conne	ctor gasket		SX3000-146-2		Supplied individually.					
A- 3	assı	Manifo	old block gasket	SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually.					
	block	r ote 1)	SY3000/5000/7000	SY30M-49-2-A	SV2000-55-2A-A	SY70M-49-2-A	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)					
A- ④	Manifold block	Tie-rod for additional stations Note	rod for itional ions	rod for itional	rod fo itional ions k	rod fo itional ions ⊼	rod fo itional ions ⊳	For mixed mounting of SY3000/5000: except A, B port size Ø8, Ø5/16"		SY50M-49-2-A		3 pcs. supplied.
	Ma		For mixed mounting of SY3000/5000: A, B port size $\emptyset 8$, $\emptyset 5/16$ "	_	SV2000-55-2A-A	_	3 pcs. supplied.					
5	Tie	-rod	SY3000/5000/7000	VVQC1000-TR-□	SV2000-55-1-□-A	SY70M-49-1-□-A	☐: Manifold stations (2 stations to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)					
			Mixed mounting type manifold (for mounting only SY3000 on SY5000 manifolds)	_	SY50M-49-1-□-A	SY70M-49-1-□-A	3 pcs. supplied.					
6		alve Round head combination s		SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are as follows. SY3000/5000: for 10 yellog (20 pag included)					
	scr	unting ew	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	for 10 valves (20 pcs. included) SY7000: for 10 valves (30 pcs. included)					
7	DIN	l rail		VZ1000	-11-1-□	VZ1000-11-4-□	Refer to page 225.					
8	8 Clamp bracket assembly (for connector connecting base)			SY30M-15-1A	SY50M	-15-1A	Supplied individually.					

Note 1) For the SS5Y5/7-(M)10/11/12, the manifold cannot be assembled with only the tie-rod for additional stations. Be sure to use the tie-rod ⑤. Note 2) For the SY7000, order this part number also when the SY5000 is mounted.

Manifold Parts No.




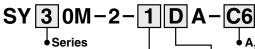



Piping direction 1 Side/Top ported 2 Bottom ported

Note) "2" for bottom ported can be selected for the

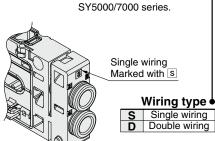

Symbol	A, B port	SY3000	SY5000	SY7000	Note
C2	ø2	•	_	_	
C3	ø3.2	•	_	_	Side/
C4	ø4	•			Bottom
C6	ø6	•			ported
C8	ø8	Note)	•	•	Metric
C10	ø10	_	_		size
C12	ø12	_	_	•	
N1	ø1/8"	•	_	_	Side/
N3	ø5/32"	•	•	_	Bottom
N7	ø1/4"	•	•	•	ported
N9	ø5/16"	Note)	•	•	Inch
N11	ø3/8"	_	_	•	size
Notal	Dofor to mi	vod mou	nting tur	o for a0	αE/16"

Note) Refer to mixed mounting type for Ø8, Ø5/16

	Symbol	Α	A, B port	SY3000	SY5000	SY7000	Note
	L4		ø4	•	•	_	Side
	L6	wod	ø6				ported
n	L8		ø8	Note)	•	•	Metric
k	L10	ē	ø10	_	-	•	size
;	LN3	ard	ø5/32"	•			Side
	LN7	Š	ø1/4"	•	•		ported
	LN9	5	ø5/16"	Note)	•	_	Inch
٦	LN11		ø3/8"	_		•	size
n	B4	_	ø4	•	•		Side
t	B6	elbow	ø6		•	•	ported
	B8	믕	ø8	Note)	•	•	Metric
	B10	5	ø10	_	_	•	size
"	BN3	Š	ø5/32"	•		_	Side
Ī	BN7	ownwa	ø1/4"	•	•	_	ported
	BN9	Ó	ø5/16"	Note)	•		Inch
	BN11	וטן	ø3/8"	_	_	•	size
	00		Plug	•	•	•	Top ported

(A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000

SY50M-2-|3||D|A-|C6|


Piping direction

3 Side/Top ported Bottom ported

> Single wiring Double wiring

4	Α.	В	port	size	(One-touch	fittinas
	· ~,	_	POIL	OILU	(0110 104011	90

Symbol	A, B port	Note	Symbol	A	A, B port	Note
C2	ø2	Side/Bottom	L4	WO.	ø4	Side ported
C3	ø3.2	ported	L6	e	ø6	Metric size
C4	ø4	Metric size	LN ₃	pward	ø5/32"	Side ported
C6	ø6	WIGHTO SIZE	LN7		ø1/4"	Inch size
N1	ø1/8"	Side/Bottom	B 4	bow	ø4	Side ported
N3	ø5/32"	ported	B6	de	ø6	Metric size
N7	ø1/4"	Inch size	BN ₃		ø5/32"	Side ported
			BN7	O	ø1/4"	Inch size
			nn		Plua	Top ported

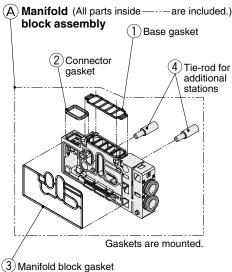

(A) Mixed mounting of the SY3000/5000 Manifold block assembly for mounting the SY3000 for Ø8, Ø5/16"

(A manifold block assembly for mounting the SY3000 valves on the SY5000 manifolds at A, B port size: Ø8, Ø5/16")

SY50M-2-5 || D

Piping direction

ipii	ig an conon •
5	Side ported
6	Bottom ported

Wiring type Single wiring D Double wiring

A, B port size (One-touch fittings)

Symbol	Α,	B port	Note		
C8		ø8	Side/Bottom ported Metric size		
N9	Ø	5/16"	Side/Bottom ported Inch size		
L8	Upward	ø8	Side ported Metric size		
LN9	elbow	ø5/16"	Side ported Inch size		
B8	Downward	ø8	Side ported Metric size		
BN9	elbow	ø5/16"	Side ported Inch size		

Manifold block assembly accessories and the number of accessories

the maniper of deceeding							
Accessories	SY3000	SY5000 SY7000 Note)					
Base gasket	1 pc.						
2 Connector gasket	1 pc.						
3 Manifold block gasket	1 pc.						
(4) Tie-rod assembly for additional stations	s 2 pcs. 3 pcs.						

Note) Including mixed mounting type

(A) Mixed mounting of the SY5000/7000 Manifold block assembly for mounting the SY5000

SY70M-2-|3||D|A-|C10|


Side/Bottom ported

Bottom ported

Wiring type • Single wiring **D** Double wiring A, B port size (One-touch fittings)

,	, - p (tg-)									
Symbol	A, B port	Note	Symbol	P	A, B port	Note	Symbol	1	A, B port	Note
C6	ø6	Cida/Dattana	L6	≥	ø6		B6	ΝO	ø6	
C8	ø8	Side/Bottom ported	L8	wod	ø8	Side ported	B8	g	ø8	Side ported
C10	ø10	Metric size	L10	9	ø10	Metric size	B10		ø10	Metric size
C12	ø12	WIELTIC SIZE	L12	ä	ø12		B12	wa	ø12	
N7	ø1/4"	Side/Bottom	LN11	l≧	ø3/8"	Side ported	BN11	Ň	ø3/8"	Side ported
N9	ø5/16"	ported	LINII	$ \neg $	Ø3/0	Inch size	DINII	മ്	Ø3/0	Inch size
N11	ø3/8"	Inch size					00		Plug	Top ported

Manifold Parts No.

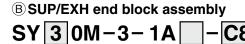

Series **3** SY3000 SY5000 SY7000 **▲** Mounting Nil Direct mounting DIN rail mounting (Without DIN rail) * For bottom ported, the symbol is nil.

♦ Pilot, Silencer/Piping type


Symbol	Pilot	type External	Built-in	Piping
Syllibol	Internal	External	silencer	direction
Nil	•	_	_	
S		_	•	Side
R —		•	_	
V	•	_	_	
RV —		•	_	Top
VP •		_	•*	·
В	•	_	_	
BS •			•	Bottom
BR	_		_	

* For silencer (supply side). E port is plugged. Note) "B" for bottom ported can be selected for the SY5000/7000 series.

P, E port size (One-touch fittings)

Symbol	P	, E port	SY3000	SY5000	SY7000	Note	
C8		ø8	•	_	_		
C10		ø10	_	•	_	Side/Bottom/Top ported Metric size	
C12		ø12	_	_	•	Metric size	
N9	Q	ø5/16"	•	_	_	Cida/Battam/Tan nartad	
N11		ø3/8"	_	•	_	Side/Bottom/Top ported Inch size	
N13		ø1/2"	_	_	•	IIICH SIZE	
L8	W	ø8	•	_	_	Side ported	
L10	lbow	ø10	_	•	_	Metric size	
L12	Θ	ø12	_	_	•	IVICTIC SIZE	
LN9	Upward	ø5/16"		_	_	Side ported	
LN11) W	ø3/8"	_		_	Inch size	
LN13		ø1/2"	_	_		IIIOII SIZE	
B8	elbow	ø8	•	_	_	Side ported	
B10	elb	ø10	_		_	Metric size	
B12		ø12	_	_		WELLIC SIZE	
BN9	Downward	ø5/16"	•	_	_	Side ported	
BN11	wr	ø3/8"	_		_	Inch size	
BN13	ă	ø1/2"	_	_		IIIOII SIZE	
00 Note)		Plug	•	•	•	P/E port entry on one side or Top ported	

Note) It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

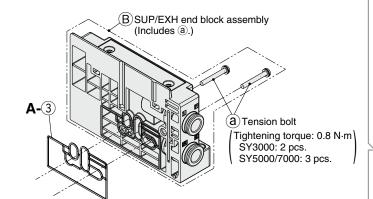

SUP/EXH end block assembly accessories and the number of accessories


Accessories	SY3000	SY5000/7000	
Tension bolt	2 pcs.	3 pcs.	
A-3 Manifold block gasket	1 pc.		

Gasket is mounted.



Manifold Parts No.

■ Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

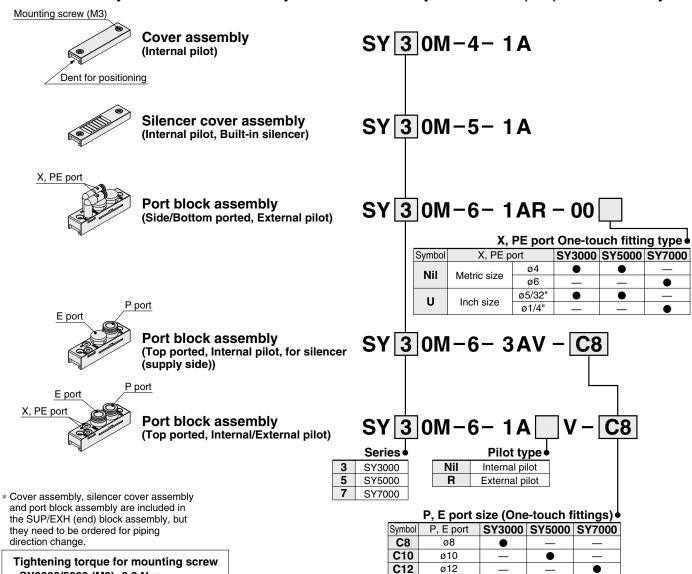

⚠ Caution

1. Be sure to shut off the power and air supplies before disassembly.

SY3000/5000 (M3): 0.8 N·m

SY7000 (M4): 1.4 N·m

- Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- 2. When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

Plug Note) Cannot be selected for the SY□0M-6-3AV-□ and SY□0M-6-1ARV-□.

N9

N11

N13

ø5/16

ø3/8"

ø1/2'

Series SY3000/5000/7000 One-touch Fittings and Plug Assembly/Part No.

Refer to "Changing One-touch Fittings" on page 248 for replacement method.

■ One-touch fittings

		Port siz	е	SY3000	SY5000	SY7000	
		ø2		VVQ1000-50A-C2	_	_	
		ø3.2	1	VVQ1000-50A-C3	_	_	
		ø4	1	VVQ1000-50A-C4	VVQ1000-51A-C4	_	
		ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6	
	F	ø8	1	-	VVQ1000-51A-C8	VVQ2000-51A-C8	
	-	ø10	1	_	_	VVQ2000-51A-C10	
		ø12	1	_	_	KQ2H12-17-X224	
	ize	ø4		SZ3000-73-1A-L4	SZ3000-74-1A-L4		
	ပ	ø6	† †	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6	
	Metric size	ø8	Elbow type	——————————————————————————————————————	SZ3000-74-1A-L8	SZ3000-83-1A-L8	
		ø10	- 2.5011 1960		-	SZ3000-83-1A-L10	
		ø12	-	<u></u> _	_	KQ2L12-17N-X224	
		ø4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	NQ2L12-17N-X224	
te1)		ø6	 	SZ3000-73-2A-L4	SZ3000-74-2A-L4	SZ3000-83-2A-L6	
A, B port Note1)	-	ø8	Long elbow type	323000-73-2A-L0	SZ3000-74-2A-L8	SZ3000-83-2A-L8	
	-	ø10	Long elbow type	_	SZ3000-74-2A-L6	SZ3000-83-2A-L10	
	-	ø10 ø12	-	-	_		
				— — — NA NII	_	KQ2W12-17N-X224	
	•	ø1/8"	-	VVQ1000-50A-N1	—	_	
	-	ø5/32"	04	VVQ1000-50A-N3	VVQ1000-51A-N3	—	
	-	ø1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7	
	-	ø5/16"	-		VVQ1000-51A-N9	VVQ2000-51A-N9	
	σ -	ø3/8"		<u> </u>	_	VVQ2000-51A-N11	
	Inch size	ø5/32"		KJL03-95-X224	_	<u> </u>	
	<u>ਵ</u> ੰ	ø1/4"	Elbow type	KJL07-95-X224	KQ2L07-14-X224		
	Ĕ	ø5/16"	_ Libow type		KQ2L09-14-X224	-	
		ø3/8"		<u> </u>	_	KQ2L11-14-X224	
		ø5/32"		KJL03-95-X225	_	<u> </u>	
		ø1/4"	Long elbow type	KJL07-95-X225	KQ2L07-14-X225	<u> </u>	
		ø5/16"	Long cibow type	_	KQ2L09-14-X225	_	
		ø3/8"		_	_	KQ2L11-14-X225	
		ø8		VVQ1000-51A-C8		-	
		ø10	Straight type	_	VVQ2000-51A-C10	_	
	a	ø12] [_	_	VVQ4000-50B-C12	
	Siz6	ø8		SZ3000-74-1A-L8	_	_	
	.5	ø10	Elbow type	_	SZ3000-83-1A-L10	_	
	Metric size	ø12	1	_		KQ2L12-19N-X224	
	_	ø8		SZ3000-74-2A-L8	_	_	
–		ø10	Long elbow type	_	SZ3000-83-2A-L10	_	
port		ø12	1 1	_	_	KQ2W12-19N-X224	
ш		ø5/16"		VVQ1000-51A-N9	_	_	
σ.		ø3/8"	Straight type	<u> </u>	VVQ2000-51A-N11	_	
		ø1/2"		_	_	VVQ4000-50B-N13	
	ze	ø5/16"		KQ2L09-14-X224	_	_	
	Inch size	ø3/8"	Elbow type		KQ2L11-14-X224		
	JO .	ø1/2"	=::::::::::::::::::::::::::::::::::::	_		KQ2L13-19N-X224	
	-	ø5/16"		KQ2L09-14-X225	_	—	
	-	ø3/8"	Long elbow type		KQ2L11-14-X225		
	-	ø3/6 ø1/2"	Long Cibow type		1\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	KQ2W13-19N-X224	
			(4.011) (.11 0)(0.000 : -0.		e same as those of the SY5000.	114244 10-1911-7224	

Note 1) A and B ports (ø8 and ø5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

Note 2) The basic order unit of the One-touch fitting part number is 1 pc. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.

■ Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

Note) The basic order unit of the plug assembly part number is 1 pc.




Series SY3000/5000/7000 Manifold Options

■ DIN rail dimensions/weight for the SY3000 Plug-in metal base and the SY3000/5000 Plug-in connector connecting base

VZ1000-11-1-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

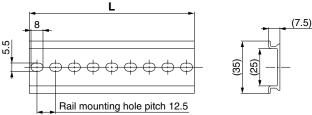


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight (g)	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight (g)	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
																	_		
Weight (g)	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
Weight (g)	103.1 57	105.4 58	107.6 59	109.9 60	112.1 61	114.4 62	116.6 63	118.9 64	121.1 65	123.4 66	125.6 67				-		139.1	141.4	143.6
	57											127.9	130.1	132.4	134.6		139.1	141.4	143.6

■ DIN rail dimensions/weight for the SY5000/7000 Plug-in metal base and the SY7000 Plug-in connector connecting base

VZ1000-11-4-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box \Box .

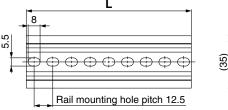

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight (g)	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight (g)	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight (g)	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
No.		58 823	59 835.5	60 848	61 860.5	62 873	63 885.5	64 898	65 910.5	66 923	67 935.5	68 948	69 960.5	70 973	71 985.5				

(10)

Manifold Options Series SY3000/5000/7000

Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Manifold Options

* Refer to pages 236, 238, 240 for dimensions.

■ Blanking plate assembly **How to Order Blanking Plate Assembly** [With two mounting screws (3 pcs. for the SY7000)] SY 3 0M-26-11 A Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting Option for mounting Series Mounting screws from sliding. Mounting screw With mounting screw (Round head combination screw) Mounting 3 SY3000 (3 pcs.), Nil screw 5 SY5000 (2 pcs.) (2 pcs.) 7 SY7000 With mounting screw В (Hexagon socket head cap screw) (B) Base type For plug-in connector connecting base 1 For plug-in metal base Т

SY70M-26-□A (-B)

(EA) (P) (EB)

Circuit diagram

■ Individual SUP spacer assembly


SY30M-26-□A (-B)

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

SY50M-26-□A (-B)

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

Note) When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

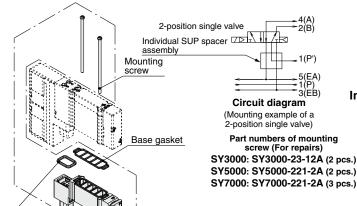

■ Individual EXH spacer assembly


Connector gasket

Connector gasket


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust. Note) When selecting a One-touch fitting elbow type for a spacer

Note) When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

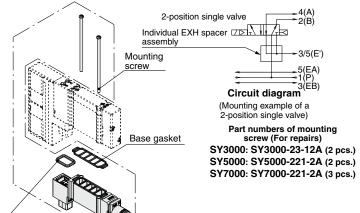

How to Order Individual SUP/EXH Spacer Assembly

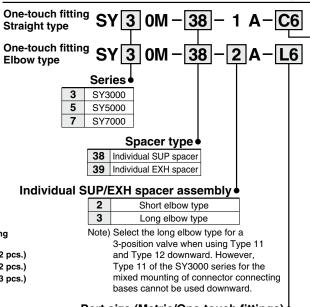

Port size (Metric/One-touch fittings)

_					<u> </u>
S	Symbol	P, E port	SY3000	SY5000	SY7000
	L4	ø4	•	•	_
	L6	ø6	•	•	•
	L8	ø8	_	•	•
	L10	ø10	_	_	•
	L12	ø12	_	_	•

Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	_
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	_
LN11	ø3/8"	_	_	•
	LN3 LN7 LN9	LN3 ø5/32" LN7 ø1/4" LN9 ø5/16"	LN3 ø5/32"	LN3

Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
C2	ø2	•	_	
C3	ø3	•	_	
C4	ø4	•	•	
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

Port size (Inch/One-touch fittings)

	1 011 3120	(111011/01	ic toucii	IIIIIII
Symbol	P, E port	SY3000	SY5000	SY7000
N1	ø1/8"	•	_	_
N3	ø5/32"	•	•	_
N7	ø1/4"	•	•	•
N9	ø5/16"	_	•	•
N11	ø3/8"	_	_	•

∕ Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Manifold Options

* Refer to pages 236 to 241 for dimensions.


■ SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually. Note) Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer

assembly.

Series	Part no.
SY3000	SY30M-50-1A
SY5000	SY50M-50-1A
SY7000	SY70M-50-1A

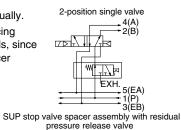

Circuit diagram (Mounting example of a

2-position single valve)

Part numbers of mounting screw (For repairs)

SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.)


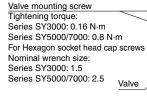


Plate type nu

SUP stop valve space assembly with residual pressure

SUP stop valve mounting screw Tightening torque: Series SY3000: 0.16 N·m Series SY5000/7000: 0.8 N·m

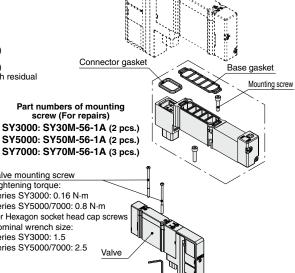

Hexagon wrench Nominal wrench size: Series SY3000: 1.3 Series SY5000/7000: 2

[How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly,

and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve.

Note 1) Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.

Note 2) When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.


■ Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust center valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve. Note) When the elbows are facing upward in A and B ports in Type 10 manifolds,

they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

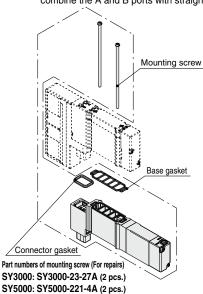

SY7000: SY7000-221-4A (3 pcs.)

227

Series	Part no.
SY3000	SY30M-60-1A
SY5000	SY50M-60-1A
SY7000	SY70M-60-1A


	Intermediate stop	Drop prevention
Applicable valve	SY ₅ ³ 40 ₁ 0	SY ³ ₇ 100

. Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Combining with 3-position closed center or pressure center valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


<Example>

Double check spacer assembly with residual pressure release valve

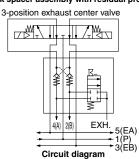

(Intermediate stop: When 3-position exhaust center valve is mounted)

Double check spacer assembly with residual pressure release valve 2-position single valve

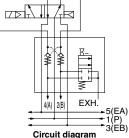

(Drop prevention: When 2-position single valve is mounted)

Manifold Options Series SY3000/5000/7000

.⚠Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Manifold Options

* Refer to pages 237, 239, 241 for dimensions.

■ Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

Regulating port


4(A) port (P controlled type, A port regulation)

2(B) port (P controlled type, B port regulation)

P 1(P) port

A1

How to Order

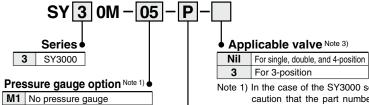

Note 1) In the case of the SY3000 series with a pressure gauge, when mounting on the manifold, use caution that the part numbers are different between the odd no. stations and the even no. stations to prevent the pressure gauges from interfering with each other. If using a connector connecting base M10/11/12 (mixed mounting type), you can use only the

model without a pressure gauge (M1).

Note 2) As per the new Measurement Law, gauges with a psi display will only be sold to overseas customers.

Note 3) In the case of the SY3000 series, use caution that the part numbers will differ depending on the one for single/double and 4- and 3-position due to the different length of solenoid valves. Also, if you have selected a model with a pressure gauge, and if at least the one for 3-position is included in the same manifold, use all the ones for 3-position to prevent the pressure gauges from interfering with each other.

SY5000 5 SY7000 Pressure gauge option

Pressure gauge with MPa display (For odd number station)

Note 2)

SY 5 0M - 00 - P

06 Pressure gauge with MPa display (For even number station)

N5 Pressure gauge with psi display (For odd number station)


	_	_	_	-	_	<u> </u>	-	-	<u> </u>	_	-	
M1	N	lo	p	re	ss	ure	Э	ga	u	ge	9	
00	_											$\overline{}$

Series •

00 Pressure gauge with MPa display N0 Pressure gauge with psi display

Part numbers of mounting screw (For repairs)

SY3000: SY3000-23-12A (2 pcs.) SY5000: SY5000-221-6A (2 pcs.) SY7000: SY7000-221-6A (3 pcs.)

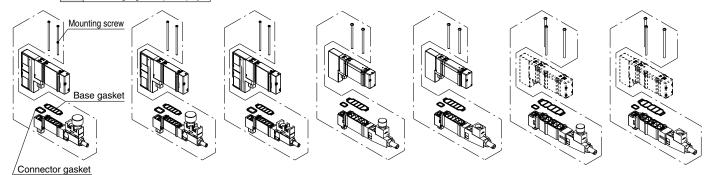

SY30M-05/N5-(With pressure gauge/

SY30M-06/N6-(With pressure gauge/

For odd number station) For even number station)

SY30M-M1-(Without pressure gauge) (With pressure gauge) (Without pressure gauge)

SY50M-00/N0-□

SY50M-M1-

SY70M-00/N0-□

SY70M-M1-

(With pressure gauge) (Without pressure gauge)

Specifications


Interface regula	tor model	SY30M-□-□-□ SY50M-□-□ SY70M-□-			
Applicable valve	model Note 2)	SY3□30□(R)	SY5□3 ⁰ □(R)	SY7□30(R)	
Regulating port		1(P), 4(A), 2(B)			
Set pressure ra	nge	0.1 to 0.7 MPa			
Maximum opera	ting pressure		1.0 MPa		
Fluid		Air			
Ambient and flui	d temperature	−10 to 50°C (No freezing)			
Weight [g] Note 3)	With pressure gauge	33(35) Note 4)	75	93	
weight [g] hold of	Without pressure gauge	27(29) Note 4)	69	87	

Note 1) Always apply pressure from 1(P) port in the base for interface regulator.

Note 2) 3-position closed center and pressure center, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.

Note 3) Gasket and mounting screws are included in the weight.

Note 4) (): Denotes the values of SY30M- \square - \square -3.

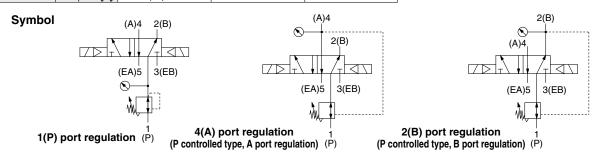

⚠ Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Mounting Screw Part No. 1 (when adding optional lamination layers)

Combination		① SY3000 (M2)		② SY5000 (M3)		3 SY7000 (M3)	
		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
-Round head combination screw ①: SY3000-23-24A ②: SY5000-221-1A ③: SY7000-221-1A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A	SUP stop valve spacer assembly with residual pressure release valve	SY30M-56-2A (2 pcs.)		SY50M-56-2A (2 pcs.)		SY70M-56-2A (3 pcs.)	
①: SY30M-56-2A ②: SY50M-56-2A ③: SY70M-56-2A	Individual SUP (EXH) spacer assembly						
Round head combination screw> (Round head combination screw>	Valve						
②: SY5000-221-5A ③: SY7000-221-5A	Double check spacer assembly with residual pressure release valve	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	_
C-	Individual SUP (EXH) spacer assembly						
Round head combination screw> (Round head combination screw>	Individual SUP (EXH) spacer assembly						
②: SY5000-221-3A ③: SY7000-221-3A		SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	SY7000- 221-3A (3 pcs.)	_	
C-	Individual EXH (SUP) spacer assembly						
Round head combination screw> ①: SY3000-23-24A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
2: SY5000-221-1A 3: SY7000-221-1A 4	SUP stop valve spacer assembly with residual pressure release valve						
①: SY30M-56-4A ②: SY50M-56-4A	Individual SUP (EXH) spacer assembly	SY30M-56-4A (2 pcs.)			I-56-4A ocs.)		I-56-4A ccs.)
③: SY70M-56-4A	Individual EXH (SUP) spacer assembly						

 $[\]ast$ Mounting onto a manifold follows the order explained above.

Note) The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.



Manifold Options *Series SY3000/5000/7000*

⚠ Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

Mounting Screw Part No. ② (when adding optional lamination layers)

			① SY30	00 (M2)	② SY50	00 (M3)	3 SY7000 (M3)	
Combin	nation		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw		Hexagon socket head cap screw
①: 9	nd head combination screw> SY3000-23-24A SY5000-221-1A SY7000-221-1A	/alve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1 A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1 A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A		SUP stop valve spacer assembly with residual oressure elease valve	SY30M	-56-3A	SY50M	-56-3A	SY70M	-56-3A
C 2:	SY50M-56-3A SY70M-56-3A C at re	Double check spacer assembly with esidual pressure release valve	(2 pcs.)		(2 pcs.)		(3 pcs.)	
①: 9 ②: 9	SY3000-23-24A SY5000-221-1A	√alve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
3: SY7000-221-1A Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A		SUP stop valve spacer assembly with residual oressure elease valve						
2:	SY30M-56-5A SY50M-56-5A SY70M-56-5A	Double check spacer assembly with residual pressure release valve	SY30M-56-5A (2 pcs.)		SY50M-56-5A (2 pcs.)		SY70M-56-5A (3 pcs.)	
	D E	ndividual EXH (SUP) spacer assembly						
<round combination="" head="" screw=""> (Round head combination screw></round>		√alve						
2: SY5000-221- 3: SY7000-221-	SY7000-221-7A	nterface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
C		ndividual SUP (EXH) spacer assembly						

^{*} Mounting onto a manifold follows the order explained above.



Note 1) The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

Note 2) When laminating an interface regulator with other options, only the combinations in the table above are possible.

∕ Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

* Refer to pages 237, 239, 241 for dimensions.

Manifold Options

■ Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow.

Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example).

* Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification

Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)

- * Electrical wiring is connected to a number of stations in the individual SUP block manifold.
- * When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- * A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.

■ Individual EXH block assembly

On the circuit of the plug-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations.


Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).

* Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification

Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)

- * Electrical wiring is connected to a number of stations in the individual EXH block manifold.
- * When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- * A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

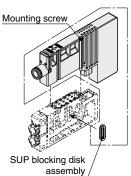

Mounting screw

5(EA)-

1(P) 3(EB)

How to Order Individual SUP/EXH Block Assembly One-touch fitting Straight type One-touch fitting **78** Elbow type Series • SY3000 3 5 SY5000 7 SY7000 78 Individual SUP block 79 Individual EXH block

<Example> D side U side 5(EA)__[5(EA) ΓX · 1(P) · 3(EB) 3(EB) 1 1(P) 1 2(B) (A)4 2(B) (A)4 2(B) (A)4 2(B) (A)4 2(B) (A)4 2(B)

EXH blocking disk

assembly

Individual SUP/EXH block assembly		
2	Short elbow type (Type 12)	
3	Long elbow type (Type 11)	
Note) Long elbow type is for the SY5000/7000 only.		

Symbol	P, E port	SY3000	SY5000	SY7000
L4	ø4	•	•	
L6	ø6	•	•	•
L8	ø8	_	•	•
L10	ø10	_	_	•
L12	ø12	_	_	•

Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
LN3	ø5/32"	•	_	1
LN7	ø1/4"	•	•	_
LN9	ø5/16"	_	•	
LN11	ø3/8"	_	_	•

Port size (Metric/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
C2	ø2	•	_	_
C3	ø3	•	_	_
C4	ø4	•	•	_
C6	ø6	•	•	•
C8	ø8	_	•	•
C10	ø10	_	_	•
C12	ø12	_	_	•

<Example> U side 5(EA) 3(EB) \$3(R) (A)4 2(B) (A)4 2(B) (A)4 2(B) (A)4 2(B)

	Port size (Inch/One-touch fittings				
Symbol	P, E port	SY3000	SY5000	SY7000	
N1	ø1/8"	•	_	_	
N3	ø5/32"	•	•	_	
N7	ø1/4"	•	•	•	
N9	ø5/16"	_	•	•	
N11	ø3/8"	_	_	•	



Manifold Options

■ SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12) [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

[EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)



3/5 3/5

B 2

Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

If the blocking disk assembly is ordered using

the manifold specification sheet and ordered

at the same time as the manifold, the position

■ Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

SUP/EXH blocking disk label



dis	k la	abel	
<u>/1</u> 		1\ 5	7

SUP blocking

dis	sk lab	el
3/9	1 5 3	/5

EXH blocking

where the blocking disk assembly is inserted will be labeled and shipped out.

Series	Part no.
SY3000	
SY5000	SJ3000-155-1A
SY7000	

■ Back pressure check valve assembly (Retrofit or pre-installed type)

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

* When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)

Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.

<Precautions>


- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- When the back pressure check valve assembly is mounted, please contact SMC for valve flow-rate characteristics.

Ordering Example

SS5Y3-10F1-05B-C6----1 set (Type 10 5-station manifold base part no.) *SY3201-5U1-------5 sets (2-position double part no.)

*SY30M-24-1A-----5 sets (Back pressure check valve assembly part no.)

-*The asterisk denotes the symbol for assembly.

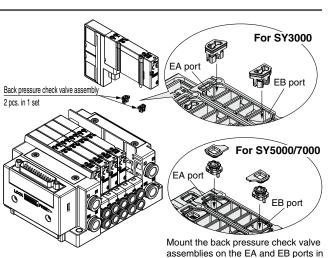

	Series	Part no.
	SY3000	SY30M-24-1A
	SY5000	SY50M-24-1A
	SY7000	SY70M-24-1A

the order shown in the figure above.


Manifold Options


■ Dual flow fitting (for connector connecting base, Type 10, side ported)


This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.


* When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

How to Order Dual Flow Fitting

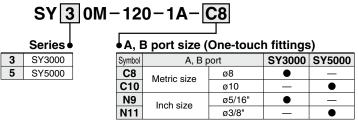

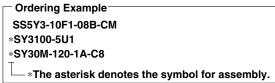

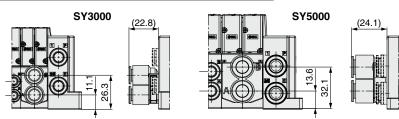

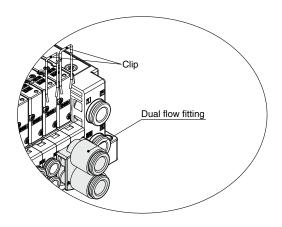

Note 1) Specifically for side porting for a connector connecting base. Cannot be attached to bottom or top ported, or mixed mounting types that are metal or connector connecting bases.

Note 2) When adding or changing clips, push them into the very end of the manifold for each station.

Also, make sure to use the clip that was packed together, as the clip and the fitting for one station differ among products that can be used with the SY5000.


Note 3) Not available for the SY7000 series.

■ Silencer

(One-touch fitting connection type)

This silencer can be mounted to the 3/5 (E: EXH) port of the manifold in one step.


Note) Shipped together with the product.

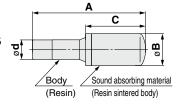

Series	Model	Effective area	Α	В	С
For SY3000 (ø8)	AN15-C08	20 mm ²	45	13	20
For SY5000 (ø10)	AN20-C10	30 mm ²	57.5	16.5	30.5
For SY7000 (ø12)	AN30-C12	41 mm ²	71.5	20	43.5

■ Plug (White)

These are inserted in unused cylinder ports and P, E ports.

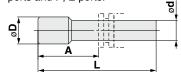

Note) Shipped together with the product.

Dimensions

ø d (Metric size)	Model	Α	L	ø D
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size ød (Inch size)	Model	Α	L	øD
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5
1/2"	KQ2P-13	24	46	15

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

Manifold Options *Series SY3000/5000/7000*

■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported)

SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.

* When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.

SS5Y3-10	
SS5Y5-10	
SS5Y7-(M) ¹⁰	

Mounting and Option

For 24 stations

	Mounting option						
Symbol	Printing		DIN rail			Direct	
	Yes	No	With	Without	Specified length	mounting	
AA	•	_	_	_	_	•	
Α	•	_	•	_	_	_	
A0	•	_	_	•	_	_	
A3	•	_	_	_	For 3 stations	_	
÷	:	:	:	:	:	_	
A24	•	_	_	_	For 24 stations	_	
BA	_	•	_	_	_	•	
В	_	•	•	_	_	_	
B0	_	•	_	•	_	_	
B3	_	•	_	_	For 3 stations	_	
_							


ı	┌ Ordering Example ─────
	SS5Y3-10F1-05UR-C6AA1 set
	<u>*</u> SY3200R-5U1 5 sets


* The asterisk denotes the symbol for assembly.


- Note 1) Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.
- Note 2) No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.

n = 4 to 24


<SY5000/7000>

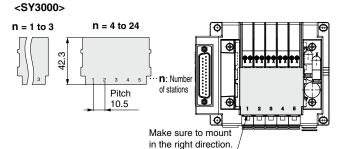

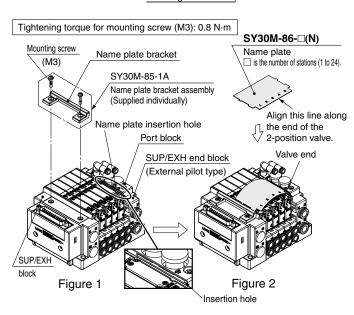

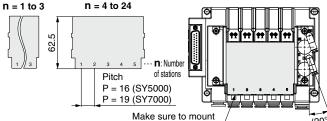

Make sure to mount in the right direction. SY5000: SY50M-86-□(N) Tightening torque for mounting screw (M3): 0.8 N-m SY7000: SY70M-86-□(N) Name plate Mounting screw \square is the number of stations (1 to 24). Name plate bracket (M3)

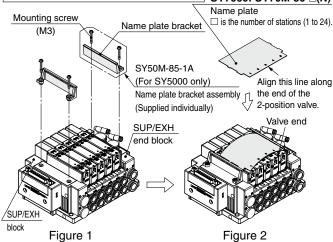

B24

Manifold Options

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

■ If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

Name plate part no.

Se	ries	SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-□N	SY50M-86-□N	SY70M-86-□N	☐:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

Name plate bracket assembly part no. and number of items ordered

	· · · · · · · · · · · · · · · · · · ·		
Serie	S	SS5Y3-10	SS5Y5-10/11
Name plate assembly part no.		SY30M-85-1A	SY50M-85-1A
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.	
block assembly	Internal pilot double sided piping	2 pcs.	2 200
Pilot type and	External pilot U/D piping	1 pc. Note)	2 pcs.
P, E port entry	External pilot double sided piping	Not required Note)	

Note 1) If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

Note 2) Name plate bracket assembly is not required for the SY7000.


⚠ Caution


- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.



Dimensions: Manifold Options/Series SY3000

■ Blanking plate assembly

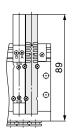

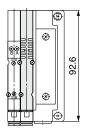








<Type 50, 51, 52>


<Type 10, 12>

■ Individual SUP/EXH spacer assembly (Side ported)

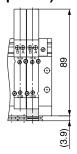


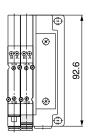


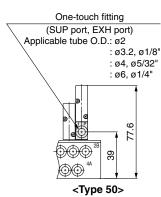


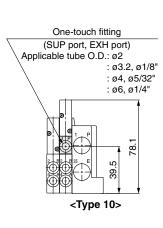


■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

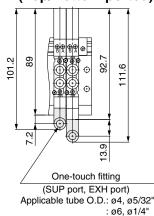


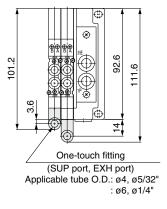


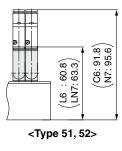


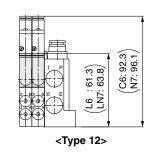


■ SUP stop valve spacer assembly with residual pressure release valve

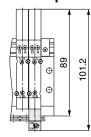

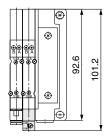

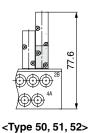

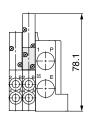



<Type 10, 12>





Dimensions: Manifold Options/Series SY3000

■ Double check spacer assembly with residual pressure release valve

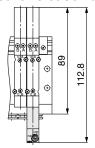

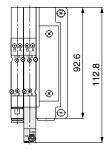

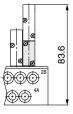


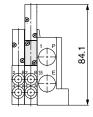


<Type 50, 51>

<Type 10>

■ Individual SUP/EXH block assembly (Top ported)

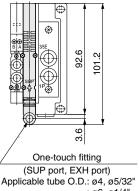


: ø6, ø1/4"

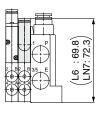


<Type 12>


■ Interface regulator

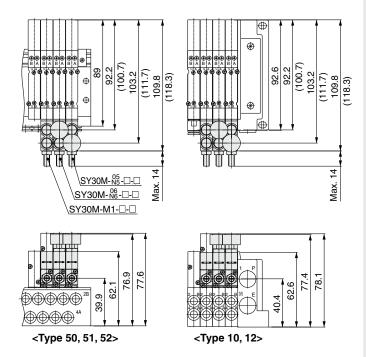

*The dimensions within () applies to the ${\bf SY30M-} \Box {\bf -} \Box {\bf -3}.$


■ Individual SUP/EXH block assembly (Side ported)

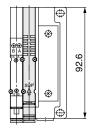


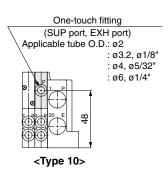

Dimensions: Manifold Options/Series SY5000

■ Blanking plate assembly

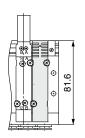

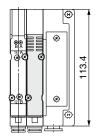







<Type 50, 51, 52>


<Type 10, 11, 12>

■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

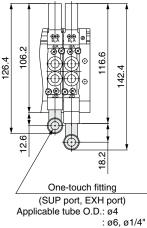

One-touch fitting
(SUP port, EXH port)
Applicable tube O.D.: ø4,
: ø6, ø1/4"

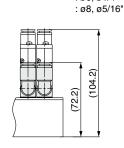


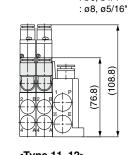



<Type 51, 52>


<Type 11, 12>

■ Individual SUP/EXH spacer assembly (Side ported)

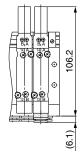


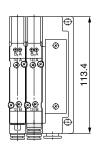


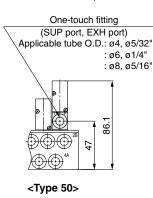


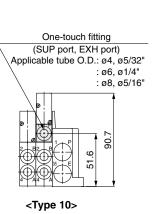


■SUP stop valve spacer assembly with residual pressure release valve

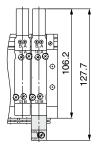

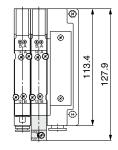

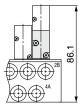

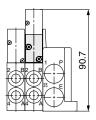



<Type 50, 51, 52>


<Type 10, 11, 12>


Dimensions: Manifold Options/Series SY5000

■ Double check spacer assembly with residual pressure release valve

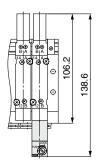

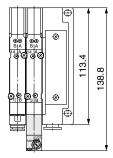

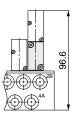


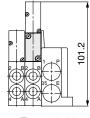

<Type 50, 51>


<Type 10, 11>


■ Individual SUP/EXH block assembly (Top ported)

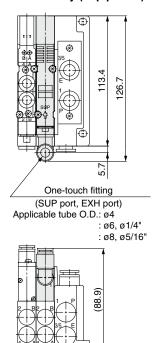


<Type 12>


■ Individual SUP/EXH block assembly (Side ported)

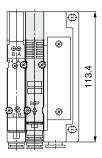


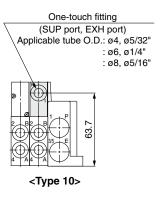


■ Interface regulator

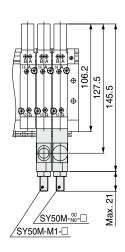

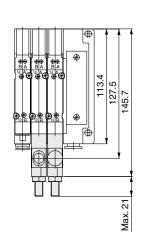

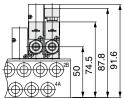



<Type 50, 51, 52>

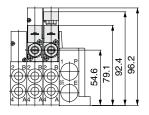

<Type 10, 11, 12>

■ Individual SUP/EXH block assembly (Bottom ported)

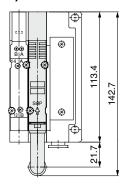


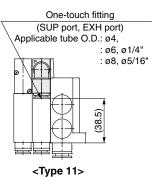



239


Dimensions: Manifold Options/Series SY7000

■ Blanking plate assembly

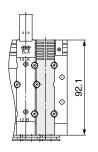

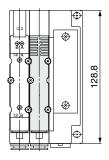

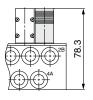


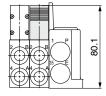



<Type 50, 51, 52>

<Type 10, 11, 12>


■ Individual SUP/EXH spacer assembly (Side ported)

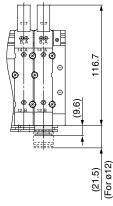

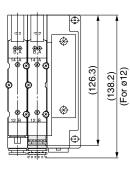


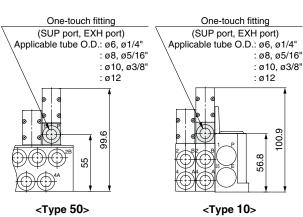


■ Individual SUP/EXH spacer assembly (Top/Bottom ported)

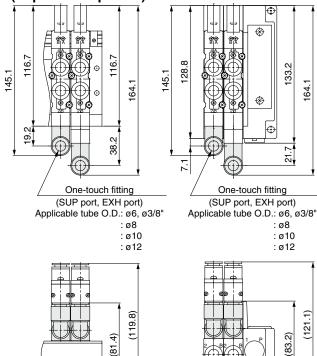


■ SUP stop valve spacer assembly with residual pressure release valve

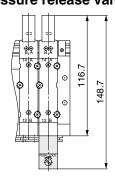


<Type 51, 52>

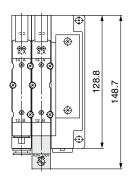

<Type 11, 12>

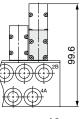

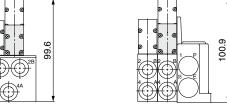

<Type 10>


<Type 10, 11, 12>





100.9


Dimensions: Manifold Options/Series SY7000

■ Double check spacer assembly with residual pressure release valve

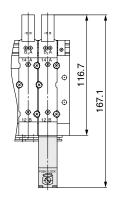

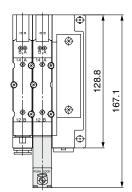

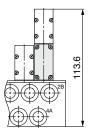


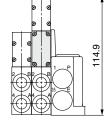


<Type 50, 51>

<Type 10, 11>

■ Individual SUP/EXH block assembly (Top ported)

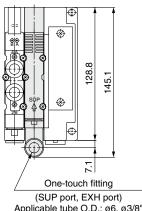



Applicable tube O.D.: ø6, ø3/8" : ø8 : ø10

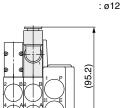


<Type 12>


■ Individual SUP/EXH block assembly (Side ported)

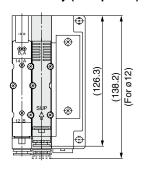


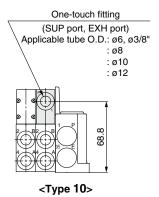


■ Interface regulator

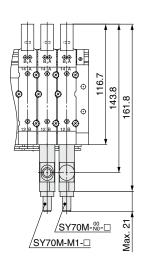


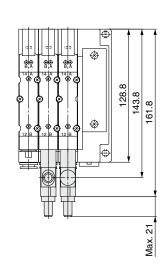


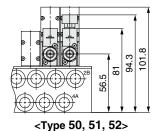

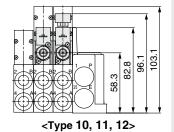

■ Individual SUP/EXH block assembly (Bottom ported)

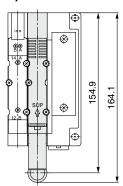

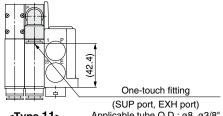

<Type 11>

Applicable tube O.D.: ø8, ø3/8" : ø10

: ø12



Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Environment

⚠ Warning

- Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
- Products compliant with IP67 enclosures (based on IEC60529)
 are protected against dust and water, however, these products
 cannot be used in water. If using in an environment that is
 exposed to water and dust splashes, take measures such as
 using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

Valve Mounting

⚠ Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Model	Thread size	Tightening torque
SY3000	M2	0.16 N·m
SY5000/7000	М3	0.8 N·m

Manual Override

⚠ Warning

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

■ Non-locking push type

Push down on the manual override button until it stops.



■ Push-turn locking slotted type [Type D]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counterclockwise.


If it is not turned, it can be operated the same way as the non-locking type.


Manual Override

Marning

■ Push-turn locking lever type [Type E]

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking type.

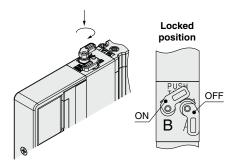

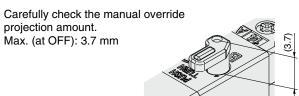


∧ Caution

Do not apply excessive torque when turning the manual override. $[0.1 \text{ N} \cdot \text{m}]$

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage etc.

■ Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

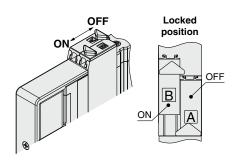



Locked position



Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Back Pressure Check Valve

⚠ Caution

- There are two types of back pressure check valves; the one which is built into a valve (with rubber seal type only) and the one which is built in on the manifold side with connector connection. Both of them have a check valve built-in to prevent back pressure. For this reason, use caution that the valves with external pilot specification cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow-rate characteristics goes down. Please contact SMC for details.
- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

Exhaust Throttle

⚠ Caution

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

Used as a 3-Port Valve

⚠ Caution

■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.

Plug position		B port	A port
Type	of actuation	N.C.	N.O.
Number of solenoids	Single	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)
Number of	Double	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)

Valve and Manifold Combination

The SY series plug-in valve has the common configuration of the valve mounting surface between base mounted type (SY $\frac{3}{7}$ \square 0 \square) and top ported type (SY $\frac{3}{7}$ \square 3 \square), therefore, it can be mounted to all manifolds of the side ported type (Type 50 and Type 10), the bottom ported type (Type 51 and Type 11) and the top ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top ported valve to a side ported or bottom ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base mounted valve is mounted to a top ported manifold, there will be no output from the A and B port.



Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Light/Surge Voltage Suppressor




■ Polar type


Positive common

Single solenoid

Light/surge voltage suppressor (□Z)

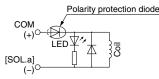


Surge voltage suppressor ($\Box S$)

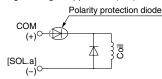


Positive common

Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□Z)

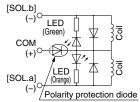


Surge voltage suppressor (□S)

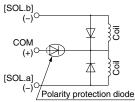


Negative common

Single solenoid

Light/surge voltage suppressor ($\square NZ$)

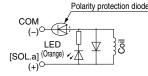


Surge voltage suppressor (□NS)

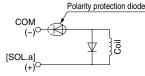


Negative common

Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□NZ)

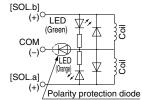


Surge voltage suppressor (□NS)

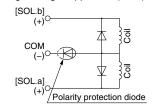


■ Non-polar type

With surge voltage suppressor (□R)

Single solenoid

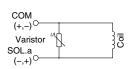


Double solenoid

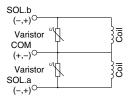

With light/surge voltage suppressor (□U)

Single solenoid


Double solenoid

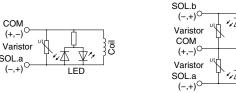

■ With power saving circuit


Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 67 ms at 24 VDC.)

Note) Be careful of the energizing time, as quick response and high pressure types will become operational when the energizing time is over 40 ms.

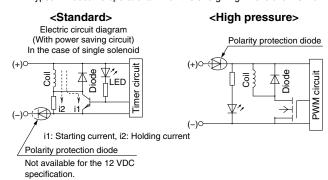

The above circuit reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

<Electrical power waveform with power saving circuit>

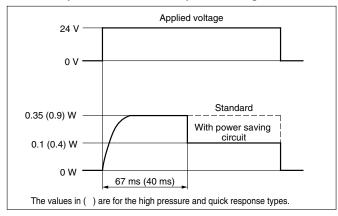

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

Residual voltage of the surge voltage suppressor

Note) If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the below table and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 4.

Residual Voltage

Surge voltage	DC			
suppressor	24 V	12 V		
S, Z	Approx. 1 V			
R, U	Approx. 47 V	Approx. 32 V		





Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Continuous Duty

⚠ Caution

If a valve is energized continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for a long period of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for a long period of time, take special care as the temperature rise will be greater.

Countermeasure for Surge Voltage Intrusion

■ Sneak-in of surge voltage

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energized state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

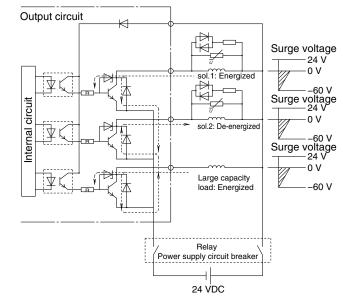


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

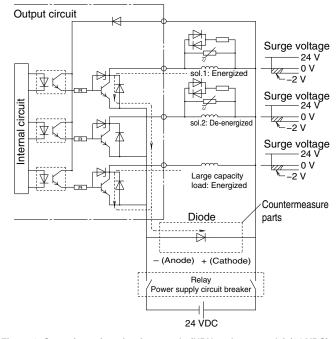


Figure 2. Surge intrusion circuit example (NPN outlet example) (24 VDC)






Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Light Indication


When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energized, and it turns green when solenoid b is energized.

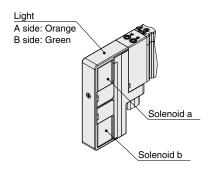

Type 5□ (Metal Base) Changing Connector Entry Direction

∧ Caution

Connector direction for electrical entry of D-sub connector, flat ribbon cable and PC wiring can be changed. If the directional change is required, push the lever on both sides to remove the connector and change the connector direction for electrical entry as shown in the figure. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

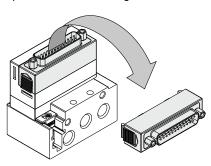


Type 1□ (Connector Connecting Base) Changing Connector Entry Direction

∧ Caution

Connector direction for electrical entry of D-sub connector <IP40>, flat ribbon cable and PC wiring can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire etc., to break. Thus, refrain from using in these ways.

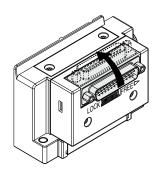


How to Order Manifold

⚠ Caution

The letter "S]" is indicated on manifold blocks for the SY series Type 1□ (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-or 4-position valves cannot be used for manifolds blocks with single wiring specification S.)

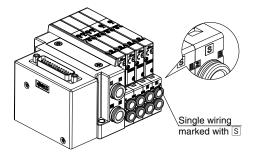





Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Substrate Assemblies inside Manifolds

A Caution

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

Fixation of DIN Rail Mounting Type Manifold

⚠ Caution

- 1. When the manifold is fixed with bolts on a mounting surface etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.


Port Block Assembly and How to Change Piping Types between Top and Side

⚠ Caution


For top ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top ported type port block assembly with the side ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 223 for part numbers of port block assembly and body cover assembly.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

∆ Caution

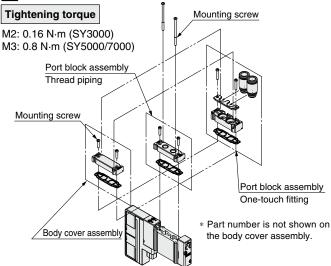

■ How to change while mounted on a manifold

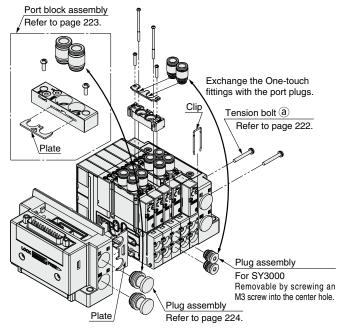





Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

Changing One-touch Fittings

⚠ Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 224 for part numbers of One-touch fittings for valve or manifold.

Port plate

■ Valve One-touch fitting


⚠ Caution

Tightening torque


M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

■ Plug-in metal base

•Side ported (Type 50)

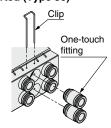

•Bottom ported (Type 51)

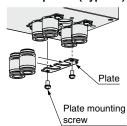

Clip part no. (10 pcs. included)

- 1 1	· (· [· · · · · · · ·]
Series	Part no.
SY3000	SY30M-19-2A
SY5000	SY50M-19-2A
SY7000	SY70M-19-2A


Plate assembly part no. (10 pcs. included)

	<u> </u>
Series	Part no.
SY3000	SY30M-10-3A
SY5000	SY50M-10-6A
SY7000	SY70M-10-7A

Note) Including mounting screw

■ Plug-in connector connecting base

•Side ported (Type 10)

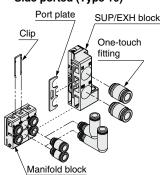

SUP/EXH block Clip part no. (10 pcs. included)

Series	Part no.					
SY3000	SY30M-19-1A					
SY5000 Note 1)	SY50M-19-6A					
SY3000/5000 Mixed mounting type						
SY7000	SV3000-70-1A					

Note 1) A and B ports (ø8 and ø5/16") of the SY3000/5000 mixed mounting type are those for the SY5000.

Note 2) If the port plate for the SUP/EXH block is required, please contact SMC.

Changing One-touch Fittings

Caution

•Bottom ported (Type 11)

Secure enough space between the manifold blocks when the plate is detached and attached.

Plate Manifold block

Plate part no. (10 pcs. included)

Series	Part no.					
SY5000 Note)	SY50M-10-4A					
SY3000/5000 Mixed mounting type						
SY7000	SY70M-10-4A					

Note) A and B ports (ø8 and ø5/16") of the SY3000/5000 mixed mounting type are those for the SY5000.

Other Tube Brands

1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.

1) Nylon tube within ± 0.1 mm within ± 0.1 mm within ± 0.1 mm 3) Polyurethane tube within ± 0.1 mm ± 0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

One-touch Fittings

■ Tube attachment/detachment for One-touch fittings

1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.





Be sure to read before handling. Refer to back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on SMC website, http://www.smcworld.com

One-touch Fittings

⚠ Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

Applicable Fittings: Series KQ2H, KQ2S

Series	Model	Piping port	Port size	Fittings	Applicable tube O.D.							
Series					ø 2	ø 3.2	ø 4	ø 6	ø 8	ø10	ø 12	
	SY3□30-□□-M5 4A, 2B	44 OD	M5	KQ2H								
		IVIO	KQ2S									
		1P, 5EA, 3EB	1/8	KQ2H								
				KQ2S								
SY3000		X, PE	M5	KQ2H								
313000	SS5Y3-50/51/52 (R)			KQ2S								
	Manifold base 4A, 2B		1/8	KQ2H								
		4A 2B	1/0	KQ2S								
		4A, 2D	M5	KQ2H								
				KQ2S								

Series	Model	Piping port	Port size	Fittings	Applicable tube O.D.						
Selles					ø 2	ø 3.2	ø 4	ø 6	ø 8	ø 10	ø 12
	07.200 04	44.00	1 (0	KQ2H							
	SY5□30-□□-01	4A, 2B	1/8	KQ2S							
		1P, 5EA, 3EB	1/4	KQ2H							
		IP, SEA, SEB	1/4	KQ2S							
SY5000		X, PE	M5	KQ2H							
	SS5Y5-50/51/52 (R)	7, FE		KQ2S							
	Manifold base	1/4	KQ2H								
		4A, 2B	1/4	KQ2S							
			1/8	KQ2H							
				KQ2S							

Series	Model	Piping port	Port	Fiftings	Applicable tube O.D.							
Selles	iviodei		size		ø 2	ø 3.2	ø 4	ø 6	ø 8	ø 10	ø 12	
	SY7□30-□□-02 4A, 2B 1	1/4	KQ2H									
	317030-00-02	4A, 2D	2D 1/4	1/4	KQ2S							
	1P, 5EA, 3EB	1D 5EA 2EB	3/8	KQ2H								
SY7000		3/6	KQ2S									
317000	SS5Y7-50/51/52 (R)	V DE	M5	KQ2H								
	Manifold base X, PE	L IVIS	KQ2S									
		4A 2B	1/4	KQ2H								
		4A, 2B		KQ2S								

■ Trademark

DeviceNet™ is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA. CompoNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

⚠ Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

- Edition B Added the EX260 Integrated-type (For Output) Serial Transmission System.
 - Added EtherNet/IP™ and EtherCAT to the EX600 Integrated-type (For Input/Output) Serial Transmission System (Fieldbus System).
 - Additional Options:
 - \cdot Interface regulator assembly $\,\cdot$ Dual flow fitting
 - · Individual SUP block assembly · Name plate for manifolds
 - · Individual EXH block assembly
- Changed the part numbers for A, B port mixed sizes for plug-in connector connecting bases for Type 10 (Side ported), Type 11 (Bottom ported), Type 12 (Top ported).
- Deleted the mixed specification for A, B port piping specification for plug-in connector connecting base for Type 12 (Top ported).
- Number of pages from 148 to 164

- Edition C Added the SY7000.
 - Added plug-in sub-plate (SY3000/5000).
 - Added with residual pressure release valve (SY5000).
 - Added with safety slide locking manual override.
 - Added D-sub connector [IP67] manifold.
 - · Added PC wiring (with power supply terminal) manifold.
 - Number of pages from 164 to 260