
BCS R08RRE-POM80C-EP02

Order Code: BCS012C





1) Sensing surface, 2) Housing, 3) Cover, 4) Power indicator green, 5) Function indicator yellow

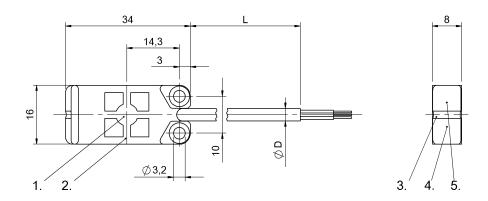

| Approval/Conformity | cULus |
|---------------------|------------------------------|
| | CE |
| | WEEE |
| | EAC |
| Basic standard | IEC 60947-5-2 |
| Scope of delivery | Holder |
| | Installation guide |
| Sensitivity | Switching distance teachable |
| Series | R08 |
| Trademark | Global |

Display/Operation

| Function indicator | yes |
|--------------------|-----------|
| Power indicator | yes |
| Setting | Teachable |
| | |

Electrical connection

| Cable diameter D | 3.40 mm |
|-----------------------------------|----------------------|
| Cable length L | 2 m |
| Conductor cross-section | 0.14 mm ² |
| Number of conductors | 4 |
| Polarity reversal protected | yes |
| Protection against device mix-ups | yes |
| Short-circuit protection | yes |

Electrical data

| 0.33 μF |
|----------|
| 12.0 mA |
| 1230 VD0 |
| 75 V DC |
| 50 mA |
| 24 V |
| 200 ms |
| 10 μΑ |
| 10 % |
| 50 Hz |
| DC -13 |
| 1.5 V |
| |

Environmental conditions

| Ambient temperature | -2570 °C |
|---------------------|----------|
| Contamination scale | 1 |
| IP rating | IP67 |
| Storage temperature | -2585 °C |
| | |
| Functional safety | |

MTTF (40 °C)

| Interface | |
|------------------|--------------------------|
| Switching output | PNP normally closed (NC) |

98 a

Capacitive Sensors

BCS R08RRE-POM80C-EP02 Order Code: BCS012C



Material

Cover materialPPHousing materialPPMaterial jacketPURMaterial sensing surfacePP

Mechanical data

Dimension34 x 16 x 8 mmInstallationfor flush mountingSizeBlock styleTightening torque0.2 Nm

Range/Distance

Hysteresis H max. (% of Sr) 15.0 %

Measuring range 1...8 mm

Real switching distance sr 8 mm

Repeat accuracy max. (% of Sr) 5.0 %

Temperature drift max. (% of Sr) 20 % [-5...55 °C]

Remarks

For full calibration connect input DI to L+ for 2...7 seconds. For empty calibration connect to L+ for 7..12 seconds.

Input DI can be used for teaching the switching point. In normal operation input DI should be connected continuously to L-.


The potentiometer does not have a fixed stop, but can be turned endlessly without destroying anything.

If no change in the switching signal is detected, the potentiometer should be turned forwards or backwards until a signal change occurs at the output.

For more information about MTTF and B10d see MTTF / B10d Certificate


Indication of the MTTF- / B10d value does not represent a binding composition and/or life expectancy assurance; these are simply experiential values with no warranty implications. These declared values also do not extend the expiration period for defect claims or affect it in any way.

Wiring Diagrams

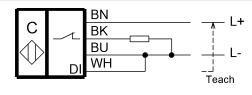

BCS R08RRE-POM80C-EP02 **Order Code: BCS012C**



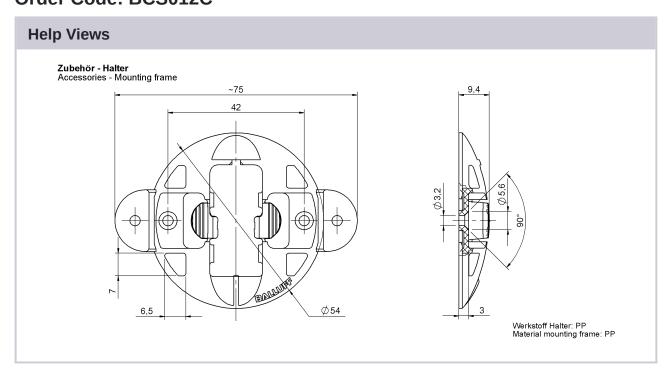

Subject to change without notice: 240716