

## Installation guide

Thank you for choosing OMP Global Style.

**omp**  
**AMERICAS**

200 Norfinch Drive  
Toronto, Ontario,  
Canada  
M3N 1Y4

Tel: 1-416-667-9909

Email: [americas@omp-global.com](mailto:americas@omp-global.com)

**omp**  
**EUROPE/MIDDLE EAST**

Common Lane  
Setchey, Kings Lynn  
Norfolk, PE33 0AT  
England

Tel: 44-1553-813-300


Email: [europe@omp-global.com](mailto:europe@omp-global.com)

**omp**  
**ASIA PACIFIC**

1D Quadrant Dr,  
Gracefield,  
Lower Hutt, 5010  
New Zealand

Tel: 64-4-586-6677

Email: [asiapacific@omp-global.com](mailto:asiapacific@omp-global.com)

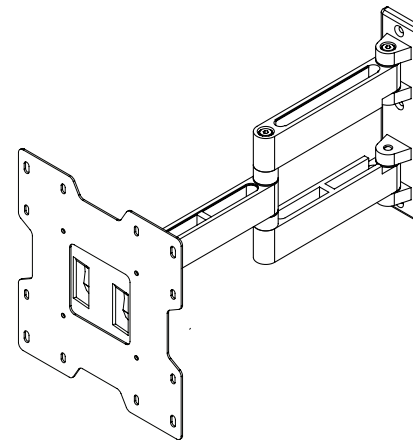

**omp**  
GLOBAL STYLE™

[www.omp-global.com](http://www.omp-global.com)

## MOUNTING INSTALLATION INSTRUCTIONS

### CAUTION:

If you do not understand these instructions, or have doubts about the safety of the installation, please call a qualified installer or contact us. We will provide assistance for any safety issues and resolve any missing component problems. Please check carefully to make sure there are no missing or defective parts. Do not use components with defects, as wrong installation may lead to component damage or serious injury to the user. Do not use this product for any purpose other than the original intended use. The hardware supplied for this product cannot be used on a steel stud wall, old cinder block wall or a hollow wall. If you cannot determine the nature of a wall, please consult a qualified installer. Our company will not be held responsible for damage or loss caused by wrong installation or assembly. Regular cleaning of this product with a clean dry cloth is usually sufficient, but for stubborn marks, wipe over gently with a clean damp cloth. Never use strong detergents or abrasives, as these may damage the surface. There are many small components used in the construction of this unit, these loose items should be kept away from young children whilst assembling your unit. Do not exceed the maximum weight capacity for this product. Your installer is responsible for ensuring the safe installation of this product.

## IMPORTANT NOTES

Designed for 23"- 40" LCD and Plasma Flat Panels  
Maximum load capacity:  
36kg (80lbs).

This product suits displays with VESA 75mm x 75mm, 100mmx100mm, 200mm x 100mm and 200mmx200mm mounting hole patterns.  
The manufacturer does not accept responsibility for incorrect installation.

## COMPONENT CHECKLIST


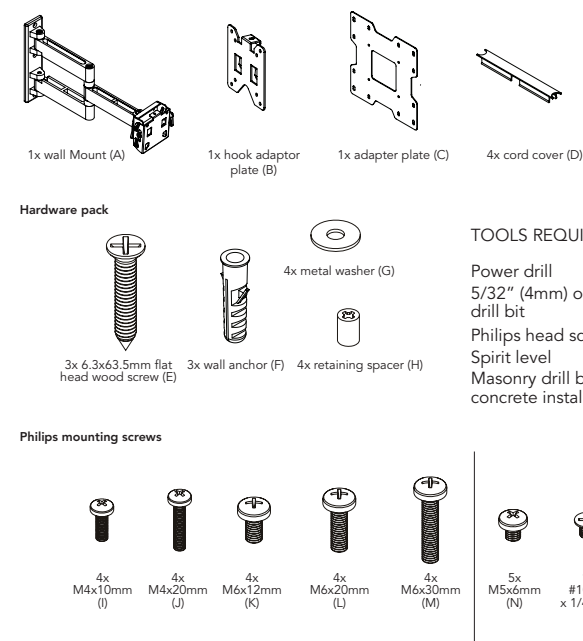


fig. I

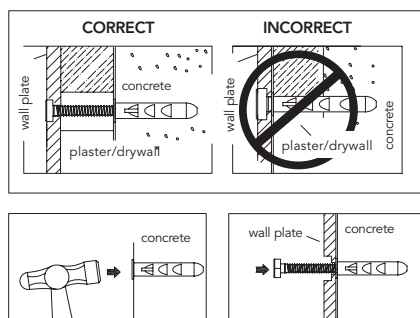

## INSTALLATION OF THE WALL PLATE TO THE WALL

### Wood stud installation:

The wall mount must be screwed into a stud in order to safely hold mount and monitor. Using a stud finder, find location of stud in wall. An "edge to edge" stud finder is recommended for this. Using wall mount (A), mark on wall screw holes. Screw holes should be in the centre of the stud. A level will ensure the holes for the mount are vertically straight. Drill three 4mm (5/32") diameter holes 65mm (2.5") deep. Attach wall arm to wall using three 6.3mm flat head wood screws (E), see fig. 2.1.

### Solid concrete and concrete block installation:

Please read warning on next page before attempting to install mount on a solid concrete or concrete block wall.

Place mount on wall, using level to ensure wall mount will be straight. For concrete block installations mount in a solid area, at least 25mm (1") from the sides of the block. Mark holes, then drill three 8mm (1/3") diameter holes with minimum depth of 65mm (2.5"). Insert wall anchors (F) in holes flush with wall. Place wall arm over wall anchors and secure with wood screws (E). Tighten fasteners, making sure the wall arm is level, see fig. 2.2.

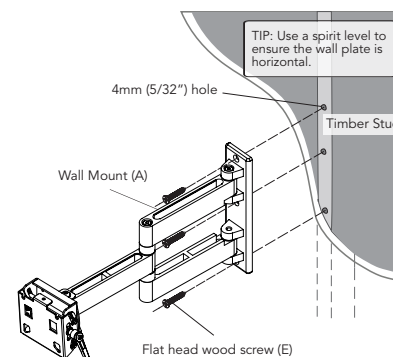


fig. 2.1

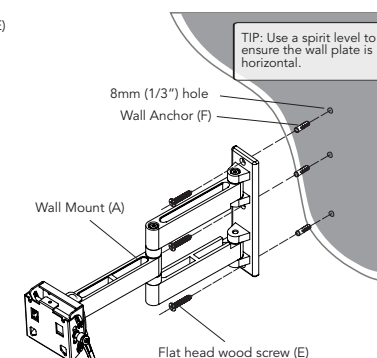


fig. 2.2

## WARNING

When installing the wall mount onto a solid concrete wall, verify that you have a minimum of 35mm (1 3/8") of actual concrete thickness in the hole to be used for the concrete anchors. Be sure to mount in a solid part of the wall. It is suggested that a standard electric drill on a slow setting is used to drill the hole, instead of a hammer drill. The concrete must be 2000PSI minimum density.

The anchors must be seated firmly against the concrete or masonry. If mounting to a masonry wall covered with drywall/plaster, counter bore a hole through the drywall/plaster around the mounting hole location, so that the anchor can be seated directly against concrete or masonry.

## SELECT THE CORRECT MOUNTING HARDWARE FOR YOUR TELEVISION

Select the correct mounting screws (I, J, K, L or M). Optional spacers (H) may be used between mount and monitor. Do not overtighten screws and make sure that screws do not bottom out in the mounting holes.

**CAUTION:** Always make sure the television is unplugged, before threading any bolt into the back panel! Find the screw holes in the television's back, then select the screws that fit the screw holes.


**IMPORTANT:** If you cannot find the hardware that fits your television, please contact your local hardware store.

## INSTALLATION OF THE TELEVISION

**CAUTION:** Never lay the television face down on the glass, it should be tilted or leaned against a wall or other solid surface. Laying the television face down on the glass, may lead to permanent damage.

## ATTACH HOOK ADAPTOR PLATE TO SCREEN


### VESA 75X75

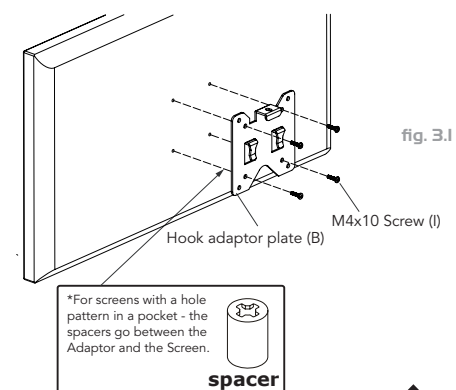

**NOTE:** If hole pattern is in a pocket, attach hook adaptor plate (B) to back of screen using four M4x20 screws (J) and four spacers (H) as shown.



### VESA 100X100

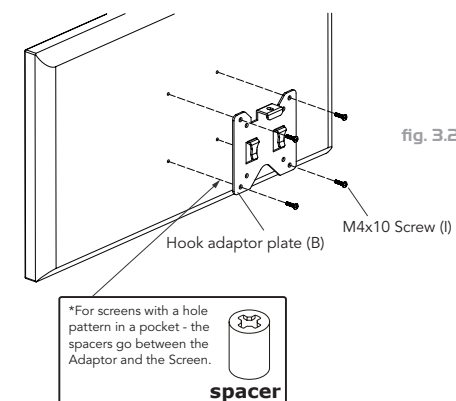

**NOTE:** If hole pattern is in a pocket, attach hook adaptor plate to back of screen using four M4x20 screws (J) and four spacers (H) as shown.

## ATTACH ADAPTOR PLATE TO HOOK ADAPTOR

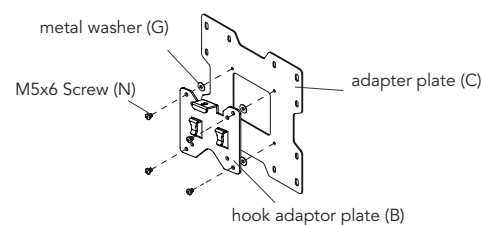


fig. 4

NOTE: If screen has VESA 200x100mm or 200x200mm mounting patterns, attach adapter plate (C) to hook adaptor plate (B) using four M5x6 screws (N) and four metal washers.

## VESA 200X100

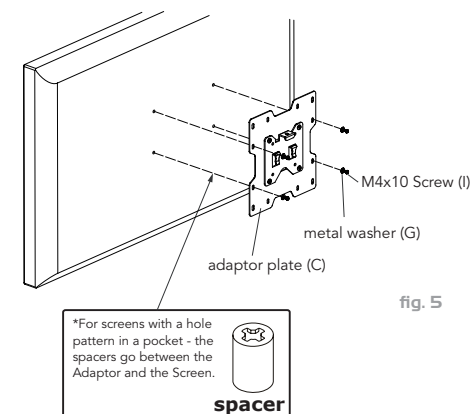


fig. 5

NOTE: If hole pattern is in a pocket, attach adaptor plate to back of screen using four M4x20 screws and four spacers as shown.



## VESA 200X200

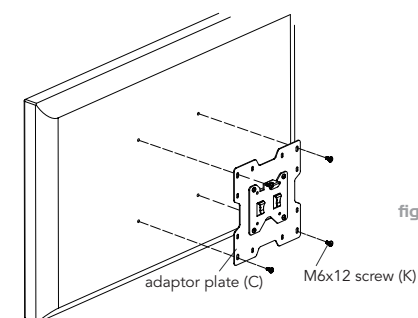


fig. 6

NOTE: If M6x12mm screws get less than 3 threads of engagement then try attaching the Adapter Plate to the back of the screen with four M6x20mm screws. If these get less than 3 threads of engagement, then use four M6x30mm screws.

## INSTALLING AND REMOVING FLAT PANEL SCREEN

Lower hook adaptor plate with screen at an angle into recesses of assembly arm.  
Once clips are engaged, push down to seat clips in recesses.  
Insert and tighten M5x6mm (N) Philips screw to lock screen to assembly arm.  
NOTE: This procedure will require two persons, see fig. 7.

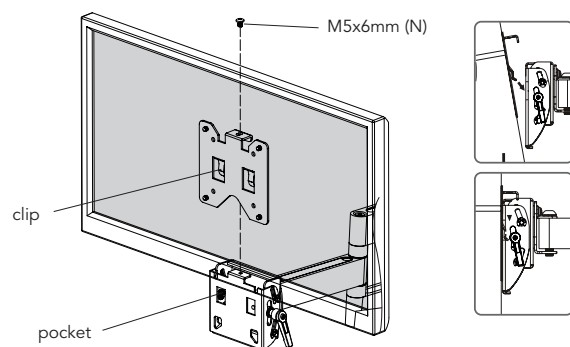


fig.7

## ADJUST TILT

Loosen tilt lever (only enough to allow controlled adjustment).  
Adjust tilt.  
Lock tilt lever (Tighten)  
Use ratchet to adjust lever position  
Roll screen to desired position (5 degrees clockwise or counter-clockwise). Insert #10-32x1/4" flat head Philips screw (O) to lock screen into position.

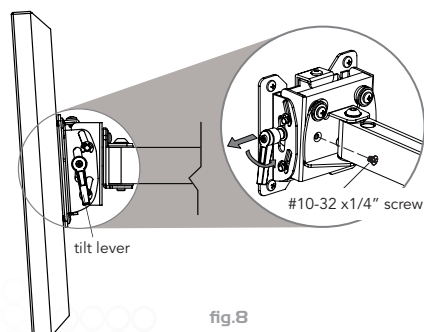


fig.8

## CORD COVERS

Install cord covers (D) as shown, and re-attach covers, see fig. 9.

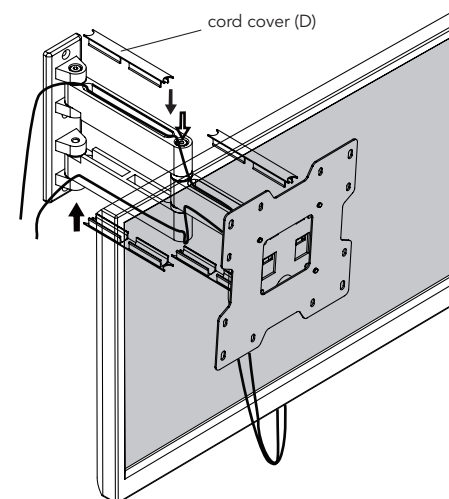


fig.9

NOTE: Be sure to leave enough slack to allow for movement of arms.