

Product description

Snap-In IP40 male panel mount connector, Contacts: 3, 2.5 - 4.0 mm, unshielded, dip-solder, IP40


Area Part no. Snap-In IP40 series 719 09 9749 20 03


## Illustration

Scale drawing

Contact arrangement (Plug-in side)



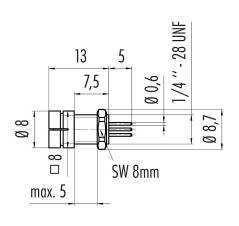

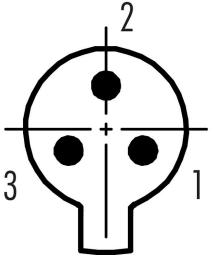

You can find the component part drawing and assembly instructions on the next page.

## **Technical data**

#### **General features**

Part no.	09 9749 20 03
Connector design	male panel mount connector
Version	male straight
Connector locking system	snap
Termination	dip-solder
Degree of protection	IP40
Cable outlet	2.5 - 4.0 mm
Temperature range from/to	-25 °C / 70 °C
Mechanical operation	> 100 Mating cycles
Weight (g)	1.13
Customs tariff number	85369010

#### **Electrical parameters**

Rated voltage	60 V
Rated impulse voltage	800 V
Rated current (40 °C)	3,0 A
Insulation resistance	$\geq 10^{10} \Omega$
Pollution degree	1



Product description

Snap-In IP40 male panel mount connector, Contacts: 3, 2.5 - 4.0 mm, unshielded, dip-solder, IP40

Area Part no. Snap-In IP40 series 719 09 9749 20 03

Overvoltage category	П
Insulating material group	11
EMC compliance	unshielded

#### Material


Housing material	PA
Contact body material	PA
Contact material	CuZn (brass)
Contact plating	Au (gold)
REACH SVHC	CAS 7439-92-1 (Lead)
SCIP number	d6cf6f75-0186-4753-8a65-0282e07404f7

#### Classifications

eCl@ss 11.1	27-44-01-09
ETIM 7.0	EC003569

## **Component part drawing**

male insert

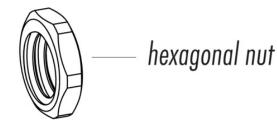




Product description

Snap-In IP40 male panel mount connector, Contacts: 3, 2.5 - 4.0 mm, unshielded, dip-solder, IP40

Area Part no. Snap-In IP40 series 719 09 9749 20 03

### Assembly instructions / Panel cut-out

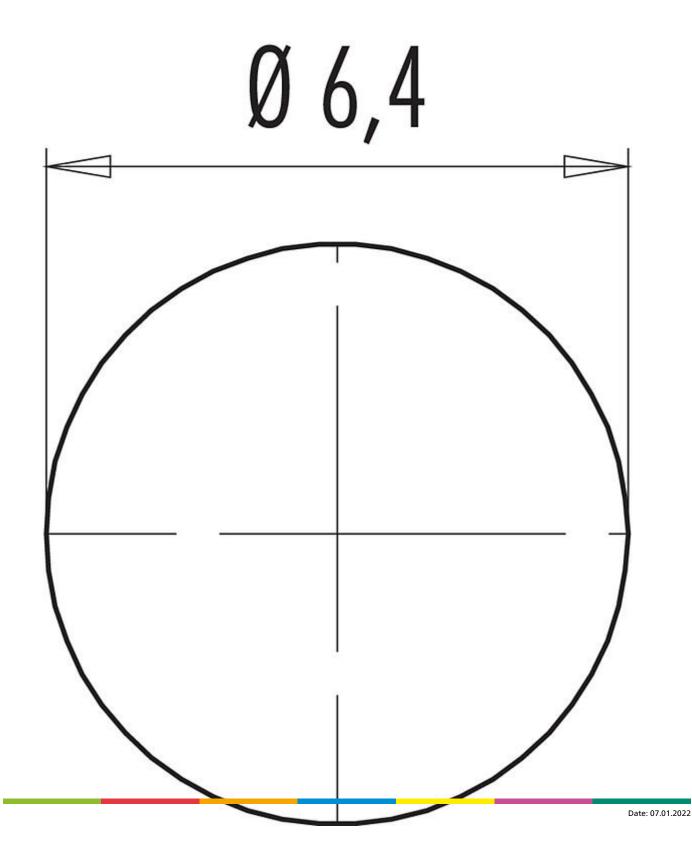



Product description

Snap-In IP40 male panel mount connector, Contacts: 3, 2.5 - 4.0 mm, unshielded, dip-solder, IP40

Area Part no. Snap-In IP40 series 719 09 9749 20 03

## **Security notices**

The connectors have been developed for applications in plant engineering, control and electrical equipment construction. The user is responsible for checking whether the connectors can also be used in other areas of application.