
Membrane Air Dryer





Possible to easily supply dry air using the hollow fiber membrane!

(Non-fluorocarbon) (Compatible with low dew point (-60°C)) (No vibration or heat discharge)

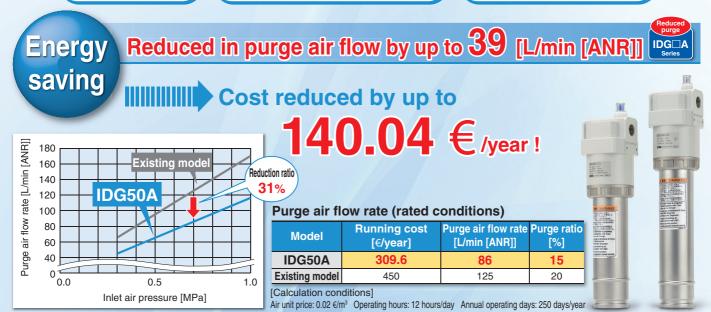





Standard dew point -20°C/--15°C/Type H -40°C/Type L

-60°C/Type S



IDG□A

Space saving

Total length is shortened. Series IDG30A to 100A

Max. 59 mm

					(111111)
Size	30	50	60	75	100
Shortened dimension	2	7	44	54	59
IDG□A	291	330	348	418	483
Existing model	271	315	392	472	542

* Standard dew point: -40°C/L, -60°C/S



Flexible mounting orientation

Series IDG1

Easy to install in narrow spaces!



- Min. bending radius: 35 mm
- Possible to dehumidify like a tube.
- Weight: 45 g

High performance

Time to reach the standard dew point

Shortened by 40 minutes



Model	Time to reach the standard dew point (minutes) 60 90		
IDG100SA	60 ▲40 minutes		
Existing model	100		

With dew point indicator for visual confirmation of the air state

(Except IDG1)

(Semi-standard: IDG3, IDG5, IDG3H, IDG5H)

- © Colour of the dew point indicator Dew point indicator
- Blue (Green): Dry state
- Pink (Yellow): Wet state



Model with fitting for purge air discharge is also available.

When purge air discharge is undesirable in the area around the membrane air dryer, it can be discharged to atmosphere via tubing (semi-standard).

Fitting for exhausting purge air for dew point indicator



Fitting for exhausting purge air for dehumidification

Reduced in purge air discharge noise with built-in silencer

Except IDG1, IDG3, IDG3H, IDG5, IDG5H, IDG30A, IDG30HA, IDG30LA, IDG50A, IDG50HA, IDG50LA

Dehumidification Principle

The membrane air dryer uses hollow fibers composed of a macro molecular membrane through which moisture passes easily, but is difficult for air (oxygen and nitrogen) to pass through.


When humid, compressed air is supplied to the inside of the hollow fibers, only moisture permeates the membrane and moves to the outside due to the pressure difference between the moisture inside and outside of the fibers. The compressed air becomes dry air and continues out of the dryer. Part of the dry air from the outlet side is passed through a very small orifice to reduce the pressure and purge the outside of the hollow fibers. The moisture which permeated to the outside of the hollow fibers is discharged to the atmosphere by this purge air. In this way, the partial pressure outside of the hollow fibers remains low and dehumidification is continuously performed.




Application Examples

Machine Tool

Powder Coating

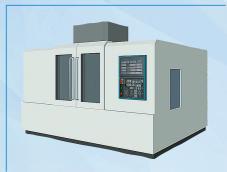

Measuring Machine

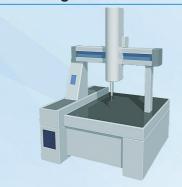

Food Machinery







Semiconductor-related

Manufacturing Equipment





- Dental equipment
- Chemical analysis equipment
- · Ozonizers, Hydrogen gas generating equipment
- Printed circuit board IC mounting machines
- Fine particle drying, **Transfer equipment**
- Drying and cleaning of precision parts
- Condensation prevention in control panels
- General pneumatic equipment and pneumatic tools





= Reduced purge

Meets a wide variety of flow rates (10 to 1000 L/min [ANR]) and dew points (Atmospheric pressure dew point: -15°C to -60°C).

Single Unit Type

Standard dew point: -20°C Standard dew point: -15°C Standard dew point: -40°C Standard dew point: -60°C Outlet air flow rate Outlet air flow rate Outlet air flow rate Outlet air flow rate Series Series Series Series [L/min [ANR]] [L/min [ANR]] [L/min [ANR]] [L/min [ANR]] IDG1 10 IDG3 **IDG3H** 25 25 IDG5 IDG5H 50 50 IDG10 IDG10H 100 100 Page 1 Page 2 IDG20 200 IDG20H 200 IDG30A **IDG30LA IDG30HA** 300 300 75 IDG50A **IDG50HA IDG50LA** 500 500 110 **IDG60LA IDG60SA** IDG60 IDG60H 170 50 600 600 IDG75 IDG75H **IDG75LA IDG75SA** 750 750 240 100 IDG100H IDG100LA IDG100SA **IDG100** 1000 1000 300 150

Note) Standard dew point: Outlet air atmospheric pressure dew point under standard performance conditions Outlet air flow rate: Values under standard performance conditions



Outlet air flow rate [L/min [ANR]]

Page 15 Page 16

Unit Type

<Type M>

A mist separator, micro mist separator, or micro mist separator with pre-filter combined with a single unit

Standard dew point: -20°C St

Standard dew point: -15°C

Standard dew point: -40°C

Standard dew point: -60°C

Series

Cartas	Outlet air flow rate	Contro	Outlet air flow rate
Series	[L/min [ANR]]	Series	[L/min [ANR]]
IDG3M4	25	IDG3HM4	25
IDG5M4	50	IDG5HM4	50
IDG10M4	100	IDG10HM4	100
IDG20M4	200	IDG20HM4	200
IDG30AM4	300	IDG30HAM4	300
IDG50AM4	500	IDG50HAM4	500
IDG60M2	600	IDG60HM2	600
IDG75M2	750	IDG75HM2	750
IDG100M2	1000	IDG100HM2	1000

Series	Outlet air flow rate [L/min [ANR]]
IDG30LAM4	75
IDG50LAM4	110
IDG60LAM4	170
IDG75LAM4	240
IDG100LAM4	300
;	

IDG60SAM4	50
IDG75SAM4	100
IDG100SAM4	150

^{*} Rated conditions: Inlet air pressure 0.7 MPa, Inlet air temperature 25°C





<Type V>

Series

IDG3V4

IDG5V4

IDG10V4

IDG20V4

IDG30AV4

A regulator combined with the type M

Outlet air flow rate

[L/min [ANR]]

25

50

100

200

300

Standard dew point: -20°C

Series	[L/min [ANR]]		
_			
IDG3HV4	25		
IDG5HV4	50		
IDG10HV4	100		
IDG20HV4	200		
IDG30HAV4	300		

Standard dew point: -15°C

IDG50AV4	500	IDG50HAV4	500
IDG60V4	600	IDG60HV4	600
IDG75V4	750	IDG75HV4	750
IDG100V4	1000	IDG100HV4	1000

Standard dew point: -40°C

Series	Outlet air flow rate [L/min [ANR]]
IDG30LAV4	75
IDG50LAV4	110
IDG60LAV4	170
IDG75LAV4	240

300

IDG100LAV4

Standard	dew	point: -	-60°C

Series

Outlet air flow rate

[L/min [ANR]]

IDG60SAV4	50
IDG75SAV4	100
IDG100SAV4	150

Made to Order

Made to Order	
Symbol	Specifications
-X016	With element service indicator
-X017	With micro mist separator regulator
-X032	With differential pressure gauge
	GOLO





Page 15 Page 16

^{*} Rated conditions: Inlet air pressure 0.7 MPa, Inlet air temperature 25°C




Membrane Air Dryer Single Unit Type





Standard dew point -20°C, -15°C, -40°C, -60°C

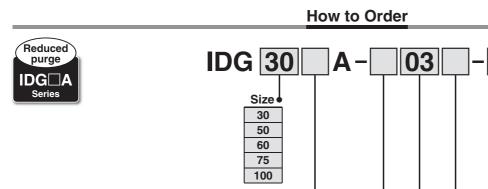

Standard dew point temperature/Outlet air flow rate

Symbol	Standard dew point	Flow rate by size, Outlet air flow rate [L/min [ANR]]				
[°C]	30	50	60	75	100	
_	-20	300	500	Select from Series IDG (page 2)		
Н	-15	300	500			
L	-40	75	110	170	240	300
S	-60	_	_	50	100	150

Thread type

Symbol	Type
	Rc
N	NPT
F	G

Semi-standard

Symbol	Specifications
_	None (Standard)
Р	With fitting for purge air discharge
R	Flow direction (Right \rightarrow Left)

Note) In the case of more than one symbol, indicate them alphabetically.

Accessory

Symbol	Specifications				
_	None (Standard)				
В	With bracket				

Note) When symbol: B is indicated, a bracket assembly with a part number shown to the left below is included as an accessory.

Bracket Assembly (Accessory)/Part No.

Symbol

	• • • • • • • • • • • • • • • • • • • •
Part no.	Applicable model
BM64	IDG30□A, IDG50□A
BM65	IDG60□A, IDG75□A, IDG100□A

^{*} With hexagon socket head cap screws (2 pcs.) and spring washers (2 pcs.)


Port size

Symbol	Port			Size				
Symbol	size	30	50 60 7		75	100		
02	1/4	•	•	- -		_		
03	3/8	•	• •		•	•		
04	1/2	_	_	•	•	•		



RoHS

Membrane Air Dryer Single Unit Type Series IDG

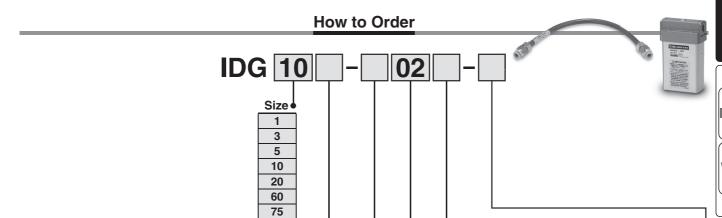

Standard dew point temperature/Outlet air flow rate

	Symbol	Standard dew point	dard Flow rate by size, Outlet air flow						ate [L/min [ANR]]			
٥	Symbol	[°C]	1	3	5	10	20	60	75	100		
	_	-20	10	25	50	100	200	600	750	1000		
	Н	-15	_	25	50	100	200	600	750	1000		
	L	-40	_	_	_	_	_		m			
	S	-60	_	_	_	_	_	Series	(page 1)			

Thread type/One-touch fitting

100

Symbol

Symbol	Type				
_	Rc				
N	NPT G				
F					
C Note)	ø6 One-touch fitting				

Note) Size 1 only

Accessory

	,				
Symbol	Specifications				
_	None (Standard)				
В	With bracket (Except IDG1)				

Note) When symbol: B is indicated, a bracket assembly with a part number shown to the left below is included as an accessory.

◆Port size/Applicable tubing O.D.

Symbol	Port	Piping type	Size							
Symbol	size	riping type	1	3	5	10	20	60	75	100
01	1/8	Thread	_	•	•	_	_	_	_	_
02	1/4		•	•	•	•	•	_	_	_
03	3/8		_	_	_	•	•	•	_	_
04	1/2		_	_	_	_	_	•	•	•
06	ø6	One-touch fitting	•	_	_	_	_	_	_	_

Bracket Assembly (Accessory)/Part No.

	recombly (recoccory), art me
Part no.	Applicable model
BM59	IDG3, 5
BM61	IDG10
BM63	IDG20
BM65	IDG60, 75, 100

^{*} With hexagon socket head cap screws (2 pcs.) and spring washers (2 pcs.)

Semi-standard

							• • • •			
C. mala al	Specifications	Size								
Symbol		1	3	5	10	20	60	75	100	
_	R Flow direction (Right → Left)		•	•	•	•	•	•	•	
Р			•	•	•	•	•	•	•	
R			•	•	•	•	•	•	•	
S			•	•	Sta	andaı	rd eq	uipme	ent	

Note) In the case of more than one symbol, indicate them alphabetically.



Standard Specifications/Single Unit Type (Standard dew point -20°C, -15°C)

Standard dew point----20°C

	Model	ID	G1	IDG3	IDG5	IDG10	IDG20	IDG30A	IDG50A	IDG60	IDG75	IDG100
ating	Fluid Note 1)					Co	mpressed	air				
operating itions	Inlet air pressure [MPa]			0.3 to	0.85					0.3 to 1.0		
Range of condi	Inlet air temperature (°C)			-5 to 55 (N	lo freezing)			-5 to 50 (No freezing)				
Ranç	Ambient temperature (°C)			-5 to 55 (N	lo freezing)				−5 to	50 (No free	ezing)	
Standard perfor- mance	Outlet air atmospheric pressure dew point [°C]		-20									
Sc	Inlet air flow rate [L/min [ANR]] Note 2)	12	2.5	31	62	125	250	360	586	725	900	1190
performance ditions	Outlet air flow rate [L/min [ANR]]	1	0	25	50	100	200	300	500	600	750	1000
fori	Purge air flow rate [L/min [ANR]] Note 3)	2.	.5	6	12	25	50	60	86	125	150	190
pe di	Inlet air pressure [MPa]						0.7					
	Inlet air temperature [°C]		25									
Standard	Inlet air saturation temperature [°C]						25					
Sta	Ambient temperature [°C]						25					
Dew	point indicator purge air flow rate		_	_			1 L/m	nin [ANR] (Ir	nlet air pres	sure at 0.7	MPa)	
Por	t size	1/4	l	1/8,	1/4		1/4	, 3/8		3/8, 1/2	1	/2
App	olicable tubing O.D.		ø6		-	1	-	_	_	1	_	_
	ight [kg] th bracket)	0.11	0.05	0.2 (0.3		0.43 (0.51)	0.66 (0.76)	0.78 (0.91)	0.81 (0.94)	1.50 (1.65)	1.50 (1.65)	1.55 (1.70)

Note 1) Prevent water droplets from entering the inlet port.

Standard dew point----15°C/Type H

	Model	IDG3H	IDG5H	IDG10H	IDG20H	IDG30HA	IDG50HA	IDG60H	IDG75H	IDG100H	
ating	Fluid Note 1)				С	ompressed a	air				
Range of operating conditions	Inlet air pressure (MPa)		0.3 to	0.85		0.3 to 1.0					
ge of	Inlet air temperature (°C)		−5 t	o 55				-5 to 50			
	Ambient temperature (°C)		−5 t	o 55				-5 to 50			
Standard perfor- mance	pressure dew point [O]				-15						
performance Iditions	Inlet air flow rate [L/min [ANR]] Note 2)	28	56	111	222	329	550	665	830	1110	
mar	Outlet air flow rate [L/min [ANR]]	25	50	100	200	300	500	600	750	1000	
fori	Purge air flow rate [L/min [ANR]] Note 3)	3	6	11	22	29	50	65	80	110	
dii be	Inlet air pressure [MPa]	0.7									
ard	Inlet air temperature [°C]	25									
Standard con	Inlet air saturation temperature [°C]					25					
Sts	Ambient temperature [°C]					25					
Dew	point indicator purge air flow rate	_	_		1 L/	min [ANR] (I	nlet air press	sure at 0.7 M	IPa)		
Por	t size	1/8,	1/4		1/4,	3/8		3/8, 1/2	1,	/2	
	ight [kg] th bracket)	0.2		0.43 (0.51)	0.66 (0.76)	0.78 (0.91)	0.81 (0.94)	1.50 (1.65)	1.50 (1.65)	1.55 (1.70)	

Note 1) Prevent water droplets from entering the inlet port.



Note 2) "ANR" indicates the flow rate converted to the value at 20°C, under the atmospheric pressure and the state of relative humidity 65%.

Note 3) Includes 1 L/min [ANR] of purge air flow (Inlet air pressure at 0.7 MPa) for the dew point indicator (except IDG1, 3, 5).

Note 2) "ANR" indicates the flow rate converted to the value at 20°C, under the atmospheric pressure and the state of relative humidity 65%.

Note 3) Includes 1 L/min [ANR] of purge air flow (Inlet air pressure at 0.7 MPa) for the dew point indicator (except IDG3H, 5H).

Membrane Air Dryer Single Unit Type Series IDG A/IDG

Standard Specifications/Single Unit Type (Standard dew point -40°C, -60°C)

Standard dew point----40°C/Type L

	Model	IDG30LA	IDG50LA	IDG60LA	IDG75LA	IDG100LA				
ating	Fluid Note 1)		С	ompressed a	air					
Range of operating conditions	Inlet air pressure (MPa)			0.3 to 1.0						
ge of	Inlet air temperature (°C)		−5 to	50 (No free	zing)					
	Ambient temperature (°C)	–5 to 50 (No freezing)								
Standard perfor- mance	Outlet air atmospheric pressure dew point [°C]		-40							
ce	Inlet air flow rate [L/min [ANR]] Note 2)	93	135	224	308	400				
performance ditions	Outlet air flow rate [L/min [ANR]]	75	110	170	240	300				
fori	Purge air flow rate [L/min [ANR]] Note 3)	18	25	54	68	100				
perforn ditions	Inlet air pressure [MPa]	0.7								
Son	Inlet air temperature [°C]			25						
Standard con	Inlet air saturation temperature [°C]			25						
Sta	Ambient temperature [°C]			25						
Dew	point indicator purge air flow rate	1 L/	min [ANR] (I	nlet air press	sure at 0.7 N	1Pa)				
Por	t size	1/4,	3/8	3/8, 1/2						
	ight [kg] th bracket)	0.78 (0.91)	0.81 (0.94)	1.69 (1.84)	1.82 (1.97)					

Note 1) Prevent water droplets from entering the inlet port.

Note 2) "ANR" indicates the flow rate converted to the value at 20°C, under the atmospheric pressure and the state of relative humidity 65%. Note 3) Includes 1 L/min [ANR] of purge air flow (Inlet air pressure at 0.7 MPa) for the dew point indicator.

Standard dew point----60°C/Type S

	Model	IDG60SA	IDG75SA	IDG100SA			
ating	Fluid Note 1)	C	ompressed a	air			
Range of operating conditions	Inlet air pressure (MPa)		0.3 to 1.0				
ge of opera	Inlet air temperature (°C)	−5 to	50 (No free:	zing)			
Ran	Ambient temperature (°C)	−5 to	50 (No free:	zing)			
Standard perfor- mance	Outlet air atmospheric pressure dew point [°C]	-60					
Se	Inlet air flow rate [L/min [ANR]] Note 2)	75	140	230			
Standard performance conditions	Outlet air flow rate [L/min [ANR]]	50	100	150			
fori	Purge air flow rate [L/min [ANR]] Note 3)	25 40 80					
₽ë	Inlet air pressure [MPa]	0.7					
ard co	Inlet air temperature [°C]		25				
gue	Inlet air saturation temperature [°C]		25				
Š	Ambient temperature [°C]		25				
Dew	point indicator purge air flow rate	1 L/min [ANR]	(Inlet air pressu	re at 0.7 MPa)			
Por	t size		3/8, 1/2				
	ight [kg] th bracket)	1.56 (1.71)	1.69 (1.84)	1.82 (1.97)			
	4) D						

Note 1) Prevent water droplets from entering the inlet port.

Note 2) "ANR" indicates the flow rate converted to the value at 20°C, under the atmospheric pressure and the state of relative humidity 65%.

Note 3) Includes 1 L/min [ANR] of purge air flow (Inlet air pressure at 0.7 MPa) for the dew point indicator.




Conditions: Inlet air temperature 25°C (saturated air), Ambient temperature 25°C, P1: Inlet air pressure, Tube for purge air discharge (semi-standard: P): None Note: Correcting outlet air flow rate is required depending on inlet air temperature. Refer to page 31 or after for details. For model with fitting for purge air discharge (semi-standard: P), the outlet air atmospheric pressure dew point may become higher depending on the tube length for purge air discharge. For other models, when the tube length is 5 meters or less, a rise of the outlet air atmospheric pressure dew point will be 1°C or less.


Performance Chart

Standard dew point···-20°C [Symbol: —], -15°C [Symbol: H]


IDG1

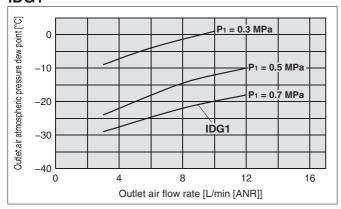


IDG3, IDG3H

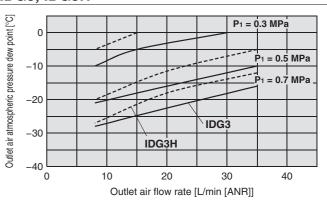


IDG5, IDG5H

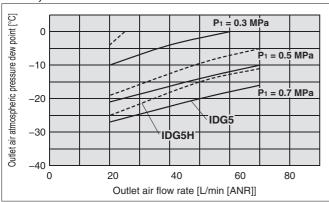


IDG10, IDG10H

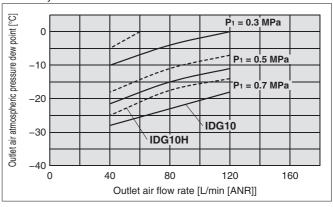


IDG20, IDG20H

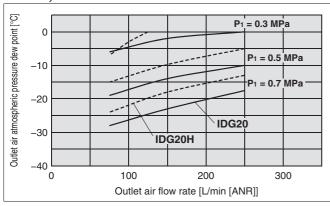


IDG30A, IDG30HA

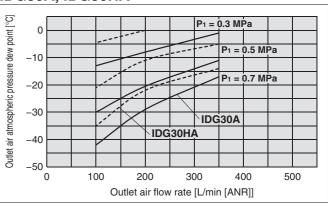

IDG50A, IDG50HA

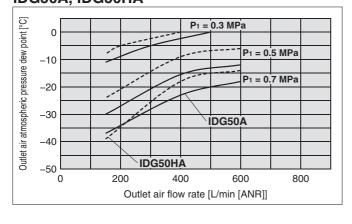


IDG60, IDG60H

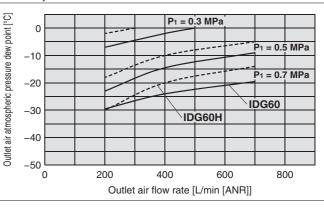



Membrane Air Dryer Single Unit Type Series IDG AIDG

Performance Chart

IDG75, IDG75H

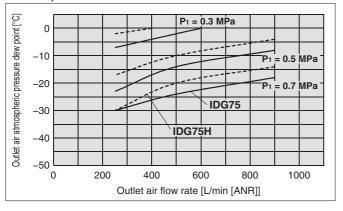


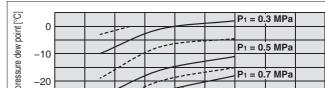

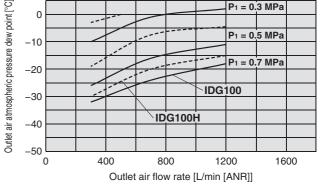


Standard dew point···-40°C [Symbol: L], -60°C [Symbol: S]

IDG30LA, IDG50LA

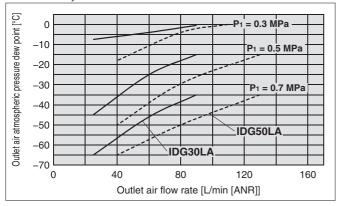


IDG60LA, IDG60SA


IDG100, IDG100H

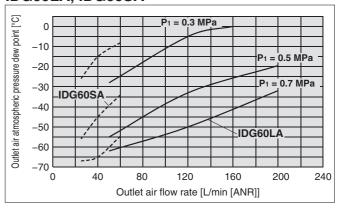

IDG75LA, IDG75SA

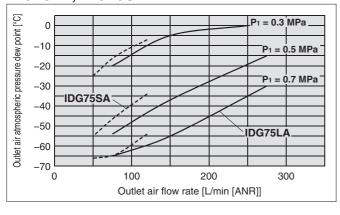

IDG100LA, IDG100SA

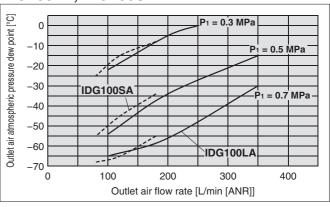


How to read the Performance Chart and select the model

Solid lines and dashed lines beginning at the top indicate the performance of inlet air temperature at 25°C and inlet air pressure P₁ = 0.3 MPa, 0.5 MPa, 0.7 MPa respectively.

- For the inlet air temperature at 25°C and outlet air flow rate at 45 (L/min) Model 1: The outlet air atmospheric pressure dew point at $P_1 = 0.7$ MPa: -25 (°C).
- For the inlet air temperature at 45°C and outlet air flow rate at 45 (L/min)

Example) Outlet air flow rate correction factor: 0.75 (The correction factor differs depending on the model. Refer to page 31 or after for details.)

Corrected outlet air flow rate: $45 \div 0.75 = 60$ (L/min). Model ①: Performing corresponding to the outlet air atmospheric pressure dew point -20 (°C) at P₁ = 0.7 MPa.

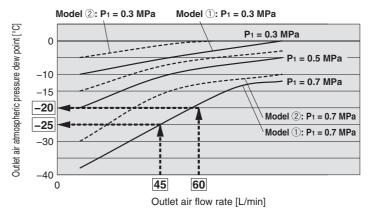






Single Unit Type/Flow-rate Characteristics


Conditions: Inlet air temperature 25°C, P1: Inlet air pressure

Standard dew point···-20°C [Symbol: —], -15°C [Symbol: H]


IDG1

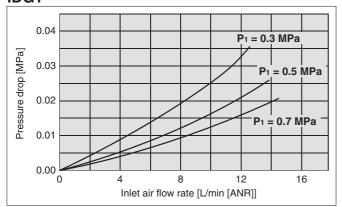


IDG3, IDG3H

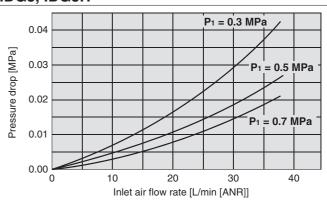


IDG5, IDG5H

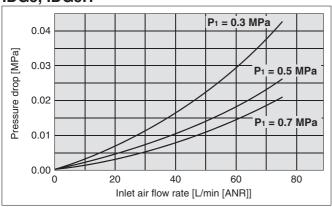


IDG10, IDG10H

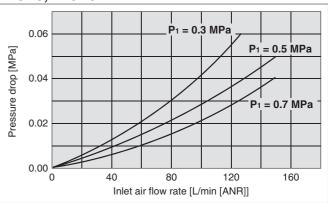


IDG20, IDG20H

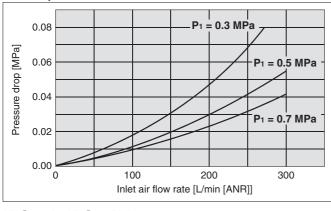


IDG30A, IDG30HA

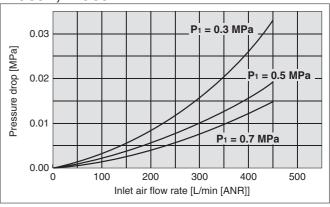

IDG50A, IDG50HA

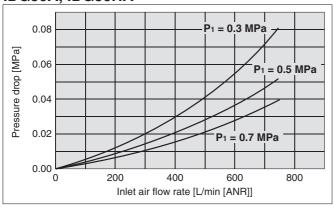

IDG60, IDG60H

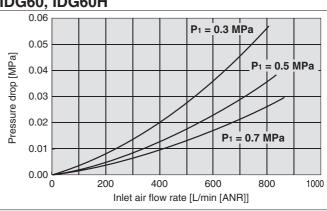


Membrane Air Dryer Single Unit Type Series IDG A/IDG

Single Unit Type/Flow-rate Characteristics


Conditions: Inlet air temperature 25°C, P1: Inlet air pressure

Standard dew point···-20°C [Symbol: —], -15°C [Symbol: H]



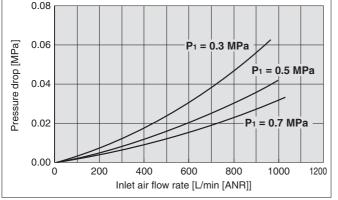


IDG100, IDG100H

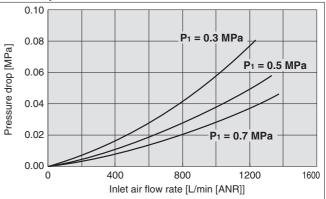


Standard dew point···-40°C [Symbol: L], -60°C [Symbol: S]


IDG30LA

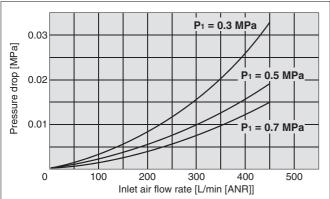


IDG50LA

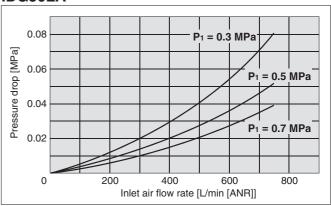


IDG60LA, IDG60SA

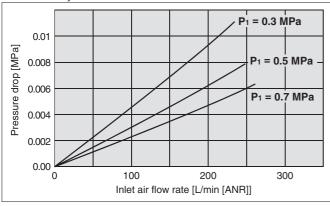

IDG75LA, IDG75SA

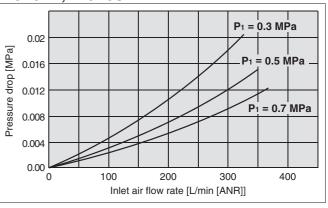

IDG100LA, IDG100SA

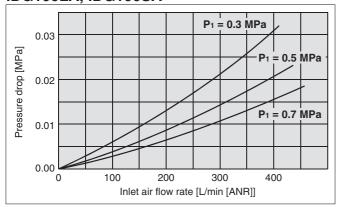

With fitting for purge air discharge (Semi-standard: P)

As the tube length for purge air discharge becomes longer, the outlet air atmospheric pressure dew point becomes higher. Refer to the table below.

Tube length	IDG30A	IDG30LA
0 m	-20	-40
1 m	-19	-39
3 m	-17	-38
5 m	-16	-38

■Conditions

Tube size

Inlet air temperature : 25°C (Saturated) Ambient temperature: 25°C Inlet air pressure

Outlet air flow rate


: Flow gained under conditions of the standard performance. (Refer to pages 3 and 4.)

: O.D. ø12 x I.D. ø9




Purge Air Flow-rate Characteristics


IDG1, 3, 5, 10, 20 (Standard dew point -20° C) IDG3H, 5H, 10H, 20H (Standard dew point -15° C)

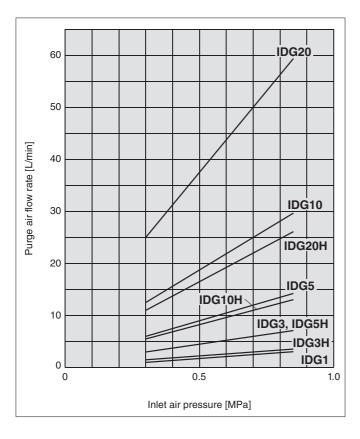


IDG30A, 50A (Standard dew point -20°C)
IDG30HA, 50HA (Standard dew point -15°C)
IDG30LA, 50LA (Standard dew point -40°C)

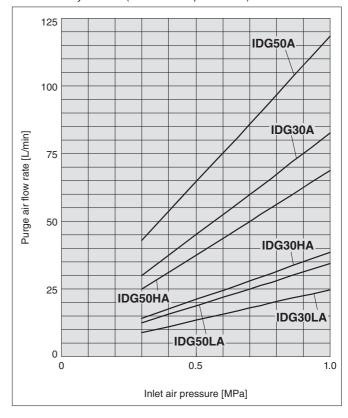

IDG60, 75, 100 (Standard dew point -20°C) IDG60H, 75H, 100H (Standard dew point -15°C)

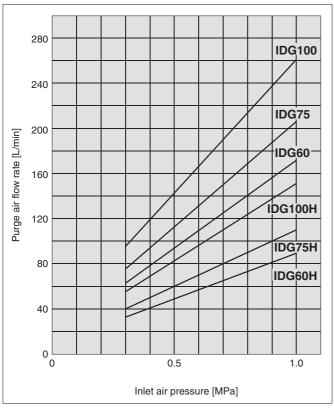



IDG60LA, 75LA, 100LA (Standard dew point -40° C) IDG60SA, 75SA, 100SA (Standard dew point -60° C)

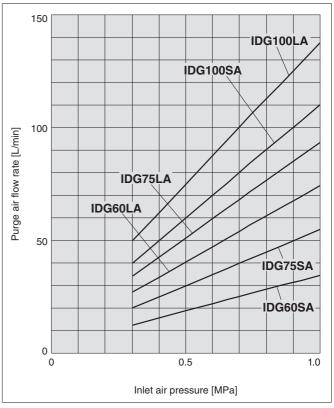


Construction


IDG1

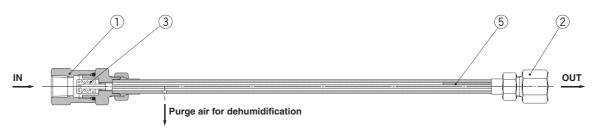


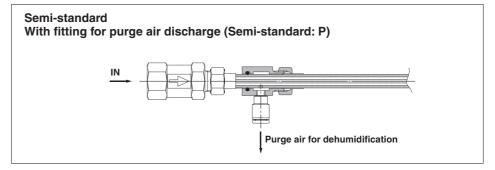


IDG3, 5 IDG3H, 5H

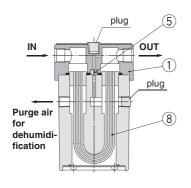

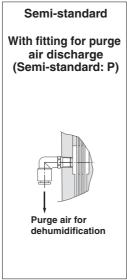

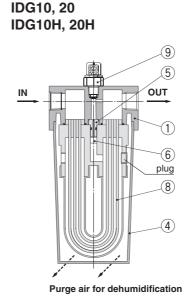

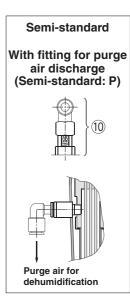

Component Parts

No	Description			Material								
No.	Description	IDG1	IDG3, 3H	IDG5, 5H	IDG10, 1	10H IDG20, 20H	Note					
1	Body	Brass		Aluminium alloy			Platinum silver coated (IDG1 is electroless nickel plated.)					
2	Female connector	Brass		-	_		Electroless nickel plated					
3	Strainer	Brass		_	_							
4	Case	_	_	-		Resin						
5	Orifice	Resin		Stainle	ss steel							
6	Silencer		_	_		Bronze						

Replacement Parts


			Part no.									
No.	Description	IDG1	IDG3	IDG3H	IDG5	IDG5H	IDG10	IDG10H	IDG20	IDG20H		
•	Manushanana mandala bib		IDG-EL3	IDG-EL3H	IDG-EL5	IDG-EL5H	IDG-EL10	IDG-EL10H	IDG-EL20	IDG-EL20H		
8	Membrane module kit	_	With Orific	ce (1 pc.), O-rin	g (3 pcs.), Gas	ket (1 pc.)	With Orifice (1 pc.), Silencer (1 pc.), O-ring (4 pcs.)					
			IDG-DP01 (Semi-standard: S) IDG-DP01									
9		_	With O-ring (1 pc.)									
10	Dew point indicator kit		IDG-	DP01-X001 (S	emi-standard: f	PS)	IDG	i-DP01-X001 (S	Semi-standard:	P)		
		_	With O-ring (1 pc.)									




Series IDG A/IDG


Construction


IDG30□A IDG50□A

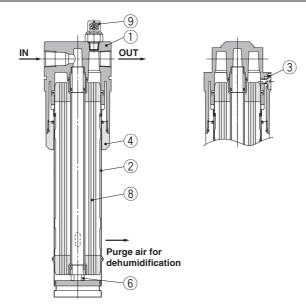

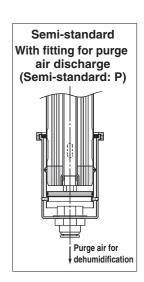

IDG60□, 75□, 100□ IDG60□A, 75□A, 100□A

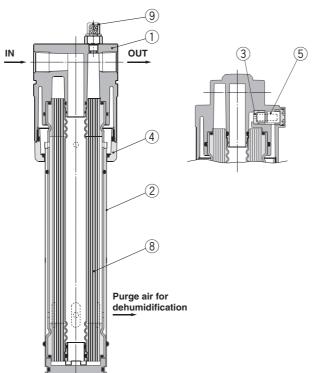

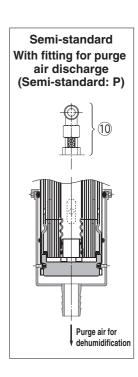

Component Parts


	poo a. to									
	D				Mat	erial				
No.	Description	IDG30□A	IDG50□A	IDG60, 60H*	IDG60LA, 60SA	IDG75, 75H*	IDG75LA, 75SA	IDG100, 100H*	IDG100LA, 100SA	Note
1	Body		Aluminium alloy/White							*Platinum silver coated
2	Case		Stainless steel							
3	Orifice				Stainle	ss steel				
4	Holder	Aluminiı	um alloy			Aluminiı	ım alloy			
5	Silencer	-	Resin + Bronze Resin Resin + Bronze Resin Resin + Bronze Resin							
6	Adapter	Re	sin							

Replacement Parts


No.	Description				Part	no.			
IVO.	Description	IDG30□A	IDG50□A	IDG60, 60H	IDG60LA, 60SA	IDG75, 75H	IDG75LA, 75SA	IDG100, 100H	IDG100LA, 100SA
_	Membrane module kit	IDG-EL30A	IDG-EL50A	IDG-EL60	IDG-EL60LA	IDG-EL75	IDG-EL75LA	IDG-EL100	IDG-EL100LA
0		With Nozzle (1 pc.), Adap	oter (1 pc.), O-ring (1 pc.)			With O-r	ing (1 pc.)		
9	Dew point indicator kit								
10	Dow point indicator fait			1	IDG-DP01-X001 (Semi-standard: F	P)		_




Dimensions/Single Unit Type

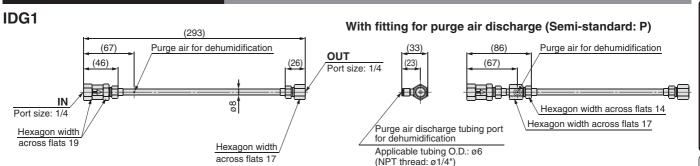


IDG1-C06: With One-touch fitting

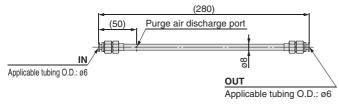


With fitting for purge air discharge (Semi-standard: P)

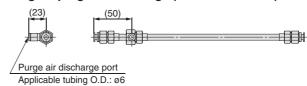


IDG3, 5 IDG3H, 5H

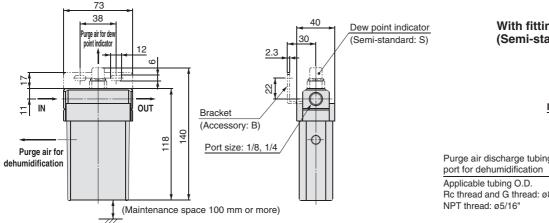


With fitting for purge air discharge (Semi-standard: P)

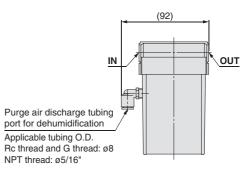

IDG10, 20 **IDG10H, 20H**

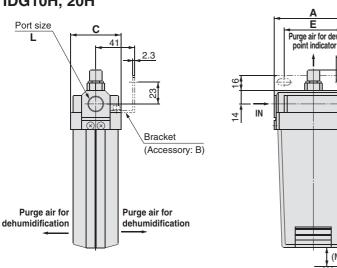

With fitting for purge air discharge (Semi-standard: P)

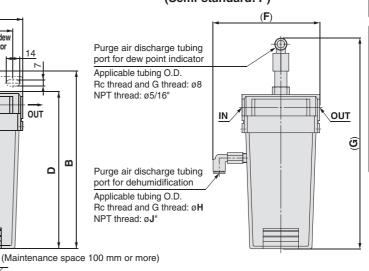

Madal	Port size	Α.	В	С	_	D E	Semi-stan		ard: P	
Model	L	AB	C	ט	_	F	G	Н	J	
IDG10, 10H	1/4 0/0	83	187	53	165	62	109	225	8	5/16
IDG20, 20H	1/4, 3/8	113	212	54	190	82	140 [139]	250	10	3/8

Values inside [] are for NPT thread.


OUT

 $\mathbf{\omega}$ Ω


Series IDG A/IDG

Dimensions/Single Unit Type

IDG30□A IDG50□A

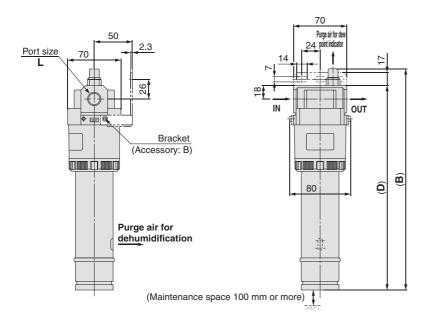


IDG60□, 75□, 100□ IDG60□A, 75□A, 100□A

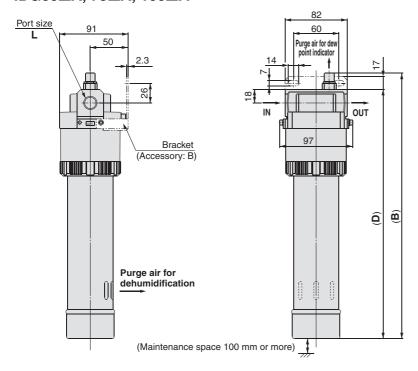


Madal	Port size	В	D	Semi-standard: P		
Model	L	В	U	G	Н	
IDG30□A	1/4 0/0	291	269	362	302	
IDG50□A	1/4, 3/8	330	308	401	341	
IDG60□	3/8, 1/2	352	330	429	369	
IDG75□, 100□	1/2	352	330	429	309	
IDG60□A		348	326	427	367	
IDG75□A	3/8, 1/2	418	396	496	436	
IDG100□A		483	461	561	501	

With fitting for purge air discharge (Semi-standard: P)

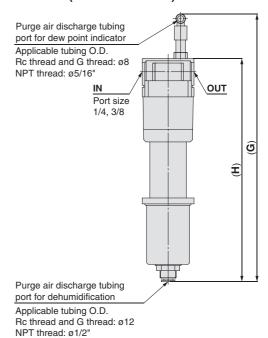

With fitting for purge air discharge (Semi-standard: P)

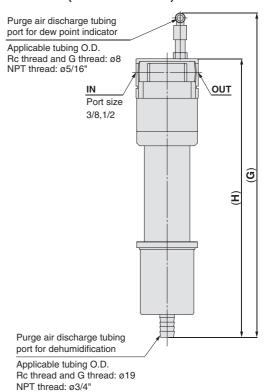



Membrane Air Dryer Unit Type






Type M, Type V

How to Order



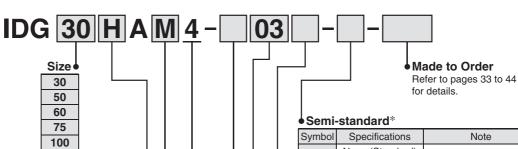

Standard dew point temperature/Outlet air flow rate

Symbol	Standard dew	Flow rate	Flow rate by size, Outlet air flow rate [L/min [ANR]]								
Symbol	point [°C]	30	50	60	75	100					
_	-20	300	500	Coloot	from Serie	- IDG					
Н	-15	300	500	Select	. IIOIII Serie	s IDG					
L	-40	75	110	170 240 300							
S	-60	_	_	50	100	150					

Cor	npon	ents

Symbol	Mist separator	Micro mist separator	Membrane air dryer	Regulator
M	•	•	•	_
٧	•	•	•	•

Equipment connection

	1aipinoni o				
Symbol	Components	Contents			
4	M	Modular			
•	V	conection			

Port size

Thread type ●						
Symbol Type						
	Rc					
Ν	NPT					
F	G					

Semi-standard*								
Symbol	Specifications	Note						
_	None (Standard)	_						
Р	With fitting for purge air discharge	 Combination with drain discharge method symbol: is not available. Combination with Type V 						

^{*} In the case of more than one symbol, indicate them alphabetically.

Flow direction (Right → Left)

is not available. Note)

Note) Type V is not applicable because it is equipped with a relief type regulator.

Drain discharge method*							
Symbol	Drain discharge method	Note					
Manual valve		Combination with semi-standard symbol: P is not available.					
С	N.C. auto-drain	Auto-drains					
D	N.O. auto-drain	listed on page 17 are attached.					
J	Drain guide	_					

^{*} For model selection of an auto-drain, refer to the Selection Precautions on page 45.


of the size													
Symbol	Port	Size							Size				
Symbol	size	30	50	60	75	100							
02	1/4	•	•	_	_	_							
03	3/8	•	•	•	•	•							
04	1/2	_	_	•	•	•							



RoHS

Membrane Air Dryer Unit Type Series IDG

How to Order

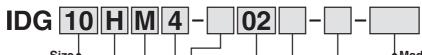

Standard dew point temperature/Outlet air flow rate

Cumbal	Standard dew	Flow rate by size, Outlet air flow rate [L/min 3 5 10 20 60 75						n [ANR]]
point [°C	point [°C]	3	5	10	20	60	75	100
_	-20	25	50	100	200	600	750	1000
Н	-15	25	50	100	200	600	750	1000

Components •

Symbol	Size	Mist separator	Micro mist separator	Micro mist separator with pre-filter	Membrane air dryer	Regulator
	3		•	_		_
	5		•	_		_
	10	•	•	_	•	_
M	20	•	•	_	•	_
	60	_	•	•	•	_
	75	_	_	•	•	_
	100	_	_	•	•	_
	3	•	•	_	•	•
	5	•	•	_	•	•
	10	•	•	_	•	•
٧	20	•	•	_	•	•
	60	_	_	•		•
	75	_	_	•	•	•
	100	_		•	•	

Equipment connection

				<u> Lqu</u>	ibiiii	511t C	,01111	CCLI	011 •		
Symbol	Compo-	0	Size								
Symbol	nents	Contents	3	5	10	20	60	75	100		
4	M	Modular connection		•	•	•	_	_	_		
4	4 V	Wodular Corniection	•	•	•	•	•	•	•		
2	M	Nipple connection		_	_	_	•	•	•		

* Some parts of the connected contents are exceptions. Check the equipment composition (described later) or the external dimension drawing for details of the connection method and the contents of the equipmentent.

Thread type

<i>J</i>
Туре
Rc
NPT
G

Made to Order

Refer to pages 33 to 44 for details.

Semi-standard[®]

Symbol	Chacifications				Size				Note
Symbol	Specifications	3	5	10	20	60	75	100	Note
_	Standard	•				•	•		_
P	Note 2) With fitting for purge air discharge	•	•	•	•	•	•	•	Combination with drain discharge method symbol: — is not available. Combination with Type V is not available. Note 1)
R	Flow direction (Right \rightarrow Left)	•				•	•		_
S	With dew point indicator Note 3)	•	•	Standard equipment			_		

- * In the case of more than one symbol, indicate them alphabetically.
- Note 1) Type V is not applicable because it is equipped with a relief type regulator. (Symbol: P is used when it is undesirable for the air to be discharged into the main body of the IDG. Therefore, it is not possible to use it in combination with a separator with manual valve, which discharges air around it, or Type V with a relief type regulator.)
- Note 2) They are not applicable in case the thread symbol is N or F when the size is 3, 5, 10, 20. (Because barrel nipples are used for equipment connections.)
- Note 3) Select the option when the size is 3 or 5. The option is the standard equipment for other sizes.

(Mist separator, Micro mist separator, Micro mist separator with pre-filter)

(IVIIST SE	parator, witche in	191 96	st separator, witcro mist separator with				with pi	e-inter)	
Complete	Drain discharge				Size				Note
Symbol	method	3	5	10	20	60	75	100	Note
	Manual valve	•	•	•	•	•	•	•	Combination with semi-standard symbol: P is not available.
С	N.C. auto-drain	•	•	•	•	_	_	_	Auto-drains
D	N.O. auto-drain	_	_	•	•	•	•	•	listed on page 17 are attached.
J	Drain guide	•	•	•	•	•	•	•	_

* For model selection of an auto-drain, refer to the Selection Precautions on page 45.

• Port size

Symbol	Port				Size			
Symbol	size	3	5	10	20	60	75	100
01	1/8	•	•	_	_	_	_	_
02	1/4	•	•	•	•	_	_	_
03	3/8	_	_	•	•	•	_	_
04	1/2	_	_	_	_	•		•



Auto-drain, Bowl Assembly, Pressure Gauge/Part No.

Description		IDG3M4 IDG3HM4 IDG5M4 IDG		IDG5HM4	IDG10M4	IDG10HM4	IDG20M4	IDG20HM4	IDG30AM4	IDG30HAM4	IDG50AM4	IDG50HAM4	
Description	DII	IDG3V4	IDG3HV4	IDG5V4	IDG5HV4	IDG10V4	IDG10HV4	IDG20V4	IDG20HV4	IDG30AV4	IDG30HAV4	IDG50AV4	IDG50HAV4
Float type	N.C.		AD27-C-A			AD37-A				AD47-A			
auto-drain	N.O.	_	_	_	_		AD3	88-A			AD4	18-A	
Pressure gauge (Ty	pe V only)		·				GC3-	10AS					

Description	Description IDG60M2		IDG75M2	IDG75HM2	IDG100M2	IDG100HM2		
Description	IDG60V4	IDG60V4 IDG60HV4		IDG75HV4	IDG100V4	IDG100HV4		
Bowl assembly (N.O.)	AM-CA3	50C-D	AM-CA450C-D					
Pressure gauge (Type V only)			GC3-	10AS				

Dogovinti	20	IDG30LAM4	IDG50LAM4	IDG60LAM4	IDG60SAM4	IDG75LAM4	IDG75SAM4	IDG100LAM4	IDG100SAM4	
Description	311	IDG30LAV4	IDG50LAV4	IDG60LAV4	IDG60SAV4	IDG75LAV4	IDG75SAV4	IDG100LAV4	IDG100SAV4	
Float type	N.C.		AD47-A							
auto-drain	N.O.		AD48-A							
Pressure gauge (Ty	pe V only)	GC3-10AS								

Replacement Parts (Element for mist separator, micro mist separator, micro mist separator with pre-filter)


	Description	AFM20-A	AFD20-A	AFM30-A	AFD30-A	AFM40-A	AFD40-A	AMH350C	AMH450C
ſ	Element assembly	AFM20P-060AS	AFD20P-060AS	AFM30P-060AS	AFD30P-060AS	AFM40P-060AS	AFD40P-060AS	AMH-EL350	AMH-EL450








Symbol (Type M)

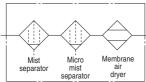


IDG60 to 100M2
IDG60H to 100HM2

Micro mist separator with pre-filter


Membrane air dryer

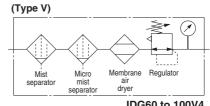

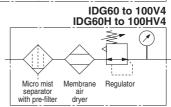

Membrane Air Dryer Unit Type Series IDG A/IDG

Clogging Indication

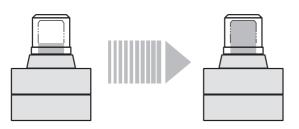

(The tip of the indicator is just visible.)

When the differential air is 0.05 MPa or less When the differential air is 0.1 MPa or more (The indicator is completely up to the top.)

Replace the element when the element service indicator's red indication reaches completely to the top.

The top of the indication window shows differential pressure of approximately 0.1 MPa. Replace the element after two years of use, even if the element service indicator's red indication does not reach the top.

The element service indicator is shipped mounted to the micro mist separator with pre-filter, and cannot be retrofitted or used individually.

Spacer Compatibility Chart

IDG size		Spacer	
IDG Size	Y200(T)-A	Y300(T)-A	Y400(T)-A
IDG3□	•	_	_
IDG5□	•	_	_
IDG10□	_	•	_
IDG20□	_	•	_
IDG30□	_	_	•
IDG50□	_	_	•
IDG60□	_	_	•
IDG75□	_	_	•
IDG100□	_	_	•



Standard Specifications/Unit [Type M, Type V] (Standard dew point: -20°C, -15°C)

						Standa	ard dew point:	–20°C					
	Model		IDG3M4	IDG5M4	IDG10M4	IDG20M4	IDG30AM4	IDG50AM4	IDG60M2	IDG75M2	IDG100M2		
			IDG3V4	IDG5V4	IDG10V4	IDG20V4	IDG30AV4	IDG50AV4	IDG60V4	IDG75V4	IDG100V4		
	Mist separator	r	AFM	20-A	AFM	30-A	AFM	40-A	_				
nts	Micro mist sepa	arator	AFD	20-A	AFD	30-A	AFD	40-A		_			
one	Micro mist separator	with pre-filter			_	_			AMH350C AMH450C				
Components	Regulator (Type V	only) Note 1)	AR20-l	3 Note 2)	AR25-	3 Note 2)	AR40-B Note 2)						
	Spacer		Y200 Y200-A (T		Y300 Y300-A (T	OT-A /pe V only)	Y400 Y400-A (Ty	OT-A ype V only)	Y400-A (Type V only)				
ting	Fluid Note 3)				•	(Compressed a	ir					
Range of operating conditions	Inlet air pressi	ure (MPa)		0.3 to	0.85				0.3 to 1.0	1.0			
ge of condi	Inlet air tempe	rature (°C)		-5 to 55 (N	lo freezing)		-5 to 50 (N	lo freezing)	5 to 50				
Ran	Ambient tempe	rature (°C)		-5 to 55 (N	lo freezing)		-5 to 50 (N	lo freezing)		5 to 50			
Standard performance	Outlet air atmo						-20						
ė	Inlet air flow ra [L/min [ANR]]		31	62	125	250	360	586	720	888	1185		
Standard performance conditions	Outlet air flow [L/min [ANR]]	rate	25	50	100	200	300	500	600	750	1000		
ard perform conditions	Purge air flow [L/min [ANR]]		6	12	25	50	60	86	120	138	185		
ard	Inlet air pressi	ure [MPa]	0.7										
and	Inlet air tempe	rature [°C]	25										
Sta	Inlet air saturation te	mperature [°C]		25									
	Ambient tempe	rature [°C]					25						
Dew p	oint indicator purge	e air flow rate			1	L/min [ANR]	(Inlet air press	ure at 0.7 MP	a)				
Regul	ator construction (Type V only)					Relief type						
Port	size		1/8,			1/4, 3/8			3/8, 1/2 1/2				
Weig	ght [kg]	Type M	0		1.0	1.3	1.8	1.9	2.7	3.2	3.3		
	r31	Type V	0	.9	1.3	1.5	2.4	2.5	3.1	3.7	3.8		

						Standa	ard dew point:	−15°C				
	Model		IDG3HM4	IDG5HM4	IDG10HM4	IDG20HM4	IDG30HAM4	IDG50HAM4	IDG60HM2	IDG75HM2	IDG100HM2	
			IDG3HV4	IDG5HV4	IDG10HV4	IDG20HV4	IDG30HAV4	IDG50HAV4	IDG60HV4	IDG75HV4	IDG100HV4	
	Mist separator	•	AFM	20-A	AFM	130-A	AFM	40-A		_		
Components	Micro mist sepa	arator	AFD	20-A	AFD	30-A	AFD	40-A		_		
one	Micro mist separator	with pre-filter			_	_			AMH350C AMH450C		450C	
μ	Regulator (Type V	only) Note 1)	AR20-l	B Note 2)	AR25-	B Note 2)	AR40-B Note 2)					
ပိ	Spacer		Y200 Y200-A (Ty			0T-A ype V only)	Y400 Y400-A (T <u>y</u>		Y400-A (Type V only)			
ting	Fluid				•	C	compressed a	ssed air				
Range of operating conditions	Inlet air pressu	ure [MPa]		0.3 to	0.85				0.3 to 1.0			
ge of condi	Inlet air temper	rature [°C]			5 Note 3)		–5 to 5	0 Note 3)	5 to 50			
Ran	Ambient tempe	rature [°C]		–5 to 5	5 Note 3)		–5 to 5	0 Note 3)		5 to 50		
Standard performance	Outlet air atmo pressure dew						-15					
ø	Inlet air flow ra		28	56	111	222	329	550	665	818	1100	
Standard performance conditions	Outlet air flow [L/min [ANR]]	rate	25	50	100	200	300	500	600	750	1000	
perfor	Purge air flow [L/min [ANR]]		3	6	11	22	29	50	65	68	100	
ard	Inlet air pressu	ure [MPa]	0.7									
and	Inlet air temper	rature [°C]	25									
Sţ	Inlet air saturation te	mperature [°C]	25									
	Ambient tempe	rature [°C]					25					
Dew p	point indicator purge	air flow rate			1	L/min [ANR] (Inlet air press	ure at 0.7 MP	a)			
Regu	lator construction (Type V only)			•		Relief type					
Port	size		1/8,	1/4		1/4,	3/8		3/8, 1/2 1/2			
Weig	ght [kg]	Type M	0.		1.0	1.3	1.8	1.9	2.7	3.2	3.3	
	2 [2]	Type V	0.	.9	1.3	1.5	2.4	2.5	3.1	3.7	3.8	



Membrane Air Dryer Unit Type Series IDG A/IDG

Standard Specifications/Unit [Type M, Type V] (Standard dew point: -40°C, -60°C)

				Stand	lard dew point:	40°C		Stano	lard dew point: -	60°C
	Model		IDC30LAMA				IDC100LAMA		IDG75SAM4	
	Woder								IDG75SAW4	
	Mist separator	,	IDGSOLAVI	IDGSOLAVT	AFM40-A	IDUTSLAVI	IDG100LAV4	IDG003AV4	AFM40-A	IDG1003AVT
nts	Micro mist sepa				AFD40-A				AFD40-A	
l eu	Regulator (Type V				AR40-B Note 2)				AR40-B Note 2)	
du	negulator (Type V	Offig) Note 17						Y400T-A		
Components	Spacer			Y4	Y400T-A 00-A (Type V o	nly)		Y4001-A Y400-A (Type V only)		
ting	Fluid Note 3)				Compressed ai	r		Compressed air		
pera	Inlet air pressi	ure (MPa)			0.3 to 1.0			0.3 to 1.0		
Range of operating conditions	Inlet air tempe			-5	to 50 (No freez	ing)		-5 to 50 (No freezing)		
Rang	Ambient tempe	rature (°C)		-5	to 50 (No freez	ing)		-5 to 50 (No freezing)		
Standard performance	Outlet air atmo				-40 Note 4)				-60 Note 4)	
Φ	Inlet air flow ra		93	135	224	308	400	75	140	230
ard performance conditions	Outlet air flow rate <u>ω</u> [L/min [ANR]]		75	110	170	240	300	50	100	150
l perfo	Purge air flow [L/min [ANR]]		18	25	54	68	100	25	40	80
arc co	Inlet air pressure [MPa]				0.7	0.7				
Standard con	Inlet air temperature [°C]				25		25			
S	Inlet air saturation temperature [°C]				25				25	
	Ambient tempe	rature [°C]			25			25		
Dew p	point indicator purge	e air flow rate		1 L/min [ANR]	(Inlet air pressu	ure at 0.7 MPa)		1 L/min [ANR] (Inlet air pressure at 0.7 MPa)		
Regu	lator construction (Type V only)			Relief type				Relief type	_
Port	size		1/4,	3/8		3/8, 1/2		3/8, 1/2		
Weig	abt [ka]	Type M	1.8	1.9	2.6	2.8	2.9	2.6	2.8	2.9
weig	ght [kg]	Type V	2.4	2.5	3.1	3.3	3.4	3.1	3.3	3.4

Note 1) For flow-rate characteristics and pressure characteristics of regulator, refer to the Best Pneumatics No. 5.

- Note 3) Prevent water droplets from entering the inlet port.
- Note 4) Refer to the Piping Precautions (Piping material for low dew point air) on page 46.
- Note 5) "ANR" indicates the flow rate converted to the value at 20°C, under the atmospheric pressure and the state of relative humidity 65%.
- Note 6) Includes 1 L/min [ANR] of purge air flow (Inlet air pressure at 0.7 MPa) for the dew point indicator.
- Note 7) When highly purified air is required, refer to the Design 3. on page 45.

Note 2) It will come with Option E (With square-shaped, embedded type of a pressure regulator). Refer to our website www.smc.eu for details of regulators such as set pressure range etc.




Unit Type/Flow-rate Characteristics


Conditions: Inlet air temperature 25°C, P1: Inlet air pressure

Standard dew point···-20°C [Symbol: —], -15°C [Symbol: H]


IDG3M4, 3V4 IDG3HM4, 3HV4

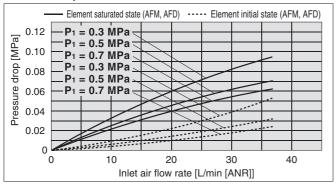


IDG10M4, 10V4 IDG10HM4, 10HV4

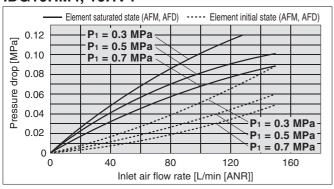


IDG30AM4, IDG30HAV4

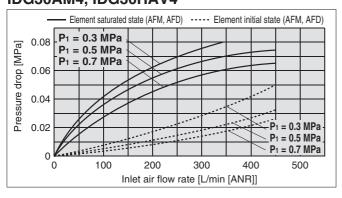


IDG60M2, 60HM2 IDG60V4, 60HV4

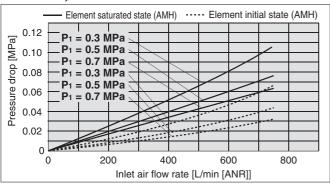


IDG5M4, 5V4 IDG5HM4, 5HV4

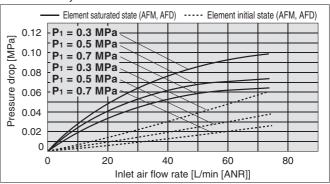


IDG20M4, 20V4 IDG20HM4, 20HV4

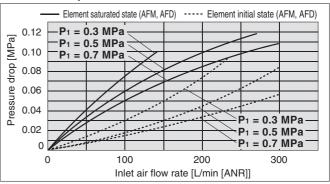

IDG50AM4, IDG50HAV4

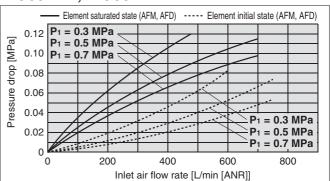

IDG75M2, 75HM2 IDG75V4, 75HV4

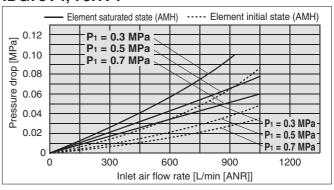


Membrane Air Dryer Unit Type Series IDG A/IDG

Unit Type/Flow-rate Characteristics


Conditions: Inlet air temperature 25°C, P1: Inlet air pressure

IDG100M2, 100HM2 IDG100V4, 100HV4

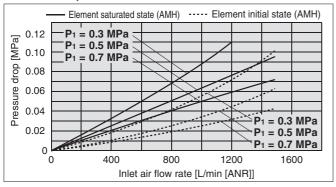


Standard dew point···-40°C [Symbol: L], -60°C [Symbol: S]


IDG30LAM4, IDG30LAV4

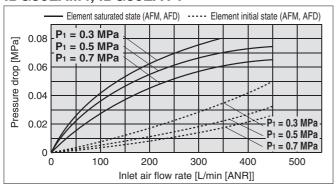


IDG60LAM4, 60SAM4 IDG60LAV4, 60SAV4

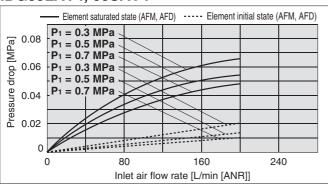


IDG100LAM4, 100SAM4 IDG100LAV4, 100SAV4

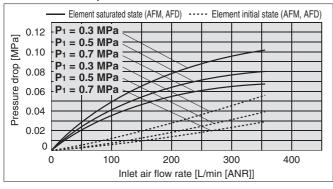

IDG50LAM4, IDG50LAV4

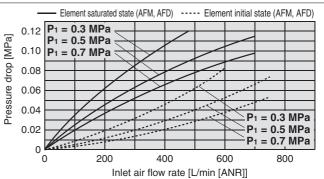


IDG75LAM4, 75SAM4 IDG75LAV4, 75SAV4

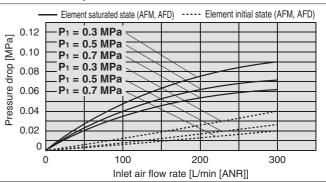


Series IDG A/IDG


Dimensions/Type M

IDG3M4, 5M4 IDG3HM4, 5HM4

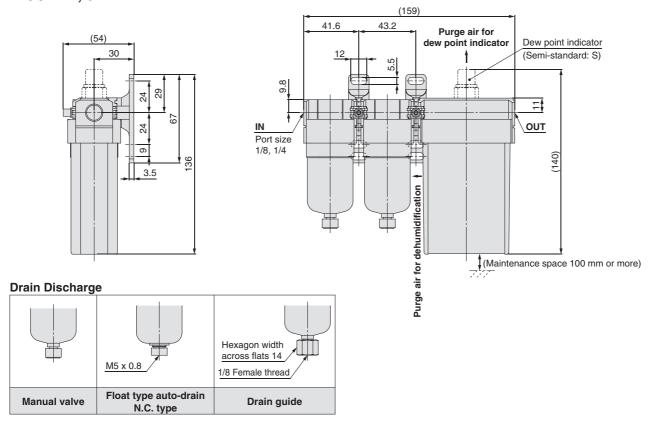

With fitting for purge air discharge (Semi-standard: P)

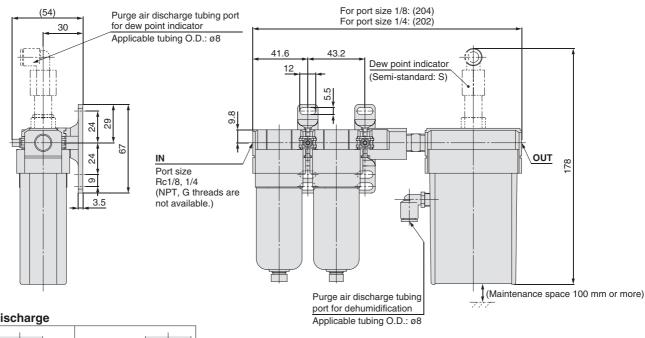


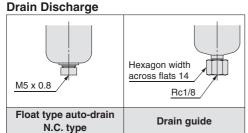





Membrane Air Dryer Unit Type Series IDG A/IDG

Dimensions/Type M

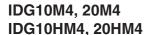

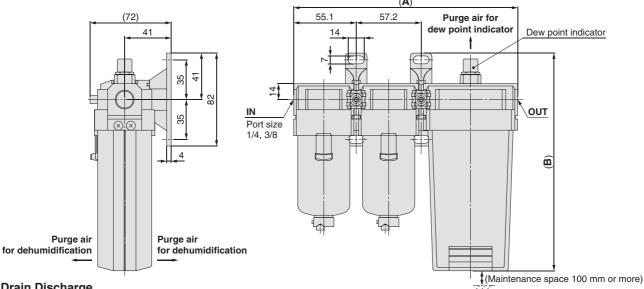


Drain Discharge

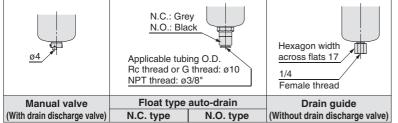

Model	Α	В
IDG10M4, 10HM4	197	192
IDG20M4, 20HM4	227	217

With fitting for purge air discharge (Semi-standard: P)

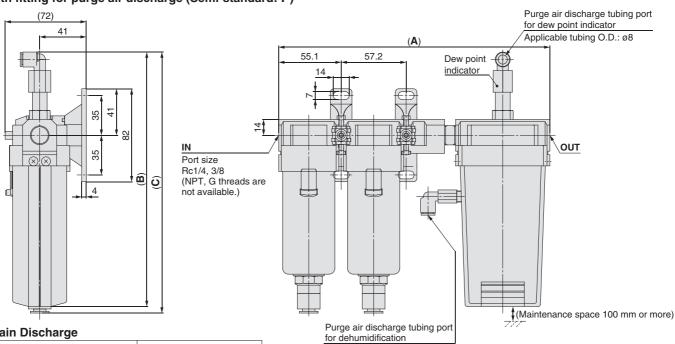

Drain Discharge

Applicable tubing O.D.: a	 Rc1/4 Drain guide
N.C.: Gr <u>N.O.: Bl</u> a	Hexagon width across flats 17


Model	Port size	Α	В	С
IDG10M4, 10HM4	1/4	242	225	231
ibaiowit, ioiiwit	3/8	243	2	201
IDG20M4, 20HM4	1/4	272	050	
IDGZUW4, ZUNIW4	3/8	273	250	_




Applicable tubing O.D.: ØD

Series IDG A/IDG

Dimensions/Type M

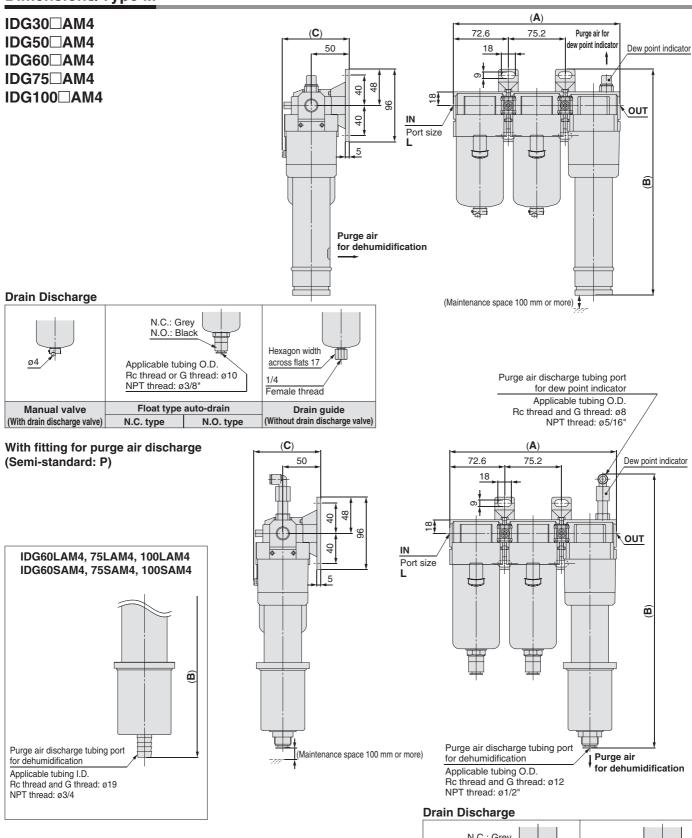


Model	Port size	Α		С		
Model	L	A	Standard	Semi-standard: P		
IDG30□AM4	1/4. 3/8	220	299	362	00	
IDG50□AM4	1/4, 3/8	220	338	401	88	
IDG60LAM4, 60SAM4			356	427		
IDG75LAM4, 75SAM4	3/8, 1/2	232	426	496	91	
IDG100LAM4, 100SAM4			491	561		

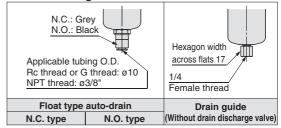








Dimensions/Type M

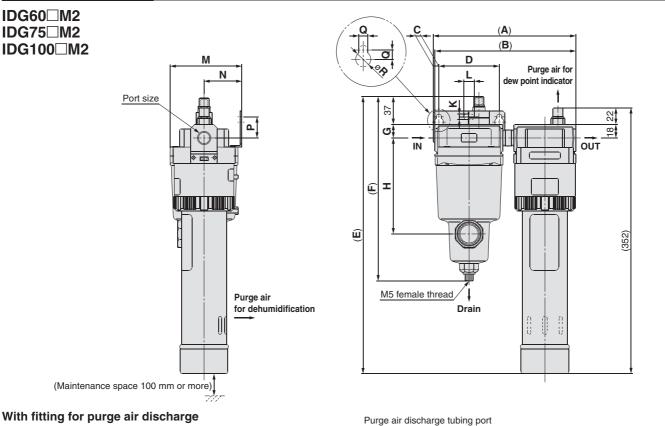

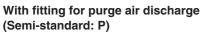


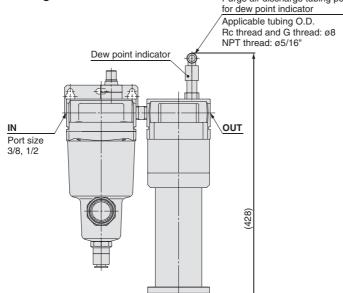

Drain Discharge

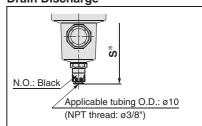

With float type auto-drain

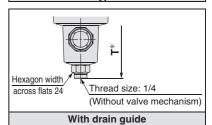

for dehumidification * Total length of the separator (Maintenance space 100 mm or more) Applicable tubing I.D. Rc thread and G thread: ø19

Model	Port size	Α	В	С	D	E	F	G	Н	K	L	M	N	Р	Q	R	With float type auto-drain	With drain guide
IDG60□M2	3/8, 1/2	189	186	7.5	80	367	244	18	127	7	14	95	50	28	7	12	255	241
IDG75□M2 IDG100□M2	1/2	206	204	10.5	90	369	262	20	146	9	18	108	55	31	9	15	276	262

Purge air discharge tubing port


NPT thread: ø3/4"




Series IDG A/IDG

Dimensions/Type V


IDG3V4, 5V4 IDG3HV4, 5HV4

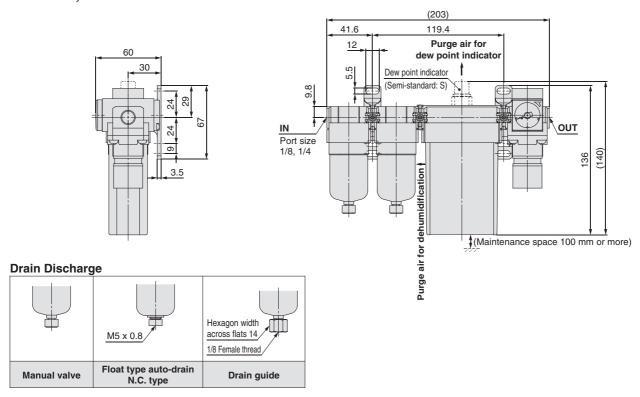

IDG10V4, 20V4 IDG10HV4, 20HV4

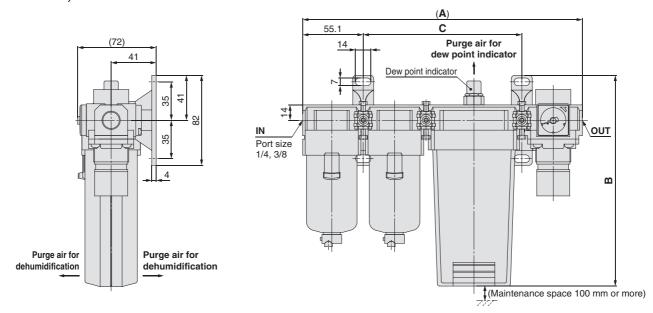

Drain Discharge

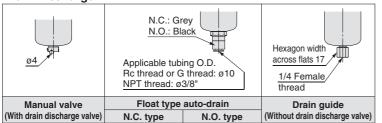

Model	Α	В	C
IDG10V4, 10HV4	255	192	144.4
IDG20V4, 20HV4	285	217	174.4



Membrane Air Dryer Unit Type Series IDG A/IDG

Dimensions/Type V


IDG30□AV4

IDG50□AV4

IDG60□AV4


IDG75□AV4

IDG100□AV4

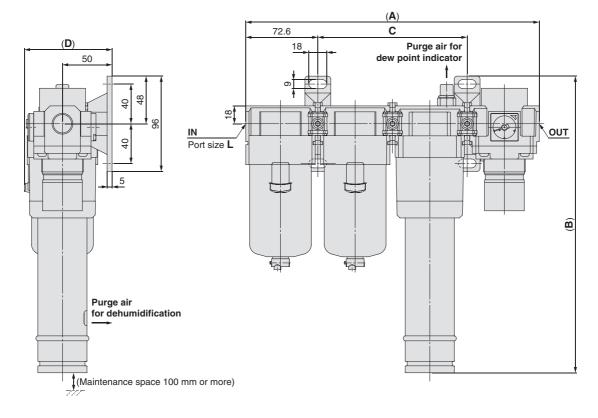

Model	Port size	Α	В	С	D	
iviodei	L	4	ם	٥	D	
IDG30□AV4	1/4. 3/8	296	299	150.4	88	
IDG50□AV4	1/4, 3/6	290	338	150.4		
IDG60LAV4, 60SAV4			356			
IDG75LAV4, 75SAV4	3/8, 1/2	308	426	162.4	91	
IDG1001 AV4 100SAV4			491			


Drain Discharge

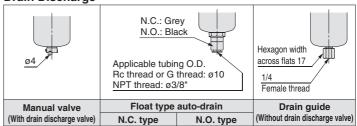


Series IDG A/IDG


Dimensions/Type V

IDG60V4, 75V4, 100V4 IDG60HV4, 75HV4, 100HV4

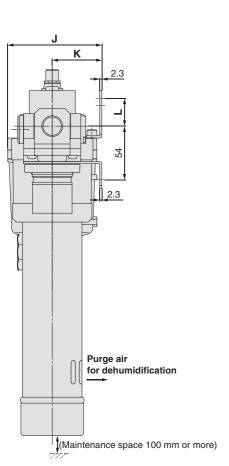

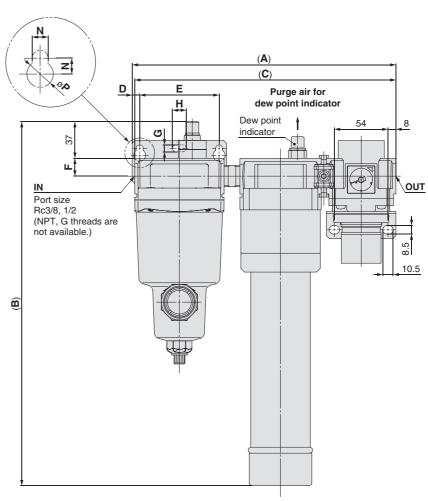

Drain Discharge

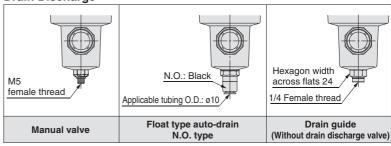

Model	Port size	Α	В	С	D	Ε	F	G	Н	J	K	L	N	Р
IDG60V4, 60HV4	3/8	264	367	261	7.5	80	18	7	14	95	50	28	7	12
	1/2	266	307	263										
IDG75V4, 75HV4	1/2	281	260	279	10.5	90	20	9	10	108	55	31	9	15
IDG100V4, 100HV4	1/2	201	369	2/9	10.5	90	20	Э	18	108	55	31	9	15

Series IDG A/IDG Model Selection

Step 1 Check the operating conditions.

Outlet air flow rate [L/min [ANR]]
Outlet air atmospheric pressure dew point [°C]
(When it is necessary to convert from the pressurized dew point,

(When it is necessary to convert from the pressurized dew point refer to the conversion chart for dew point temperature below.)

Inlet air pressure [MPa] Inlet air temperature [°C]


Allowable pressure drop ΔP [MPa]

Compressed air supply capacity **Q** [L/min [ANR]]

[Example]
Outlet air flow rate
150 L/min[ANR]
Outlet air atmospheric pressure dew point
-15 °C

Inlet air pressure 0.5 MPa
Inlet air temperature 35 °C
Allowable pressure drop 0.03 MPa
Compressed air supply capacity 300 L/min [ANR]

Dew Point Temperature Conversion Chart

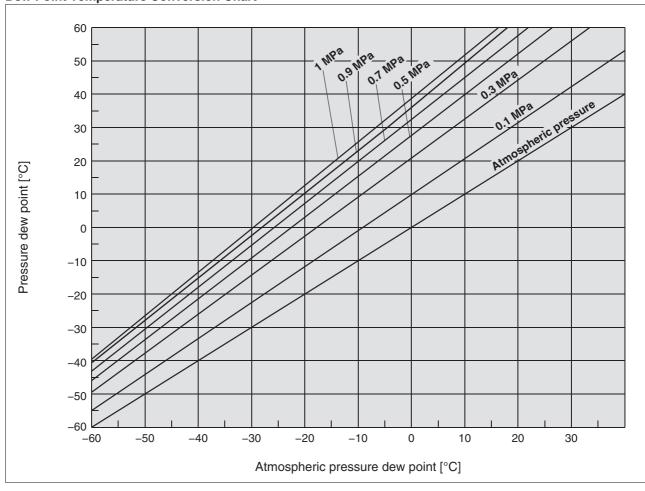

Model Selection Series IDG A/IDG

Step 2 Correction of the outlet air flow rate influenced by the inlet air temperature

(When the inlet air temperature is 25°C, proceed to Step 4)

When the inlet air temperature is not the same temperature (25°C) on the performance charts, calculate the correction factor for the outlet air flow rate from the table below to compensate the outlet air flow rate.

Therefore

Example:

Inlet air temperature 35°C

From the table below (Inlet Air Temperature

- Correction Factor for Outlet Air Flow Rate),
correction factors for outlet air flow rate are as follows.

Series IDG□A: 0.86 Series IDG: 0.40

Outlet air flow rate 150 L/min [ANR]

corrected outlet air flow rate can be determined.

[Series IDG
] 150 ÷ 0.86 = 175 L/min [ANR]
[Series IDG] 150 ÷ 0.4 = 375 L/min [ANR]

Inlet Air Temperature — Correction Factor for Outlet Air Flow Rate

Inlet air temperature [°C]	Series IDG□A	Series IDG
10	1.35	3.00
15	1.22	2.17
20	1.10	1.52
25	1.00	1.00
30	0.92	0.65
35	0.86	0.40
40	0.80	0.25
45	0.75	0.19
50	0.70	0.14

Note) Correction factors between Series IDG□A and Series IDG are different from each other, because the membrane module characteristics are different.

Step 3 Model selection based on corrected outlet air flow rate

Based on the corrected outlet air flow rate calculated by **Step 2** select a model from the performance charts on pages 5 and 6.

Example:

Corrected outlet air flow rate 175 L/min

175 L/min [ANR] [Series IDG□A] 375 L/min [ANR]

Corrected outlet air flow rate 375 L/min [A [Series IDG]

Inlet air pressure 0.5 MPa
Outlet air atmospheric pressure dew point -15°C

With the conditions of the corrected outlet air flow rate and the inlet air pressure mentioned to the left, when selecting a model which satisfies the specifications that the outlet air atmospheric pressure dew point -15°C or less,

[Series IDG□A] IDG30A, IDG50HA [Series IDG] IDG60

Step 4 Check the purge air flow rate.

Read out from the purge air flow-rate characteristics on page 9.

Example:

Inlet air pressure 0.5 MPa Selected model IDG30A

IDG50HA

For the IDG30A For the IDG50HA For the IDG60 45 L/min [ANR] 38 L/min [ANR] 94 L/min [ANR] Calculate the inlet air flow rate Q₁, and check the compressed air supply capacity.

Inlet air flow rate Q1 [L/min [ANR]] =

Outlet air flow rate [L/min [ANR]] + Purge air flow rate [L/min [ANR]]

Example: Assuming that the IDG30A is chosen | Inlet air flow rate Q1 = 150 + 45 = 195 L/min [ANR] |

Step 4 |

Outlet air flow rate 150 L/min [ANR] |

Purge air flow rate 45 L/min [ANR] |

Compressed air supply capacity Q |

300 L/min [ANR] |

YES 300 ≥ 195, therefore
proceed to Step 6

Step 6

Step 6 Check the pressure drop Δ P1 [MPa].

0.03 MPa


Single Unit (Refer to pages 7 and 8.)
Unit (Refer to pages 21 and 22.)

Example: Selected model: IDG30A Inlet air pressure 0.5 MPa Inlet air flow rate 195 L/min [ANR] Allowable pressure drop ΔP

 • Single Unit: IDG30A Based on the flow-rate characteristics (page 7), $\Delta P_1 = 0.006 \; \text{MPa}$

ΔP1 = 0.006 N • Unit: IDG30AM4

 Δ P1 = 0.01 MPa (Element initial state)

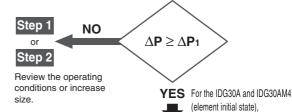

Step 7

Consider the drain discharge method (in the case of Unit), accessory and semi-standard specification.

Example:
For the IDG30A
 Accessory: With bracket
 Semi-standard: None
For the IDG30AM4
 Drain discharge method:

Drain discharge method: N.O. auto-drain Semi-standard: None Single Unit (Refer to pages 1 and 2.)
Unit (Refer to pages 15 and 16.)

 $\Delta P \ge \Delta P_1$, therefore proceed to


Refer to Selection in the Specific Product Precautions 1 on page 45.

Model selected

<Single Unit>
IDG30A-03B
<Unit>
IDG30AM4-03D



Series IDG A/IDG Made to Order 1

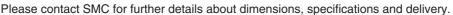




1 With Element Service Indicator

Symbol -X016

An element service indicator is mounted on the micro mist separator with pre-filter (Series AMH) to allow visual management of the element's clogging life. In addition, combination with a micro mist separator with pre-filter also provides a spatially compact design.

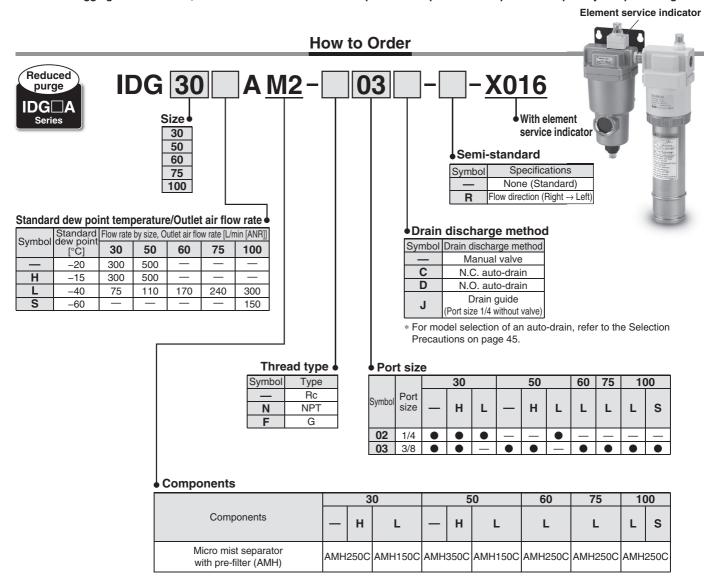


Replacement Parts (Element for micro mist separator with pre-filter)

 -			-
Description	AMH150C	AMH250C	AMH350C
Element assembly	AMH-EL150	AMH-EL250	AMH-EL350

AMH250C

AMH150C

Made to Order Series IDG A/IDG

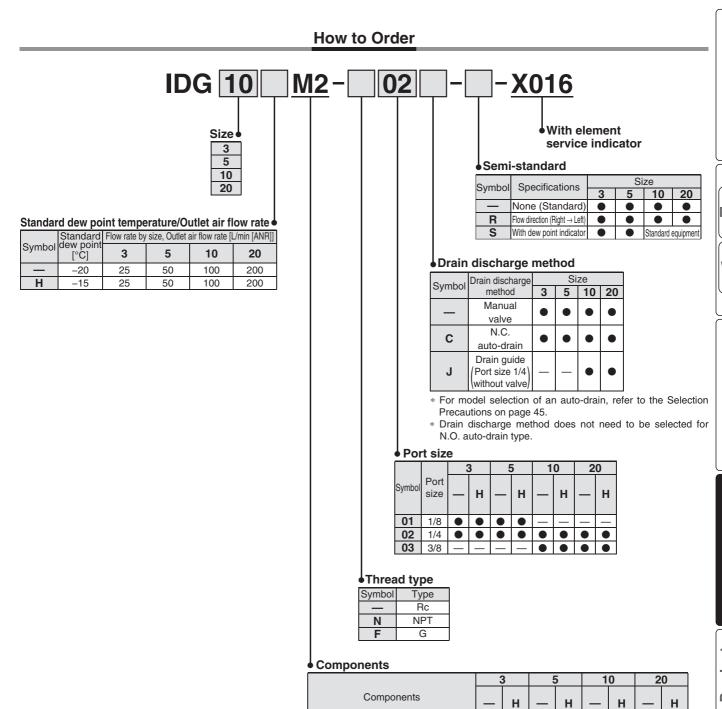

Replacement Parts (Element for micro mist separator with pre-filter)

		<u> </u>
Description	AMH150C	AMH250C
Element assembly	AMH-EL150	AMH-EL250

Refer to page 18 for the clogging indication of the element service indicator.




Micro mist separator

with pre-filter (AMH)


Series IDG A/IDG

Dimensions


IDG3M2, 5M2, 10M2, 20M2 IDG3HM2, 5HM2, 10HM2, 20HM2

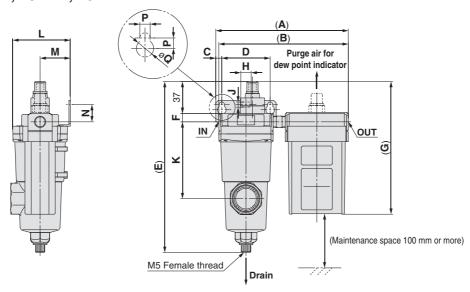


IDG30AM2, 50AM2 IDG30HAM2, 50HAM2 IDG30LAM2, 50LAM2

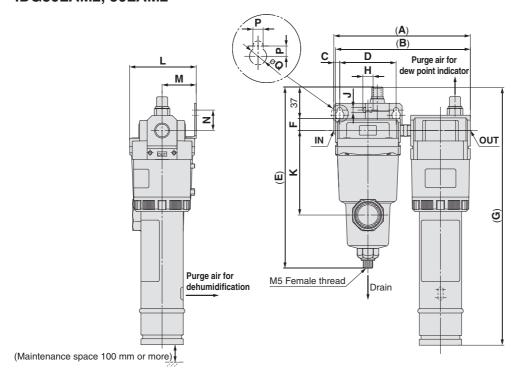

Drain Discharge

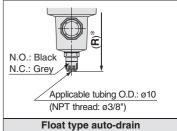

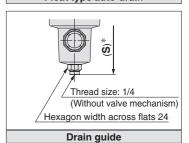


* Total length of the separator


Model	Port size	А	В	С	D	Е	F	G	н	J	К	L	М	N	Р	Q	With float type auto-drain	With drain guide	
		, ,				_	-	_				_			-	_	R	S	
IDG3M2, 3HM2,	1/8	155.5	152					154											
5M2, 5HM2	1/4	153.5	150		56 198	56 198	198	10	154		89	66.5	35	20				209	_
IDG10M2, 10HM2	1/4	163.5	160					198										195	
IDG20M2, 20HM2	1/4	205	203	7				227	12	6					6	10			
IDG20W2, 20HW2	3/8	206	204		66	212	14	221			99	78	40	24			223	209	
IDG30AM2, 30HAM2	1/4, 3/8	160	158					302											
IDG30LAM2	1/4	150.5	147		56	198	10	298			89	69	35	20			209	195	
IDG50AM2, 50HAM2	3/8	175	172	7.5	80	244	18	345	14	7	127	95	50	28	7	12	255	241	
IDG50LAM2	1/4	150.5	147	7	56	198	10	337	12	6	89	69	35	20	6	10	209	195	


Made to Order Series IDG A/IDG

Dimensions


IDG60LAM2 IDG75LAM2 IDG100LAM2, IDG100SAM2

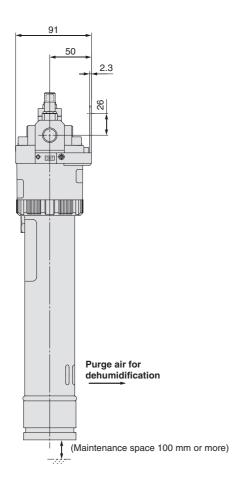

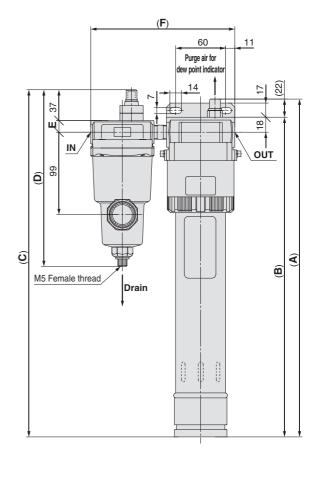

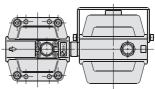

Drain Discharge

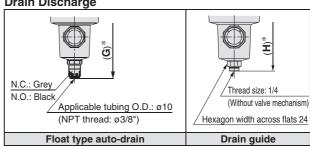

^{*} Total length of the separator

Model	Port size	Α	В	С	D	E	F	With float type auto-drain	With drain guide
IDG60LAM2		348	326	359					
IDG75LAM2	3/8	418	418 396 429	212	14	170	223	209	
IDG100LAM2, IDG100SAM2		483	461	494					




Series IDG A/IDG Made to Order 2

Please contact SMC for further details about dimensions, specifications and delivery.




With Micro Mist Separator Regulator (Series AWD)

Symbol -X017

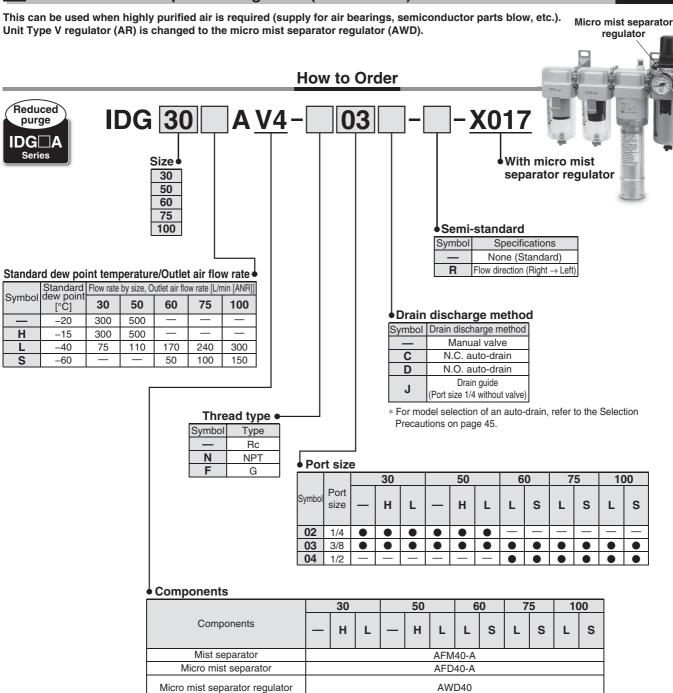

Replacement Parts (Element for mist separator, micro mist separator, micro mist separator regulator)

Description	AFM40-A	AFD40-A	AWD40
Element assembly	AFM40P-060AS	AFD40P-060AS	AFD40P-060AS

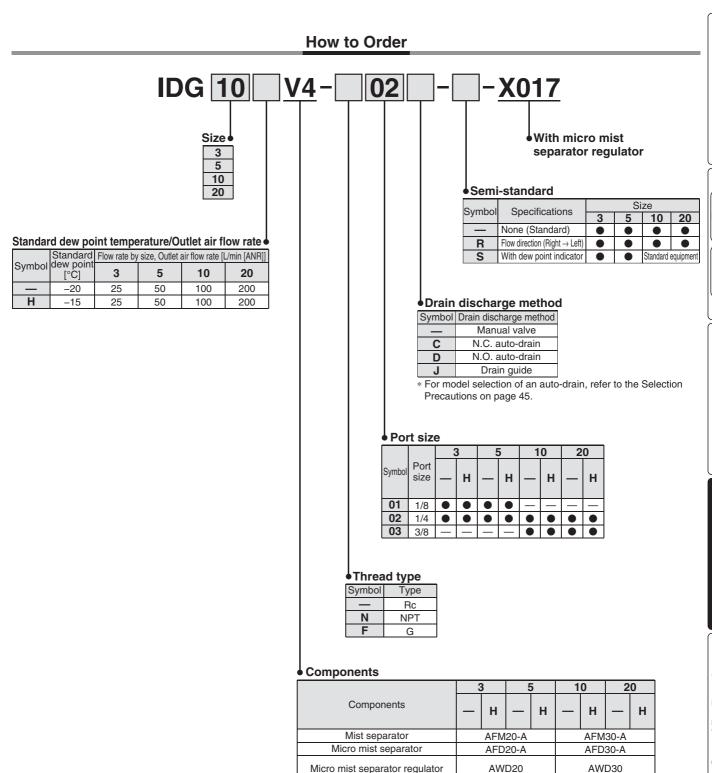

Replacement Parts (Element for mist separator, micro mist separator, micro mist separator regulator)


Description	AFM20-A	AFM30-A	AFD20-A	AFD30-A	AWD20	AWD30	
Element assembly	AFM20P-060AS	AFM30P-060AS	AFD20P-060AS	AFD30P-060AS	AFD20P-060AS	AFD30P-060AS	







Dimensions

IDG3V4, 5V4, 10V4, 20V4 IDG3HV4, 5HV4, 10HV4, 20HV4

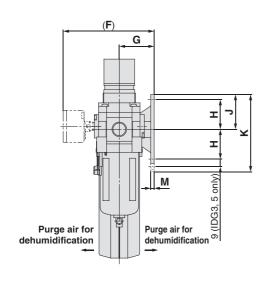


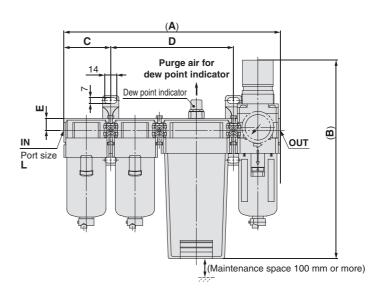

Drain Discharge (IDG3□V4, 5□V4)

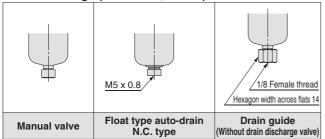

Drain Discharge (IDG10□V4, 20□V4)

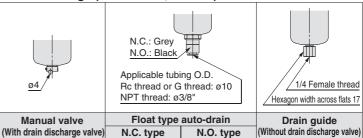



Model	Port size L	Α	В	С	D	E	F	G	Н	J	К	M
IDG3V4, 3HV4, 5V4, 5HV4	1/8, 1/4	203	180	41.6	119.4	9.8	93	30	24	29	67	3.5
IDG10V4, 10HV4	1/4. 3/8	255	237	55.1	144.4	14	107	41	35	44	92	4
IDG20V4, 20HV4	1/4, 3/8	285	262		174.4					41	82	

Made to Order Series DG A/IDG


Dimensions

IDG30AV4, 50AV4 IDG30HAV4, 50HAV4 IDG30LAV4, 50LAV4, 60LAV4, 75LAV4, 100LAV4 IDG60SAV4, 75SAV4, 100SAV4

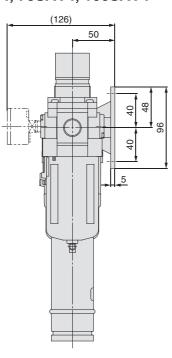

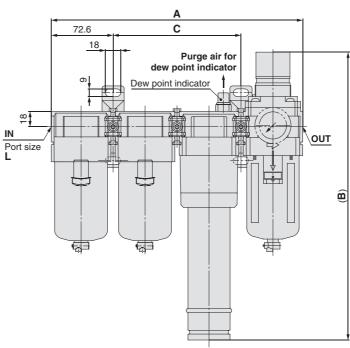

Drain Discharge

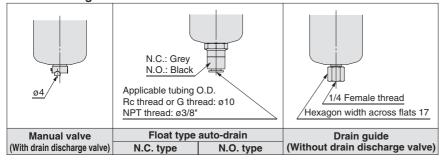


Model	Port size L	Α	В	С
IDG30□AV4	1/4. 3/8	296	343	150.4
IDG50□AV4	1/4, 3/6	290	382	150.4
IDG60LAV4, 60SAV4			400	
IDG75LAV4, 75SAV4	3/8, 1/2	308	470	162.4
IDG100LAV4, 100SAV4			535	

Series IDG A/IDG Made to Order 3




Please contact SMC for further details about dimensions, specifications and delivery.

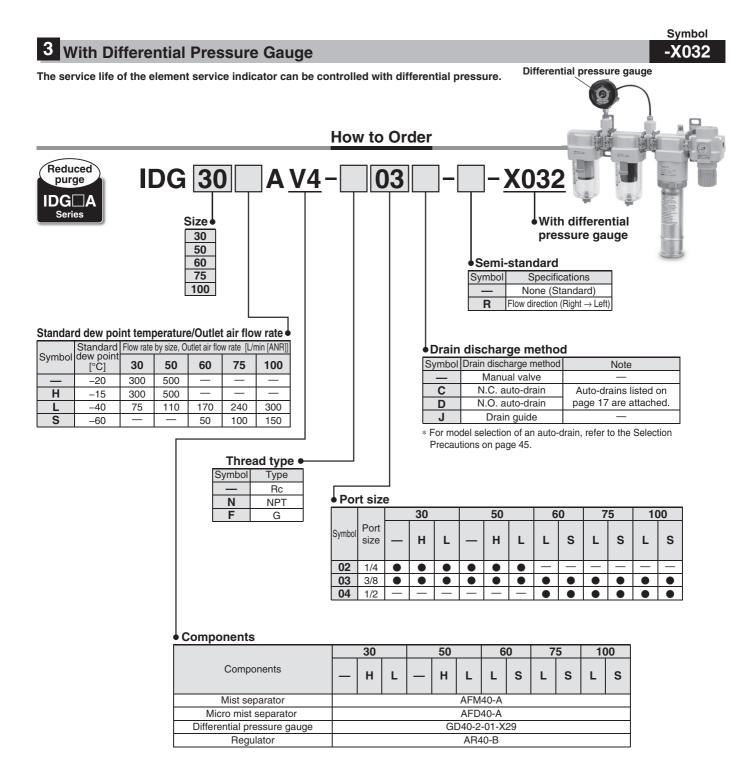

Replacement Parts (Element for mist separator, micro mist separator)

Description	AFM40-A	AFD40-A
Element assembly	AFM40P-060AS	AFD40-060AS



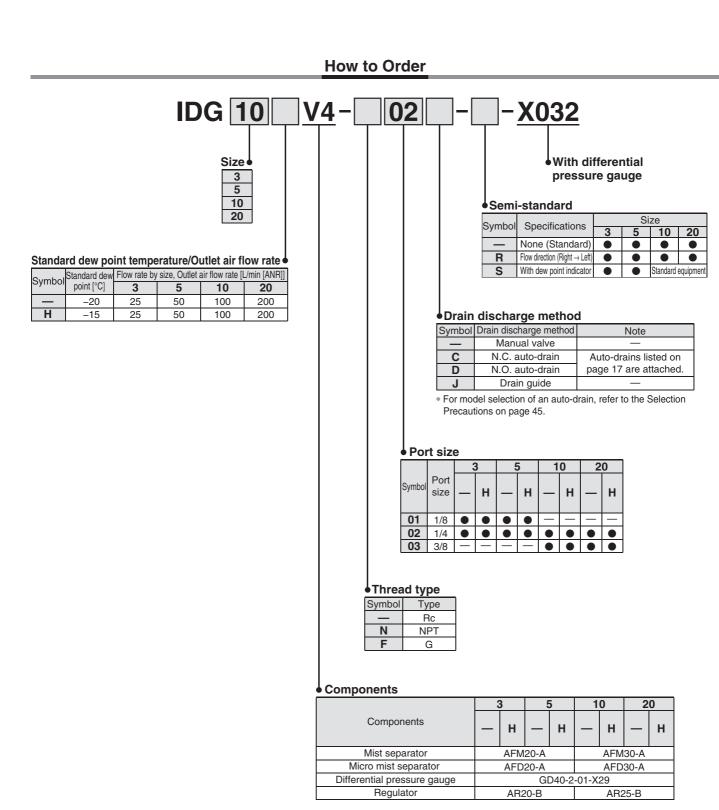

Replacement Parts (Element for mist separator, micro mist separator)


ſ	Description	AFM20-A	AFM30-A	AFD20-A	AFD30-A
ſ	Element assembly	AFM20P-060AS	AFM30P-060AS	AFD20P-060AS	AFD30P-060AS




Series IDG A/IDG

Dimensions


IDG3V4, 5V4, 10V4, 20V4 IDG3HV4, 5HV4, 10HV4, 20HV4

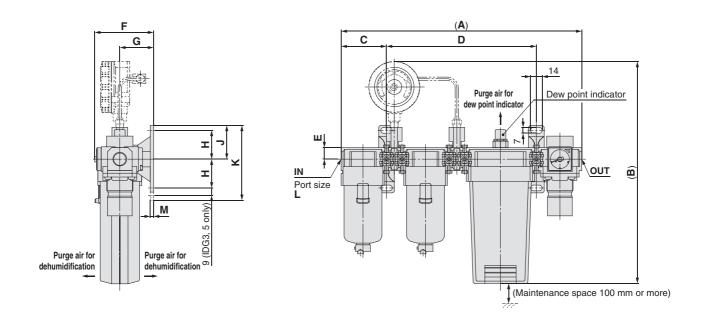



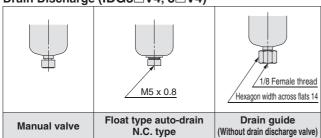

Drain Discharge (IDG10□V4, 20□V4)

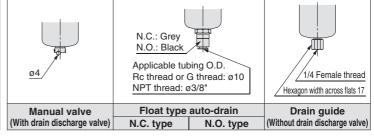


Model	Port size L	Α	В	С	D	E	F	G	Н	J	K	M
IDG3V4, 3HV4, 5V4, 5HV4	1/8, 1/4	238	219	41.6	155	9.8	60	30	24	29	67	3.5
IDG10V4, 10HV4	4/4 0/0	292	270	FF 4	182	14	72	41	35	44	00	4
IDG20V4, 20HV4	1/4, 3/8	322	295	55.1	212					41	82	


Made to Order Series IDG A/IDG

Dimensions

IDG30AV4, 50AV4 IDG30HAV4, 50HAV4 IDG30LAV4, 50LAV4, 60LAV4, 75LAV4, 100LAV4 IDG60SAV4, 75SAV4, 100SAV4

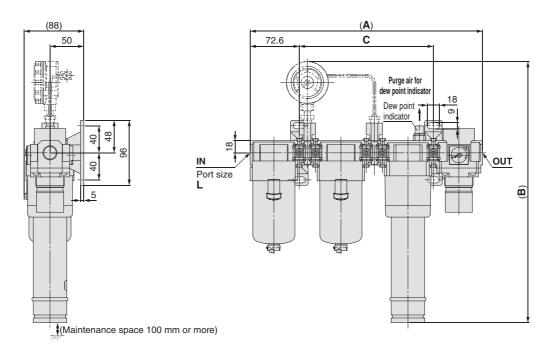

Drain Discharge

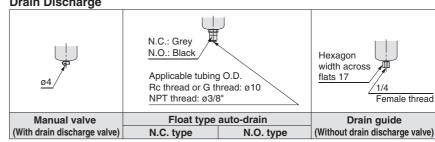

Model	Port size L	Α	В	С
IDG30□AV4	1/4	343	387	198
IDG50□AV4	3/8		423	
IDG60LAV4, 60SAV4	3/8	355	441	210
IDG75LAV4, 75SAV4	3/0 1/2		511	
IDG100LAV4, 100SAV4	1/2		576	



Series IDG□A/IDG Specific Product Precautions 1

Be sure to read before handling. Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Air Preparation Equipment Precautions.

Design

Marning

1. Depending on the model and operating conditions, the oxygen ratio of the outlet air may drop.

Do not use standard dew point -40° C (symbol: L) type, standard dew point -60° C (symbol: S) type and IDG30A, 50A, 30HA, 50HA for dehumidifying breathing air. Do not use only outlet air (dry air) in a closed room.

2. Do not exert intermittent pressure on this product. (Example: Frequently operating solenoid valves installed on the primary side) Intermittent pressure damages the product.

∧ Caution

1. Install a regulator on the outlet side of the membrane air dryer.

If it is installed on the inlet side, dehumidification performance will be reduced.

2. Devise a layout which considers the position of purge air discharge ports.

Purge air is humid air. Devise a layout in which purge air will not cause trouble such as corrosion or malfunction of peripheral equipment.

3. When highly purified air is required

(Supply to air bearings, blowing of semiconductor parts, etc.) Install a micro mist separator or super mist separator on the outlet side (end terminal) of the membrane air dryer (unit). Grease is applied inside a regulator used in the unit (Type V). When highly purified air is required, please either mount the above separator on the outlet side or use a made-to-order product (refer to pages 37 and 38), which is provided with a micro mist separator (Series AWD) instead of a regulator.

4. Time to reach the standard dew point

A certain amount of time is required to achieve the standard dew point after the air begins flowing into the membrane air dryer. Using the times below as a guide, begin operating outlet side equipment after the standard dew point is achieved.

Standard dew point -20°C, -15°C: about 10 minutes
Standard dew point -40°C: about 30 minutes *
Standard dew point -60°C: about 60 minutes *

- * This time can be shortened as described below.
 - 1) Provide a valve on the outlet side of the membrane air dryer.
 - 2) Supply air with the valve closed. Only purge air flows into the membrane air dryer.
 - 3) After 15 minutes or more, open the valve and let air flow to the outlet side equipment.

5. Dehumidification performance when inlet air temperature changes

Performance chart shows the case at an inlet air temperature of 25°C. In other cases, refer to "Model Selection" (page 31) for proper selection.

Do not use for applications such as repeatedly bending or stretching (IDG1). This may cause damage to the product.

Selection

⚠ Caution

1. Consider the purge air flow rate.

Find the purge air flow rate from the charts and calculate the "required outlet air flow rate + purge air flow rate". The air supply capacity must be at least equal to the calculated flow or the required outlet air flow rate cannot be obtained.

- 2. Selection for a compressed air line in which a mist separator or micro mist separator is already installed Verify the operating air flow rate and air pressure, and select a membrane air dryer in accordance with "Model Selection" (page 31). If a membrane air dryer is selected using the port size of the equipment that is already installed as a reference, it could result in the selection of a model that is too small and has an insufficient dehumidification capacity.
- 3. With fitting for purge air discharge (Semi-standard: P) The dehumidification capacity decreases in proportion to the length of the tube for discharging purge air. Use a tube of the specified size and keep its length within 5 meters. For the outlet air atmospheric pressure dew point in relation to the length of the tube for discharging purge air, refer to the table "regarding the outlet air atmospheric dew point in relation to the tube length for purge air discharge" on page 8.
- 4. Auto-drain selection for the unit type

When the compressor in use is for 2.2 kW (300 L/min [ANR]) or less, use an N.C. auto-drain (symbol: C). If an N.O. auto-drain (symbol: D) is used when the compressor is for 2.2 kW or less, pressure inside the mist separator may not increase and remain in the state of blowing off. Auto-drain with differential pressure type can be used in 2.2 kW or less.

Mounting

⚠ Caution

1. Do not obstruct the purge air discharge ports.

The product may be damaged. And if purge air back pressure becomes too high or purge air stops flowing, dehumidification performance will decrease or may become impossible.

2. Be sure to install a mist separator and micro mist separator or a micro mist separator with pre-filter on the inlet side of the membrane air dryer.

If the inlet air contains oil, performance will be reduced. (A mist separator and micro mist separator or a micro mist separator with pre-filter are already installed on the unit types.)

3. Remove water droplets from the inlet air.

Water droplets in the air can lower performance and cause malfunction

4. Large quantities of dust (solid foreign matter) are contained in the supply air.

When there are large quantities of dust (solid foreign matter), install an air filter or main line filter to the inlet side of the mist separator in addition to 2 above.

5. Take sufficient care in handling.

There is a danger of damage if dropped.

6. When using a fixture, fix it on the metal part of the product. Using a fixture on the resin part may cause damage to the product.





Series IDG□A/IDG Specific Product Precautions 2

Be sure to read before handling. Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Air Preparation Equipment Precautions.

Piping

⚠ Warning

1. Check for locking of case and body.

When using in a unit, be sure to set the air pressure to zero before using a mist separator or micro mist separator with modular connections. Also, confirm that the body and case are locked together with a click before starting the flow of compressed air.


2. Check for tightening of the holder.

(for IDG30A to IDG100, IDG30HA to IDG100H, IDG30LA to IDG100LA, IDG60SA to IDG100SA)

Before starting the flow of compressed air, turn the membrane air dryer's holder in its tightening direction, confirming that it is completely tightened and that the case will not come off.

3. Minimum bending radius (for IDG1)

Maintain a minimum bending radius of 35 mm or more and do not bend the sections that are within 50 mm from the nuts. Furthermore, do not twist the product.

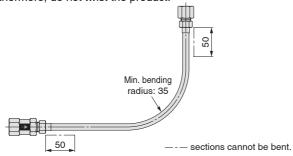

4. With fitting for purge air discharge (Semi-standard: P)

The piping of purge air for dehumidification and for the dew point indicator can be combined, but do not combine it with compressed air lines or drain piping or merge the purge air with exhaust air from other equipment. As this can cause damage.



1. Use of tools

Hold the upper portion of the body (aluminium die-casted section) with a wrench or adjustable angle wrench. Do not turn it while holding the case section.

2. Drain piping for separators

When installing drain piping for mist separators or micro mist separators, use a tube of the prescribed size and keep the length within 5 meters. Also, be sure that the tube does not rise up or become folded over.

3. Piping materials for low dew point air

If air of a low dew point (-40°C or less) is required, do not use a nylon tube piping and resin fittings (except fluoropolymer) for the outlet side of the membrane air dryer. Due to the nature of the nylon tube, it could be affected by the ambient air, and it might not be possible to achieve the prescribed low dew point at the end of the tube. Therefore, for low dew point air, use a stainless steel or fluoropolymer piping.

Piping

⚠ Caution

4. With fitting for purge air discharge (Semi-standard: P) (for IDG60 to IDG100, IDG60H to IDG100H, IDG60LA to IDG100LA, IDG60SA to IDG100SA)

To install piping for dehumidification purge air discharge, attach tubing of the prescribed size to the hose nipple section and then secure it with tubing bands.

5. Before piping is connected, flush the piping.

Be sure to remove chips, cutting oil and other debris. If they get into the product, unexpected malfunction or damage to the product may occur.

Air Supply

⚠ Caution

1. Compressed air supply capacity

An air source that has a supply capacity that is larger than the "required outlet air flow rate (dry air flow rate) + purge air flow rate" is required. Verify the purge air flow rate in "Purge Air Flow-rate Characteristics." (page 9)

2. Chemicals with a negative effect on this product

Chemicals listed in the table below in the compressed air can lower performance and damage the element. Do not use the product in environments including these chemicals.

Category	Chemicals not to be included		
Solvents	Acetone, benzene, phenol, toluene, trichloroethylene, xylene, cresol, thinner, aniline, chloroform, chlorobenzene, trichloroethane, ethylbenzene, ethyl alcohol, methyl alcohol, isopropyl alcohol, dioxin, tetrahydrofuran, methylene chloride, cyclohexane, carbon tetrachloride, methyl ketone, ethyl ketone, hexafluoroisopropanol, and others		
Acids	Sulfuric acid, nitric acid, hydrochloric acid, acetic acid, lactic acid, chromic acid, and others		
Gases	Chlorine gas, sulfurous acid gas, hydrogen chloride, bromine, ozone, ammonia, and others		
Oils	Phosphoric-ester hydraulic oil, fuel oil, water soluble cutting oil (alkaline), kerosene, and others		
Strong bases	Lithium hydroxide, sodium hydroxide, potassium hydroxide, calcium hydroxide, and others		
Others	Anaerobic adhesive, anaerobic sealant, and others		





Series IDG□A/IDG Specific Product Precautions 3

Be sure to read before handling. Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for Air Preparation Equipment Precautions.

Operating Environment

⚠ Caution

1. Do not use at temperatures (fluid or ambient temperatures) higher than the prescribed operating conditions.

Resin is used in the membrane module, and it can be damaged by operation at high temperatures. Especially when installed immediately after a reciprocating type air compressor, confirm that the fluid temperature does not exceed the range of operating conditions during use.

2. Keep the inlet air temperature lower than the ambient temperature.

If the membrane air dryer body is cooled by the surrounding air, water drops may accumulate inside and reduce its dehumidification capacity.

- 3. Do not use in the following environments, as this can cause failure.
 - In locations having corrosive gases, organic solvents, and chemicals, or in locations where these elements are likely to adhere to the equipment.
 - 2) In locations where salt water, water, or water vapor could come in contact with the equipment.
 - 3) In locations that is exposed to shocks and vibrations.

Maintenance

⚠ Caution

- Confirm that the equipment's pressure is at zero and no longer in a pressurized state before removing any parts or piping. Performing any work while pressure remains in the equipment may lead to injury or product damage.
- 2. When replacing the membrane module

For modular connections, be sure to remove the membrane air dryer before attempting any replacement work.

3. About the dew point indicator

You can use the dew point indicator to confirm the state of the outlet air of the membrane air dryer.

· When the absorbent is blue or pink

· When the absorbent is green or yellow

It takes time for the dew point indicator's color to change.

Absorbent is used in the dew point indicator. When it absorbs vaporized oil content or other gaseous components in the compressed air, it may turn a color other than blue (green) or pink (yellow).







⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1), and other safety regulations.

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

injury.

Warning indicates a hazard with a medium level of risk⚠ Warning: which, if not avoided, could result in death or serious

njury.

▶ Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

njury.

ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

∧ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions

- Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements


- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

↑ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

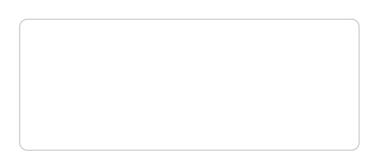

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 www.smc.be Bulgaria +359 (0)2807670 www.smc.bg +385 (0)13707288 www.smc.hr Croatia Czech Republic +420 541424611 www.smc.cz Denmark +45 70252900 www.smcdk.com Estonia +372 6510370 Finland +358 207513513 www.smc.fi France +33 (0)164761000 www.smc-france.fr Germany +49 (0)61034020 www.smc.de www.smchellas.gr Greece +30 210 2717265 Hungary +36 23513000 www.smc.hu Ireland www.smcitalia.it Italy +39 03990691 Latvia +371 67817700 www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com www.smcpneumatics.ee smc@info@smcee.ee smcfi@smc.fi info@smc-france fr info@smc.de sales@smchellas.gr office@smc.hu +353 (0)14039000 www.smcautomation.ie sales@smcautomation.ie mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 www.smclt.lt info@smclt.lt Netherlands +31 (0)205318888 www.smc.nl info@smc.nl Norway www.smc-norge.no post@smc-norge.no +47 67129020 office@smc.pl +48 222119600 Poland www.smc.pl +351 214724500 Portugal www.smc.eu apoioclientept@smc.smces.es Romania +40 213205111 www.smcromania.ro smcromania@smcromania.ro Russia +7 8127185445 info@smc-pneumatik.ru www.smc-pneumatik.ru Slovakia +421 (0)413213212 www.smc.sk office@smc.sk +386 (0)73885412 www.smc.si Slovenia office@smc si Spain +34 945184100 www.smc.eu post@smc.smces.es Sweden +46 (0)86031240 www.smc.nu smc@smc.nu **Switzerland** +41 (0)523963131 info@smc.ch www.smc.ch Turkey +90 212 489 0 440 www.smcpnomatik.com.tr info@smcpnomatik.com.tr UK +44 (0)845 121 5122 www.smc.uk sales@smc.uk

South Africa +27 10 900 1233 zasales@smcza.co.za www.smcza.co.za