



## **Digital Flow Switches**





Flow rate setting and monitoring are possible with the digital display.
Two types are available:
Integrated and Remote type.
Three types of output:

Switching from real-time flow rate to accumulated flow is possible.

(Accumulated flow rate is reset when the power supply turns OFF.)

Two independent flow rate settings are possible.




A single controller can monitor the flow rate of 4 different sensors.





4 independent flow rate ranges can be monitored by a single controller.

4-channel Flow Monitor

Series PF2 200

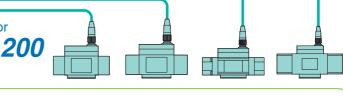

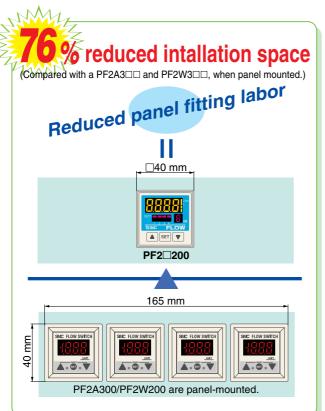

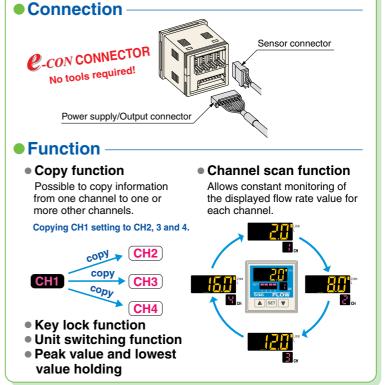



Flow rate measurement range <i>l</i> /min	Integrated type
1 to 10	PF2A710
5 to 50	PF2A750
10 to 100	PF2A711
20 to 200	PF2A721
50 to 500	PF2A751
150 to 3000	PF2A703H
300 to 6000	PF2A706H
600 to 12000	PF2A712H







4					
Remote type					
Sensor unit	Display unit	Display unit (4ch)			
PF2A510	PF2A30□				
PF2A550	FIZAGO				
PF2A511	<u></u>	PF2A20□			
PF2A521	PF2A31□				
PF2A551					
_	_	_			

PF2W33

#### For Water

(P. 15)



Flow rate measurement range <i>e</i> /min	Integrated type
0.5 to 4	PF2W704(T)
2 to 16	PF2W720(T)
5 to 40	PF2W740(T)
10 to 100	PF2W711
	,







ote type	
Display unit	Display unit (4ch)
PF2W30□	PF2W20□

## For De-ionised Water and Chemicals


PF2W511

PF2W504(T)

PF2W520(T)


PF2W540(T)



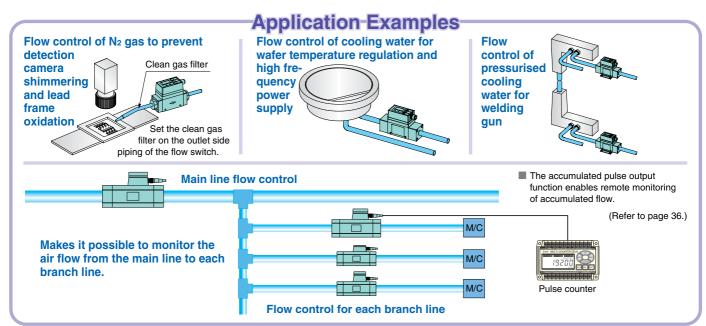

## For Air **Digital Flow Switch** Series PF2A Refer to www.smcworld.com for details of products compatible with overseas standa



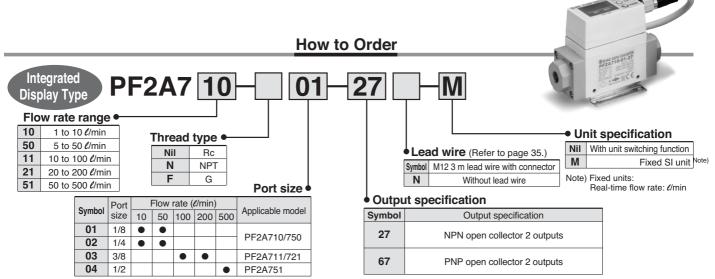

#### **Specifications**

Mo	del		PF2A710	PF2A750	PF2A711	PF2A721	PF2A751
Measured fluid			112/110	1 1 27 11 00	Air, Nitrogen	, .,	112/1101
Flo	w rate meas	surement range	0.5 to 10.5 ℓ/min	2.5 to 52.5 <i>l</i> /min	5 to 105 <i>l</i> /min	10 to 210 <i>e</i> /min	25 to 525 ℓ/min
	flow rate ra		0.5 to 10.5 ℓ/min	2.5 to 52.5 ℓ/min	5 to 105 ℓ/min	10 to 210 ℓ/min	25 to 525 <i>t</i> /min
	ed flow ran		1 to 10 <i>U</i> /min	5 to 50 ℓ/min	10 to 100 ℓ/min	20 to 200 ℓ/min	50 to 500 ℓ/min
	nimum set u		0.1 ℓ/min	0.5 ℓ/min	1 e/min	2 ℓ/min	5 ℓ/min
Accu	nulated pulse flow rat	te exchange value (Pulse width: 50 ms)	0.1 <i>t</i> /pulse	0.5 ℓ/pulse	1 <i>e</i> /pulse	2 l/pulse	5 <i>e</i> /pulse
	Note 1, 2)	Real-time flow rate	ℓ/min, CF	M x 10 <sup>-2</sup>		ℓ/min, CFM x 10 <sup>-1</sup>	·
Dis	play units	Accumulated flow			ℓ, ft <sup>3</sup> x 10 <sup>-1</sup>		
Op	erating fluid	temperature			0 to 50C		
Lin	earity				±5% F.S. or less		
Re	peatability		±1% F.S	6. or less		±2% F.S. or less	
Ter	nperature c	haracteristics	±3% F.S. or	less (15 to 35°C, base	d on 25°C), ±5% F.S. o	r less (0 to 50°C, based	d on 25°C)
		mption (No load)	150 mA	or less	160 mA	or less	170 mA or less
We	ight Note 3)		250	0 g		290 g	
Port size (Rc, NPT, G)		1/8,	1/4	3	/8	1/2	
Detection type			Heater type				
Indicator light			3-digit, 7-segment LED				
Operating pressure range			-50 kPa t	-50 kPa to 0.5 MPa -50 kPa to 0.75 MPa			
Proof pressure					1.0 MPa		
		low range Note 4)			0 to 999999 ℓ		
Note 5)	Switch ou	itput	NPN open collector Maximum load current: 80 mA; Internal voltage drop: 1 V or less (with load current of 80 mA) Maximum applied voltage: 30 V; 2 outputs				
Switch output Switch output Switch output Accumulated puls		put		Maximum load current: nternal voltage drop: 1.		urrent of 80 mA); 2 outp	outs
S S	Accumula	nted pulse output		NPN or PNP o	pen collector (same a	s switch output)	
	tus LED's			Illuminates up whe	n output is ON OUT1	: Green; OUT2: Red	
Re	sponse time	)			1 sec. or less		
	steresis		Hysteresis mode: Variable (can be set from 0), Window comparator mode Note 6): 3-digit fixed				: 3-digit fixed
Po	wer supply v	voltage	12 to 24 VDC (ripple ±10% or less)				
Enclosure				IP65			
Operating temperature range			Оре			freezing and condens	ation)
Withstand voltage					min. between external		
Insulation resistance						between external term	
<b>4</b> 1	ibration res		10 to 500 Hz with a 1.5 mi			rection for 2 hrs, whichever	is smaller. (de-energised)
			490 m/s <sup>2</sup> in X, Y, Z directions 3 times each				
N	loise resista	nce		1000 Vp- <sub>I</sub>	o, Pulse width 1 $\mu$ s, Ris	e time 1 ns	

Note 1) For digital flow switch with unit switching function. (Fixed SI unit [(//min, or /, m³ or m³ x 10³)] will be set for switch type without the unit switching function.)

Note 2) Flow rate display can be switched between the basic condition of 0°C, 101.3 kPa and the standard condition (ANR) of 20°C, 101.3 kPa, and 65% RH.

Note 3) Without lead wire.

Note 4) Accumulated flow rate is reset when the power supply turns OFF.


Note 5) Switch output and accumulated pulse output can be selected during initial setting.

Note 6) Window comparator mode — Since hysteresis will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits or more. (In case of output OUT2, n\_1, 2 to be n\_3, 4 and P\_1, 2 to be P\_3, 4.)

Note 7) The flow switch conforms to the CE mark.



## For Air Digital Flow Switch Series PF2A

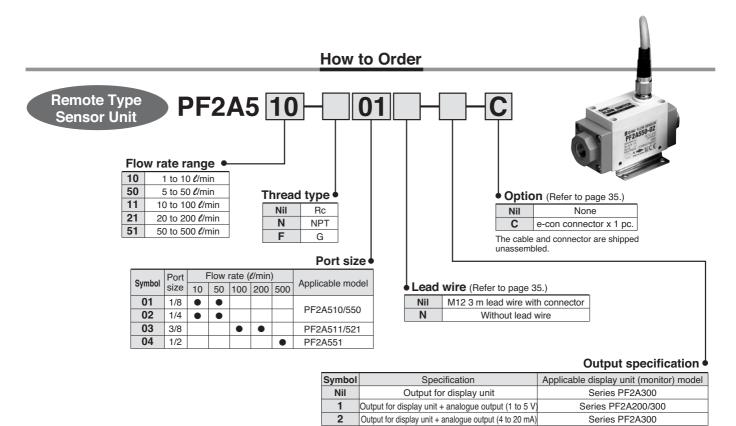

#### **Specifications**

Mod	el	PF2A510	PF2A550	PF2A511	PF2A521	PF2A551	
Meas	sured fluid			Air, Nitrogen			
Dete	Detection type Heater type						
Rate	d flow range	1 to 10 ℓ/min	5 to 50 ℓ/min	10 to 100 ℓ/min	20 to 200 ℓ/min	50 to 500 ℓ/min	
Oper	ating pressure range	–50 kPa t	o 0.5 MPa		-50 kPa to 0.75 MPa		
Proc	of pressure			1.0 MPa			
Opera	ating fluid temperature			0 to 50°C			
Line	arity Note 1)			±5% F.S. or less			
Repe	eatability Note 1)	±1% F.5	6. or less (Connected with	PF2A3□□), ±3%F.S. or	less (Connected with PF2	A2□□)	
Temperature ±2% F.S. or less (15 to 35°C, based on 25°C) characteristics ±3% F.S. or less (0 to 50°C, based on 25°C)							
(S)	Output for display unit	Analogu	e voltage output (non-line	ar) output impedance 1 kg	Ω output for display unit P	F2A3□□	
Output Note 2) specifications	Analogue output		Voltage output 1 to 5 V (within the flow rate range) Linearity: $\pm 5\%$ F.S. or less; allowable load resistance: 100 k $\Omega$ or more.				
Outp		Linearity: ±5% F	Current output 4 to 20 mA (within the flow rate range) Linearity: $\pm 5\%$ F.S. or less; allowable load resistance: 300 $\Omega$ or less with 12 VDC, 600 $\Omega$ or less with 24 VDC				
Power supply voltage 12 to 24 VDC (ripple ±10% or less)							
Current consumption (No load) 100 mA or less 110				110 mA or less			
Er	nclosure	IP65					
Op	erating temperature range	Operating: 0 to 50°C, Stored: -25 to 85°C (with no freezing and condensation)					
S M	ithstand voltage	1000 VAC for 1 min. between external terminal and case					
In sta	sulation resistance	50 $M\Omega$ or more (500 VDC measured via Megohmmeter) between external terminal and case.					
Resistance in W	bration resistance	ce 10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, whichever is smaller.					
	pact resistance		490 m/s	<sup>2</sup> in X, Y, Z directions 3 tir	mes each		
No	oise resistance		1000 Vp-p, Pulse width 1 $\mu$ s, Rise time 1 ns				
Weiç	jht Note 3)	20	0 g		240 g		
Port	size (Rc, NPT, G)	1/8	, 1/4	3	3/8	1/2	

Note 1) The system accuracy when combined with PF2A2 $\square\square$ /3 $\square\square$ .

Note 2) Output system can be selected during initial setting.

Note 3) Without lead wire. (Add 20 g for the types of analogue output whether voltage or current output selected.)

Note 4) Flow rate unit measured under the following conditions: 0°C and 101.3 kPa.


Note 5) The sensor unit conforms to the CE mark.



#### **How to Order**

PNP open collector 2 outputs

PF2A301, 311

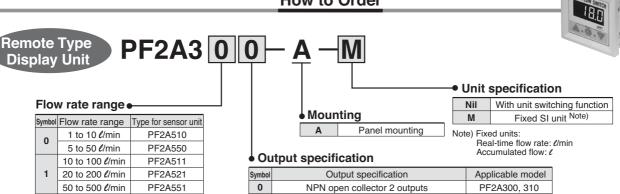

1

Mod	lel	PF2A300/301 PF2A310/311				
Flow r	ate measurement range Note 1)	0.5 to 10.5 <b>ℓ</b> /min	2.5 to 52.5 ℓ/min	5 to 105 ℓ/min	n 10 to 210 <i>l</i> /min 25 to 525 <i>l</i>	
Set f	low rate range Note 1)	0.5 to 10.5 <i>l</i> /min 2.5 to 52.5 <i>l</i> /min		5 to 105 ℓ/min	10 to 210 ℓ/min	25 to 525 ℓ/min
Mini	mum set unit Note 1)	0.1 <i>U</i> /min	0.5 <b>ℓ</b> /min	1 <i>l</i> /min	2 ℓ/min	5 <b>ℓ</b> /min
	rulated pulse flow rate exchange Pulse width: 50 ms) Note 1)	0.1 <i>ℓ</i> /pulse	0.5 <b>ℓ</b> /pulse	1 Upulse	2 Upulse	5 <b>ℓ</b> /pulse
Note 2		ℓ/min, CF	M x 10 <sup>-2</sup>		ℓ/min, CFM x 10 <sup>-1</sup>	
units	Accumulated flow			ℓ, ft <sup>3</sup> x 10 <sup>-1</sup>		
	mulated flow range Note 4)			0 to 999999 ℓ		
Line	earity Note 5)			±5% F.S. or less		
Rep	eatability Note 5)			±1% F.S. or less		
	nperature racteristics			or less (15 to 35°C, based or less (0 to 50°C, based		
Curre	ent consumption (No load)	50 mA	or less		60 mA or less	
Wei	ght			45 g		
Output Note 6) specifications	Switch output	NPN open collector	(PF2A300, PF2A310)	Maximum load currer Internal voltage drop: Maximum applied vol 2 outputs	1 V or less (with load curr	rent of 80 mA)
	PNP open col		open collector (PF2A301, PF2A311)		Maximum load current: 80 mA Internal voltage drop: 1.5 V or less (with load current of 80 mA) 2 outputs	
	Accumulated pulse output		NPN or PNP	open collector (same as s	switch output)	
Indi	cator light			3-digit, 7-segment LED		
Stat	us LED's		Illuminates up wh	en output is ON OUT1: G	Green; OUT2: Red	
Pov	er supply voltage		12 to	24 VDC (ripple ±10% or	less)	
	ponse time			1 sec. or less		
Ť	teresis	Hysteresis mode: Variable (can be set from 0), Window comparator mode Note 7): Fixed (3-digits)				
	nclosure	osure IP40				
9 0	perating temperature range	C	·	·	reezing and condensation	)
<u>a</u> —	/ithstand voltage			min. between external te		
sise Ir	sulation resistance				etween external terminal a	
	ibration resistance	10 to 500 Hz with a 1	<u> </u>		K, Y, Z direction for 2 hrs,	whichever is smaller.
	npact resistance		490 m/s <sup>2</sup> in X, Y, Z directions 3 times each			
	oise resistance	ant range can be modified do	•	p, Pulse width 1 $\mu$ s, Rise	time 1 ns	

Note 1) The flow rate measurement range can be modified depending on the setting.

Note 2) For digital flow switch with unit switching function. (Fixed SI unit [e/min or e] will be set for switch types without the unit switching function.)

Note 3) Flow rate display can be switched between the basic condition of 0°C, 101.3 kPa and the standard condition (ANR) of 20°C, 101.3 kPa, and 65% RH.

Note 4) Accumulated flow rate is reset when the power supply turns OFF.

Note 5) The system accuracy when combined with PF2A5

Note 6) Switch output and accumulated pulse output can be selected during initial setting.

Note 7) Window comparator mode — Since hysteresis will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits or more. (In case of output OUT2, n\_1, 2 to be n\_3, 4 and P\_1, 2 to be P\_3, 4.)

Note 8) The display unit conforms to the CE mark.

## For Air Digital Flow Switch Series PF2A

#### **How to Order**

4-channel Flow Monitor Remote Type Display Unit

**Specifications** 

Output specification •

Accessory / Power supply output cable (2 m)

0 NPN4 outputs1 PNP4 outputs

Unit specification

Nil With unit switching function

M Fixed SI unit Note)

Note) Fixed units: Real-time flow rate: ℓ/min Accumulated flow: ℓ Option 2 (Refer to page 35.)

Nil None
4C Sensor connector (4 pc.)

**Option 1** (Refer to page 35.)

Nil	None
Α	Panel mounting
В	Front protective cover + Panel mounting

Connectable remote type sensor part is PF2A5□□-□-1\_(with analogue output 1 to 5 V).

N4 -	.l1	<b>DT</b> 0.100.100.1					
Mod			DE010	PF2A200/201	DE01-01-01	DE0.1-1-1-1	
	olicable flow rate sensor	PF2A510-□-1	PF2A550-□-1	PF2A511-□-1	PF2A521-□-1	PF2A551-□-1	
	w rate measurement range Note 1)	0.5 to 10.5 ℓ/min	2.5 to 52.5 ℓ/min	5 to 105 ℓ/min	10 to 210 <i>l</i> /min	25 to 525 ℓ/min	
	flow rate range Note 1)	0.5 to 10.5 ℓ/min	2.5 to 52.5 ℓ/min	5 to 105 ℓ/min	10 to 210 ℓ/min	25 to 525 ℓ/min	
	imum set unit Note 1)	0.1 ℓ/min	0.5 <b>ℓ</b> /min	1 ℓ/min	2 ℓ/min	5 <b>ℓ</b> /min	
	umulated pulse flow rate exchange le (Pulse width: 50 ms) Note 1)	0.1 <i>l</i> /pulse	0.5 <b>ℓ</b> /pulse	1 ℓ/pulse	2 ℓ/pulse	5 <b>ℓ</b> /pulse	
	Real-time flow rate	e ℓ/min, Cf	FM x 10 <sup>-2</sup>		ℓ/min, CFM x 10 <sup>-1</sup>		
	Accumulated flow	ℓ, ft <sup>3</sup>	x 10 <sup>-2</sup>		ℓ, ft <sup>3</sup> x 10 <sup>-1</sup>		
Acc	cumulated flow range Note 1)	0 to 999999 ℓ, 0 to	o 999999 ft <sup>3</sup> x 10 <sup>-2</sup>	0 to 99	99999 ℓ, 0 to 999999 ft <sup>3</sup>	x 10 <sup>-1</sup>	
Pov	ver supply voltage		24 VDC (ripple ±10% of	or less) (With power sup	oply polarity protection)		
Cur	rent consumption		55 mA or less (Not inc	luding the current cons	umption of the sensor)		
Pov	wer supply voltage for sensor		Sam	e as [Power supply vol	tage]		
Pow	ver supply current for sensor Note 3)	Max. 11	0 mA (However, the tot	al current for the 4 inpu	ts is 440 mA maximum	or less.)	
Ser	nsor input		1 to 5 VDC	Input impedance: Appr	ox. 800K Ω)		
	No. of inputs			4 inputs			
	Input protection	Excess voltage protection					
Note 4)	Switch output (Real-time switch output, Accumulated switch	Maximum load current: 80 mA  NPN open collector (PF2A200)  Maximum load current: 80 mA  Internal voltage drop: 1 V or less (with load current of 80 mA)  Maximum applied voltage: 30 V					
Output	output)	PNP open coll	ector (PF2A201)	Maximum load current Internal voltage drop:	t: 80 mA 1 V or less (with load cu	urrent of 80 mA)	
Ħ.	Accumulated pulse output	NPN open collector or PNP open collector (same as switch output)					
Ħ	No. of outputs	4 outputs (1 output per 1 sensor input)					
0	Output protection			With short circuit protection			
Hys	steresis	Hysteresis	s mode: Variable (can b	e set from 0), Window	comparator mode: Fixed	d (3-digits)	
Res	sponse time Note 5)			1s or less			
Line	earity Note 5)			±5% F.S. or less			
Rep	peatability Note 5)			±3% F.S. or less			
Ten	nperature characteristics	±2% F.S. or less (0 to 50°C, based on 25°C)					
Dis	play method	For measured value display: 4-digits, 7-segment LED (Orange) For channel display: 1-digit, 7-segment LED (Red)					
Sta	tus LED's		Illuminates	when output is ON (	DUT1: Red		
	Enclosure	IP65 for the front face only, and IP40 for the remaining parts.					
හු [	Operating temperature range	Ope	rating: 0 to 50°C, Store	d: -10 to 60°C (with no	freezing and condensa	tion)	
an	Operating humidity range		Operating or Stor	ed: 35 to 85%RH (with	no condensation)		
Resistance	Vibration resistance	10 to 500 Hz with a 1.5 m	nm amplitude or 98 m/s <sup>2</sup> acc	eleration, in each X, Y, Z di	rection for 2 hrs, whichever	is smaller. (de-energised)	
Re	Impact resistance		980 m/s <sup>2</sup> in X, Y,	Z directions 3 times ea	ch (de-energised)		
	Noise resistance	500 Vp-p, Pulse width 1 μs, Rise time 1 ns					
Cor	nnection	Power sup	ply / Output connection	: 8P connector, Sensor	connection: 4P connec	ctor (e-con)	
Mat	terial		Housing: PBT, Display: PET, Backside rubber: CR				
We	ight			ny accessories that are			
			<u> </u>	-	,		

Note 1) Fixed SI unit [ $\ell$ /min or  $\ell$ ] will be set for switch types without the unit switching function. ("-M" is suffixed at the end of part number.) Accumulated flow is reset when the power supply turns OFF.



Note 2) Flow rate display can be switched between the basic condition of 0°C, 101.3 kPa and the standard condition (ANR) of 20°C, 101.3 kPa, and 65% RH.

Note 3) If Vcc side on sensor input connector part is short-circuited with the 0V side, the flow monitor inside will be damaged.


Note 4) Switch output and accumulated pulse output can be selected during initial setting.

Note 5) The system accuracy when combined with an applicable flow sensor.


Note 6) This product conforms to the CE mark.

#### Flow Characteristics (Pressure Loss)


#### PF2A710, 510

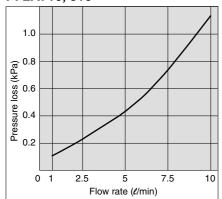


#### PF2A750, 550

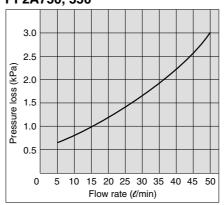


PF2A711, 511

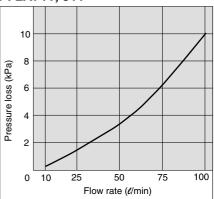

PF2A721, 521

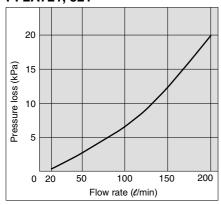


PF2A751, 551

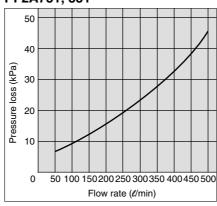


#### **Sensor Unit Construction**



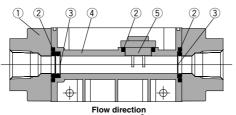

PF2A711/721/751 PF2A511/521/551

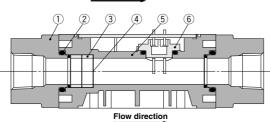


#### Parts list


No.	Description	Material
1	Attachment	ADC
2	Seal	NBR
3	Mesh	Stainless steel
4	Body	PBT
5	Sensor	PBT


#### Parts list


No.	Description	Material
1	Attachment	ADC
2	Seal	NBR
3	Spacer	PBT
4	Mesh	Stainless steel
5	Body	PBT
6	Sensor	PBT


## Dimensions: Integrated Display Type for Air

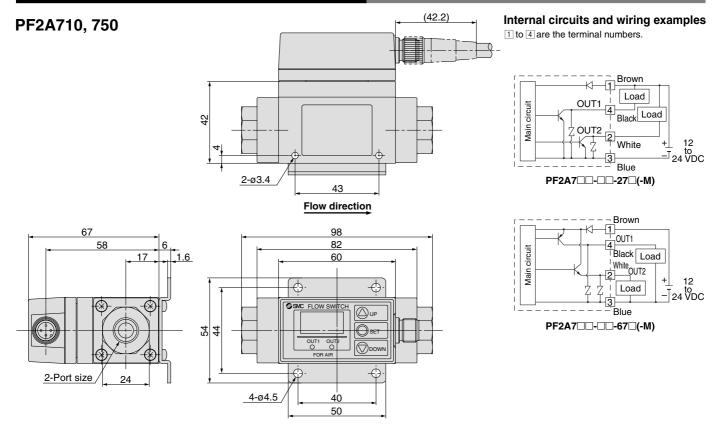

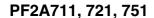

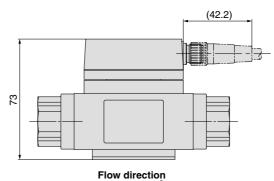

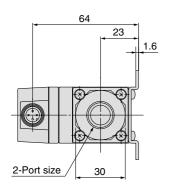

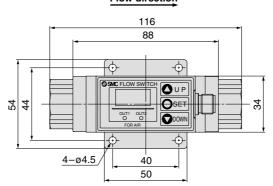


Connector pin numbers





Pin no.	Pin description
1	DC(+)
2	OUT2
3	DC(-)
4	OUT1


## Dimensions: Remote Type Sensor Unit for Air

#### PF2A510, 550

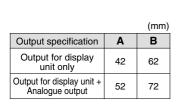

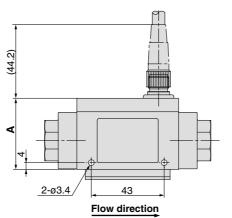


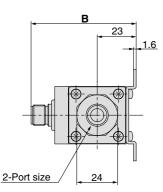


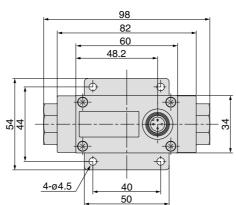


#### Internal circuits and wiring examples

1 to 8 are the terminal numbers.

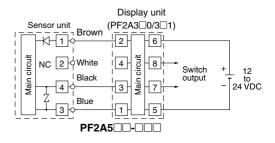

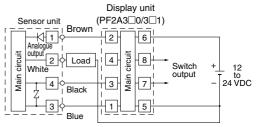



Load is an analogue input equipment such as a voltmeter. **PF2A5**□□-□□-1 (With voltage output type)

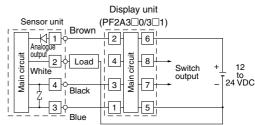

Load is an analogue input equipment such as a voltmeter. **PF2A5** — - — 2 (With voltage output type)

#### PF2A511, 521, 551

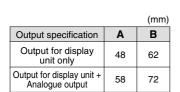


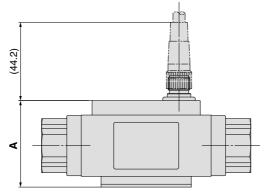


116

➂

(X)

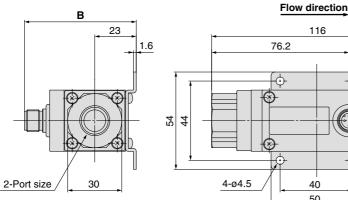

#### Wiring

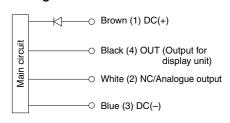

Use this sensor by connecting it to a SMC remote type display unit Series PF2A2□□/3□□.

#### Connector pin numbers



Pin no.	Pin description
1	DC(+)
2	NC/Analogue output
3	DC(-)
4	OUT


40

## Dimensions: Remote Type Display Unit for Air


## PF2A3□□-A Panel mounting type


# Panel fitting dimensions 36 +0.5 90 90 90

 $\ast$  The applicable panel thickness is 1 to 3.2 mm.

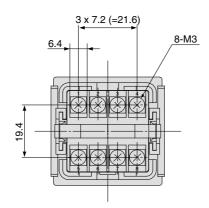




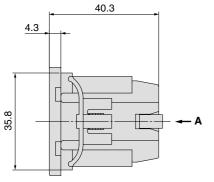

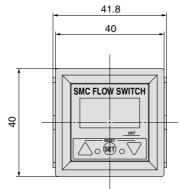


#### Internal circuits and wiring examples

1 to 8 are the terminal numbers.

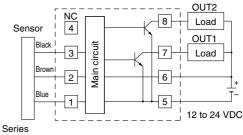


PF2A3□0-A

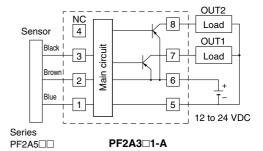


\* Do not connect the white wire of the sensor to 3.

#### Terminal block numbers

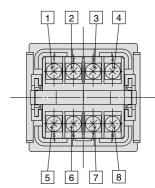


## Analogue output 1 to 5 VDC

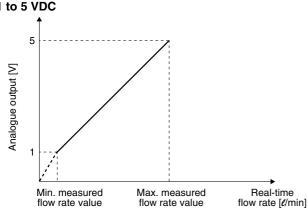

	Normal o	condition	Standard condition		
Part no.	Min. measured flow rate value [ <i>l</i> /min]	Max. measured flow rate value [d/min]	Min. measured flow rate value [ℓ/min]	Max. measured flow rate value [t/min]	
PF2A510-□-1	1	10	1.1	10.7	
PF2A550-□-1	5	50	5.4	53.5	
PF2A511-□-1	10	100	11	107	
PF2A521-□-1	20	200	21	214	
PF2A551-□-1	50	500	54	535	

#### 4 to 20 mADC

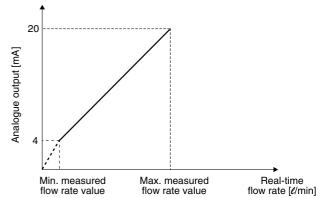


	Normal o	condition	Standard condition		
Part no.	Min. measured flow rate value [d/min]	Max. measured flow rate value [ℓ/min]	Min. measured flow rate value [t/min]	Max. measured flow rate value [d/min]	
PF2A510-□-2	1	10	1.1	10.7	
PF2A550-□-2	5	50	5.4	53.5	
PF2A511-□-2	10	100	11	107	
PF2A521-□-2	20	200	21	214	
PF2A551-□-2	50	500	54	535	




## Dimensions: Remote Type Display Unit for Air (4-channel Flow Monitor)


#### PF2A200, 201

#### Front protective cover + Panel mounting

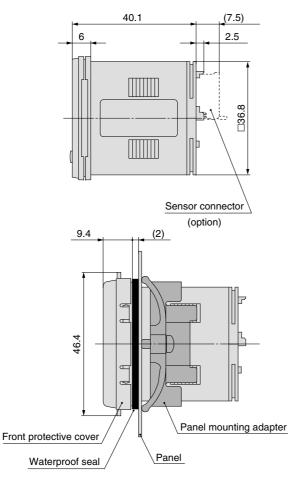




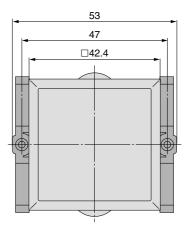

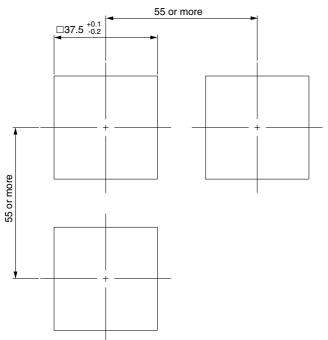


Panel fitting dimensions
Applicable panel thickness: 0.5 to 8 mm


## Dimensions: Remote Type Display Unit for Air (4-channel Flow Monitor)

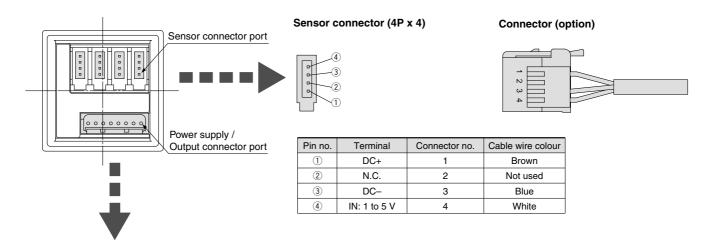

#### Power supply / Output connector (8P)

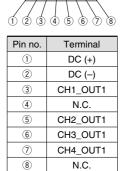


#### Power supply / Output connector (accessory)

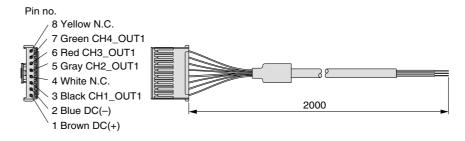

## Internal circuits and wiring examples PF2A200

#### DC (+) (Brown) NC 2 CH1\_OUT1 $\pm$ 24 VDC Load (Black) 3 Main circuit CH2\_OUT1 NC2 (Gray) 1 Sensor CH3\_OUT1 (Red) NC 2 CH4\_OUT1 (Green) DC (-)

#### PF2A201

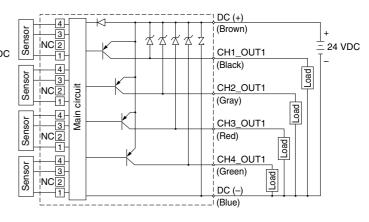


## For Air

## Digital Flow Switch/High Flow Rate Type

# Series PF2A

Refer to www.smcworld.com for details of products compatible with overseas standards.

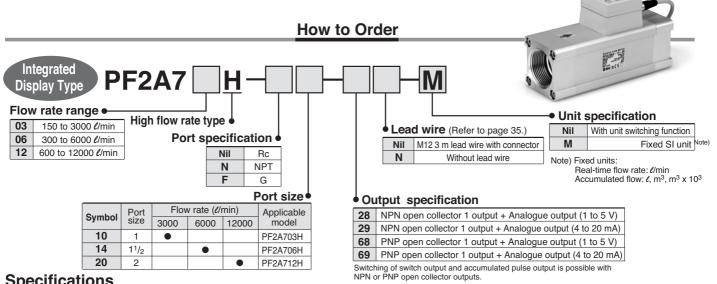

Model		PF2A703H	PF2A706H	PF2A712H				
Measured flu	id	Dry air						
Detection type	е		Heater type					
Rated flow ra	inge Note 1)	150 to 3000 ℓ/min	300 to 6000 ℓ/min	600 to 12000 ℓ/min				
Minimum set	unit Note 1)	5 <b>ℓ</b> /min	10 €	/min				
Note 2)			∉min, CFM					
Display units	Accumulated flow	$\ell$ , m <sup>3</sup> , m <sup>3</sup> x 10 <sup>3</sup> , ft <sup>3</sup> x 10 <sup>3</sup> , ft <sup>3</sup> x 10 <sup>6</sup>						
	essure range		0.1 to 1.5 MPa					
Proof pressu	re		2.25 MPa					
Pressure los	s		20 kPa (at maximum flow rate)					
Accumulated	I flow range		0 to 9,999,999,999 ℓ					
Linearity Note	3)		±1.5% F.S. or less (0.7 MPa, at 20°C)					
Repeatability	1	±1.0% F.S. or less (0.7 N	MPa, at 20°C), ±3.0% of F.S. or less in	case of analogue output				
Pressure cha	racteristics	±1.5% F	S.S. or less (0.1 to 1.5 MPa, based on 0	0.7 MPa)				
Temperature	characteristics	±2.0	0% F.S. or less (0 to 50°C, based on 2	5°C)				
	Switch output Note 4)	NPN open collector Max. load current: 80 mA; Max. applied voltage: 30 V; Internal voltage drop: 1 V or less (with load current of 80 mA)						
	Switch output	PNP open collector Max. load current: 80 mA; Internal voltage drop: 1.5 V or less (with load current of 80 mA)						
Output specification	Accumulated Note 4) pulse output	NPN or PNP open collector  Flow rate per pulse: 100 ℓ/pulse, 10.0 ft <sup>3</sup> /pulse ON time per pulse width: 50 msec						
	A mala mus autout Noto 5)	Output vol	Output voltage: 1 to 5 V; Load impedance: 100 kΩ or more					
	Analogue output Note 5)	Output current: 4 to 20 mA; Load impedance: 250 Ω or less						
Response tir	ne	1 sec. or less						
Hysteresis		Hysteresis mode: Variable (can be set from 0); Window comparator mode: (can be set from 0 to 3% F.S.)						
Power suppl	y voltage		24 VDC (ripple ±10% or less)					
Current cons	umption		150 mA or less					
Enclosure			IP65					
<sub>Φ</sub> Operating	temperature range	0 to	50°C (with no freezing and condensa	tion)				
Withstand	voltage	1000 VA	C for 1 min. between external terminal	and case				
Insulation	resistance	50 MΩ (at 500 VDC me	asured via Megohmmeter) between ex	ternal terminal and case				
Withstand Insulation Vibration	resistance		or 98 m/s <sup>2</sup> acceleration, in each X, Y, Z					
Impact res	sistance	49	90 m/s <sup>2</sup> in X, Y, Z directions 3 times ea	ch				
Noise res	stance	10	00 Vp-p, Pulse width 1 $\mu$ s, Rise time 1	ns				
Weight		1.1 kg (without lead wire)	1.3 kg (without lead wire)	2.0 kg (without lead wire)				
	, NPT, G)	1	11/2	2				

Note 1) Flow rate display can be switched between the basic condition of 0°C, 101.3 kPa and the standard condition (ANR) of 20°C, 101.3 kPa, and 65% RH.

Note 4) Switch output and accumulated pulse output selections are made using the button controls Note 5) The analogue output operates only for real-time flow rate, and does not operate for accumulated flow





Note 2) For digital flow switch with unit switching function. (Fixed SI unit [(t/min, or t, m³ or m³ x 10³)] will be set for switch type without the unit switching function.)


Note 3) The high flow rate type is CE marked; however, the linearity with applied noise is ±5% F.S. or less.

#### Flow Characteristics (Pressure Loss)


## PF2A703H 20

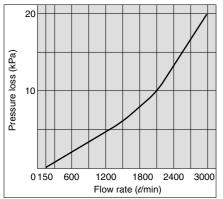

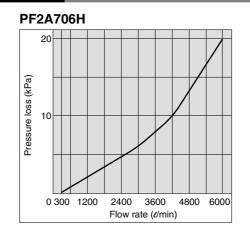

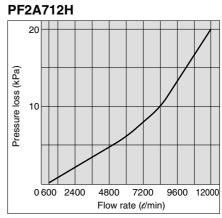

#### Construction

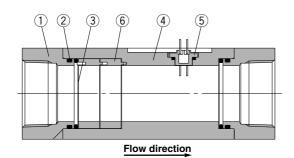

#### Parts list

No.	Description	Material	Note
1	Attachment	Aluminum alloy	Anodized
2	Seal	HNBR	_
3	Mesh	Stainless steel	_
4	Body	Aluminum alloy	Anodized
5	Sensor	PPS	_
6	Spacer	PBT	_


#### **Dimensions**


#### PFA703H, 706H, 712H

#### Connector pin numbers


Pin no.	Pin description		
1	DC(+)		
2	Analogue output		
3	DC(-)		
4	OUT1		



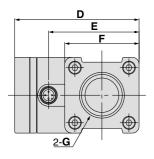

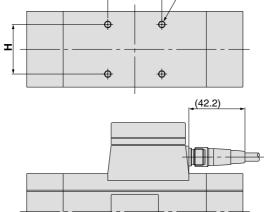


4-I thread with depth J

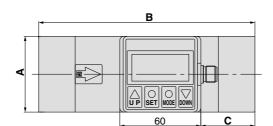


#### Internal circuits and wiring examples

1 to 4 are the terminal numbers.

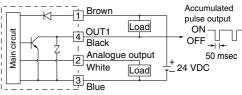

Load is an analogue input equipment such as a voltmeter, ammeter.


PF2A7□□H-□□-<sup>28</sup><sub>29</sub> (-M)

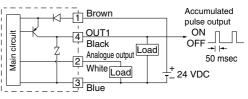

Load is an analogue input equipment such as a voltmeter, ammeter.


PF2A7□□H-□□-<sup>68</sup><sub>69</sub> (-M)

#### Accumulated pulse output wiring examples

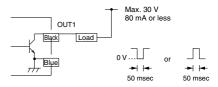


PF2A7□□H-□□-<sup>28</sup><sub>-29</sub> (-M)

Model	Α	В	С	D	Е	F	G	Н	I	J
PF2A703H	55	160	40	92	67	55	Rc1, NPT1, G1	36	M5	8
PF2A706H	65	180	45	104	79	65	Rc1 <sup>1</sup> / <sub>2</sub> , NPT1 <sup>1</sup> / <sub>2</sub> , G1 <sup>1</sup> / <sub>2</sub>	46	M6	9
PF2A712H	75	220	55	114	89	75	Rc2, NPT2, G2	56	M6	9

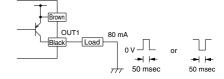


PF2A7□□H-□□-<sup>68</sup><sub>69</sub> (-M)

## Analogue output 1 to 5 VDC

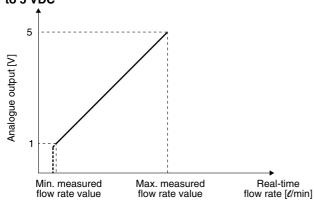

Part no.	Min. measured flow rate value [ℓ/min]	Max. measured flow rate value [ℓ/min]
PF2A703H-□-28 PF2A703H-□-68		3000
PF2A706H-□-28 PF2A706H-□-68		6000
PF2A712H-□-28 PF2A712H-□-68	600	12000

4 to 20 mADC

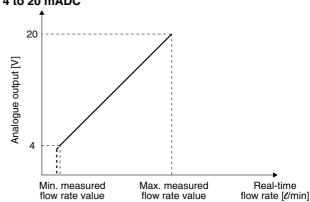

Part no.	Min. measured flow rate value [ℓ/min]	Max. measured flow rate value [ℓ/min]
PF2A703H-□-29 PF2A703H-□-69		3000
PF2A706H-□-29 PF2A706H-□-69		6000
PF2A712H-□-29 PF2A712H-□-69		12000




## For Water

## **Digital Flow Switch**

# Series PF2W (E

Refer to www.smcworld.com for details of products compatible with overseas standards.

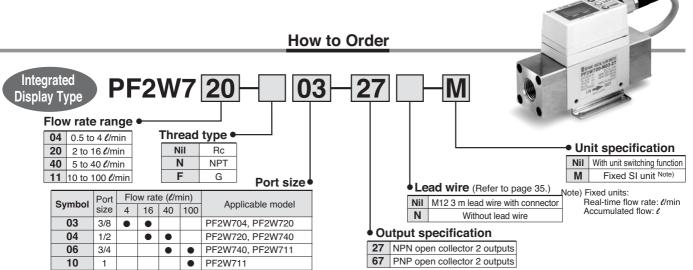

Model		PF2W704	PF2W720	PF2W740	PF2W711		
	red fluid	1124704	Wat	-	1124711		
	ate measurement range	0.35 to 4.5 ℓ/min	1.7 to 17.0 <i>t</i> /min	3.5 to 45 <i>l</i> /min	7 to 110 ℓ/min		
	w rate range	0.35 to 4.5 ℓ/min	1.7 to 17.0 ℓ/min	3.5 to 45 <i>e</i> /min	7 to 110 ℓ/min		
		0.5 to 4 <i>e</i> /min	2 to 16 ℓ/min	5 to 40 <i>l</i> /min	10 to 100 ℓ/min		
Rated flow range Minimum set unit		0.05 <i>ℓ</i> /min	0.1 <i>ℓ</i> /min	0.5 <b>ℓ</b> /min	1 <i>l</i> /min		
	pulse flow rate exchange value (Pulse width: 50 ms)	0.05 ℓ/pulse			1 <i>l</i> /pulse		
	ing fluid temperature		0 to 5	0.5 ℓ/pulse			
Lineari	· · · · · · · · · · · · · · · · · · ·		±5% F.S. or less		±3% F.S. or less		
Repeat	·		±3% F.S. or less		±2% F.S. or less		
Tempe	rature characteristics Note 1)		±5% F.S. or less (0 to 5	50°C, based on 25°C)			
Curren	t consumption (No load)		70 mA or less	,	80 mA or less		
Weight	Note 2)	460 g	520 g	700 g	1150 g		
Port si	ze (Rc, NPT, G)	3/8	3/8, 1/2	1/2, 3/4	3/4, 1		
Detecti	ion type	Karman vortex					
Indicat	or light	3-digit, 7-segment LED					
Diamler	Note 3) Real-time flow rate	∉min, gal(US)/min					
Display	7 TOOUTHURATOU HOW	ℓ, gal(US)					
	ing pressure range	0 to 1 MPa					
	pressure	1.5 MPa					
	ulated flow range Note 4)	0 to 999999 <i>t</i>					
Ambie	nt temperature range	Operating: 0 to 50°C, Stored: –25 to 85°C (with no freezing and condensation)					
Output		NPN open collector: Maximum load current: 80 mA; Internal voltage drop: 1 V or less (with load current of 80 mA); Maximum applied voltage: 30 V; 2 output PNP open collector: Maximum load current: 80 mA; Internal voltage drop: 1.5 V or less (with load current of 80 mA); 2 outputs					
specific	Accumulated pulse output	NPN or PNP open collector (same as switch output)					
Status		Illuminates when output is ON, OUT1: Green; OUT2: Red					
Respo	nse time		1 sec. c	or less			
Hyster	esis	Hysteresis mode: Variable (can be set from 0), Window comparator mode Note 6): 3-digit fixed					
Power	supply voltage	12 to 24 VDC (ripple ±10% or less)					
End	closure		IP6	55			
و Ope	erating temperature range	:	0 to 5	0°C			
Wit With With With With With With With W	hstand voltage		1000 VAC for 1 min. between	external terminal and case			
Ins	ulation resistance		t 500 VDC measured via Mego				
diV	ration resistance	10 to 500 Hz with a 1.5 mm a	amplitude or 98 m/s² acceleration	on in each X, Y, Z direction fo	r 2 hrs, whichever is smaller.		
	pact resistance		490 m/s <sup>2</sup> in X, Y, Z dir				
Noi	se resistance		1000 Vp-p, Pulse width	1 μs, Rise time 1 ns			
Note 1) In t	the case of PE2W711 +3% of E.S. or	less (15°C to 35°C, based on 25°C).	Note 2) Without lead wire.				



Note 1) In the case of PF2W711, ±3% of F.S. or less (15°C to 35°C, based on 25°C). Note 2) Without lead wire.


Note 3) For digital flow switch with unit switching function. (Fixed SI unit [a/min or a] will be set for switch type without the unit switching function.)

Note 4) Accumulated flow rate is reset when the power supply turns OFF. Note 5) Switch output and accumulated pulse output can be selected during initial setting.

Note 6) Window comparator mode — Since hysteresis will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits or more.

(In case of output OUT2, n\_1, 2 to be n\_3, 4 and P\_1, 2 to be P\_3, 4.) Note 7) This product conforms to the CE mark.

## For Water Digital Flow Switch Series PF2W

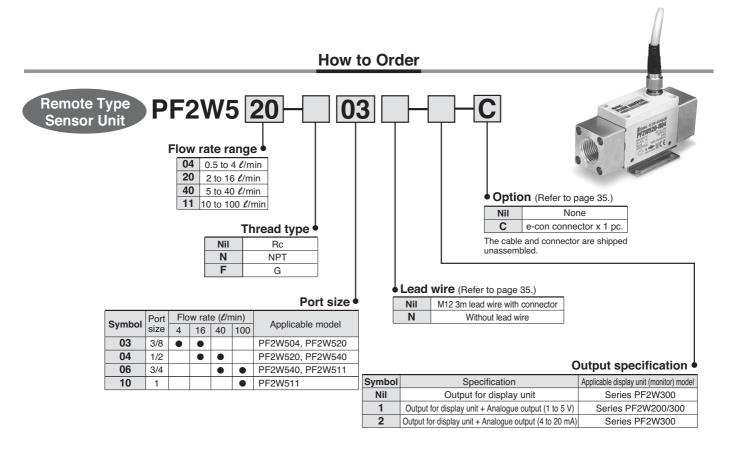

Mod	lel	PF2W504	PF2W520	PF2W540	PF2W511				
Mea	sured fluid		Water						
Det	ection type		Karman vortex						
Rate	ed flow range	0.5 to 4 ℓ/min	2 to 16 ℓ/min	5 to 40 ℓ/min	10 to 100 ℓ/min				
Ope	rating pressure range		0 to -	I MPa					
Witl	nstand pressure		1.5	MPa					
Oper	rating fluid temperature		0 to 50°C		0 to 50°C				
Line	earity Note 1)		±5% F.S. or less		±3% F.S. or less				
Rep	eatability Note 1)		±3% F.S. or less		±1% F.S. or less (connected with PF2W33□) ±3% F.S. or less (connected with PF2W2□□)				
Tem	perature characteristics	2% F.S. or les	ss (15 to 35°C based on 25°C)	, 3% F.S. or less (0 to 50°C, b	pased on 25°C)				
ote 2)	Pulse output, N channel, open drain, output for display unit PF2W3 (Specifications: Maximum load current of 10 mA; Maximum applied voltage of 30 V)								
Output Note 2)	Analogue output	Lin	Voltage output 1 to 5 V Linearity: ±5% F.S. or less; allowable load resistance: 100 kΩ or more.						
Out		Linearity: ±5% F.S. or	Current output 4 to 20 mA Linearity: $\pm 5\%$ F.S. or less; allowable load resistance: 300 $\Omega$ or less with 12 VDC, 600 $\Omega$ or less with 24 VDC						
Pov	ver supply voltage	12 to 24 VDC (ripple ±10% or less)							
Curre	ent consumption (No load)		20 mA or less						
	Enclosure		IF	P65					
0	Operating temperature range	Opera	ting: 0 to 50°C, Stored: -25 to 8	5°C (with no freezing and conde	ensation)				
Resistance	Withstand voltage		1000 VAC for 1 min. between	en external terminal and case					
iste	nsulation resistance	50 MΩ or more	e (at 500 VDC measured via Me	gohmmeter) between external te	erminal and case				
Res	Vibration resistance	10 to 500 Hz with a 1.5 m	m amplitude or 98 m/s <sup>2</sup> accelera	tion, whichever is smaller.	4.9 m/s <sup>2</sup>				
	mpact resistance		490 m/s <sup>2</sup> in X, Y, Z d	lirections 3 times each					
	Noise resistance		1000 Vp-p, Pulse wid	Ith 1 $\mu$ s, Rise time 1 ns					
Wei	ght Note 3)	410 g	470 g	650 g	1,100 g				
Por	t size (Rc, NPT, G)	3/8	3/8, 1/2	1/2, 3/4	3/4, 1				


Note 1) The system accuracy when combined with PF2W2DD/3DD.



Note 2) Output system can be selected during initial setting.

Note 3) Without lead wire. (Add 20 g for the types of analogue output whether voltage or current output selected.)

Note 4) The sensor unitis conforms to the CE mark.

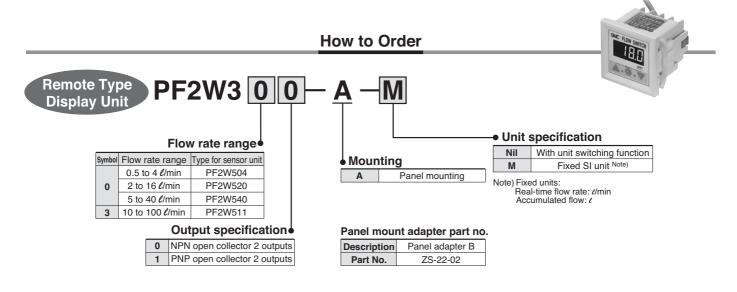

Mod	el		PF2W330/331					
Flow ra	ite measurement range Note 1)	0.35 to 4.5 ℓ/min	1.7 to 17.0 <i>l</i>	/min	3.5 to 45 ℓ/min	7 to 110 <i>e</i> /min		
Set f	ow rate range Note 1)	0.35 to 4.5 ℓ/min	1.7 to 17.0 <i>l</i>	//min	3.5 to 45 ℓ/min	7 to 110 <i>e</i> /min		
Mini	mum set unit Note 1)	0.05 <b>ℓ</b> /min	0.1 <i>e</i> /mir	า	0.5 <b>ℓ</b> /min	1 ℓ/min		
	ulated pulse flow rate exchange Pulse width: 50 ms) Note 1)	0.05 <b>ℓ</b> /pulse	0.1 <b>ℓ</b> /puls	se	0.5 <i>ℓ</i> /pulse	1 ℓ/pulse		
Note 2 Display			ℓ/min, gal(US)/min					
units	Accumulated flow			ℓ, gal	I(US)			
	mulated flow range Note 3)			0 to 99	9999 ℓ			
Line	arity Note 4)		±5% F.S.	or less		±3% F.S. or less		
Rep	eatability Note 4)		±3% F.S.	or less		±1% F.S. or less		
Temp	erature characteristics	±2% F.S. or le	ess (0 to 50°C, base	d on 25°C),	±1% F.S. or less (15 to 35°C, ba	sed on 25°C)		
Curre	nt consumption (No load)		50 mA o	r less		60 mA or less		
Wei	ght		45 g					
Output Note 5) specifications	Switch output	NPN open collector (PF2W3	300, PF2W330)	Maximum load current: 80 mA Internal voltage drop: 1 V or less (with load current of 80 mA) Maximum applied voltage: 30 V 2 outputs				
Output specifi	PNP open collector (PF2W301, F		801, PF2W331)	Maximum load current: 80 mA Internal voltage drop: 1.5 V or less (with load current of 80 mA) 2 outputs				
	Accumulated pulse output		NPN or PNP	pen collector (same as switch output)				
E	nclosure			IP	40			
	erating temperature range	Operating: 0 to 50°C, Stored: –25 to 85°C (with no freezing and condensation)						
S W	ithstand voltage		1000 VAC for 1	min. betwee	n external terminal and case			
Resistance	sulation resistance	50 MΩ or mor	e (500 VDC measur	red via Mego	hmmeter) between external tern	ninal and case		
N Se	bration resistance	10 to 500 Hz with a 1.5 m	m amplitude or 98 m	/s² accelerat	ion in each X, Y, Z direction for 2	hrs, whichever is smaller.		
_ In	npact resistance		490 m/s <sup>2</sup>	in X, Y, Z di	rections 3 times each			
N	oise resistance	1000 Vp-p, Pulse width 1 $\mu$ s, Rise time 1 ns						
Indi	cator light			3-digit, 7-se	egment LED			
Stat	us LED's		Illuminates wher	n output is Ol	N, OUT1: Green; OUT2: Red			
Pow	er supply voltage		12 to 24 VDC (ripple ±10% or less)					
Res	oonse time		1 sec. or less					
Hys	teresis	Hysteresis mod	de: Variable (can be	set from 0)	Window comparator mode: 3-di	igit fixed Note 6)		
N1 - 1 - 4 \	Malana and dan and Para	on each set flow rate range						



Note 1) Values vary depending on each set flow rate range.

Note 2) For digital flow switch with unit switching function. (Fixed SI unit [e/min or e] will be set for switch types without the unit switching function.)

Note 3) Accumulated flow rate is reset when the power supply turns OFF.

Note 4) The system accuracy when combined with PF2W5 .....

Note 5) Switch output and accumulated pulse output can be selected during initial setting.

Note 6) Window comparator mode — Since hysteresis (H) will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits or more. (In case of output OUT2, n\_1, 2 to be

n\_3, 4 and P\_1, 2 to be P\_3, 4.)

Note 7) The display unit conforms to the CE mark.

## For Water Digital Flow Switch Series PF2W

#### **How to Order**



## PF2W20 \_\_\_M \_\_

Output specification •

Accessory / Power supply output cable (2 m)

0 NPN4 outputs 1 PNP4 outputs

Unit specification

Nil With unit switching function

M Fixed SI unit Note)

Note) Fixed units: Real-time flow rate: ℓ/min Accumulated flow: ℓ Option 2 (Refer to page 35.)

Nil None
4C Sensor connector (4 pc.)

Option 1 (Refer to page 35.)

Nil	None
Α	Panel mounting
В	Front protective cover + Panel mounting

Connectable remote type sensor part is PF2W5□□-□-1\_(with analogue output 1 to 5 V).

Mod	del		PF2W200/201				
Applicable flow rate sensor         PF2W504/504T-□-1         PF2W520/520T-□-1         PF2W540/540T-□-1			PF2W511-□-1				
Flov	v rate meas	surement range Note 1)	0.35 to 4.50 ℓ/min	1.7 to 17.0	ℓ/min	3.5 to 45.0 ℓ/min	7 to 110 ℓ/min
Set	flow rate r	range Note 1)	0.35 to 4.50 ℓ/min	1.7 to 17.0	ℓ/min	3.5 to 45.0 ℓ/min	7 to 110 ℓ/min
Minimum set unit Note 1)		unit Note 1)	0.05 <b>ℓ</b> /min	0.1 <b>ℓ</b> /mi	n	0.5 <b>ℓ</b> /min	1 <i>U</i> /min
		ulse flow rate exchange of th: 50 ms) Note 1)	0.05 <b>ℓ</b> /pulse	0.1 <i>l</i> /pul	se	0.5 ℓ/pulse	1 <i>U</i> /pulse
	Note 1)	Real-time flow rate	ℓ/min, gal(US)/min				
Dis	play units	Accumulated flow	ℓ, gal(US)				
Acc	umulated	flow range Note 1)		0 to 9	99999 <b>ℓ</b> , 0 t	o 999999 gal(US)	
Pov	ver supply	voltage	24 VI	DC (ripple ±10% c	r less) (Wit	h power supply polarity prote	ction)
Cur	rent consu	umption	55 m	A or less (Note inc	cluding the	current consumption of the se	nsor)
Pov	ver supply	voltage for sensor		Sam	e as [Powe	r supply voltage]	
Pow	er supply c	urrent for sensor Note 2)	Max. 110 mA	(However, the total	al current fo	r the 4 inputs is 440 mA max	imum or less.)
Sen	sor input			1 to 5 VDC (	Input imped	dance: Approx. 800K $\Omega$ )	
	No. of	f inputs			4 in	puts	
	Input	protection		E	xcess volta	ge protection	
Note 3)	Switch output (Real-time switch output,		NPN open collector	(PF2W200)	Internal vo	load current: 80 mA Itage drop: 1 V or less (with k applied voltage: 30 V	oad current of 80 mA)
:	accumulated switch output)  Accumulated pulse output No. of outputs  Output protection		PNP open collector	PNP open collector (PF2W201)  Maximum load current: 80 mA Internal voltage drop: 1 V or less (with load current of 80 mA)			
Į,	Accur	nulated pulse output	NPN	l open collector or	PNP open	collector (same as switch ou	tput)
E	No. of	f outputs		<u>.</u>	<u> </u>	per 1 sensor input)	
	<sup>σ</sup> Outpι	ut protection	Short circuit protection  Hysteresis mode: Variable (can be set from 0), Window comparator mode: Fixed (3-digits)				
	teresis		Hysteresis mode	e: Variable (can b		*	: Fixed (3-digits)
	ponse tim		1s or less				
	earity Note 4		±5% F.S. or less				
	eatability		±3% F.S. or less				
Ten	nperature	characteristics	±2% F.S. or less (0 to 50°C, based on 25°C)				
	play meth	od	For measured value display: 4-digits, 7-segment LED (Orange) For channel display: 1-digit, 7-segment LED (Red)				
			Illuminates when output is ON OUT1: Red				
	Enclosure		IP65 for the front face only, and IP40 for the remaining parts.				
) Se	Operating temperature range		Operating: 0 to 50°C, Stored: -10 to 60°C (with no freezing and condensation)				
star	<u> </u>	humidity range	Operating or Stored: 35 to 85%RH (with no condensation)				
Resistance	Vibration resistance		10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs, whichever is smaller. (de-energised)				
<del>K</del>	Impact re		980 m/s <sup>2</sup> in X, Y, Z directions 3 times each (de-energised)				
Noise resistance 500 Vp-p, Pulse width 1 μs, Rise time 1 ns							
Cor	nection		Power supply / Output connection: 8P connector, Sensor connection: 4P connector (e-con)				
Mat	erial		Housing: PBT, Display: PET, Backside rubber: CR				
Wei	ight		6	60 g (Except for a	ny accessoi	ries that are shipped together	)

Note 1) Fixed SI unit [l/min or l] will be set for switch types without the unit switching function. ("-M" is suffixed at the end of part number.) Accumulated flow is reset when the power supply turns OFF.



Note 2) If Vcc side on sensor input connector part is short-circuited with 0V side, the flow monitor inside will be damaged.


Note 3) Switch output and accumulated pulse output can be selected during initial setting.

Note 4) The system accuracy when combined with applicable flow sensor.


Note 5) This product conforms to the CE mark.

#### Flow Characteristics (Pressure Loss)


#### PF2W704, 504

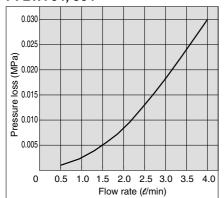


#### PF2W720, 520

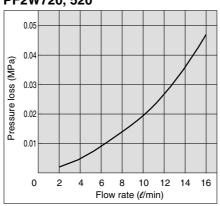


PF2W740, 540

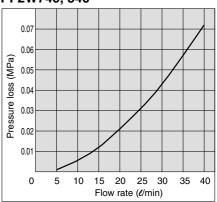

#### PF2W711, 511

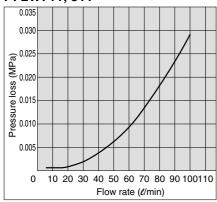


#### **Sensor Unit Construction**

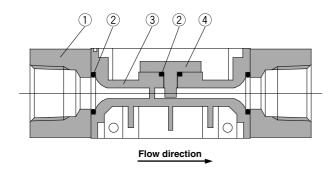


Parts list

No.	Description	Material
1	Attachment	Stainless steel
2	Seal	NBR
3	Body	PPS
4	Sensor	PPS

## Dimensions: Integrated Display Type for Water

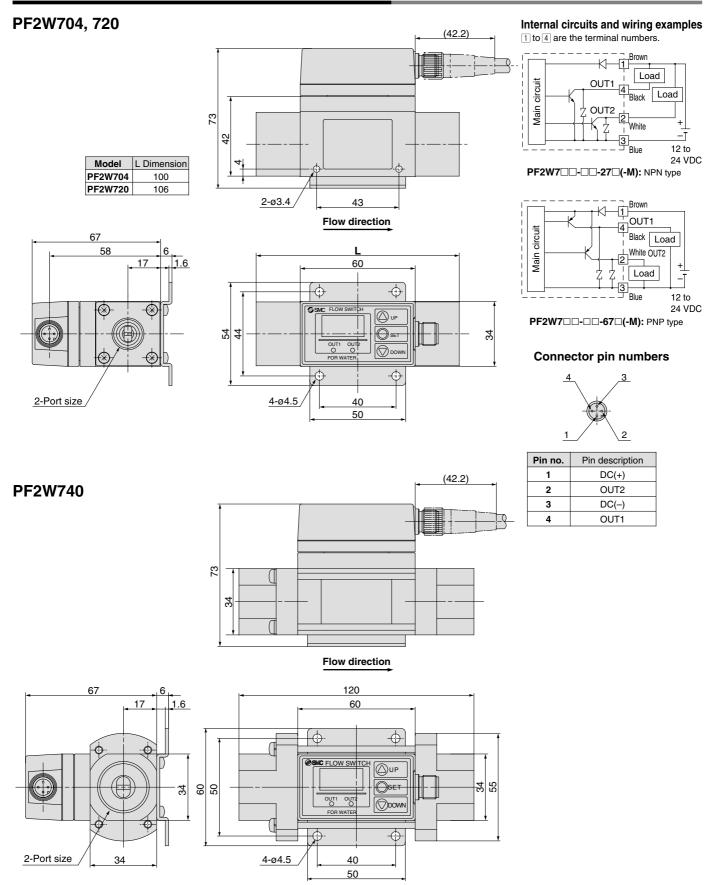



## Dimensions: Integrated Display Type for Water

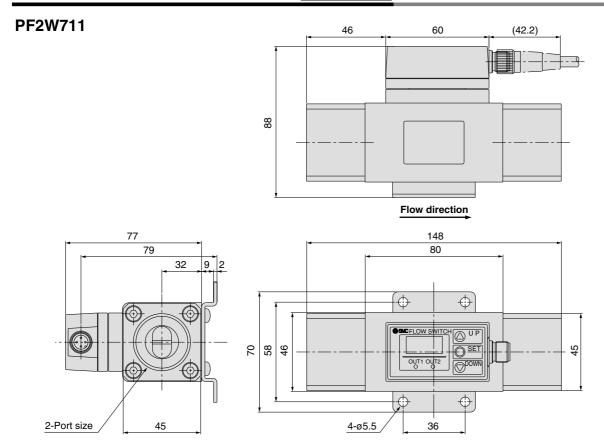


#### Dimensions: Remote Type Sensor Unit for Water

#### PF2W504, 520-□(N)-□

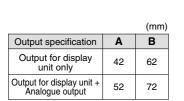


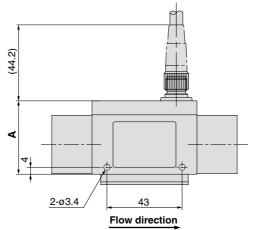


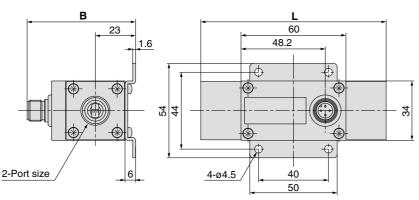

Model	L dimension
PF2W504	100
PF2W520	106

#### **PF2W540-**□(N)-□

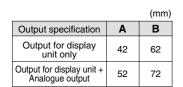


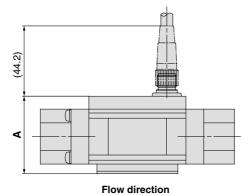


23 1.6 60 48.2	В .	120
24 OIT SIZE / 40 - 50 - 50	23 1.6	60 48.2 4-04.5 40

#### Internal circuits and wiring examples


1 to 8 are the terminal numbers.

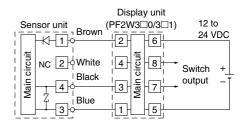

**PF2W5**□□-□□□

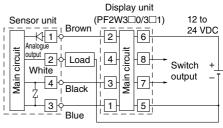


Load is an analogue input equipment such as a voltmeter. **PF2W5** — - — (With voltage output type)

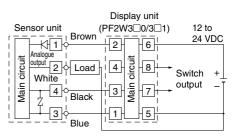

Load is an analogue input equipment such as a voltmeter. **PF2W5** —-———-2 (With voltage output type)

#### Wiring

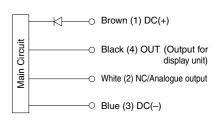

Use this sensor by connecting it to a SMC remote type display unit Series PF2W2□□/3□□.


#### Connector pin numbers





Pin no.	Pin description		
1	DC(+)		
2	NC/Analogue output		
3	DC(-)		
4	OUT		


## Dimensions: Remote Type Sensor Unit for Water

#### **PF2W511-**□(N)-□

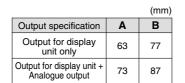


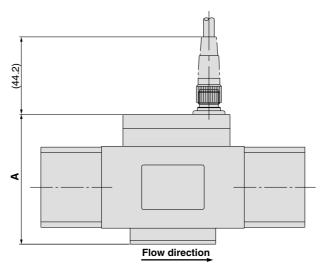

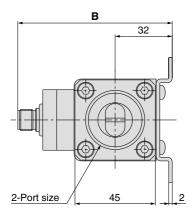

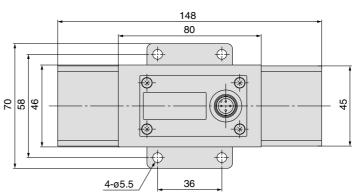


## Analogue output 1 to 5 VDC

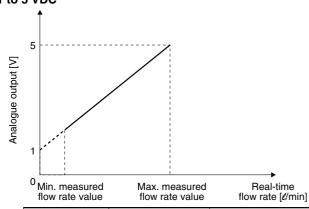

Part no.	Min. measured flow rate value [ℓ/min]	Max. measured flow rate value [\ell/min]
PF2W504-□-1	0.5	4
PF2W520-□-1	2	16
PF2W540-□-1	5	40
PF2W511-□-1	10	100

#### 4 to 20 mADC

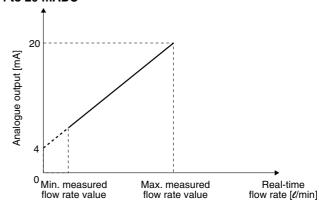



Part no.	Min. measured flow rate value [ $\ell$ /min]	Max. measured flow rate value [l/min]
PF2W504-□-2	0.5	4
PF2W520-□-2	2	16
PF2W540-□-2	5	40
PF2W511-□-2	10	100

## Dimensions: Remote Type Display Unit for Water

#### PF2W3□□-A Panel mounting type


## Panel fitting dimension

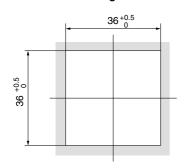


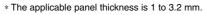


4.3

35.8

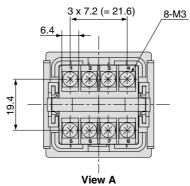


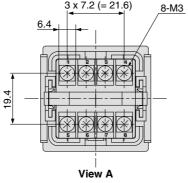


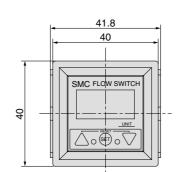

#### Internal circuits and wiring examples


1 to 8 are the terminal numbers.

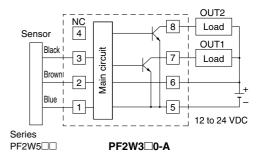

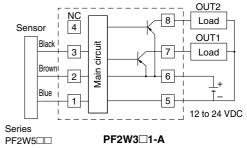

\* Do not connect the white wire of the sensor to 3.


#### **Terminal block numbers**

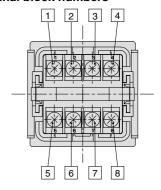


## Dimensions: Remote Type Display Unit for Water (4-channel Flow Monitor)


#### PF2W200, 201

#### Front protective cover + Panel mounting

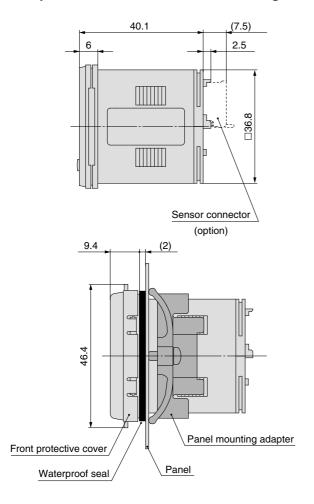




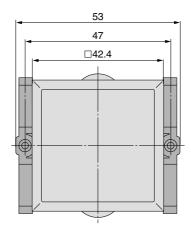

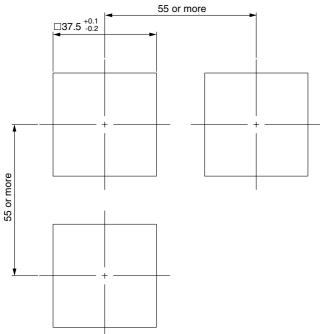


Panel fitting dimensions
Applicable panel thickness: 0.5 to 8 mm

#### Dimensions: Remote Type Display Unit for Water (4-channel Flow Monitor)

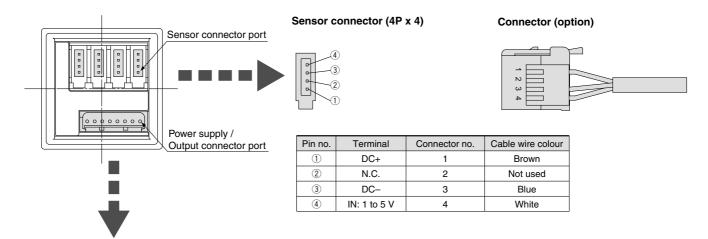

#### Power supply / Output connector (8P)

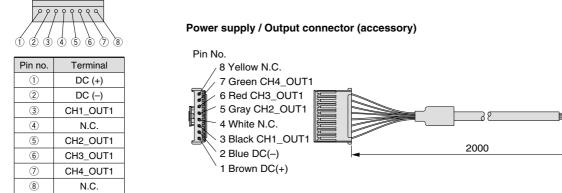

## Internal circuits and wiring examples PF2W200


#### PF2W201 DC (+) DC (+) (Brown) (Brown) NC 2 4 4 4 NC 2 24 VDC CH1\_OUT1 CH1\_OUT1 $\pm$ 24 VDC (Black) (Black) 4 Load Sensor Sensor circuit circuit CH2\_OUT1 CH2\_OUT1 NC2 NC2 (Gray) (Gray) 1 oad Main Main Sensor Sensor CH3\_OUT1 CH3\_OUT1 (Red) NC 2 NC<sub>2</sub> (Red) CH4\_OUT1 CH4\_OUT1 (Green) (Green) Load NC<sub>2</sub> DC (-) DC (-)

## For Water

## Digital Flow Switch/High Temperature Fluid Type

# Series PF2W

products compatible with overseas standards.

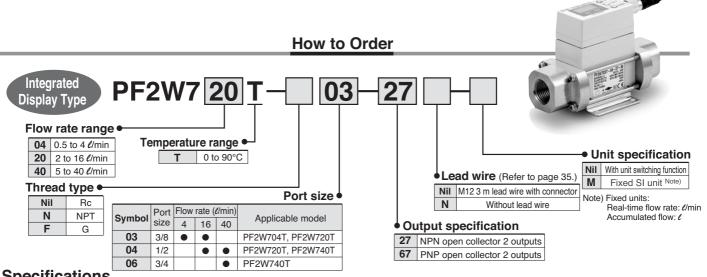

Model			PF2W704T		PF2W720T	PF2W740T
	sured fluid				ture of water (50%) and ethylene	<u> </u>
Flow rate measurement range			0.35 to 4.5 ℓ/n		1.7 to 17.0 ℓ/min	3.5 to 45 ℓ/min
	flow rate range		0.35 to 4.5 ℓ/n	nin	1.7 to 17.0 ℓ/min	3.5 to 45 ℓ/min
	ed flow range		0.5 to 4 ℓ/mi	n	2 to 16 <i>l</i> /min	5 to 40 ℓ/min
Mini	mum set unit		0.05 <i>ℓ</i> /min		0.1 <i>e</i> /min	0.5 ℓ/min
Accumulated pulse flow rate exchange value (Pulse width: 50 ms)			0.05 <i>ℓ</i> /pulse	)	0.1 <i>l</i> /pulse	0.5 ℓ/pulse
Ope	rating fluid temp	perature			0 to 90°C (with no cavitation)	
Line	arity				±5% F.S. or less	
	eatability				±3% F.S. or less	
Tem	perature charact	eristics Note 1)		±5%	F.S. or less (0 to 90°C, based on	25°C)
	ent consumption	n (No load)			70 mA or less	
Weig	ght Note 2)				710 g	
Port	size (Rc, NPT, 0	G)	3/8		3/8, 1/2	1/2, 3/4
Dete	ection type				Karman vortex	
Indic	cator light		3-digit, 7-segment LED			
Display units Note 3) Real-time flow rate		ℓ/min, gal(US)/min				
Disp	nay units	Accumulated flow			ℓ, gal(US)	
Operating pressure range					0 to 1 MPa	
Withstand pressure Accumulated flow range Note 4)		1.5 MPa				
		ange Note 4)	0 to 999999 ℓ			
Output Note 5)	Switch output		NPN open collector Maximum load current: 80 mA; Internal voltage drop: 1 V or less (with load current of 80 mA Maximum applied voltage: 30 V; 2 outputs			
utput	•			Maximum load 2 outputs	current: 80 mA; Internal voltage drop:	1.5 V or less (with load current of 80 mA);
	Accumulated p	ulse output		NPN or	PNP open collector (same as swi	ch output)
	us LED's			Illuminates	when output is ON OUT1: Greer	; OUT2: Red
	ponse time		1 sec. or less			
Hysteresis		Hysteresis mode: Variable (can be set from 0); Window comparator mode Note 6): 3-digit fixed				
Pow	er supply voltag	ge	12 to 24 VDC (ripple ±10% or less)			
	Enclosure		IP65			
ø		perature range	Operating: 0 to 50°C, Stored: -25 to 85°C (with no freezing and condensation)			
Resistance	Withstand volt		1000 VAC for 1 min. between external terminal and case			
ste	Insulation resi		50 MΩ and more (at 500 VDC measured via Megohmmeter) between external terminal and case			
esi	Vibration resis		10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration in each X, Y, Z direction for 2 hrs, whichever is smaller.			
Œ	Impact resista		490 m/s <sup>2</sup> in X, Y, Z directions 3 times each			
Noise resistance 1000 Vp-p, Pulse width 1 $\mu$ s, Rise time 1 ns					) Vp-p, Pulse width 1 $\mu$ s, Rise tim	e 1 ns

Note 1) ±5% F.S. or less (0 to 50°C, based on 25°C), ±3% F.S. or less (15 to 35°C, based on 25°C)



Note 2) Without lead wire.

Note 3) For digital flow switch with unit switching function. (Fixed SI unit [l/min or l] will be set for switch type without the unit switching function.)

Note 4) Accumulated flow rate is reset when the power supply turns OFF.


Note 5) Switch output and accumulated pulse output can be selected during initial setting.

Note 6) Window comparator mode — Since hysteresis will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits or more.

<sup>(</sup>In case of output OUT2, n\_1, 2 to be n\_3, 4 and P\_1, 2 to be P\_3, 4.)

Note 7) The flow switch conforms to the CE mark.


## For Water Digital Flow Switch Series PF2W

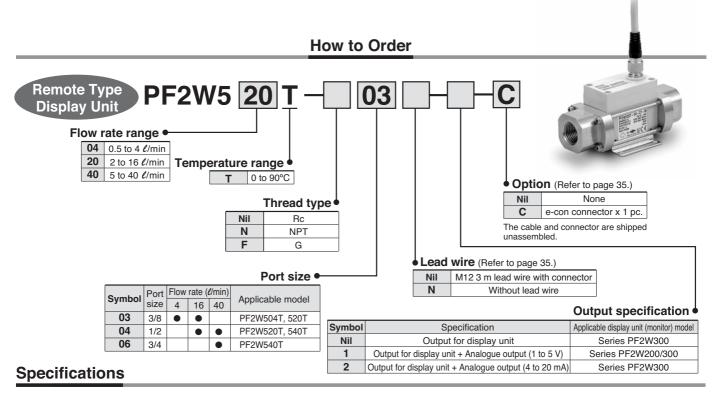

Mod	lel	PF2W504T	PF2W520T	PF2W540T		
Mea	sured fluid	Water, Mixture of water (50%) and ethylene glycol (50%)				
Dete	ection type	Karman vortex				
Rate	ed flow range	0.5 to 4 ℓ/min	2 to 16 ℓ/min	5 to 40 ℓ/min		
Oper	rating pressure range	0 to 1 MPa				
With	nstand pressure		1.5 MPa			
Oper	ating fluid temperature		0 to 90°C (with no cavitation)			
Line	earity Note 1)		±5% F.S. or less			
Rep	eatability Note 1)		±2% F.S. or less			
Temp	perature characteristics	±2% F.S. or less (15 to 35	$^{\circ}$ C, based on 25 $^{\circ}$ C), ±3% F.S. or less (0	to 50°C, based on 25°C)		
ote 2)	Output for display unit	Pulse output, N channel, open drain, output for display unit PF2W3□□. (Specifications: Maximum load current of 10 mA; Maximum applied voltage of 30 V)				
Output Note 2) specifications	Analogue output	Voltage output 1 to 5 V Linearity: ±5% F.S. or less; allowable load resistance: 100 kΩ or more.				
Out	Analogue output	Linearity: ±5% F.S. or less; allow	Current output 4 to 20 mA able load resistance: 300 $\Omega$ or less with 12	VDC, 600 $\Omega$ or less with 24 VDC		
Pow	er supply voltage		12 to 24 VDC (ripple ±10% or less)			
Current consumption (No load)		20 mA or less				
Eı	nclosure		IP65			
Op	erating temperature range	Operating: 0 to 50°C, Stored: –25 to 85°C (with no freezing and condensation)				
S W	ithstand voltage	1000 V	1000 VAC for 1 min. between external terminal and case			
ists In	sulation resistance	$50~\text{M}\Omega~\text{or more}$ (at $500~\text{VDC}$ measured via Megohmmeter) between external terminal and case				
Resistance	bration resistance	10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, whichever is smaller.				
	npact resistance	490 m/s <sup>2</sup> in X, Y, Z directions 3 times each				
N	oise resistance	1000 Vp-p, Pulse width 1 μs, Rise time 1ns				
Wei	ght Note 3)		660 g			
Port	t size (Rc, NPT, G)	3/8	3/8, 1/2	1/2, 3/4		

Note 1) The system accuracy when combined with PF2W2 $\square$  $\square$ /3 $\square$  $\square$ .

Note 4) The sensor unit conforms to the CE mark.

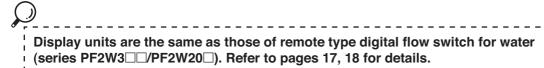


Note 2) Output system can be selected during initial setting.


Note 3) Without lead wire. (Add 20g for the types of analogue output whether voltage or current output selected.)

#### Flow Characteristics (Pressure Loss)


#### PF2W704T, 504T

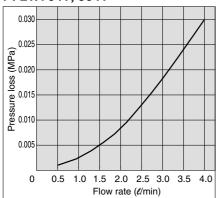


PF2W720T, 520T

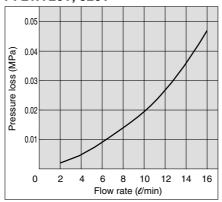

PF2W740T, 540T

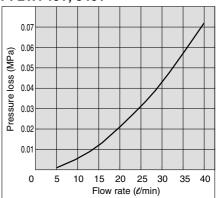


#### **Sensor Unit Construction**

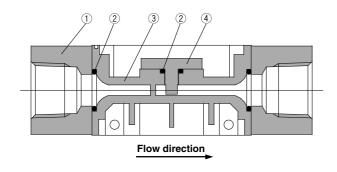

Parts list

No.	Description	Material
1	Attachment	Stainless steel
2	Seal	FKM
3	Body	PPS
4	Sensor	PPS
	•	

#### **Dimensions: Integrated Display Type for Water**

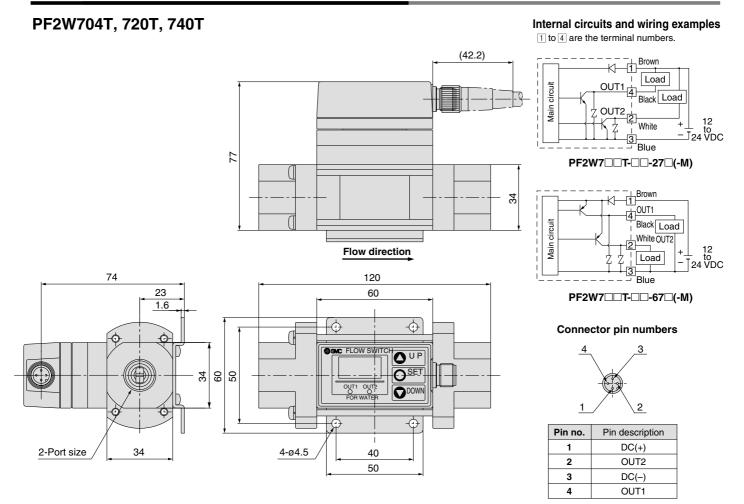


Output specification Output for display unit only

Output for display unit -Analogue output

## Dimensions: Remote Type Sensor Unit for Water


#### PF2W504T, 520T, 540T-□(N)

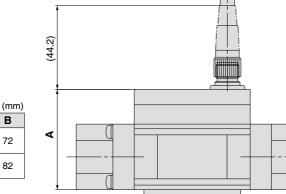


#### Display unit Sensor unit Brown 2 6 NC 2 White 4 8 Switch +\_ output |3| je 7 PF2W5□□T-□□□

Internal circuits and wiring examples


1 to 8 are the terminal numbers.

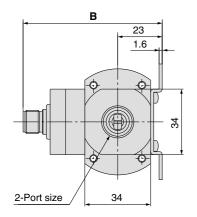

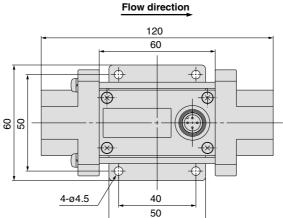


Display unit  Sensor unit  (PF2W3□0/3□1)  Analogue output  Analogue output  Switch  Black  Analogue output  Black  T  Output	DC +
Blue 1 5	


Load is an analogue input equipment such as a voltmeter. **PF2W5**□□**T-**□□□**-1** (With voltage output type)

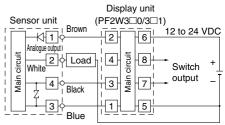

#### **Analogue output** 1 to 5 VDC

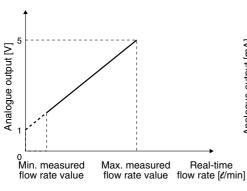


#### 4 to 20 mADC

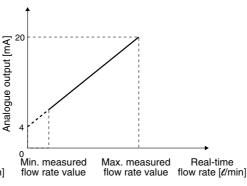

Load is an analogue input equipment such as a voltmeter. **PF2W5**□□**T-**□□□**-2** (With voltage output type)

#### Wiring

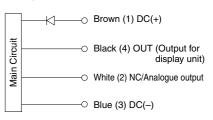

<sup>\*</sup> Use this sensor by connecting it to a SMC remote type display unit Series PF2W3 $\square$  $\square$ .

Part no.	Min. measured flow rate value [t/min]	Max. measured flow rate value [t/min]
PF2W504T-□-1	0.5	4
PF2W520T-□-1	2	16
PF2W540T-□-1	5	40

Part no.	Min. measured flow rate value [ℓ/min]	Max. measured flow rate value [t/min]
PF2W504T-□-2	0.5	4
PF2W520T-□-2	2	16
PF2W540T-□-2	5	40

#### Connector pin numbers



Pin no.	Pin description
1	DC(+)
2	NC/Analogue output
3	DC(-)
4	OUT






#### **Description**

#### Integrated Display Type PF2A710, 750, 711, 721, 751 PF2W704(T), 720(T), 740(T), 11



#### Remote Type/Display Unit PF2A300, 301, 310, 311 PF2W300, 301, 330, 331

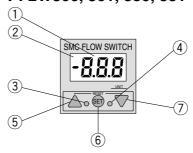


#### RESET button (▲ + ▼ button)

If the UP and DOWN buttons are pressed simultaneously, the RESET function will activate. In case of an emergency, please clear the display. The display of the accumulated flow will be reset to zero.

1	LED display/Red	Displays the measured flow rate, each setting condition, and error code.
2	Indicator (PF2A7□□, PF2A3□□ for air only)	Illuminates when the normal condition (nor) is selected.
3	Output (OUT1) display/Green	Displays the output condition of OUT1. Illuminates when turned ON.
4	Output (OUT2) display/Red	Displays the output condition of OUT2. Illuminates when turned ON.
(5)	UP button (▲ button)	Use to change the mode or to increase the set value.
6	SET button (● button)	Use this button to set the valve or the set mode.
(7)	DOWN button (▼ button)	Use to change the mode or decrease the set value.

## Integrated Display Type PF2A703H, 706H, 712H

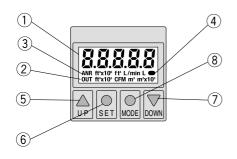


#### RESET button (▲ + ▼ button)

If the UP and DOWN buttons are pressed simultaneously, the RESET function will activate. In case of an emergency, please clear the display. The display of the accumulated flow will be reset to zero.

1	LCD display/Orange	Displays the measured flow rate, each setting condition, and error code.
2	Output (OUT1) display/Orange	Displays the output condition of OUT1. Illuminates when turned ON.
3	Unit display/Orange	Displays the selected unit. Type without unit switching function is fixed SI units ( $\ell$ /min, or $\ell$ , m <sup>3</sup> , m <sup>3</sup> x 10 <sup>3</sup> ).
4	Flow rate confirmation display/Orange	The blinking intervals change depending on the flow rate value.
(5)	UP button (▲ button)	Use to change the mode or to increase the set value.
6	SET button (● button)	Use to select the function.
7	DOWN button (▼ button)	Use to change the mode or decrease the set value.
8	MODE button (● button)	Use for changing the function.

## 4-channel Flow Monitor (Remote type/Display unit) PF2A200, 201 PF2W200, 201

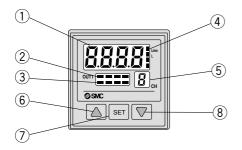

1	LCD display/Orange	Displays the measured flow rate, each setting condition, and error code.
2	Switch output display/Red	Displays the output condition of OUT1 (CH1 to 4). Illuminates when turned ON.
3	Unit display of flow rate for air/ Red (PF2A200, 201 for air only)	CH1 to 4 will illuminate when the normal condition (nor) is selected.
4	Unit display/Orange	Illuminates the selected unit. Use after putting the unit label other than $\ell\!\!/\!\!$ min, $\ell\!\!.$
(5)	Channel display/Red	Displays the selected channel.
6	UP button (▲ button)	Use to change the mode or to increase the set value.
7	SET button	Use this button to set the value or the set mode.
8	DOWN button (▼ button)	Use to change the mode or decrease the set value.



#### **Functions**

Refer to the "Instruction Manual" for information on setting and operating.

#### Flow rate measurement selection

Real-time flow rate and accumulated flow rate can be selected. A flow rate of up to 999999 can be accumulated.

The accumulated flow rate is reset when the power supply turns OFF. (PF2A7□H maintains the values.)

#### Unit switching

#### For Air

Display	Real-time flow rate	Accumulated flow
U_1	ℓ/min	e
U_2	CFM x 10-2 x CFM x 10-1	ft <sup>3</sup> x 10 <sup>-1</sup>

CFM = ft3/min

#### **High Flow Rate Type (For Air)**

Display	Real-time flow rate	Accumulated flow
U_ 1	ℓ/min	$\ell$ , m <sup>3</sup> , m <sup>3</sup> x 10 <sup>3</sup>
U_2	CFM	ft <sup>3</sup> , ft <sup>3</sup> x 10 <sup>3</sup> , ft <sup>3</sup> x 10 <sup>6</sup>

#### For Water / High Temperature Fluid Type (For Water)

Display	Real-time flow rate	Accumulated flow
U_I	ℓ/min	e
U_2	GPM	gal (US)

GPM = gal (US)/min

Note) Fixed SI unit (t/min, or t, m³, m³ x 10³) will be set for the type without the unit switching function.

#### Flow rate conversion

Normal condition: 0°C, 101.3 kPa, dry air

Standard condition: 20°C, 101.3 kPa, 65%RH (ANR)

Switchable between these conditions.

#### Flow rate measuring unit confirmation

This function allows for the confirmation of the accumulated flow rate when real-time flow rate is selected and to confirm the real-time flow rate when accumulated flow rate is selected.

#### Key lock

This function prevents accidental operations such as changing the set value.

#### Accumulation clearance

This function clears the accumulated value.


#### Initialization of setting (only for Series PF2A7□□H)

This function restores the setting to the original state, just as it had been shipped from the factory.


#### Output types

Real-time switch output, accumulated switch output, or accumulated pulse output can be selected as an output type.

#### Real-time switch output

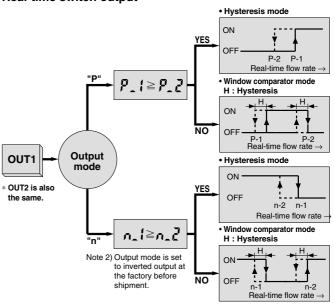


#### **Accumulated switch output**

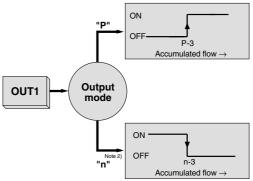

Note 2) Output mode is set to inverted output at the factory before shipment.

#### Accumulated pulse output

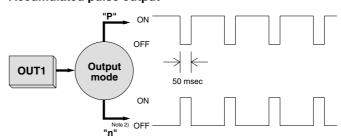

Note1) For a digital flow switch with an unit switching function. (Fixed SI unit [t/min, or t, m<sup>3</sup> or m<sup>3</sup> x 10<sup>3</sup>] will be set for switch types without an unit switching function.)

Refer to the specifications of the display unit for the flow rate value per pulse.

#### **Functions**

#### Copy function (PF2□200, 201 only)

Information to be copied is:

- 1) Flow rate range
- 2 Display mode
- 3 Display unit (Only available when the unit specification is nil.)
- 4 Output method
- **5** Output mode
- **(6)** Flow rate display unit (available with PF2A20□ only)
- 7 Flow rate value

# Peak hold, Bottom hold display function (PF2 200, 201 only)

The maximum or minimum value can be held in the case where the real-time flow rate display mode is selected during the initial setting.

#### **Error correction**

LED display	Contents	Solution
Note 1)	A current of more than 80 mA is flowing to OUT1.	Check the load and the wiring for OUT1.
Erz Note 1)	A current of more than 80 mA is flowing to OUT2.	Check the load and the wiring for OUT2.
Note 1)	The set data has changed for some reason.	Perform the RESET operation, and reset all the data again.
Note 1)	The flow rate is over the flow rate measurement range.	Use an adjustment valve, etc. to reduce the flow rate until it is within the flow rate range.

Note 1) Applicable to display integrated type and remote type except PF2A7□□H series.

Note 2) Applicable to PF2A7□□H series only.

#### For PF2A/W200, 201

LED display	Contents	Solution	
Er 1	Over current is flowing to the load of a switch output.	Shut off the power supply. After eliminating the output factor that caused the excess current, turn the power supply back on.	
Er 🛭	Er 🛚 Internal data error.		
Er7	Internal data error.	Contact SMC.	
ErIO	Internal data error.		
Er5	Internal data error.	Shut off the power supply	
E-5	Internal data error.	and then reset the switch.	
	The flow rate is over the flow rate measurement range.	Use an adjustment valve, etc. to reduce the flow rate until it is within the flow rate range.	

#### Channel select function (PF2□200, 201 only)

Every pushing the  $\triangle$  button, channel selection " $1\rightarrow 2\rightarrow 3\rightarrow 4\rightarrow 1...$ " is available. The flow rate measurement of each selected channel is shown in the display unit.

#### Channel scan function (PF2□200, 201 only)

Changes displaying the channel shown every about 2 seconds and its detected flow rate.



# Series PF2A/PF2W

#### **Option**


When only optional parts are required, order with the part numbers listed below.


#### M12 lead wire with connector

Part no.	Qty.	Lead wire length
ZS-29-A	1	3 m



Part no.	Qty.
ZS-28-CA-4	1

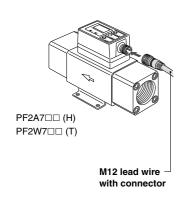

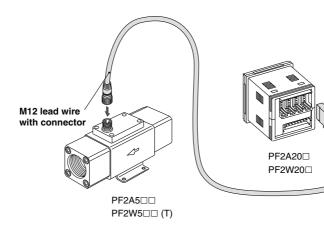

In addition to the lead wire assembly shown above, those listed below (female contact) can be connected.

However, they cannot be connected with an e-con connector because the diameter of the core wire and its coverage diameter are different. For details, contact each manufacturer.

Connector size	Pin no.	Manufacturer	Applicable series
		Correns Corp.	VA-4D
		OMRON Corp.	XS2
M12	4	Yamatake Co.,Ltd.	PA5-4I
		Hirose Electric Co., Ltd.	HR24
		DKK Ltd.	CM01-8DP4S

In addition to the connectors shown above, those listed below (e-con) can be connected.


Manufacturer	Model
Sumitomo 3M Limited	37104-3122-000FL
Tyco Electronics AMP K.K.	2-1473562-4
OMRON Corp.	XN2A-1430


e-con connector

#### **Panel mounting**

Pin no.	Description	Note
ZS-22-E	Panel mounting adapter A, B	With mounting bracket

	Panel PF2A3□□ PF2W3□□
Panel mounting adapter A	Panel mounting adapter B
	Mounting bracket (accessory)

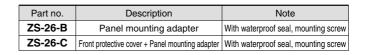

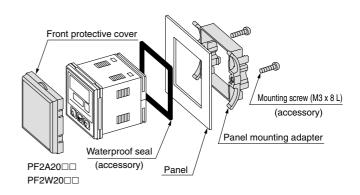


# Related Product Multi Counter

# Series CEU5




#### **How to Order**

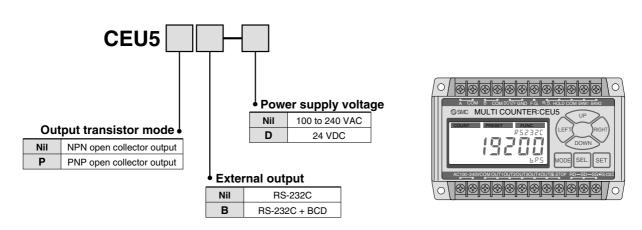

#### **Connection Method**

#### Connection with the Digital Flow Switch (Series PF2)

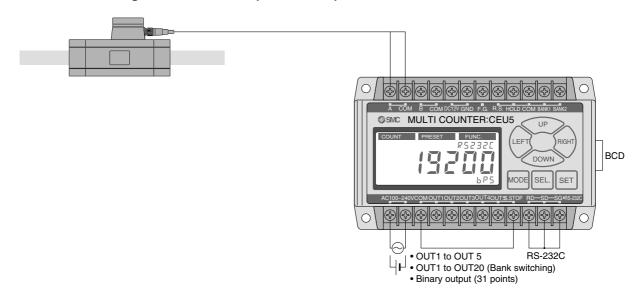

- •Possible to measure accumulated pulse output of a Digital Flow Switch by an unit of 100 ℓ (litter) and 10 ft³ (cube foot) using the pre-scaling function\* of the multi counter (When inputting to the multi counter, Up or Down is selected as input method.)
- Possible to take advantage of all CEU5 functions using preset mode and function mode.
- \* The set value is calculated by selecting manual mode. By multiplication by 4, then, per pulse value is set.

#### <Connection with other manufacturers' encoders>

- Possible to switch multi counter side input method to 2-phase or Up/Down.
- Possible to connect to an encoder if the output method is Open Collector.
- When selecting UP or DOWN, phase A to COM input is counted toward addition direction, phase B to COM input is counted toward subtraction direction.

#### **⚠** Caution

When connecting the CEU5 with an encoder from another manufacturer, please thoroughly confirm the specification beforehand. Please note that the CEU5 may not count normally depending on the output method, output frequency and connecting cable length, etc. of the encoders.

Regarding connection with scale cylinder, refer to "Stroke reading cylinders & Counters CE series" in the Best Pneumatics Vol. 10.





# Series PF2A/PF2W Safety Instructions

The following safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by all safety practices, including labels of "Caution", "Warning" or "Danger". To ensure safety, please observe ISO 4414 Note 1), JIS B 8370 Note 2) and other safety practices.

**Caution**: Operator error could result in injury or equipment damage.

**Warning**: Operator error could result in serious injury or loss of life.

⚠ Danger : In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power – General Rules for Pneumatic Equipment

Note 2) JIS B 8370: Pneumatic system axiom

## **Marning**

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility with the specific pneumatic system must be based on specifications, post analysis and/or tests to meet a specific requirements. The expected performance and safety assurance will be the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalogue information and taking into consideration the possibility of equipment failure when configuring a system.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if handled incorrectly. Assembly, handling or maintenance of the pneumatic system should be performed by trained and experienced operators.

- Do not service machinery/equipment or attempt to remove components until safety is confirmed.
  - 1. Inspection and maintenance of machinery/equipment should only be performed after confirming the control positions are safely locked-out.
  - 2. When equipment is to be removed, confirm the safety processes mentioned above. Cut the supply pressure for the equipment and exhaust all residual compressed air in the system.
  - 3. Before the machinery/equipment is restarted, take measures to prevent quick extension of a cylinder piston rod, etc. (Bleed air into the system gradually, to create back pressure.)
- 4. Contact SMC if the product is to be used in any of the following conditions:
  - 1. Conditions and environments beyond the given specifications, or if product is used outdoors.
  - 2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
  - 3. An application which has the possibility of having a negative effects on people, property, or animals, and therefore requires special safety analysis.





Be sure to read before handling. Refer to page 37 for safety instructions.

#### **Design and Selection**

# **△**Warning

1. Operate the switch only within the specified voltage.

Use of the switch outside of the specified voltage range can cause not only a malfunction and damage to the switch, but it can also cause electrical shock and fire.

2. Do not exceed the maximum allowable load specification.

A load exceeding the maximum load specification can cause damage to the switch.

3. Do not use a load that generates a surge voltage.

Although the circuit at the output side of the switch is surgeprotected, damage may still occur if a voltage surge is applied repeatedly. When a load which generates a surge, such as from a relay or solenoid valve, is directly driven, use a switch with a built-in surge absorbing element.

4. Since the type of fluid varies depending on the product, be sure to verify the specifications.

The switches do not have an explosion proof rating. To prevent a possible fire hazard, do not use with inflammable gases or fluids.

5. Monitor the internal voltage drop of the switch.

When operating below the specified voltage, it is possible that the load may be ineffective even though the pressure switch function is normal. Therefore, the formula below should be satisfied after confirming the minimum operating voltage of the load.

Supply _	Internal voltage	>	Minimum operating
voltage	drop of switch		voltage of load

#### [For air]

6. Use the switch within the specified flow rate measurement and operating pressure.

Operating beyond the specified flow rate and operating pressure can damage the switch.

#### [For water]

7. Use the switch within the specified flow rate measurement and operating pressure.

Operating beyond the specified flow rate and operating pressure can damage the switch. Especially avoid the application of pressure through a water hammer, which is above the specification.

- <Examples of pressure reduction measures>
- a) Use a device such as a water hammer relief valve to slow the valve's closing speed.
- Absorb impact pressure by using an accumulator or elastic piping material such as a rubber hose.
- c) Keep the piping length as short as possible.
- 8. Design the system, so that the fluid always fills the detection passage.

Especially for vertical mounting, introduce the fluid from the bottom to the top.

Operate within the flow rate measurement range.

If operated outside of the flow rate measurement range, the Karman vortex will not be generated and normal measurement will not be possible.

#### [Series PF2A7□□H]

10. Sudden increase in flow rate may destroy the flow sensor. Ensure to open/close the flow control valve not to exceed the maximum flow rate measurement values.

#### **Design and Selection**

# **△**Caution

1. Data from the flow switch is stored even after the power supply is turned off.

The input data is stored in EEPROM so that the data will not be lost after the flow switch is turned off. (The data can be rewritten for up to one million times, and stored for up to 20 years.)

2. Accumulated flow rate is reset when it is turned OFF.

Only the PF2A7 H series (for air) will maintain, its accumulated flow rate value, even though the power supply is cut.

#### Mounting

# **△**Warning

1. Mount the switch using the proper tightening torque.

When the switch is tightened beyond the specified tightening torque, it may be damaged. On the other hand, tightening below the specified tightening torque may cause the installation screws to loosen during operation.

Thread	Tightening torque N·m
Rc 1/8	7 to 9
Rc 1/4	12 to 14
Rc 3/8	22 to 24
Rc 1/2	28 to 30

Thread	Tightening torque N·m
Rc 3/4	28 to 30
Rc 1	36 to 38
Rc 1, 1/2	48 to 50
Rc 2	48 to 50

2. Apply a wrench only to the metal part of the piping when installing the flow switch onto the system piping.

Do not apply the wrench to any part other than the piping attachment or the switch may be damaged.

3. Monitor the flow direction of the fluid.

Install and connect piping so that fluid flows in the direction of the arrow indicated on the body.

- 4. Remove dirt and dust from inside of the piping by means of air blow, before attaching to the switch.
- 5. Do not drop or bump.

Do not drop, bump, or apply excessive impacts (490 m/s²) while handling. Although the external body of the switch (switch case) may not be damaged, the switch inside could be damaged and cause a malfunction.

6. Hold the body of the switch when handling.

The tensile strength of the cord is 49N and applying a greater pulling force than this can cause a malfunction. When handling, hold the body of the switch.

7. Do not use until you can verify that equipment can operate properly.

Following mounting, repair, or retrofit, verify correct mounting by conducting suitable function and leakage tests after piping and power connections have been made.

8. Avoid the mounting orientation with the bottom of the body facing up.

The switch can be mounted in any way such as vertically or horizontally, however, avoid the mounting orientation with the bracket on the bottom of the body facing upward.





Be sure to read before handling. Refer to page 37 for safety instructions.

#### Mounting

# **△**Warning

[For air]

9. Never mount a switch in a place that will be used as a step stool during piping.

Damage may occur if an excessive load is applied to the switch.

10. Be sure to allow straight pipe length that is minimum 8 times the port size upstream and downstream of the switch piping.

When abruptly reducing the size of piping or when there is a restriction such as a valve on the upstream side, the pressure distribution in the piping changes and makes accurate measurement impossible. Therefore, flow restriction measures such as these should be implemented on the downstream side of the switch.

#### [For water]

11. Never mount a switch in a place that will be used as a step stool during piping.

Damage may occur if an excessive load is applied to the switch. Especially when the switch supports the piping, do not apply a load of 15N·m or more to the metal part of the switch.

12. Be sure to allow straight pipe length that is minimum 8 times the port size upstream and downstream of the switch piping.

When abruptly reducing the size of piping or when there is a restriction such as a valve on the upstream side, the pressure distribution in the piping changes and makes accurate measurement impossible. Therefore, flow restriction measures such as these should be implemented on the downstream side of the switch.

When used with the downstream side open, be careful of the cavitation that is prone to occur.

#### Wiring

# **Marning**

- Verify the colour and the terminal number when wiring.
   Incorrect wiring can cause the switch to be damaged and malfunction. Verify the colour and the terminal number in the instruction manual when wiring.
- Avoid repeatedly bending or stretching of the lead wire. Repeatedly applying bending stress or stretching force to the lead wire will cause it to break.
- 3. Confirm proper insulation of wiring.

Make sure that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a switch.

4. Do not wire in conjunction with power lines or high voltage lines.

Wire separately from power lines and high voltage lines, and avoiding wiring in the same conduit with these lines. Control circuits including switches may malfunction due to noise from these lines.

5. Do not allow a load to short circuit.

Although a switch indicates excess current error if a load is short circuited, all incorrect wiring connections such as power supply polarity cannot be protected. Take precautions to avoid incorrect wiring.

#### Usage

# **A** Warning

1. When using a switch for high temperature fluid, the switch itself also becomes hot due to the high temperature fluid. Avoid touching the switch directly as this may cause a burn.

#### **Operating Environment**

## **△**Warning

1. Never use in the presence of explosive gases.

The switches do not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.

- 2. Mount the switch in a locations where there is no vibration greater than 98 m/s<sup>2</sup> or impact greater than 490 m/s<sup>2</sup>.
- 3. Do not use in an area where surges are generated.

When there are units that generate a large amount of surge in the area around a pressure switch, (e.g., solenoid type lifters, high frequency induction furnaces, motors, etc.) this may cause deterioration or damage to the switch's internal circuitry. Avoid sources of surge generation and crossed lines.

4. Switches are not equipped with surge protection against lightning.

The flow switches are CE compliant, however they are not equipped with surge protection against lightning. Lightning surge protection measures should be applied directly to the system components as necessary.

5. Avoid using the switch in an environment where the likelihood of splashing or spraying of liquids exists.

The switches are dustproof and splashproof, however avoid using in an environment where the likelihood of heavy splashing or spraying of liquids exists. Since the display unit of the remote type switches featured here is not dust or splashproof, the use in an environment where liquid splashing or spraying exists must be avoided.

#### [For air]

6. Use the switch within the specified fluid and ambient temperature range.

The fluid and ambient temperature range is  $0^{\circ}$  to  $50^{\circ}$ C. Take measures to prevent the fluid from freezing when it is below  $5^{\circ}$ C, since this may damage the switch and lead to a malfunction. The installation of an air dryer is recommended for eliminating condensation and moisture. Never use the switch in an environment where there are drastic temperature changes even when these temperatures are within the specification.

#### [For water]

7. Use the switch within the specified fluid and ambient temperature range.

The fluid and ambient temperatures range for the switch is 0 to  $50^{\circ}$ C (and 0 to  $90^{\circ}$ C for high temperature fluid). Take measures to prevent the fluid from freezing when it is below  $5^{\circ}$ C, since this may cause damage to the switch and lead to a malfunction. Never use the switch in an environment where there are drastic temperature changes even when these temperatures fall within the specified temperature range.





Be sure to read before handling. Refer to page 37 for safety instructions.

#### Maintenance

## **△**Warning

1. Perform periodical inspections to ensure proper operation of the switch.

Unexpected malfunctions may cause a possible danger.

2. Take precautions when using the switch for an interlock circuit.

When a pressure switch is used for the interlock circuit, devise a multiple interlock system to prevent trouble or malfunction, and verify the operation of the switch and interlock function on a regular basis.

3. Do not disassemble or perform any conversion work on flow switches.

#### **Measured Fluid**

# **△**Warning

1. Check regulators and flow adjustment valves before introducing the fluid.

If pressure or flow rate beyond the specified range are applied to the switch, the sensor unit may be damaged.

#### [For air]

2. The fluids that the switch can measure accurately are nitrogen and dry air.

Please note that accuracy cannot be guaranteed when other fluids are used.

3. Never use inflammable fluids.

The flow velocity sensor heats up to approximately 150°C.

4. Install a filter or mist separator on the upstream side when there is a possibility of condensate and foreign matter being mixed in with the fluid.

The rectifying device built into the switch will be clogged up and accurate measurement will no longer be possible.

#### [For water]

5. The fluid that the switch can measure accurately is water. Also, combination of equal parts water/ethylene glycol (50/50%) can be used if its temperature is high.

Please note that accuracy cannot be guaranteed when other

fluids are used.

#### **Measured Fluid**

## **Warning**

- 6. Never use inflammable fluids.
- 7. Install a filter on the inlet side when there is a possibility of condensation and foreign matter being mixed with the fluid.

If foreign matter adheres to the switch's vortex generator or vortex detector, accurate measurement will no longer be possible.

#### **Others**

## **△**Warning

- 1. After the power is turned on, the switch's output remains off while a message is displayed. Therefore, start the measurement after a value is displayed.
- Perform settings after stopping control systems.
   When the switch's initial setting and flow rate setting are performed, output maintains the condition prior to the settings.
- 3. Do not apply excessive rotational force to the display unit.

The integrated type display unit can rotate 360°. Rotation is controlled by the stopper; however, the stopper may be damaged if the display unit is turned with excessive force.

#### [For air]

4. Be certain to turn on the power supply when the flow rate is at zero.


Allow an interval of 10 minutes after turning on the power, as there are some changes in the display.

5. Flow rate unit

The switch measures at mass flow rates without being influenced by temperature and pressure. The switches use  $\ell$ /min as the flow rate indicator unit, in which the volumetric flow is substituted for mass flow at 0°C and 101.3 kPa (nor). The volumetric flow rate at 20°C, 101.3 kPa, and 65%RH (ANR) can be displayed with the high flow rate type switches for air.

## Detection principle of digital flow switch for air

A heated thermistor is installed in the passage, and fluid absorbs heat from the thermistor as it is introduced to the passage. The thermistor's resistance value increases as it loses heat. Since the resistance value increase ratio has a uniform relationship to the fluid velocity, the fluid velocity can be detected by measuring the resistance value. To further compensate the fluid and ambient temperature, the temperature sensor is also built into the switch to allow stable measurement within the operating temperature range.

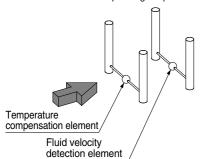

This flow switch uses  $\ell$ /min as the flow rate indicator unit. The mass flow is converted and displayed under the conditions of 0°C and 101.3 kPa.

The conversion conditions can be switched to 20°C and 101.3 kPa with high flow type switches.


#### Detection principle of digital flow switch for water

When an elongated object (vortex generator) is placed in the flow, reciprocal vortexes are generated on the downstream side. These vortexes are stable under certain conditions, and their frequency is proportional to the flow velocity, resulting the following formula.

f = k x v

f: Frequency of vortex v: Flow velocity k: Proportional constant (determined by the vortex generator's dimensions and shape).

Therefore, the flow rate can be measured by detecting this frequency.

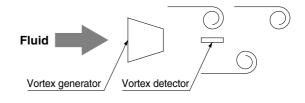

Contact SMC regarding the specifications for clean environment.



Be sure to read before handling. Refer to page 37 for safety instructions.

#### **Set Flow Rate Range and Rated Flow Range**




#### Set the flow rate within the rated flow range.

The set flow rate range is the range of flow rate that can be set on the controller.


The rated flow range is the range that satisfies the sensor's specifications (accuracy, linearity etc.).

It is possible to set a value outside of the rated flow range, however, the specification is not be guaranteed.

#### <For Air/PF2A>

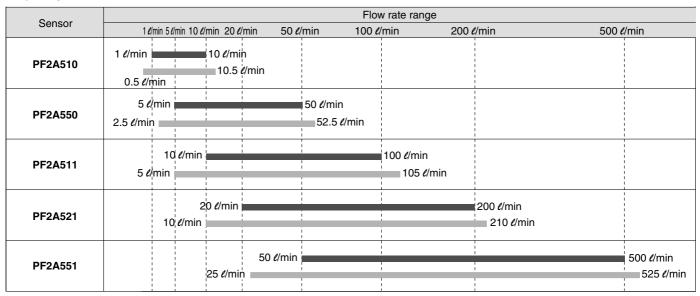

#### <For Water/PF2W>

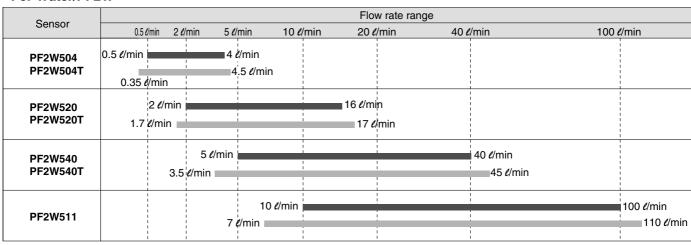

Rated flow range of sensor
Set flow rate range of sensor



Be sure to read before handling. Refer to page 37 for safety instructions.

#### ■ 4-channel Flow Monitor

Handling

## 

- Do not drop, bump, or apply excessive impacts (980 m/s²) while handling. Although the body of the flow monitor case may not be damaged, the inside of the flow monitor could be damaged and lead to a malfunction.
- 2. The tensile strength of the power supply/output connection cable is 50N and the sensor lead wire with a connector is 25N. Applying a greater pulling force than the applicable specified tensile strength to either of these components can lead to a malfunction. When handling, hold the body of the controller.

#### Connection

# **⚠** Warning

- Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output. Connections should be done while the power is turned off.
- Do not attempt to insert or pull the flow rate sensor or its connector when the power is on. Switch output may malfunction.
- Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 4. If a commercial switching power supply is used, make sure that the F.G. terminal is grounded.

#### **Operating Environment**

## **⚠** Warning

- Our 4-channel flow monitor is CE marked, however, it is not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- 2. Our 4-channel flow monitor does not have an explosion proof rating. Never use pressure sensors in the presence of inflammable or explosive gases.
- 3. Enclosure "IP65" applies only to the front face of the panel when mounting. Do not use in an environment where oil splashing or spraying are anticipated.


#### Mounting

### **∧** Caution

The front face of the panel mount conforms to IP65, however there is a possibility of liquid infiltration if the panel mount adapter is not installed securely and properly. Securely fix the adapter with screws as shown below.

Front protective cover + Panel mounting

Tighten screws 1/4 to 1/2 turn after the heads are flush with the panel.

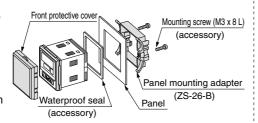

#### Wiring


#### 


- 1. Connecting sensor cable and connector (ZS-28-CA-□)
- Cut the sensor cable as shown below.
- Insert each lead wire into the corresponding connector number by following the chart provided below.

20	) mm or more

Connector no.	Cable wire colour
1	Brown (DC+)
2	Not used
3	Blue (DC-)
4	White (IN: 1 to 5 V)


- Make sure that the numbers on the connector and the wire colours match. After verifying that the wires are fully inserted, temporarily hold A down by hand.
- Using pliers, press the center of A straight down.
- Note that that connector cannot be taken apart for reuse once it is crimped. Use a new sensor connector if wiring or cable insertion is done incorrectly.

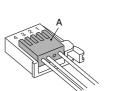


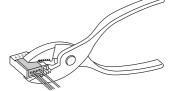


# 2. Inserting/Detaching of sensor connector, power supply/output connector

- Insert each connector straightforwardly until it clicks and locks onto the body.
- To remove the connector, pull it straight out while pushing the lever with your thumb.

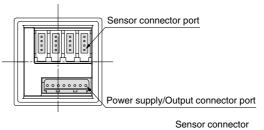

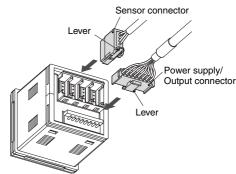



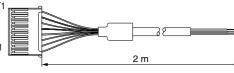





# **Digital Flow Switch for De-ionised Water and Chemicals**

Series PF2D



A single controller can monitor the flow rate of 4 different sensors.



4-channel Flow Monitor Series PF2D200

would otherwise be caused by

vibration are prevented.

# **New PFA**

**Tube** 

# Super PFA


Three types of flow range

0.4 to 4 ℓ/min (PF2D504) 1.8 to 20 ℓ/min (PF2D520) 4.0 to 40 ℓ/min (PF2D540)

Dust generation of 3 particles/cc or less (average number)


Karman vortex eliminates moving parts and allows low dust generation.

#### Particle characteristics (reference)

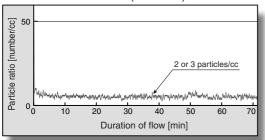

The data was obtained by performing an actual 10 minutes' supersonic cleaning using an average 16 M $\Omega$ -cm of de-ionised water at class 10000 clean room (1  $\ell$ /min flow rate).


The diameter of the measured particles ranges from 0.1 to 0.5 μm. The flow rate used during measuring is 100 cc/min.

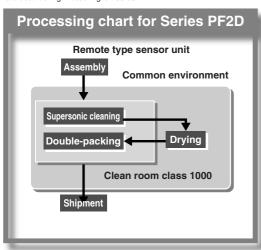

#### **Swept flow characteristics** Tapered side seal minimizes dead volume to reduce accumulation of liquid pool.

Sensor

#### Swept flow characteristics (reference)

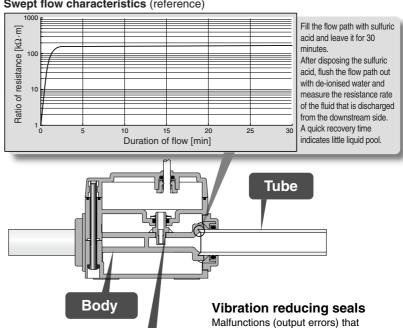

# For De-ionised Water and Chemicals

# **Digital Flow Switch**

# Series PF2D



Remote Type PF2D5 20 **Sensor Unit** 

Flow rate range 0.4 to 4 ℓ/min 1.8 to 20 ℓ/min 4 to 40 ℓ/min

	1 011 01201 (111011)		
11	3/8	PF2D504	
13	1/2	PF2D520	
19	3/4	PF2D540	

Option (Refer to page 55.)

- 10 11.0	Third (Holdi to page 661)	
Nil	None	
С	e-con connector x 1 pc.	

The cable and connector are shipped Output specification

Symbol	Specification	Applicable display unit (monitor) model
Nil	Output for display unit	Series PF2D300
1	Output for display unit + analogue output (1 to 5 V)	Series PF2D200/300
2	Output for display unit + analogue output (4 to 20 mA)	Series PF2D300

#### **Specifications for Sensor Unit**

Model			PF2D504	PF2D520	PF2D540	
Measured fluid			Liquid not to corrode nor erode de-ionised water and/or PFA. Viscosity: 3mPa·s (3cP) or less			
Detection style			Karman vortex			
Rate	d flow rang	ge	0.4 to 4 <i>U</i> /min	1.8 to 20 <i>l</i> /min Note 1)	4 to 40 ℓ/min	
Oper	ating press	sure range Note 2)	0 to 1 MPa 0 to 0.6 MPa		0 to 0.6 MPa	
Proo	f pressure	Note 3)	1.5 MPa 0.9 MPa		0.9 MPa	
Ope	rating fluid	temperature		0 to 90°C		
Line	arity Note 4)			±2.5% F.S. or less (at 25°C water)		
Repe	eatability			±1% F.S. or less (at 25°C water)		
Tem	perature cl	naracteristics	±ŧ	$5\%$ F.S. or less (0 to $50^{\circ}$ C, based on $25^{\circ}$	C)	
		Pulse output	Pulse output, N	channel, open drain, output for display u	nit PF2D 300/301	
		i disc output	(Specifications: Maximum load current of 10 mA; Maximum applied voltage of 30 V)			
Outp	ut		Voltage output Note 5) 1 to 5 V			
spec	ifications	Analogue	Linearity: ±2% F.S. or less, allowable load resistance: 100 kΩ or more			
		output	Current output Note 6) 4 to 20 mA			
			Linearity: ±2% F.S.or less, allowa	ble load resistance: 300 $\Omega$ or less with 1	th 12 VDC, 600 Ω or less with 24 VDC	
Pow	er supply v	oltage	12 to 24 VDC (ripple ±10% or less)			
Curr	ent consur	nption	20 mA or less (without load)			
	Enclosure		IP65			
Ta .	Operating t	temperature range	Operating: 0 to 50°C, Stored: -25 to 85°C in stock (with no condensation and freezing)			
Environmental resistance	Voltage re	esistance	1000 VAC for 1 min. between external terminals and case			
onn ista	Insulation	n resistance	50 MΩ or more (at 500 VDC measured via Megohmmeter) between external terminals and case			
vir	Vibration	resistance	4.9 m/s <sup>2</sup>			
<u> </u>	Impact resistance		490 m/s <sup>2</sup> to X,Y,Z directions 3 times for each			
	Noise resistance		1000 Vp-p, Pulse width: 1 $\mu$ s, Rise time: 1 ns		ns	
Weig	jht		140 g (witho	140 g (without lead wire) 225 g (without lead wire)		
Port	size		3/8 inch tube	3/8 inch tube 1/2 inch tube 3/4 inch tube		
Wett	ed materia	I	Body: New PFA, Sensor: New PFA, Tube: Super PFA			

Note 1) 1.6 to 20 ℓ/min (0.1 MPa) with viscosity of 1 mPa·s (1 cP) or less

Note 2) The operating pressure range drops according to the fluid temperature. See attached graph.


Note 3) 1.5 times of the maximum operating pressure and varying with fluid temperature.

Note 4) The system accuracy when combined with PF2D30 ...


Note 5) When the voltage output is selected.

Note 6) When the current output is selected

Note 7) The sensor unit conforms to the CE mark.

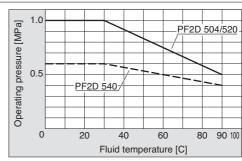

# For De-ionised Water and Chemicals Digital Flow Switch Series PF2D

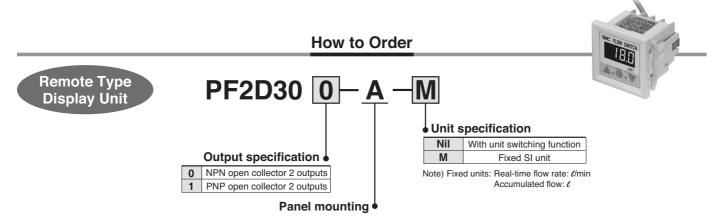

#### **Specifications for Display Unit**

Model			PF2D300/301	
Flow r	rate measurement range Note 1)	0.25 to 4.5 ℓ/min	1.3 to 21.0 ℓ/min	2.5 to 45 ℓ/min
Set flow rate range Note 1)		0.25 to 4.5 ℓ/min	1.3 to 21.0 ℓ/min	2.5 to 45 ℓ/min
Minimum set unit Note 1)		0.05 <b>ℓ</b> /min	0.1 ℓ/min	0.5 <b>ℓ</b> /min
	nulated pulse flow rate exchange Pulse width: 50ms) Note 1)	0.05 ℓ/pulse	0.1 <i>t</i> /pulse	0.5 <b>ℓ</b> /pulse
	Real-time flow rate		ℓ/min, gal (US)/min	
Displ units			ℓ, gal (US)	
Accu	imulated flow range Note)	0 to 999999 ℓ		
Linea	arity Note 3)		±2.5% F.S. or less	
Repe	eatability		±0.5% F.S. or less	
Temp	perature characteristics		$\pm 1\%$ F.S. or less (15 to 35°C, based on 25 $\pm 2\%$ F.S. or less (0 to 50°C, based on 25°	<i>'</i>
Curre	ent consumption (No load)		60 mA or less	
Weig	ht	45 g		
Note 4) Output specifications	Switch output	NPN open collector (PF2D300)	Maximum load current: 80 mA Internal voltage drop: 1 V or less (with Maximum applied voltage: 30 V 2 outputs	n load current of 80 mA)
Output spe		PNP open collector (PF2D301)	Maximum load current: 80 mA Internal voltage drop: 1.5 V or less (w 2 outputs	ith load current of 80 mA)
	Accumulated pulse output	NPN open collector or PNP open collector (same as switch output)		switch output)
	Enclosure	IP40		
tal	Operating temperature range	Operating: 0 to 50°C, Stored: –25 to 85°C (with no condensation and freezing)		sation and freezing)
Environmental resistance	Voltage resistance	1000 VAC for 1 min. between external terminal and case		
onr ista	Insulation resistance	50 $M\Omega$ or more (at 500 VDC measured via Megohmmeter) between external terminal and case		
nvir res	Vibration resistance	10 to 500 Hz with a 1.5 mm amplitu	de or 98 m/s <sup>2</sup> acceleration in each X, Y, Z d	
ш	Impact resistance		490 m/s <sup>2</sup> to X, Y, Z directions 3 times for ea	ach
	Noise resistance		1000 Vp-p, Pulse width: 1 $\mu$ s, Rise time: 1	ns
Indic	ator light	3-digits 7-segment LED		
Statu	ıs LED's	ON: when light is on, OUT1: Green; OUT2: Red		
Powe	er supply voltage	12 to 24 VDC (ripple ±10% or less)		
Resp	onse time		1sec. or less	
Hyst	eresis	Hysteresis mode: adjustable (can be set from 0) Window comparator mode Note 5): fixed (3 digits)		r mode Note 5): fixed (3 digits)
Note 1) The value varies depending on set				

Note 1) The value varies depending on set flow range

Note 2) For digital flow switch with unit switching function. (Fixed SI unit [t/min or t] will be set for switch types without the unit switching function.)


Note 3) The system accuracy when combined with PF2D5□□.

Note 4) Switch output and accumulated pulse output can be selected using the control button operation during initial setting.

	1	2	3	4
Output 1	Switch output	Switch output	Accumulated pulse output	Accumulated pulse output
Output 2	Switch output	Accumulated pulse output	Switch output	Accumulated pulse output

Note 5) Window comparator mode: Since hysteresis (H) will reach 3 digits, keep P\_1 and P\_2 or n\_1 and n\_2 apart by 7 digits more. (In case of output OUT2, n\_1, 2 to be n\_3, 4 and P\_1, 2 to be P\_3, 4.) Note 6) The display unit conforms to the CE mark.

Note) Accumulated flow rate is reset when the power supply turns OFF.

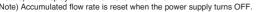



#### **How to Order**





PF2D20 Output specification

Accessory / Power supply output cable (2 m)

0 NPN4 outputs PNP4 outputs

Unit specification •

With unit switching function Fixed SI unit Note) М

Note) Fixed units: Real-time flow rate:  $\ell$ /min Accumulated flow:  $\ell$  Option 2 (Refer to page 55.) None

Sensor connector (4 pc.)

**♦Option 1** (Refer to page 55.) None

Α Panel mounting В Front protective cover + Panel mounting

#### **Specifications**

Connectable remote type sensor part is PF2D5□□-□-1\_(with analogue output 1 to 5 V).

Model			PF2D200/201			
Applicable flow rate sensor		ow rate sensor	PF2D504-□-1	PF2D520-□-1	PF2D540-□-1	
Flo	Flow rate measurement range Note 1)		0.25 to 4.50 <b>ℓ/</b> min	1.3 to 21.0 <b>ℓ</b> /min	2.5 to 45.0 ℓ/min	
Se	t flow rate	range Note 1)	0.25 to 4.50 ℓ/min	1.3 to 21.0 <b>ℓ</b> /min	2.5 to 45.0 <b>ℓ</b> /min	
Mi	nimum set	unit Note 1)	0.05 <b>ℓ</b> /min	0.1 <i>U</i> /min	0.5 <b>ℓ</b> /min	
Ac	cumulated p ue (Pulse wi	ulse flow rate exchange idth: 50ms) Note 1)	0.05 <b>ℓ</b> /pulse	0.1 <b>ℓ</b> /pulse	0.5 <b>ℓ</b> /pulse	
	Note 1)			ℓ/min, gal(US)/min		
Dis	splay units	Accumulated flow	ℓ, gal(US)			
Ac	cumulated	I flow range Note 1)		0 to 999999 ℓ, 0 to 999999 gal(US)		
Po	wer supply	y voltage	24 VDC (ripple	±10% or less) (With power supply pol-	arity protection)	
Cu	rrent cons	umption	55 mA or less	(Not including the current consumption	of the sensor)	
Po	wer suppl	y voltage for sensor		Same as [Power supply voltage]		
Po	wer supply	current for sensor Note 2)	Max. 110 mA (However	r, the total current for the 4 inputs is 440	) mA maximum or less.)	
Se	nsor input		1 to	5 VDC (Input impedance: Approx. 800)	< Ω)	
	No. o	f inputs		4 inputs		
	Input	protection		Excess voltage protection		
Note 3)	(Real	th output -time switch output,	NPN open collector (PF2D20	Maximum load current: 80 mA 0) Internal voltage drop: 1 V or le Maximum applied voltage: 30	ess (with load current of 80 mA)	
Output	Accumulated swite output)		PNP open collector (PF2D20	Maximum load current: 80 mA Internal voltage drop: 1 V or le	ess (with load current of 80 mA)	
支	<u></u> Accu	mulated pulse output	NPN open collector or PNP open collector (same as switch output)			
₹	No. o	f outputs	4 outputs (1 output per 1 sensor input)			
	σ Outp	ut protection	Short circuit protection			
	steresis		Hysteresis mode: Variable	e (can be set from 0), Window compara	ator mode: Fixed (3-digits)	
	sponse tin		1s or less			
Lir	nearity Note	4)		±5% F.S. or less		
Re	peatability	Note 4)		±3% F.S. or less		
Те	mperature	characteristics	±2°	% F.S. or less (0 to 50°C, based on 25	°C)	
Dis	splay meth	nod	For measured value display: 4-digits, 7-segment LED (Orange) For channel display: 1-digit, 7-segment LED (Red)			
Sta	atus LED's	3	IIIu	uminates when output is ON OUT1: F	led	
	Enclosure	•	IP	65 for the front face only, the rest is IP4	10.	
ခြင့	Operating	temperature range	Operating: 0 to 50°C, Stored: -10 to 60°C (with no freezing and condensation)			
tan [	Operating	humidity range	Operating or Stored: 35 to 85%RH (with no condensation)			
Resistance	Vibration	resistance	10 to 500 Hz with a 1.5 mm amplitude or 98 m/s <sup>2</sup> acceleration, in each X, Y, Z direction for 2 hrs., whichever is smaller. (de-energy)			
8	Impact re	sistance	980 m/s <sup>2</sup> in X, Y, Z directions 3 times each (de-energised)		energised)	
	Noise res	istance	500 Vp-p, Pulse width 1 μs, Rise time 1 ns		ns	
Co	nnection		Power supply / Output connection: 8P connector, Sensor connection: 4P connector (e-con)		tion: 4P connector (e-con)	
Ma	aterial		Housing: PBT, Display: PET, Backside rubber: CR			
We	eight		60 g (Except for any accessories that are shipped together.)			
Note 1) Fixed SI unit [//min or /] will be set for		nit [//min or // will be set for	cwitch types without the unit switching functi	on (" M" is suffixed at the and of part number	r \ Assumulated flaw is reset when the	

Note 1) Fixed SI unit [t/min or t] will be set for switch types without the unit switching function. ("-M" is suffixed at the end of part number.) Accumulated flow is reset when the power supply turns OFF.

Note 2) If Vcc side on sensor input connector part is short-circuited with the 0V side, the flow monitor inside will be damaged.


Note 3) Switch output and accumulated pulse output can be selected during initial setting.


Note 4) The system accuracy when combined with an applicable flow sensor.


Note 5) This product conforms to the CE mark.



## Flow Characteristics (Pressure Characteristics)

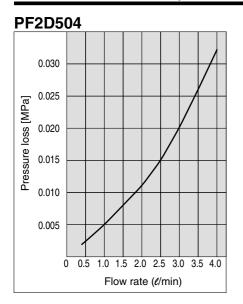


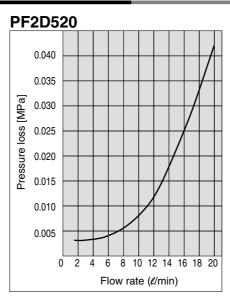

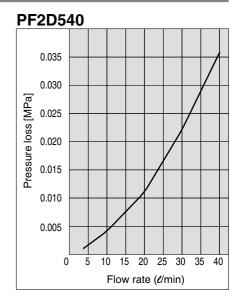

#### Construction

#### PF2D504/520

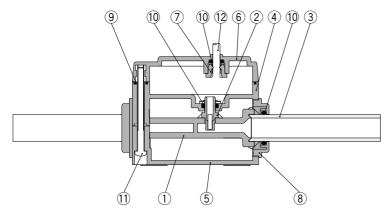

1	Body	New PFA
2	Sensor	New PFA
3	Tube	Super PFA
4	Housing A	PPS
5	Housing B	PPS
6	Housing C	PPS
7	Bushing	POM
8	Сар	PPS
9	Gasket	FKM
10	O-ring	FKM

Material

Stainless steel 304

PVC

Parts

Thread


Lead wire

Parts list Number

11

12

#### PF2D540

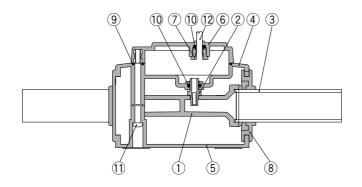



# Series PF2D

PF2D504-11/520-13


#### **Dimensions: Remote Type Sensor Unit**

# 176 70 60 40 15 4-04.5


Model	Α
PF2D504	ø9.52
PF2D520	ø12.7

#### Internal circuits and wiring examples

 $\boxed{1}$  to  $\boxed{8}$  are the terminal numbers.

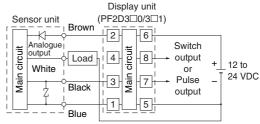


Load is an analogue input equipment such as a voltmeter.  $\textbf{PF2D5} \square \neg \neg -\textbf{1} \text{ (With voltage output type)}$ 

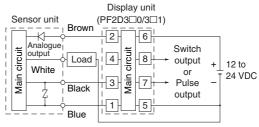


Load is an analogue input equipment such as a voltmeter. **PF2D5**□□-□-2 (With voltage output type)

#### Wiring

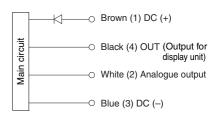


 Use this sensor by connecting it to a SMC remote type display unit Series PF2D2□□/3□□.

# PF2D540-19

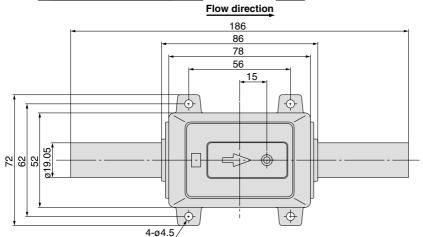

**Analogue output** 

49

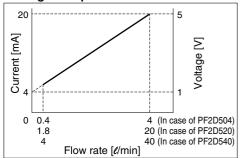

3 x 7.2 (=21.6)

View A

6.4

19.4


8-M3

#### **Dimensions: Remote Type Display Unit**

# PF2D30 <sup>9</sup>-A Panel mounting type


# Panel fitting dimensions 36 +0.5 98


\* The applicable panel thickness is 1 to 3.2 mm.

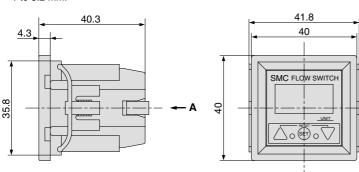

#### Internal circuits and wiring examples


1 to 8 are the terminal numbers.

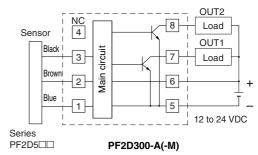

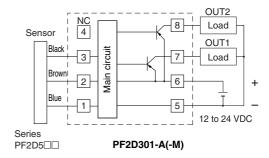

\* Do not connect the white wire of the sensor to 3 of the display unit.


#### **Terminal block numbers**

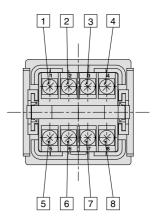

# Series PF2D


# Dimensions: Remote Type Display Unit for De-ionised Water and Chemicals (4-channel Controller)


#### PF2D200/201

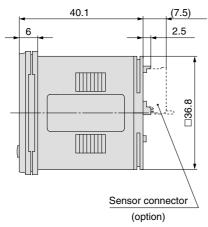




#### Front protective cover + Panel mounting

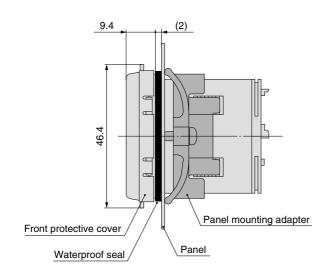

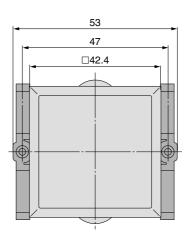


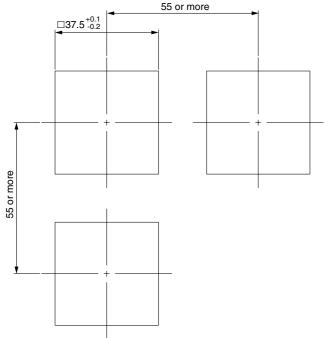


Panel fitting dimensions
Applicable panel thickness: 0.5 to 8 mm

# For De-ionised Water and Chemicals Digital Flow Switch Series PF2D


## Dimensions: Remote Type Display Unit for De-ionised Water and Chemicals (4-channel Controller)

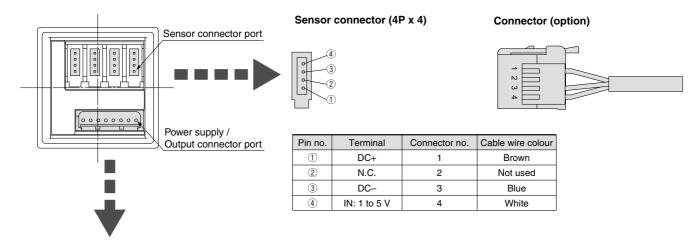

#### Power supply / Output connector (8P)

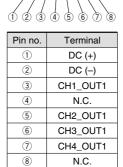


#### Power supply / Output connector (accessory)

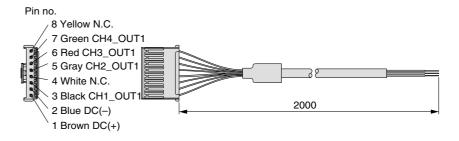

# Internal circuits and wiring examples PF2D200

#### DC (+) (Brown) Sensor NC 2 CH1\_OUT1 $\pm$ 24 VDC Load (Black) 4 Sensor circuit CH2\_OUT1 NC2 (Gray) -1 Main 4 Sensor CH3\_OUT1 (Red) NC 2 CH4\_OUT1 (Green) NC 2 DC (-)

#### PF2D201

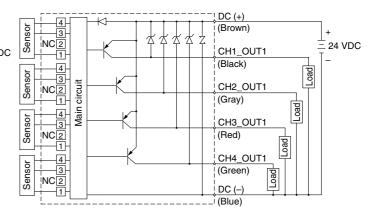



# Series PF2D

#### **Description**

# Remote Type/Display Unit PF2D300, 301




#### RESET button (▲ + ▼ button)

If the UP and DOWN buttons are pressed simultaneously, the RESET function will activate. In case of an emergency, please clear the display. The display of the accumulated flow will be reset to zero.

1	LED display/Red	Displays the measured flow rate, each setting condition, and error code.
2	Output (OUT1) display/Green	Displays the output condition of OUT1. Illuminates when turned ON.
3	Output (OUT2) display/Red	Displays the output condition of OUT2. Illuminates when turned ON.
4	UP button (▲ button)	Use to change the mode or to increase the set value.
(5)	SET button (● button)	Use this button to set the value or the set mode.
6	DOWN button (▼ button)	Use to change the mode or decrease the set value.

# 4-channel Flow Monitor (Remote type/Display unit) PF2D200, 201

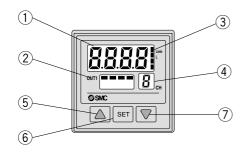

1	LED display/Orange	Displays the measured flow rate, each setting condition, and error code.
2	Switch output display/Red	Displays the output condition of OUT1 (CH1 to 4). Lights up when turned ON.
3	Unit display/Orange	Illuminates the selected unit. Use after putting the unit label other than $\ell$ min, $\ell$ .
4	Channel display/Red	Displays the selected channel.
(5)	UP button (▲ button)	Use to change the mode or to increase the set value.
6	SET button	Use this button to set the value or the set mode.
(7)	DOWN button (▼ button)	Use to change the mode or decrease the set value.

#### Functions/PF2D

Refer to the "Instruction Manual" for information on setting and operating.

#### Flow rate measurement selection

Real-time flow rate and accumulated flow rate can be selected. A flow rate of up to 999999 can be accumulated. The accumulated flow rate is reset when the power supply turns OFF.

#### Unit switching

Display	Real-time flow rate   Accumulated	
U_ (	ℓ/min	l
U_2	GPM	gal (US)

GPM = gal (US)/min

Note) Fixed SI unit (*l*/min, *l*, m³ or m³x10) will be set for the type without the unit switching function.

#### Flow rate measuring unit confirmation

This function allows to confirm the accumulated flow rate when real-time flow rate is selected and to confirm the real-time flow rate when accumulated flow rate is selected.

#### **Error correction**

#### For PF2D300/301

LED display Contents		Solution	
A current of more than 80 mA is flowing to OUT1.		Check the load and the wiring for OUT1.	
ErZ	A current of more than 80 mA is flowing to OUT2.	Check the load and the wiring for OUT2.	
The set data has changed for some reason.		Perform the RESET operation, and reset all the data again.	
	The flow rate is over the flow rate measurement range.	Use an adjustment valve, etc. to reduce the flow rate until it is within the flow rate range.	

#### For PF2D200/201

LED display	Contents	Solution	
Er 1	Over current is flowing to the load of a switch output.	Shut off the power supply. After eliminating the output factor that caused the excess current, turn the power supply back on.	
ErO	Internal data error.		
E-7	Internal data error.	Contact SMC.	
ErlO	Internal data error.		
E-5	Internal data error.	Shut off the power supply and then reset the switch.	
Er 5	Internal data error.		
	The flow rate is over the flow rate measurement range.	Use an adjustment valve, etc. to reduce the flow rate until it is within the flow rate range.	

#### Key lock

This function prevents incorrect operations such as changing the set value accidentally.


#### **Accumulation clearance**

#### This is to clear the accumulated value.

#### Output types


Real-time switch output, accumulated switch output, or accumulated pulse output can be selected as an output type.

#### Real-time switch output

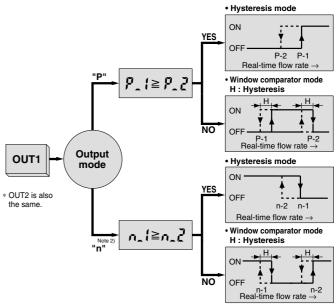


Note 2) Output mode is set to inverted output at the factory before shipment.

#### **Accumulated switch output**

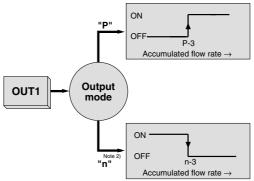

Note 2) Output mode is set to inverted output at the factory before shipment.

#### Accumulated pulse output

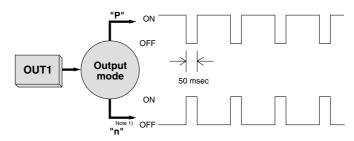

Note1) Refer to the specifications of display unit for the flow rate value per pulse.



## Series PF2D

#### **Functions**

#### Copy function (PF2D200, 201 only)

Information to be copied is:

- 1) Flow rate range
- 2 Display mode
- 3 Display unit (Only available when the unit specification is nil.)
- 4 Output method
- **5** Output mode
- 6 Flow rate value

# Peak hold, Bottom hold display function

(PF2D200, 201 only)

The maximum or minimum value can be held in the case where the real-time flow rate display mode is selected during the initial setting.

#### Channel select function (PF2D200, 201 only)

Every pushing the  $\triangle$  button, channel selection "1 $\rightarrow$ 2 $\rightarrow$ 3 $\rightarrow$ 4 $\rightarrow$ 1..." is available. The flow rate measurement of each selected channel is shown in the display unit

#### Channel scan function (PF2D200, 201 only)


Changes displaying the channel shown every about 2 seconds and its detected flow rate.

#### **Option**

When only optional parts are required, order with the part numbers listed below.

#### e-con connector

Part no.	Qty.	
ZS-28-CA-2	1	

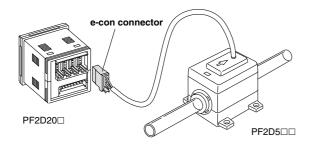


In addition to the connector shown above, those listed below (female contact) can be connected.


Manufacturer	Model
Sumitomo 3M Limited	37104-3101-000FL
Tyco Electronics AMP K.K.	1-1473562-4
OMRON Corp.	XN2A-1430

#### **Panel mounting**

Pin no.	Description	Note
ZS-22-E	ZS-22-E Panel mounting adapter A, B	

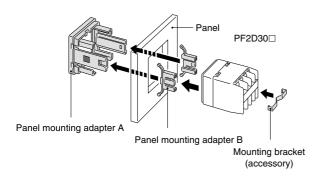

Part no.	Description	Note
ZS-26-B	Panel mounting adapter	With waterproof seal, mounting screw
ZS-26-C	Front protective cover + Panel mounting adapter	With waterproof seal, mounting screw

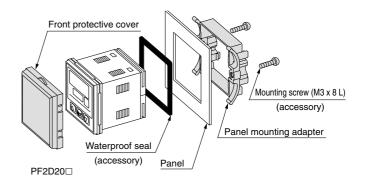



Compatibility checklist: Between the digital flow switch material for de-ionised water and chemicals and the fluid selected.

Flu	iid	Compatibility
Acetone		0
Ammonium hydroxide		0
Isobutyl alcohol		×
Isopropyl alcohol		0
Hydrochloric acid		0
Ozone		×
Hydrogen peroxide	Concentration 50% or less 50°C or less	0
Ethyl acetate		0
Butyl acetate		0
Nitric acid (except fuming nitric acid)	Concentration 10% or less	0
De-ionised water		0
Sodium hydroxide		×
Ultra de-ionised water		0
Toluene		0
Hydrofluoric acid	Concentration 50% or less	0
Sulfuric acid (except fuming sulfuric acid)	Concentration 20% or less	0
Phosphoric acid	Concentration 30% or less	0

Note 1) The material and fluid compatibility check list provides reference values as a guide only.

Note 2) It is possible that some fluids are permeable depending on the type of fluid, its density and temperature. Any permeated fluid may affect the products life.

Thus, when using these fluid types, verify the fluid in advance by testing it, prior to making a decision to use it.

- $\cdot$  Compatibility is indicated for fluid temperatures at 90°C or less.
- The product does not have an explosion proof construction. Be sure to take measures to prevent the area around the product from becoming filled with an explosive gas, when using an explosive fluid.

Table symbols : Can be used : Can be used under certain conditions × : Cannot be used



# Series PF2D Safety Instructions

The following safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by a label of "Caution", "Warning" or "Danger". To ensure safety, please observe all safety practices.

**Caution**: Operator error could result in injury or equipment damage.

**Warning**: Operator error could result in serious injury or loss of life.

**Danger**: In extreme conditions, there is a possible result of serious injury or loss of life.

## **Marning**

1. The compatibility of equipment is the responsibility of the person who designs the system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility with the specific system must be based on specifications, post analysis and/or tests to meet a specific requirements. The expected performance and safety assurance will be the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalogue information and taking into consideration the possibility of equipment failure when configuring a system.

- Only trained personnel should operate machinery and equipment.
   Assembly, handling or repair of systems should be performed by trained and experienced operators.
- 3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.
- 4. To promote safe operation, be sure to observe company standard and legal regulations, etc.

Refer to ISO4414, JIS B 8370 (pneumatic system axiom), labor health and safety laws and other safety regulations.





Be sure to read before handling. Refer to page 57 for safety instructions and precautions.

#### **Design and Selection**

# $\Delta$ Warning

1. Operate the switch only within the specified voltage.

Use of the switch outside of the specified voltage range can cause not only a malfunction and damage to the switch, but it can also cause electrocution and fire.

2. Do not exceed the maximum allowable load specification.

A load exceeding the maximum load specification can cause damage to the switch.

3. Do not use a load that generates a surge voltage.

Although the circuit at the output side of the switch is surge protected, damage may still occur if a voltage surge is applied repeatedly. When a load which generates a surge, such as from a relay or solenoid valve is directly driven, use a switch with a built-in surge absorbing element.

4. Be sure to verify the applicable fluid.

The switches do not have an explosion proof rating. To prevent possible fire hazard, do not use with flammable gases or fluids.

5. Monitor the internal voltage drop of the switch.

When operating below the specified voltage, it is possible that the load may be ineffective even though the pressure switch function is normal. Therefore, the formula below should be satisfied after confirming the minimum operating voltage of the load.

Supply \_ Internal voltage > Minimum operating voltage drop of switch > voltage of load

6. Use the switch within the specified flow rate measurement and operating pressure.

Operating beyond the specified flow rate and operating pressure can damage the switch. Especially avoid the application of pressure through a water hammer, which is above the specification.

- <Examples of pressure reduction measures>
- a) Use a device such as a water hammer relief valve to slow the valve's closing speed.
- Absorb impact pressure by using an accumulator or elastic piping material such as a rubber hose.
- c) Keep the piping length as short as possible.
- 7. Design the system so that the fluid always fills the detection passage.

Especially for vertical mounting, introduce the fluid from the bottom to the top.

8. Operate within the flow rate measurement range.

If operated outside of the flow rate measurement range, the Karman vortex will not be generated and normal measurement will not be possible.

9. Never use inflammable fluids and/or permea-

They may cause a fire, an explosion or corrosion.

\*Refer to the MSDA (material safety data sheet) when using chemicals.

#### **Design and Selection**

## **△** Caution

1. Data from the flow switch is stored even after the power supply is off.

The input data is stored in EEPROM so that the data will not be lost after the flow switch is turned off. (The data can be rewritten for up to one million times, and stored for up to 20 years.)

2. Accumulated flow rate is reset when it is turned OFF.

#### Mounting

# **A**Warning

1. Monitor the flow direction of the fluid.

Install and connect piping so that fluid flows in the direction of the arrow indicated on the body.

- 2. Remove dirt and dust from inside of the piping by means of air blow, before attaching to the switch.
- 3. Do not drop or bump.

Do not drop, bump, or apply excessive impacts (490 m/s²) while handling. Although the external body of a switch (switch case) may not be damaged, the switch inside could be damaged and cause a malfunction.

4. Hold the body of the switch when handling.

The tensile strength of the cord is 49N and applying a greater pulling force than this can cause a malfunction. When handling, hold the body of the switch.

5. Do not use until you can verify that equipment can operate properly.

Following mounting, repair, or retrofit, verify correct mounting by conducting suitable function and leakage tests after piping and power connections have been made.

- 6. Never mount a switch in a place that will be used as a step stool during piping.
- 7. Be sure to allow straight pipe length that is minimum 8 times the port size upstream and downstream of the switch piping.

When abruptly reducing the size of piping or when there is a restriction such as a valve on the inlet side, the pressure distribution in the piping changes and makes accurate measurement impossible. Therefore, flow restriction measures such as these should be implemented on the outlet side of the switch.

When used with the outlet side open, be careful of the cavitation that is prone to occur.





Be sure to read before handling. Refer to page 57 for safety instructions and precautions.

#### Wiring

## **△**Warning

1. Verify the colour and the terminal number when wiring.

Incorrect wiring can cause the switch to be damaged and malfunction. Verify the colour and the terminal number in the instruction manual when wiring.

2. Avoid repeatedly bending or stretching of the lead wire.

Repeatedly applying bending stress or stretching force to the lead wire will cause it to break.

3. Confirm proper insulation of wiring.

Make sure that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a switch.

4. Do not wire in conjunction with power lines or high voltage lines.

Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Control circuits including switches may malfunction due to noise from these other lines.

5. Do not allow loads to short circuit.

Although a switch indicate excess current error if a load is short circuited, all incorrect wiring connections such as power supply polarity cannot be protected. Take precautions to avoid incorrect wiring.

#### **Usage**

## **Warning**

 When using a switch for high temperature fluid, the switch itself also becomes hot due to the high temperature fluid. Avoid touching the switch directly as this may cause a burn.

#### **Operating Environment**

# **△**Warning

1. Never use in the presence of explosive gases.

The switches do not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.

- 2. Mount the switch in a location where there is no vibration (Display: greater than 98 m/s², Sensor: 4.9 m/s² or less), or no impact greater than 490 m/s².
- 3. Do not use in an area where surges are generated.

When there are units that generate a large amount of surge in the area around a pressure switch, (e.g., solenoid type lifters, high frequency induction furnaces, motors, etc.) this may cause deterioration or damage to the switch's internal circuitry. Avoid sources of surge generation and crossed lines.

4. Switches are not equipped with surge protection against lightning.

The flow switches are CE compliant; however, they are not equipped with surge protection against lightning. Lightning surge protection measures should be applied directly to system components as necessary.

5. Avoid using the switch in an environment where the likelihood of splashing or spraying of liquids exists.

The switches are dustproof and splashproof; however, avoid using in an environment where the likelihood of heavy splashing or spraying of water and/or oil exist. Since the display unit of the remote type switches featured here is not dust or splash proof, the use in an environment where water and/or oil splashing or spraying exists must be avoided.

#### Maintenance

# **△**Warning

1. Perform periodical inspections to ensure proper operation of the switch.

Unexpected malfunctions may cause a possible danger.

2. Take precautions when using the switch for an interlock circuit.

When a pressure switch is used for the interlock circuit, devise a multiple interlock system to prevent trouble or malfunction. Verify the operation of the switch and the interlock function on a regular basis.

- 3. Do not disassemble or perform any conversion work on flow switches.
- 4. The following should be observed during regular maintenance to avoid damage and loss due to chemicals.
  - a) Do not touch the remaining chemicals in piping and/or digital flow switch.
  - b) Check the name and the nature of chemicals used and treat them accordingly.





Be sure to read before handling. Refer to page 57 for safety instructions and precautions.

#### **Measured Fluid**

# $oldsymbol{\Delta}$ Warning

- 1. Check regulators and flow adjustment valves before introducing the fluid.
  - If pressure or flow rate beyond the specified range are applied to the switch, the sensor unit may be damaged.
- 2. Be sure to take measures to prevent exposing the switch to inflammable and/or explosive gases when using inflammable fluid.
- 3. Install a filter on the inlet side when there is a possibility of condensation and foreign matter being mixed with the fluid.

If foreign matter adheres to the switch's vortex generator or vortex detector, accurate measurement will no longer be possible.

#### **Others**

# **△**Warning

- After the power is turned on, the switch's output remains off while a message is displayed. Therefore, start the measurement after a value is displayed.
- 2. Perform settings after stopping control systems.

When the switch's initial setting and flow rate setting are performed, output maintains the condition prior to the settings. Output turns OFF when the switch's initial setting and flow rate setting are preformed.

#### **Set Flow Rate Range and Rated Flow Range**


## **⚠** Caution

#### Set the flow rate within the rated flow range.

The set flow rate range is the range of flow rate that can be set on the controller side.

The rated flow range is the range that satisfies the sensor's specifications (accuracy, linearity etc.).

It is possible to set a value outside off the rated flow range, however, the specification is not be guaranteed.

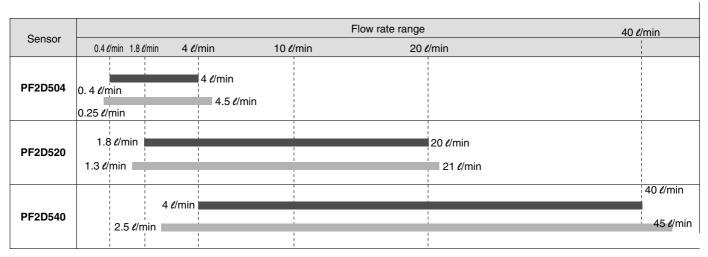

Rated flow range of sensor

Set flow rate range of sensor



# $\triangle$

# Series PF2D Specific Product Precautions 4

Be sure to read before handling.
Refer to page 57 for safety instructions and precautions.

#### 4-channel Flow Monitor

Handling

## **Marning**

- Do not drop, bump, or apply excessive impacts (980 m/s²) while handling. Although the body of the flow monitor case may not be damaged, the inside of the flow monitor could be damaged and lead to a malfunction.
- 2. The tensile strength of the power supply/output connection cable is 50N and the sensor lead wire with a connector is 25N. Applying a greater pulling force than the applicable specified tensile strength to either of these components can lead to a malfunction. When handling, hold the body of the controller.

#### Connection

# **Marning**

- Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output. Connections should be done while the power is turned off.
- Do not attempt to insert or pull the flow rate sensor or its connector when the power is on. Switch output may malfunction.
- 3. Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 4. If a commercial switching power supply is used, make sure that the F.G. terminal is grounded.

#### **Operating Environment**

# 

- Our 4-channel flow monitor is CE marked, however it is not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- Our 4-channel flow monitor does not have an explosion proof rating. Never use pressure sensors in the presence of inflammable or explosive gases.
- 3. Enclosure "IP65" applies only to the front face of the panel when mounting. Do not use in an environment where oil splashing or spraying are anticipated.


#### Mounting

### **⚠** Caution

The front face of the panel mount conforms to IP65, however there is a possibility of liquid infiltration if the panel mount adapter is not installed securely and properly. Securely fix the adapter with screws as shown below.

# Front protective cover + Panel mounting

Tighten screws 1/4 to 1/2 turn after the heads are flush with the panel.

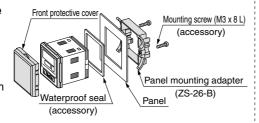

#### Wiring

#### 


#### 1. Connecting sensor cable and connector (ZS-28-CA-□)


- Cut the sensor cable as shown below.
- Insert each lead wire into the corresponding connector number by following the chart provided below.

20	mm or more

Connector no.	Cable wire colour	
1	Brown (DC+)	
2	Not used	
3	Blue (DC-)	
4	White (IN: 1 to 5 V)	


- Make sure that the numbers on the connector and the wire colours match. After verifying that the wires are fully inserted, temporarily hold A down by hand.
- Using pliers, press the center of A straight down.
- Note that that connector cannot be taken apart for reuse once it is crimped. Use a new sensor connector if wiring or cable insertion is done incorrectly.

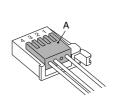


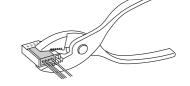

# 2. Inserting/Detaching of sensor connector, power supply/output connector


- Insert each connector straightforwardly until it clicks and locks onto the body.
- To remove the connector, pull it straight out while pushing the lever with your thumb.

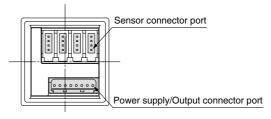

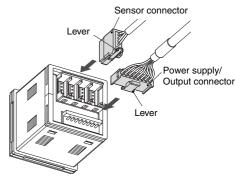

Pin no.



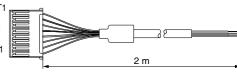









#### **EUROPEAN SUBSIDIARIES:**



#### Austria

SMC Pneumatik GmbH (Austria). Girakstrasse 8, A-2100 Korneuburg Phone: +43 2262-62280, Fax: +43 2262-62285 E-mail: office@smc.at http://www.smc.at



#### Belgium

SMC Pneumatics N.V./S.A.
Nijverheidsstraat 20, B-2160 Wommelgem
Phone: +32 (0)3-355-1464, Fax: +32 (0)3-355-1466
E-mail: post@smcpneumatics.be http://www.smcpneumatics.be



#### Bulgaria

SMC Industrial Automation Bulgaria EOOD 16 kliment Ohridski Blvd., fl.13 BG-1756 Sofia Phone:+359 2 9744492, Fax:+359 2 9744519 E-mail: office@smc.bg http://www.smc.ba



#### Croatia

SMC Industrijska automatika d.o.o. Črnomerec 12. 10000 ZAGREB Phone: +385 1 377 66 74, Fax: +385 1 377 66 74 F-mail: office@smc hr http://www.smceu.com



#### Czech Republic

SMC Industrial Automation CZ s.r.o. Hudcova 78a, CZ-61200 Brno Phone: +420 5 414 24611, Fax: +420 5 412 18034 E-mail: office@smc.cz http://www.smc.cz



Denmark SMC Pneumatik A/S Knudsminde 4B, DK-8300 Odder Phone: +45 70252900, Fax: +45 70252901 E-mail: smc@smc-pneumatik.dk http://www.smcdk.com



#### Estonia

SMC Pneumatics Estonia OÜ Laki 12-101, 106 21 Tallinn Phone: +372 (0)6 593540, Fax: +372 (0)6 593541 E-mail: smc@smcpneumatics.ee http://www.smcpneumatics.ee



#### Finland

SMC Pneumatics Finland OY PL72, Tilstinniityntie 4, SF-02031 ESPOO Phone: +358 207 513513, Fax: +358 207 513595 E-mail: smcfi@smc.fi



#### France

SMC Pneumatique, S.A. 1, Boulevard de Strasbourg, Parc Gustave Eiffel Bussy Saint Georges F-77607 Marne La Vallee Cedex 3 Phone: +33 (0)1-6476 1000, Fax: +33 (0)1-6476 1010 E-mail: contact@smc-france.fr http://www.smc-france.fr



#### Germany

SMC Pneumatik GmbH Boschring 13-15, D-63329 Egelsbach Phone: +49 (0)6103-4020, Fax: +49 (0)6103-402139 E-mail: info@smc-pneumatik.de http://www.smc-pneumatik.de



#### Greece

S. Parianopoulus S.A. 7, Konstantinoupoleos Street, GR-11855 Athens Phone: +30 (0)1-3426076, Fax: +30 (0)1-3455578 E-mail: parianos@hol.gr http://www.smceu.com



#### Hungary

SMC Hungary Ipari Automatizálási Kft. Budafoki ut 107-113, H-1117 Budapest Phone: +36 1 371 1343, Fax: +36 1 371 1344 E-mail: office@smc-automation.hu http://www.smc-automation.hu



#### Ireland

SMC Pneumatics (Ireland) Ltd. 2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin Phone: +353 (0)1-403 9000, Fax: +353 (0)1-464-0500 E-mail: sales@smcpneumatics.ie http://www.smcpneumatics.ie



#### Italy

SMC Italia S.p.A Via Garibaldi 62, I-20061Carugate, (Milano) Phone: +39 (0)2-92711, Fax: +39 (0)2-9271365 E-mail: mailbox@smcitalia.it http://www.smcitalia.it



#### Latvia

SMC Pneumatics Latvia SIA Smerla 1-705, Riga LV-1006, Latvia Phone: +371 (0)777-94-74, Fax: +371 (0)777-94-75 E-mail: info@smclv.lv http://www.smclv.lv



#### Lithuania

UAB Ottensten Lietuva Savanoriu pr. 180, LT-2600 Vilnius, Lithuania Phone/Fax: +370-2651602



#### Netherlands

SMC Pneumatics BV De Ruyterkade 120, NL-1011 AB Amsterdam Phone: +31 (0)20-5318888, Fax: +31 (0)20-5318880 E-mail: info@smcpneumatics.nl http://www.smcpneumatics.nl

Spain

E-mail: post@smc.smces.es

Sweden

Ekhagsvägen 29-31, S-141 71 Huddinge Phone: +46 (0)8-603 12 00, Fax: +46 (0)8-603 12 90

SMC Pneumatics Sweden AB

E-mail: post@smcpneumatics.se http://www.smc.nu

Turkey

E-mail: smc-entek@entek.com.tr http://www.entek.com.tr

Switzerland

Dorfstrasse 7, CH-8484 Weisslingen Phone: +41 (0)52-396-3131, Fax: +41 (0)52-396-3191

Entek Pnömatik San. ve Tic Ltd. Sti. Perpa Tic. Merkezi Kat: 11 No: 1625, TR-80270 Okmeydani Istanbul Phone: +90 (0)212-221-1512, Fax: +90 (0)212-221-1519

SMC Pneumatics (UK) Ltd Vincent Avenue, Crownhill, Milton Keynes, MK8 0AN Phone: +44 (0)800 1382930 Fax: +44 (0)1908-555064 E-mail: sales@smcpneumatics.co.uk http://www.smcpneumatics.co.uk

Zuazobidea 14, 01015 Vitoria Phone: +34 945-184 100, Fax: +34 945-184 124

SMC España, S.A.

http://www.smces.es

SMC Pneumatik AG

E-mail: info@smc.ch

http://www.smc.ch



#### Norway

SMC Pneumatics Norway A/S Vollsveien 13 C, Granfos Næringspark N-1366 Lysaker Tel: +47 67 12 90 20, Fax: +47 67 12 90 21 E-mail: post@smc-norge.no http://www.smc-norge.no



#### Poland

SMC Industrial Automation Polska Sp.z.o.o. ul. Konstruktorska 11A, PL-02-673 Warszawa, Phone: +48 22 548 5085, Fax: +48 22 548 5087 E-mail: office@smc.pl http://www.smc.pl



#### Portugal

Portugal SMC Sucursal Portugal, S.A. Rua de Eng<sup>o</sup> Ferreira Dias 452, 4100-246 Porto Phone: +351 22-610-89-22, Fax: +351 22-610-89-36 E-mail: postpt@smc.smces.es http://www.smces.es



#### Romania

SMC Romania srl Str Frunzei 29. Sector 2. Bucharest Phone: +40 213205111, Fax: +40 213261489 F-mail: smcromania@smcromania ro http://www.smcromania.ro



#### Russia

SMC Pneumatik LLC. 36/40 Sredny pr. St. Petersburg 199004 Phone.:+812 118 5445, Fax:+812 118 5449 E-mail: smcfa@peterlink.ru http://www.smc-pneumatik.ru



Slovakia SMC Priemyselná Automatizáciá, s.r.o. Námestie Martina Benku 10, SK-81107 Bratislava Phone: +421 2 444 56725, Fax: +421 2 444 56028 E-mail: office@smc.sk http://www.smc.sk



#### Slovenia

Shovenia
Sho http://www.smc-ind-avtom.si



#### OTHER SUBSIDIARIES WORLDWIDE:

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE, CHINA, HONG KONG, INDIA, INDONESIA, MALAYSIA, MEXICO, NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA, TAIWAN, THAILAND, USA, VENEZUELA

> http://www.smceu.com http://www.smcworld.com