

Load feeders and motor starters for use in the control cabinet



	Price groups PG 14O, 255, 41B, 41D, 41E, 41L, 42C, 42D, 42F, 42G, 42L
8/2	Introduction
8/6	SIRIUS 3RA2 load feeders General data 3RA21 direct-on-line starters - for DIN-rail mounting or screw fixing 3RA22 reversing starters - for DIN-rail mounting or screw fixing 3RV29 infeed system for load feeders
8/24	
8/32	
8/36	
8/42	
8/47	Accessories
8/58	
8/59	SIRIUS 3RA6 compact starters General data 3RA61, 3RA62 compact starters - 3RA61 direct-on-line starters - 3RA62 reversing starters Accessories Add-on modules for AS-Interface Infeed system for 3RA6
8/67	
8/69	
8/71	
8/75	
8/77	
8/84	SIRIUS 3RA8 intelligent load feeders <i>NEW</i>
8/90	SIRIUS 3RC7 intelligent link modules <i>NEW</i>
8/98	ET 200SP motor starters
8/107	SIRIUS 3RM1 motor starters

Load feeders and motor starters for use in the control cabinet


Introduction

Overview

Central and compact starter solutions

Our range offers you many different possibilities for simple and practical starter solutions in the control cabinet. Features common to all our load feeders, compact starters and motor starters: Like all SIRIUS devices, they are optimally coordinated with each other, have a very compact design and are particularly easy and quick to install and wire up.

In addition, there is a seamless range of SIRIUS 3RW soft starters available for soft starting in the control cabinet (see page 6/2).

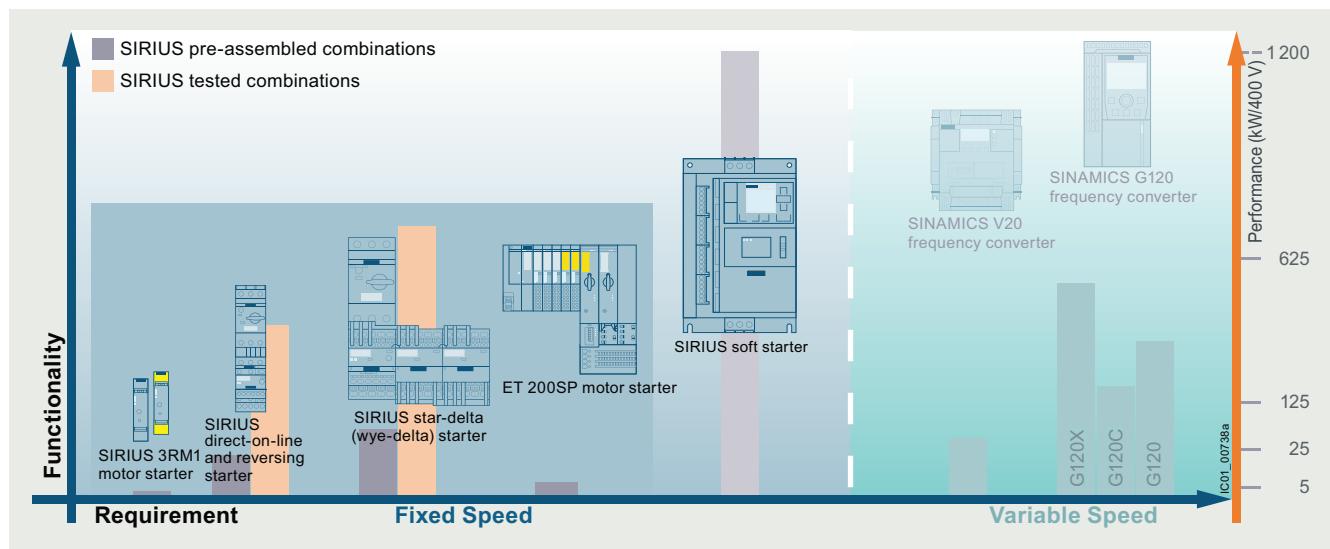

Central and compact starter solutions

Decision support for motor start – Starting and operating three-phase asynchronous motors efficiently



Decision support tool for motor start

This tool guides you to the optimum individual drive solution via a short query about the application.

Based on this solution approach, you will then be directed to the right product configurator for selecting the appropriate products, see www.siemens.com/motorstart-guide.

Load feeders and motor starters for use in the control cabinet

Introduction



	Type	Page
SIRIUS 3RA2 load feeders		
• The 3RA2 fuseless load feeders consist of the 3RV2 motor starter protector and the 3RT2 contactor. The motor starter protector and contactor are prewired and mechanically and electrically connected in preassembled kits (link modules, wiring kits and DIN-rail or busbar adapters).	8/6	
• 4 sizes (S00, S0, S2, S3)		
• Can be supplied for direct-on-line starting or reversing operation as		
- a complete unit or		
- single devices for customer assembly		
• Can be supplied with screw or spring-loaded terminals		
3RA21 direct-on-line starters for DIN-rail mounting or screw fixing	3RA21	8/24
• Rated control supply voltage 50/60 Hz 230 V AC and 24 V DC		
3RA21 direct-on-line starters for 60 mm busbars	3RA21	8/32
• Rated control supply voltage 50/60 Hz 230 V AC and 24 V DC		
3RA22 reversing starters for DIN-rail mounting or screw fixing	3RA22	8/36
• Rated control supply voltage 50/60 Hz 230 V AC and 24 V DC		
3RA22 reversing starters for 60 mm busbars	3RA22	8/42
Accessories for 3RA2 direct-on-line and reversing starters		8/47
Infeed system	3RV29	7/68, 8/58
• The infeed system is a convenient means of energy supply and distribution for a group of several motor starter protectors or complete load feeders with screw or spring-loaded terminals up to size S0.		
SIRIUS 3RA6 compact starters		
• Integrated functionality of a motor starter protector, contactor and electronic overload relay and various functions of optional mountable accessories	8/59	
• Can be used for direct starting of standard three-phase motors up to 32 A		
3RA61 direct-on-line starters	3RA61	8/67
• Up to 15 kW/400 V, weld-free, wide setting range, removable terminals		
3RA62 reversing starters	3RA62	8/69
• Up to 15 kW/400 V, weld-free, wide setting range, removable terminals		
Accessories for 3RA6 direct-on-line and reversing starters	3RA69	8/71
Add-on modules for AS-Interface	3RA69	8/75
Infeed system for 3RA6	3RA68	8/77
• Modular expandability, up to 100 A, terminals up to 70 mm ²		
• 3-phase infeeds and expansion modules	8/80	
• Expansion modules		8/81
• Accessories for infeed systems for 3RA6		8/82

Load feeders and motor starters for use in the control cabinet

Introduction

3RA8411,
3RA84123RA8511,
3RA8512

3RC7140



3RC7141

	Type	Page
SIRIUS 3RA8 intelligent load feeders		8/84
3RA84 direct-on-line starters	3RA84	8/89
3RA85 reversing starters	3RA85	8/89
Infeed system	3RV29	7/68, 8/58
Accessories	3RC79	8/96
SIRIUS 3RC7 intelligent link modules		8/90
3RC7140 direct-on-line starters	3RC7140	8/95
3RC7141 reversing starters	3RC7141	8/95
Accessories	3RC79	8/96

Load feeders and motor starters for use in the control cabinet

Introduction



	Type	Page
ET 200SP motor starters		
3RK1308 direct-on-line starters	• In hybrid technology in the SIMATIC ET 200SP I/O system • For switching and protecting three-phase asynchronous motors, 1-phase AC motors and 1-phase asynchronous motors up to 5.5 kW (at 400 V)	8/98
3RK1308 reversing starters	• Direct-on-line starting with electronic overload protection	3RK1308-0A.0 8/104
3RK1308 fail-safe direct-on-line starters	• Reversing functionality with electronic overload protection	3RK1308-0B.0 8/104
3RK1308 fail-safe reversing starters	• Direct-on-line starting with electronic overload protection	3RK1308-0C.0 8/104
BaseUnits	• Reversing functionality with electronic overload protection	3RK1308-0D.0 8/104
3DI/LC control module	• Mounting components for infeed and for integration into the ET 200SP I/O system	3RK1908-0AP00 8/105
Accessories	• Module with three digital inputs for the use of additional functions such as "Quick stop", and for manual local operation	3RK1908-1AA00 8/105
Cover for BaseUnit and infeed bus, additional mechanical mounting unit, fan		3RK19, 3RW49 8/106
SIRIUS 3RM1 motor starters		
3RM10 direct-on-line starters	• For switching three-phase motors up to 3 kW (at 400 V) and resistive loads up to 10 A at AC voltages up to 500 V under normal operating conditions • Space-saving design (width 22.5 mm)	8/107
3RM12 reversing starters	• Direct-on-line starting with electronic overload protection	3RM10 8/114
3RM11 Failsafe direct-on-line starters	• Reversing functionality with electronic overload protection	3RM12 8/114
3RM13 Failsafe reversing starters	• As 3RM10 plus safety-related shutdown	3RM11 8/114
Accessories for 3RM1 motor starters	• As 3RM12 plus safety-related shutdown	3RM13 8/114
	• 3RM19 3-phase infeed system for the main circuit	3RM19 8/116
	• Fuse modules for the use of 3RM1 motor starters on 8US busbar systems and mounting rails	3RM19 8/116
	• Adapters	8US1 8/116
	• Cover profiles	8US1922 8/117
	• Device connectors for the control circuit	3ZY1212 8/117
	• Spare terminals for main and control circuits	3ZY11 8/118
	• Push-in lugs for wall mounting, integrated sealable cover, coding pins	3ZY1 8/118

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Overview

3RA2 load feeders



3RA22 reversing starters for DIN-rail mounting or screw fixing with screw terminals

The 3RA2 fuseless load feeders consist of the 3RV2 motor starter protector and the 3RT2 electromechanical contactor. The devices are electrically and mechanically connected using preassembled kits (link modules, wiring kits and DIN-rail or busbar adapters).

Around 500 preassembled 3RA2 combinations can be ordered for direct-on-line and reversing starting of standard three-phase motors up to 65 A (approx. 37 kW/400 V). Preassembled kits are available as accessories for the power range up to 45 kW. The desired fuseless load feeder can thus be quickly and economically assembled by the customer. A time saving is also achieved in connection with switchgear acceptances, as – unlike with conventional wiring systems – there is no need to rectify possible wiring errors.

In the 3RA2 load feeder, the 3RV2 motor starter protector is responsible for overload and short-circuit protection. Back-up protective devices, such as melting fuses or limiters, are superfluous here, as the motor starter protector is short-circuit-proof up to 150 kA at 400 V.

The 3RT2 contactor is particularly suitable for extremely complex switching tasks requiring the greatest endurance.

The 3RA2 load feeders are available with setting ranges from 0.14 to 65 A in sizes S00, S0 and S2. Load feeders in size S3 up to 100 A are available for customer assembly:

Size	Width Direct-on-line starters/ reversing starters mm	Max. rated current I_n max	For three- phase motors up to
		A	kW
S00	45/90	16	7.5
S0	45/90	32	15
S2	55/120	65	37
S3	70/150	100	45

The size of the 3RA2 load feeders is based on the size of the contactor:

Size 3RA2	S00	S0	S2	S3
Size of 3RV2 motor starter protector	S00	S00 ¹⁾ , S0	S2	S3
Size of 3RT2 contactor	S00	S0	S2	S3

¹⁾ The combination of an S00 motor starter protector with an S0 contactor is possible only for screw terminal versions.

More information

Homepage, see www.siemens.com/sirius-control

SiePortal, see www.siemens.com/product?3RA2

Online configurator, see www.siemens.com/sirius/configurators

TIA Selection Tool Cloud (TST Cloud), see www.siemens.com/tstcloud/?node=LoadFeeder

Decision support for motor start – Starting and operating three-phase asynchronous motors efficiently, see www.siemens.com/motorstart-guide

Operating conditions

3RA2 load feeders are climate-proof. They are intended for use in enclosed rooms in which no harsh operating conditions (such as dust, caustic vapors, hazardous gases) prevail. Suitable covers must be provided for installation in dusty and damp locations.

Behavior in the event of short circuit

EN 60947-4-1 (VDE 0660 Part 102) and IEC 60947-4-1 make a distinction between two different types of coordination, which are referred to as type of coordination "1" and type of coordination "2". Any short circuits that occur are cleared safely by both types of coordination. The only differences concern the extent of the damage caused to the device by a short circuit.

TOC
1

Type of coordination "1"

The load feeder may be non-operational after a short circuit has been cleared. Damage to the contactor or to the overload release is permissible.

TOC
2

Type of coordination "2"

There must be no damage to the overload release or to any other component after a short circuit has been cleared. The load feeder can resume operation without needing to be renewed. At most, welding of the contactor contacts is permissible if they can be disconnected easily without any significant deformation.

The types of coordination are indicated in the corresponding tables by the symbols shown on orange backgrounds.

Voltage data

The data for 3-phase power systems according to IEC 60947-4-1 are valid for the following line system configurations:

Voltage U_e	Line system configurations	
	Three-phase four-wire systems	Three-phase three-wire systems
V	V	V
230	--	230
400	230/400	400
440	260/440	440
500	--	500
690	400/690	690 (only from size S3)

-- Not specified

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Tripping times

All 3RA2 load feeders described here are designed for normal starting, in other words for overload tripping times of less than 10 s (CLASS 10). At rated-load operating temperature the tripping times are shorter, depending on the particular device and the setting range. The exact values can be derived from the tripping characteristics of the motor starter protectors.

Connection methods

For all 3RA2 feeders up to 32 A, spring-loaded terminals are available as well as screw terminals. To connect two devices with spring-loaded terminals, there are plug-in link modules for sizes S00 and S0 which enable very quick mounting of the feeders and a vibration-resistant assembly.

To connect a motor starter protector with screw terminals to a contactor with spring-loaded terminals there are special hybrid link modules for the sizes S00 and S0.



Screw terminals



Spring-loaded terminals

The connection method is indicated in the corresponding tables by the symbols shown on orange backgrounds.

3RA2 complete units

The 3RA2 fuseless load feeders can be ordered as preassembled complete units for direct-on-line starting (3RA21) or for reversing operation (3RA22) with screw or spring-loaded terminals. From size S2, complete units for direct-on-line starting (3RA21) are only available with screw terminals.

Control supply voltages of 230 V AC 50 Hz and 24 V DC are available.

A distinction is also drawn between whether the feeder is mounted on a 35 mm DIN rail, on a flat surface using screws, or on a 60 mm busbar system.

3RA21 load feeders in the S0 size must be configured on DIN-rail adapters if high vibration and shock loads (railways, power plant construction, etc.) are involved.

A vibration and shock kit is available for mounting on busbar adapters.

Accessories

As the 3RA2 fuseless load feeders are constructed from 3RV2 motor starter protectors and 3RT2 contactors, the same accessories – such as auxiliary switches, undervoltage releases or door-coupling rotary operating mechanisms – can be used for the 3RA2 fuseless load feeders as for these motor starter protectors and contactors.

In particular, certain accessories have been optimized for the fuseless load feeders. These include the top-connected, transverse auxiliary switch on the motor starter protector, which is available in a range of different versions. Special auxiliary switches that can be snapped on from below are available for the contactor. These two accessories enable the fuseless load feeders to be wired simply without having to route cables through the device.

Incoming power supply

A total of four different incoming power supply options are available (see [3RV29 infeed system for load feeders on page 8/58](#)).

Customer assembly of fuseless load feeders

Whereas preassembled 3RA2s can be ordered up to 65 A, combinations in size S3 up to 100 A (approx. 45 kW/400 V) are also available for customer assembly.

The standard devices can be combined optimally – in terms of both technical specifications and dimensions, thanks to the modular system of the SIRIUS series.

The fuseless load feeders can thus be assembled easily by the customer. It is simply necessary to assemble the standard 3RV2 motor starter protector, the 3RT2 contactor and the appropriate assembly kit.

Single devices and assembly kits, see the [Selection and ordering data for 3RA21 direct-on-line starters or 3RA22 reversing starters, page 8/24 or 8/36 onwards](#).

Assembly kits for direct-on-line starting or reversing operation for mounting on DIN rails or busbars, [see page 8/52](#).

For size S3 direct-on-line starters and sizes S0, S2 and S3 reversing starters, it is imperative that a DIN-rail adapter is used to ensure the necessary mechanical strength. If a busbar adapter is used (not possible for size S3), then a DIN-rail adapter is not necessary.

SENTRON 3VA circuit breakers and SIRIUS 3RT contactors are available for rated currents >100 A.

Single devices for customer assembly can be ordered if other rated control supply voltages are required. Assembly kits can be used to facilitate assembly.

Customers can also assemble tested combinations of motor starter protectors with electronic switching devices (soft starters, solid-state contactors) and load feeders with additional monitoring and control devices (3RR monitoring relays, SIMOCODE 3UF).

For the electrical and mechanical connection of protection equipment and controls, there are preassembled kits (link modules, wiring kits and DIN-rail or busbar adapters).

The following types of configuration are possible:

- Direct-on-line/reversing starting
- Star-delta (wye-delta) starting
- Solid-state/soft starting

For more information and assignment tables for combinations of the 3RA2 generation for customer assembly, [see](#)

- [Digital Configuration Manual for load feeders,](https://imp.siemens.com/digital-engineering-manual/dem)
<https://imp.siemens.com/digital-engineering-manual/dem>
- [Configuration Manual for load feeders, see](https://support.industry.siemens.com/cs/ww/en/view/39714188)
<https://support.industry.siemens.com/cs/ww/en/view/39714188>
- [Equipment Manual,](https://support.industry.siemens.com/cs/ww/en/view/60284351)
<https://support.industry.siemens.com/cs/ww/en/view/60284351>

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Customer assembly of fused load feeders

The flexible, modular system of SIRIUS also enables the configuration of fused load feeders up to 100 A (approx. 45 kW/400 V). 45 mm installation widths are also possible up to 32 A.

Compact 3NW7...-1 cylindrical fuse holders for IEC fuses size 10 x 38 mm, or 3NW7...-1HG holders for Class CC UL fuses, can be used for this purpose.

For more information about fuse systems, see [Catalog LV 10](#).

Communication link through IO-Link

Load feeders can also be assembled with IO-Link for connection to the higher-level control system. For each feeder, this requires a contactor with a voltage tap onto which a 3RA2711 function module is plugged (various versions for direct-on-line, reversing and star-delta (wye-delta) starters). The design of the SIRIUS load feeders permits a group of up to four SIRIUS controls to be conveniently connected through the standardized open system IO-Link to a control system, thus reducing wiring considerably compared to the conventional parallel wiring method. The electrical connection is made using only three standard cables.

The function modules perform not only the communication (contactor operation and feedback, ready signal) but also the electrical interlocking (for reversing and star-delta (wye-delta) starters) and the timing relay function (star-delta (wye-delta) reversing time).

Communication information and supply voltages are passed on through flat ribbon cables so that the complete control current wiring on the feeder is no longer needed.

The monitoring and maintenance of a plant is made considerably easier by transmitting diverse diagnostics data from the function modules (e.g. missing main and auxiliary voltage, local disconnection...) through IO-Link to the higher-level control system. Also, feeders equipped for IO-Link can be conveniently controlled from the control cabinet door using the optional operator panel.

More information:

- [IO-Link, see page 2/88 onwards](#)
- [3RA27 function modules, see pages 3/73, 3/79 and 3/102](#)

Communication link through AS-Interface

Integration of the load feeders with the higher-level control system is possible not only through IO-Link but also through AS-Interface. The AS-Interface integration is recommended wherever load feeders are used in distributed applications. In this case, too, a contactor with a voltage tap is required with a corresponding 3RA2712 function module (various versions for direct-on-line, reversing and star-delta (wye-delta) starters). The devices are implemented in A/B technology, making it easy to connect up to 62 feeders to an AS-i master (regardless of whether they are direct-on-line, reversing or star-delta (wye-delta) starters). This results in a significant reduction of wiring compared to the conventional parallel wiring method. The electrical connection is made using standard cables.

The function modules perform not only the communication (contactor operation and feedback, ready signal) but also the electrical interlocking (for reversing and star-delta (wye-delta) starters) and the timing relay function (star-delta (wye-delta) reversing time).

Communication information and supply voltages are passed on through flat ribbon cables so that the complete control current wiring on the starter is no longer needed.

More information:

- [AS-Interface, see page 2/3 onwards](#)
- [3RA27 function modules, see pages 3/73, 3/79 and 3/102](#)

Contactors with voltage tap

For configuring load feeders with communication links (AS-i/IO-Link), contactors with voltage taps are required. These contactors are not included as standard in the preassembled 3RA2 load feeders. A load feeder with communication link must be assembled therefore from single devices.

Complete integration in the automation landscape

As the result of the communication link through IO-Link or AS-i, the SIRIUS load feeders are fully integrated in the automation landscape and can draw on all the advantages of TIA (e.g. integration in the TIA Maintenance Station).

Mounting

3RA2 fuseless load feeders can be supplied:

- For mounting on TH 35-15 DIN rail according to IEC 60715
- For mounting on busbar adapters (busbar center-to-center clearance 60 mm, busbar thickness 5 to 10 mm with beveled edges)

The fuseless load feeders are also suitable for screw fixing using two 3RV2928-0B push-in lugs.


3RA2 fuseless load feeders can also be installed using the 3RV29 infeed system (S0 and S00 only, [see page 7/68](#)).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data


Direct-on-line starting • For DIN-rail mounting or screw fixing • Sizes S00 and S0

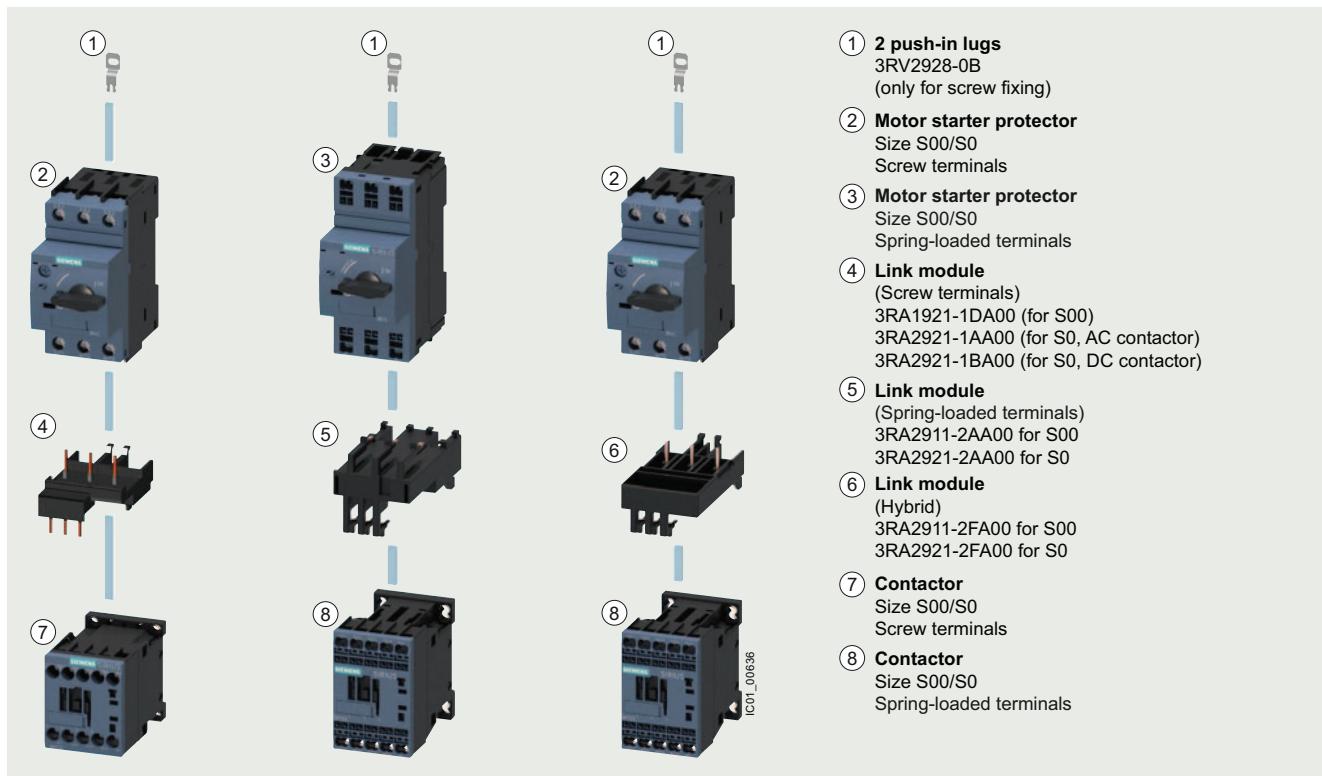

Left: 3RA21 load feeder with screw terminals

Center: 3RA21 load feeder with spring-loaded terminals

Right: Motor starter protector combination with screw terminals, with contactor with spring-loaded terminals

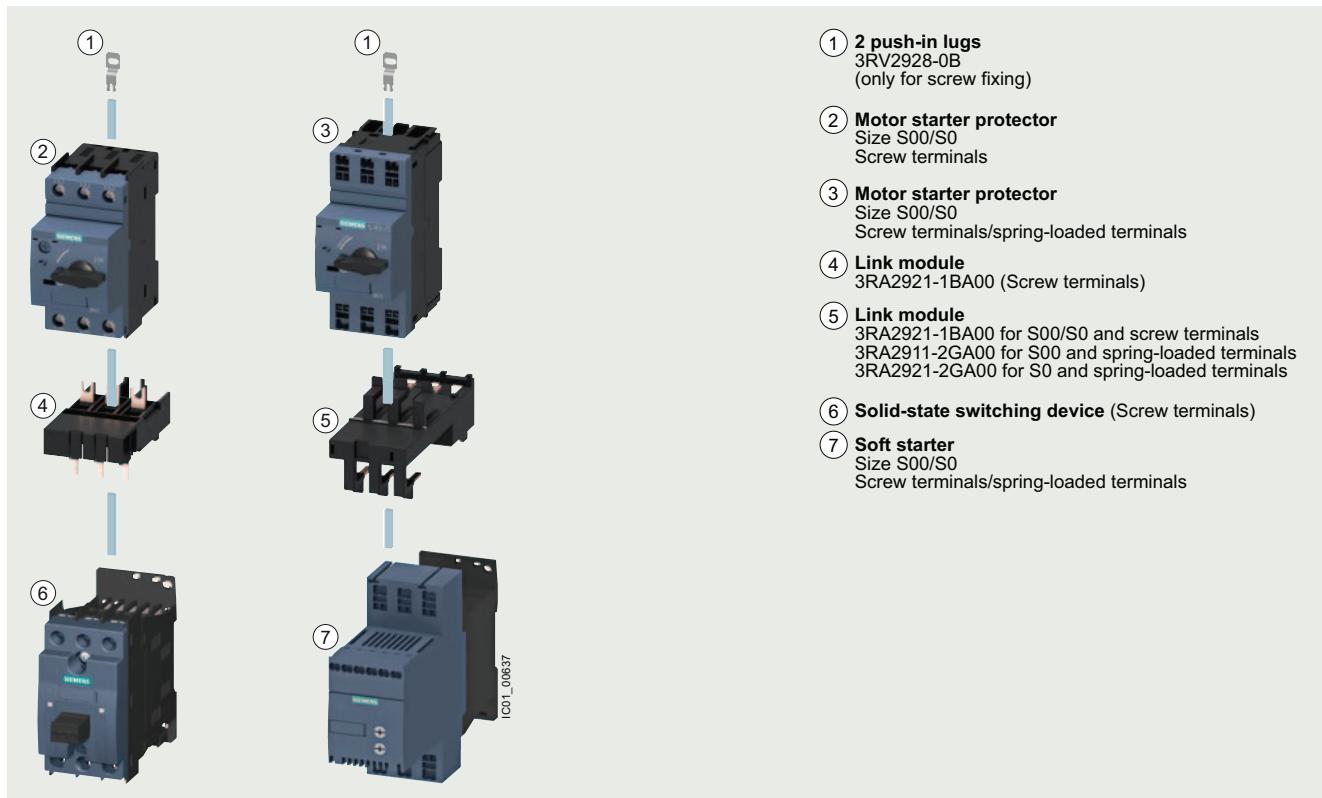

Left: Motor starter protector combination with solid-state switching device with screw terminals


Right: Motor starter protector combination with soft starter with spring-loaded terminals

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Direct-on-line starting • For DIN-rail mounting • Size S2

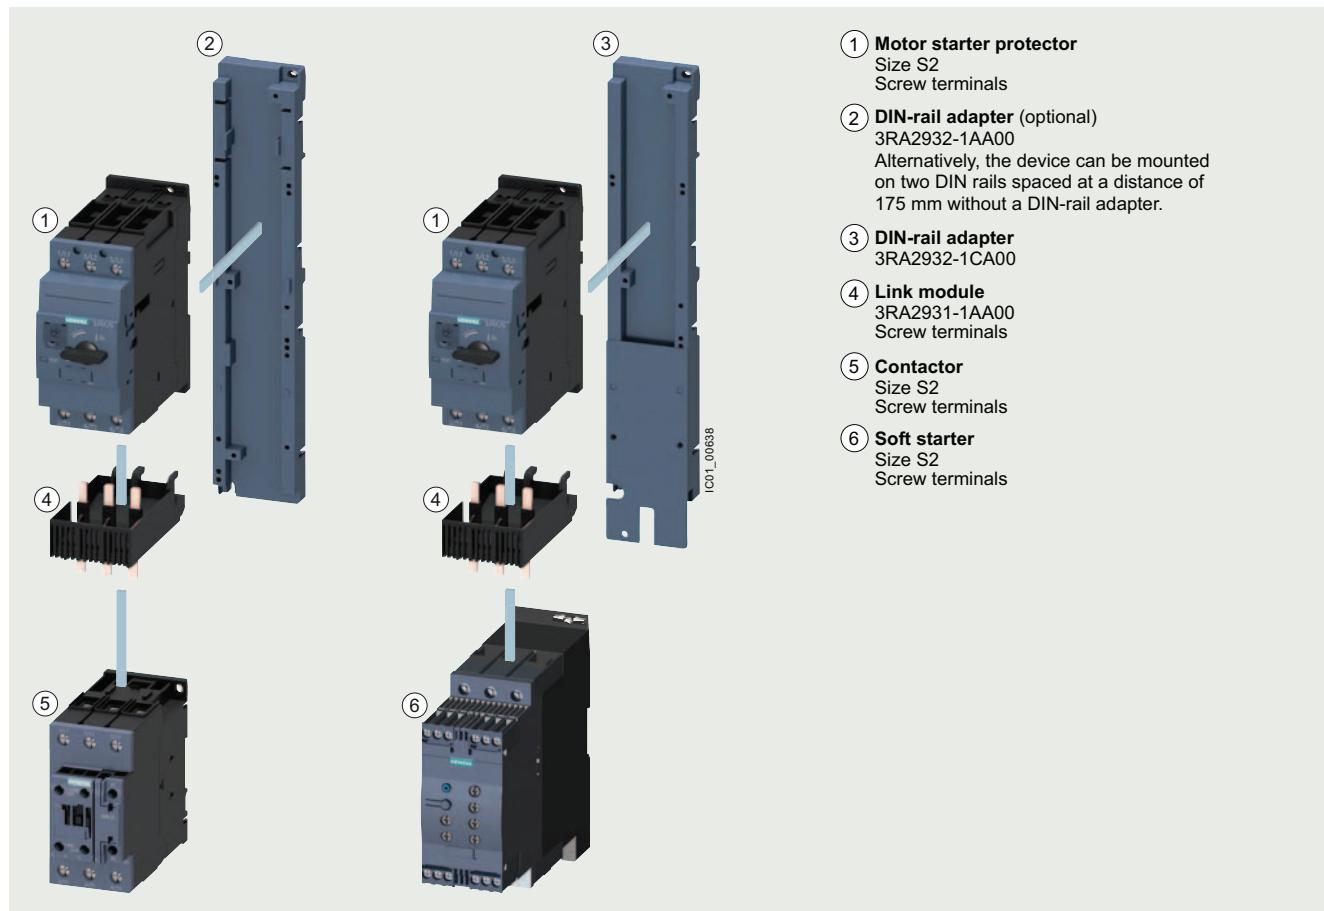


Left: 3RA21 load feeder with screw terminals

Right: Motor starter protector combination with soft starter with screw terminals

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

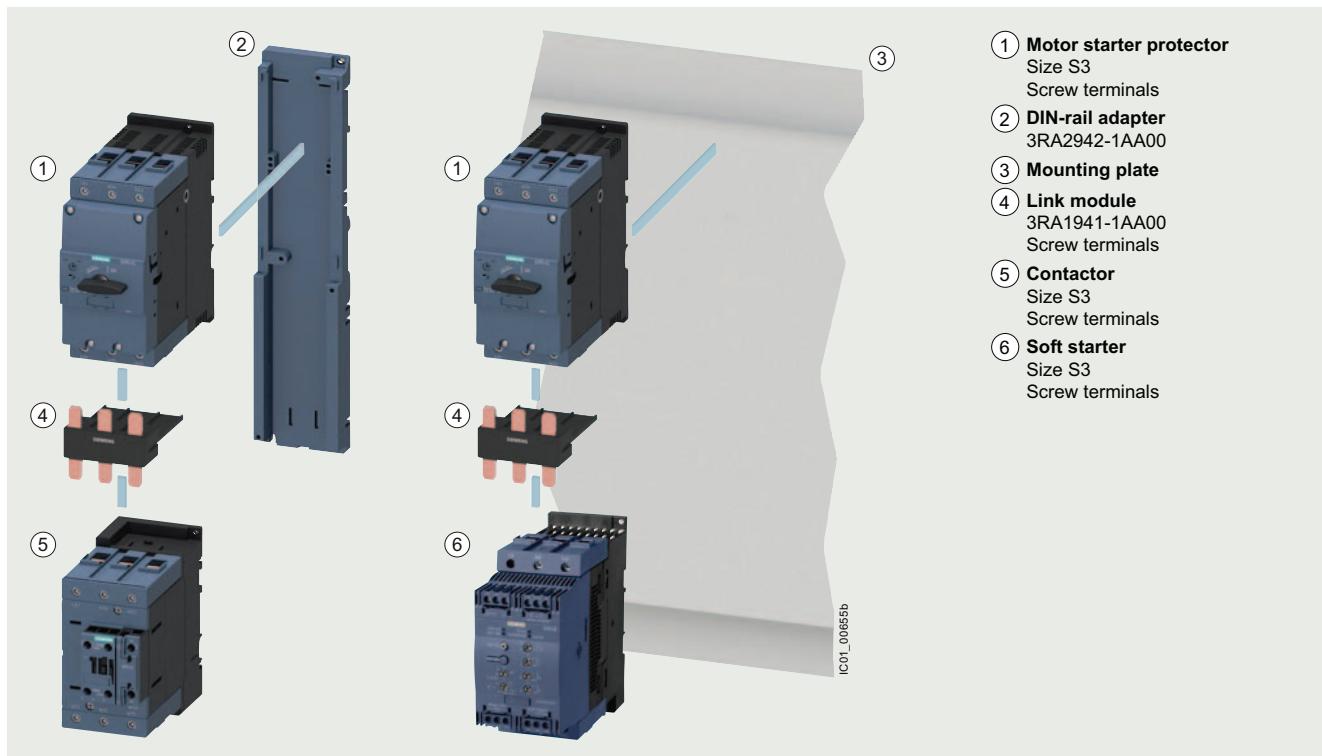
General data**Direct-on-line starting • For DIN-rail mounting • Size S3**3RA21 load feeder for direct-on-line starting and DIN-rail mounting in size S3
(the version with screw terminals is shown in the illustration)

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Direct-on-line starting • For 60 mm busbar systems • Sizes S00 and S0

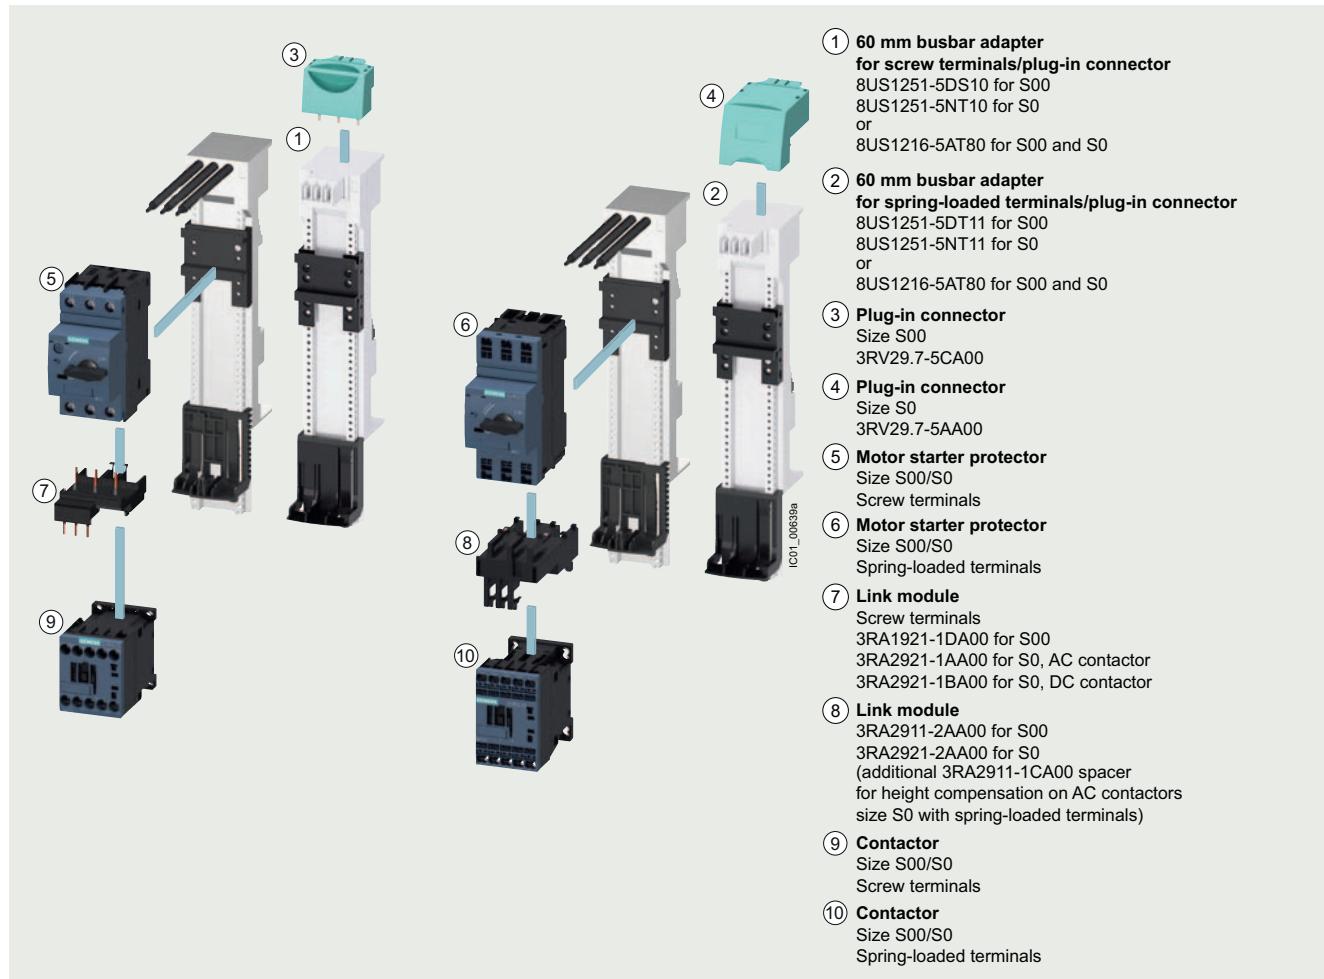


Left: 3RA21 load feeder for direct-on-line starting with busbar adapter with screw terminals

Right: 3RA21 load feeder for direct-on-line starting with busbar adapter with spring-loaded terminals

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

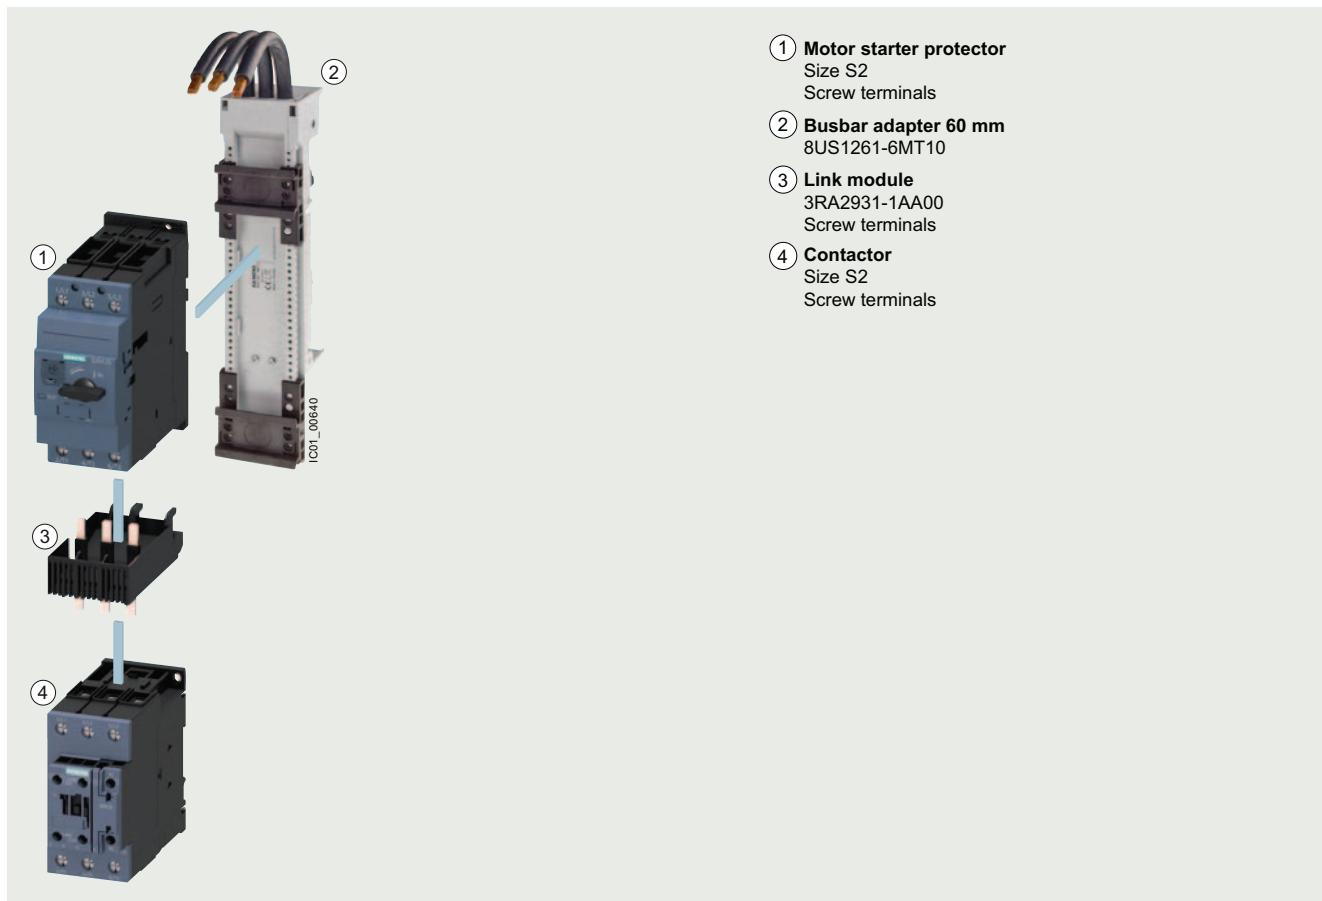General data**Direct-on-line starting • For 60 mm busbar systems • Size S2**


3RA21 load feeder for direct-on-line starting with busbar adapter with screw terminals

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Reversing operation • For DIN-rail mounting or screw fixing • Size S00

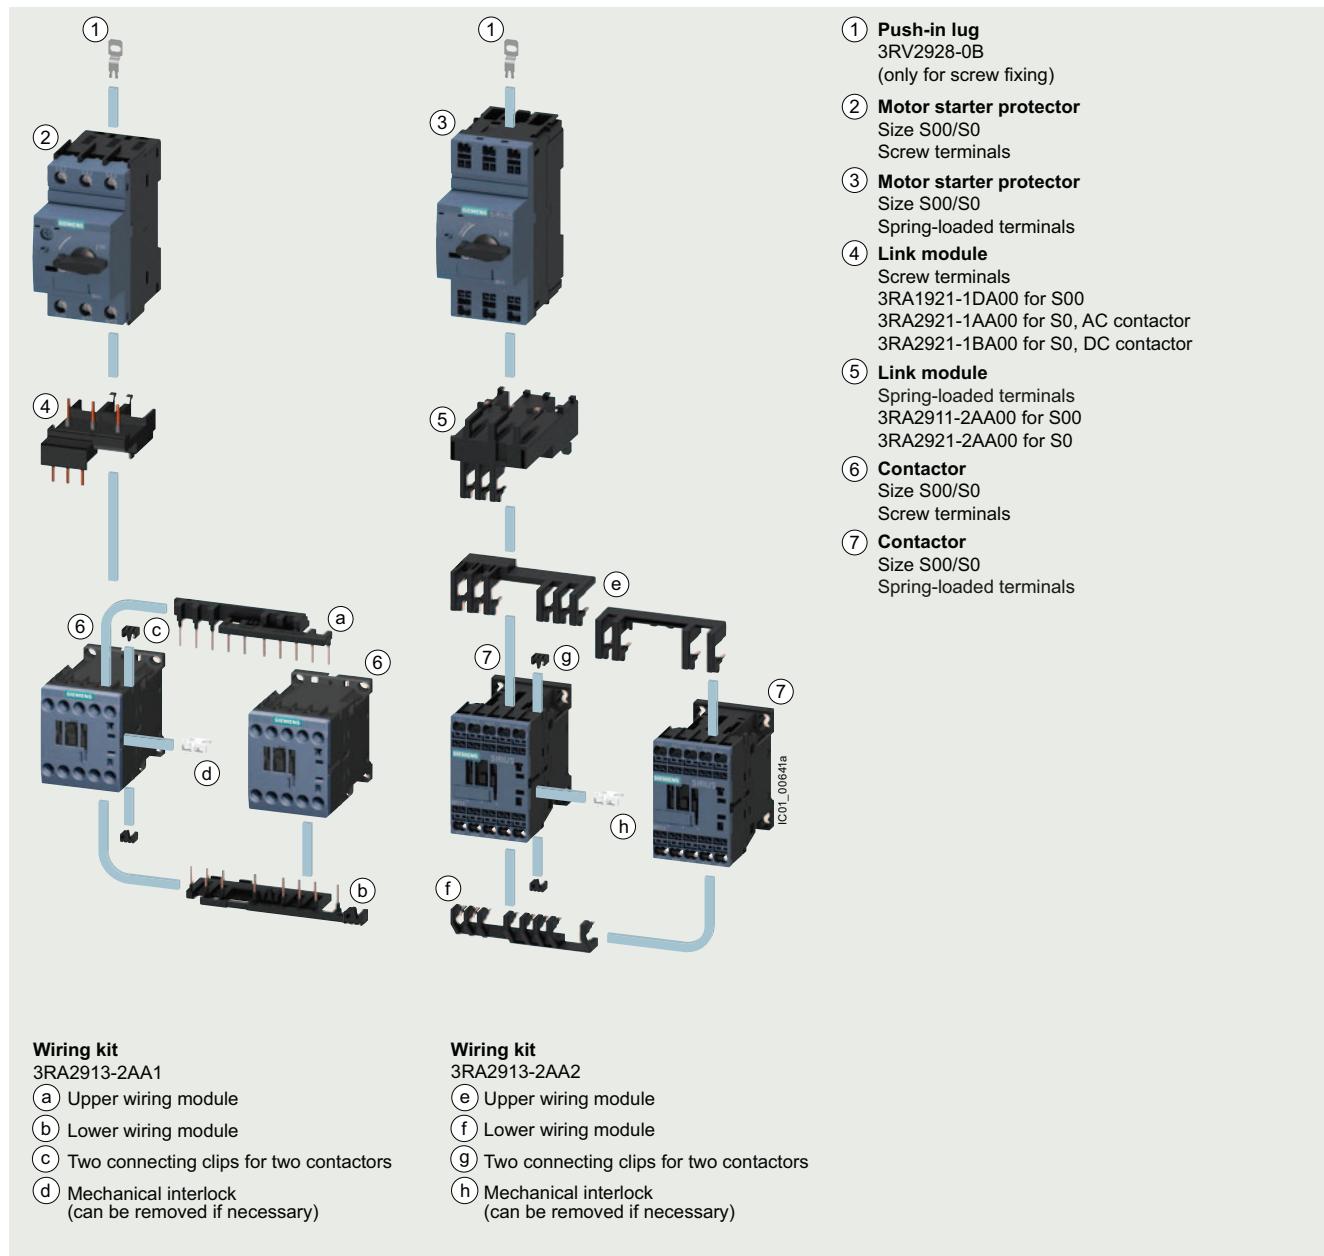


Left: 3RA22 load feeder with screw terminals with push-in lugs with two contactors for reversing operation and 3RA2913-2AA1 wiring kit for connection of the contactors (including mechanical interlock and connecting clips)

Right: 3RA22 load feeder with spring-loaded terminals with push-in lugs with two contactors for reversing operation and 3RA2913-2AA2 wiring kit (including mechanical interlock and connecting clips)

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

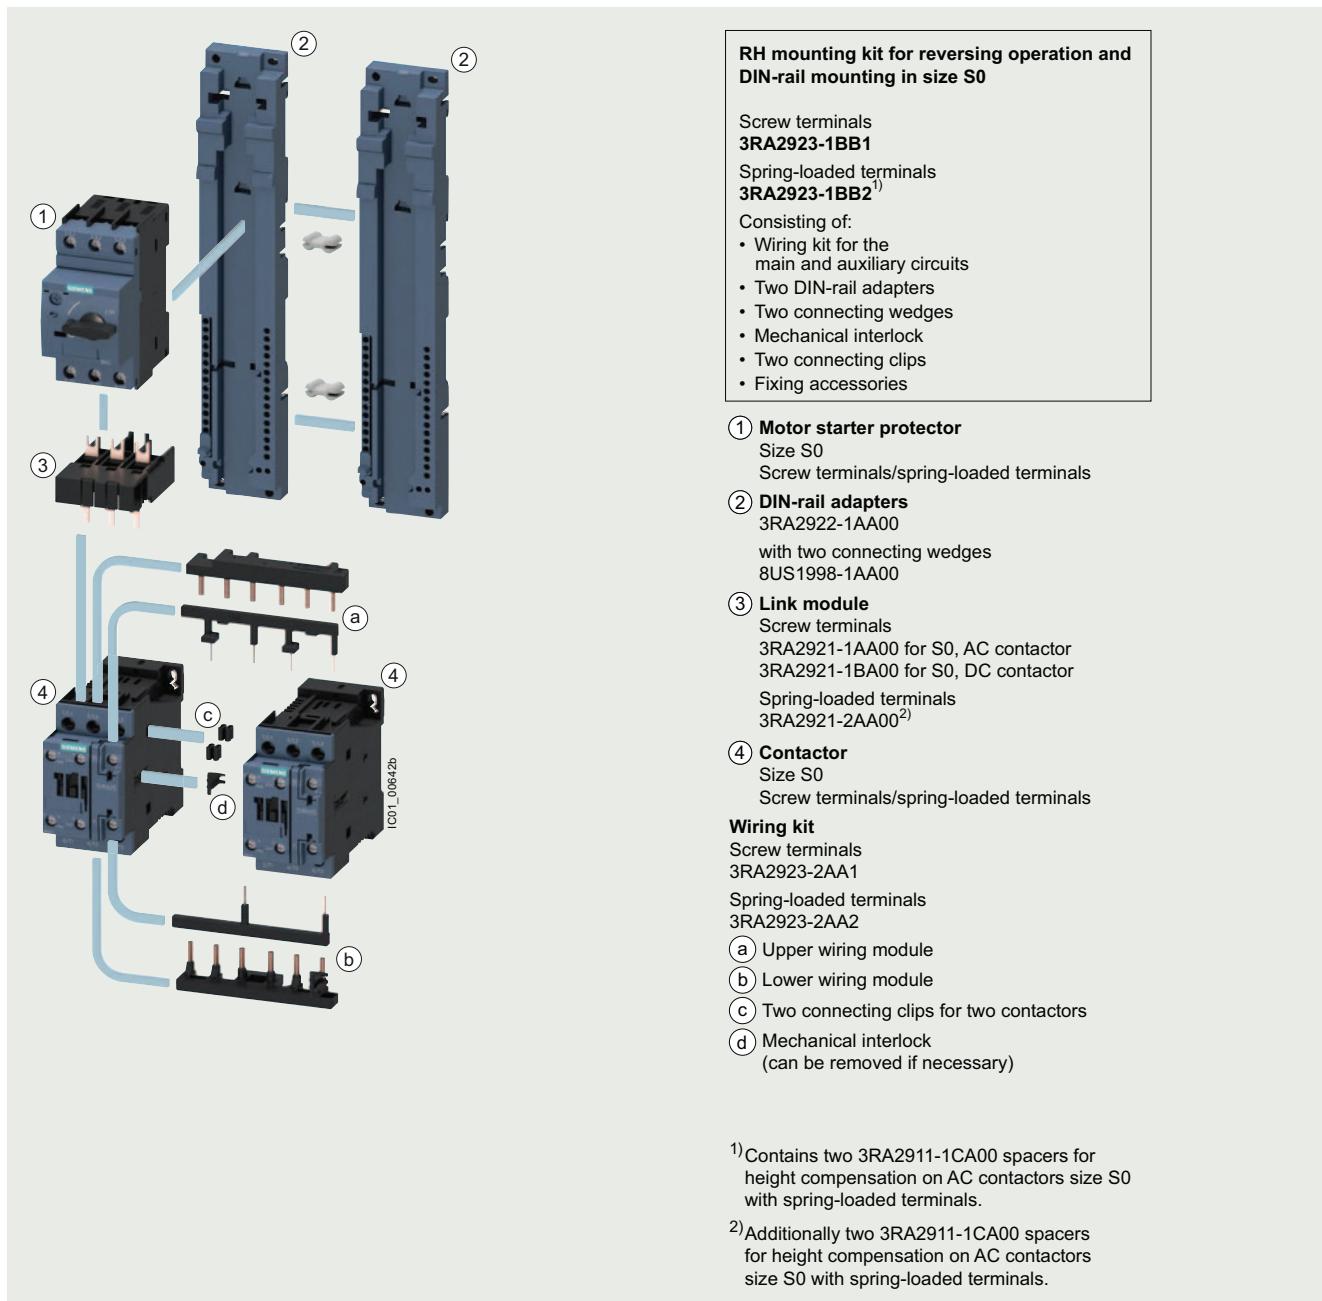General data**Reversing operation • For DIN-rail mounting • Size S0**

3RA22 load feeder for reversing operation and DIN-rail mounting in size S0
(the version with screw terminals is shown in the illustration)


RH mounting kits for reversing operation and DIN-rail mounting in size S0, [see page 8/54](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Reversing operation • For DIN-rail mounting • Size S2

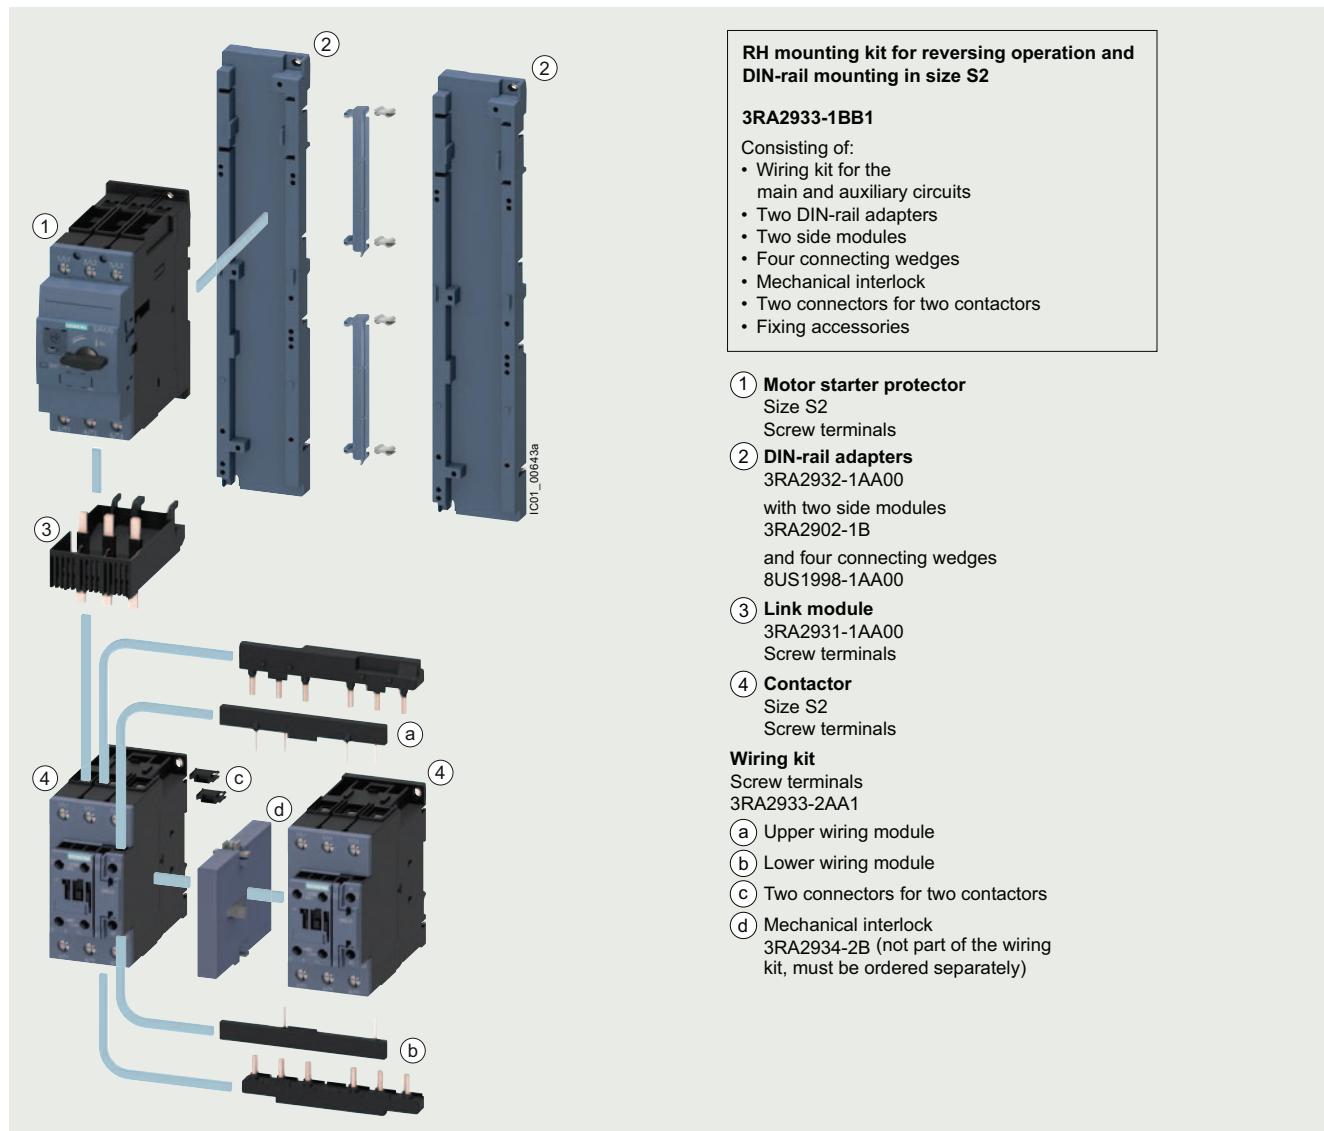


3RA22 load feeder for reversing operation and DIN-rail mounting in size S2
(the version with screw terminals is shown in the illustration)

RH mounting kits for reversing operation and DIN-rail mounting in size S2, [see page 8/54](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

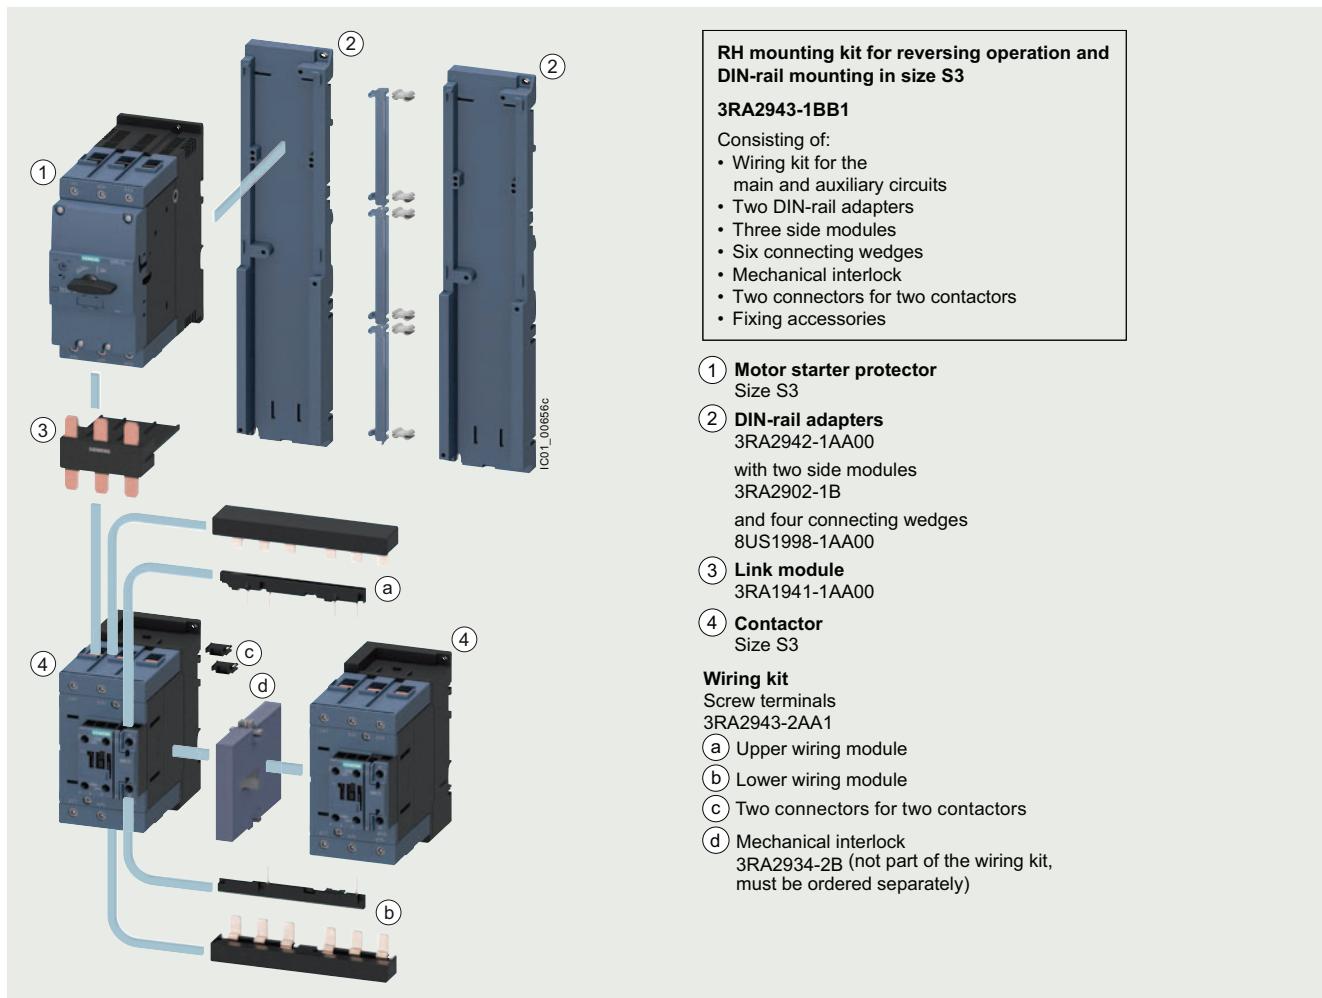General data**Reversing operation • For DIN-rail mounting • Size S3**

3RA22 load feeder for reversing operation and DIN-rail mounting in size S3
(the version with screw terminals is shown in the illustration)


RH mounting kits for reversing operation and DIN-rail mounting
in size S3, [see page 8/54](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Reversing operation • For 60 mm busbar systems • Sizes S00 and S0

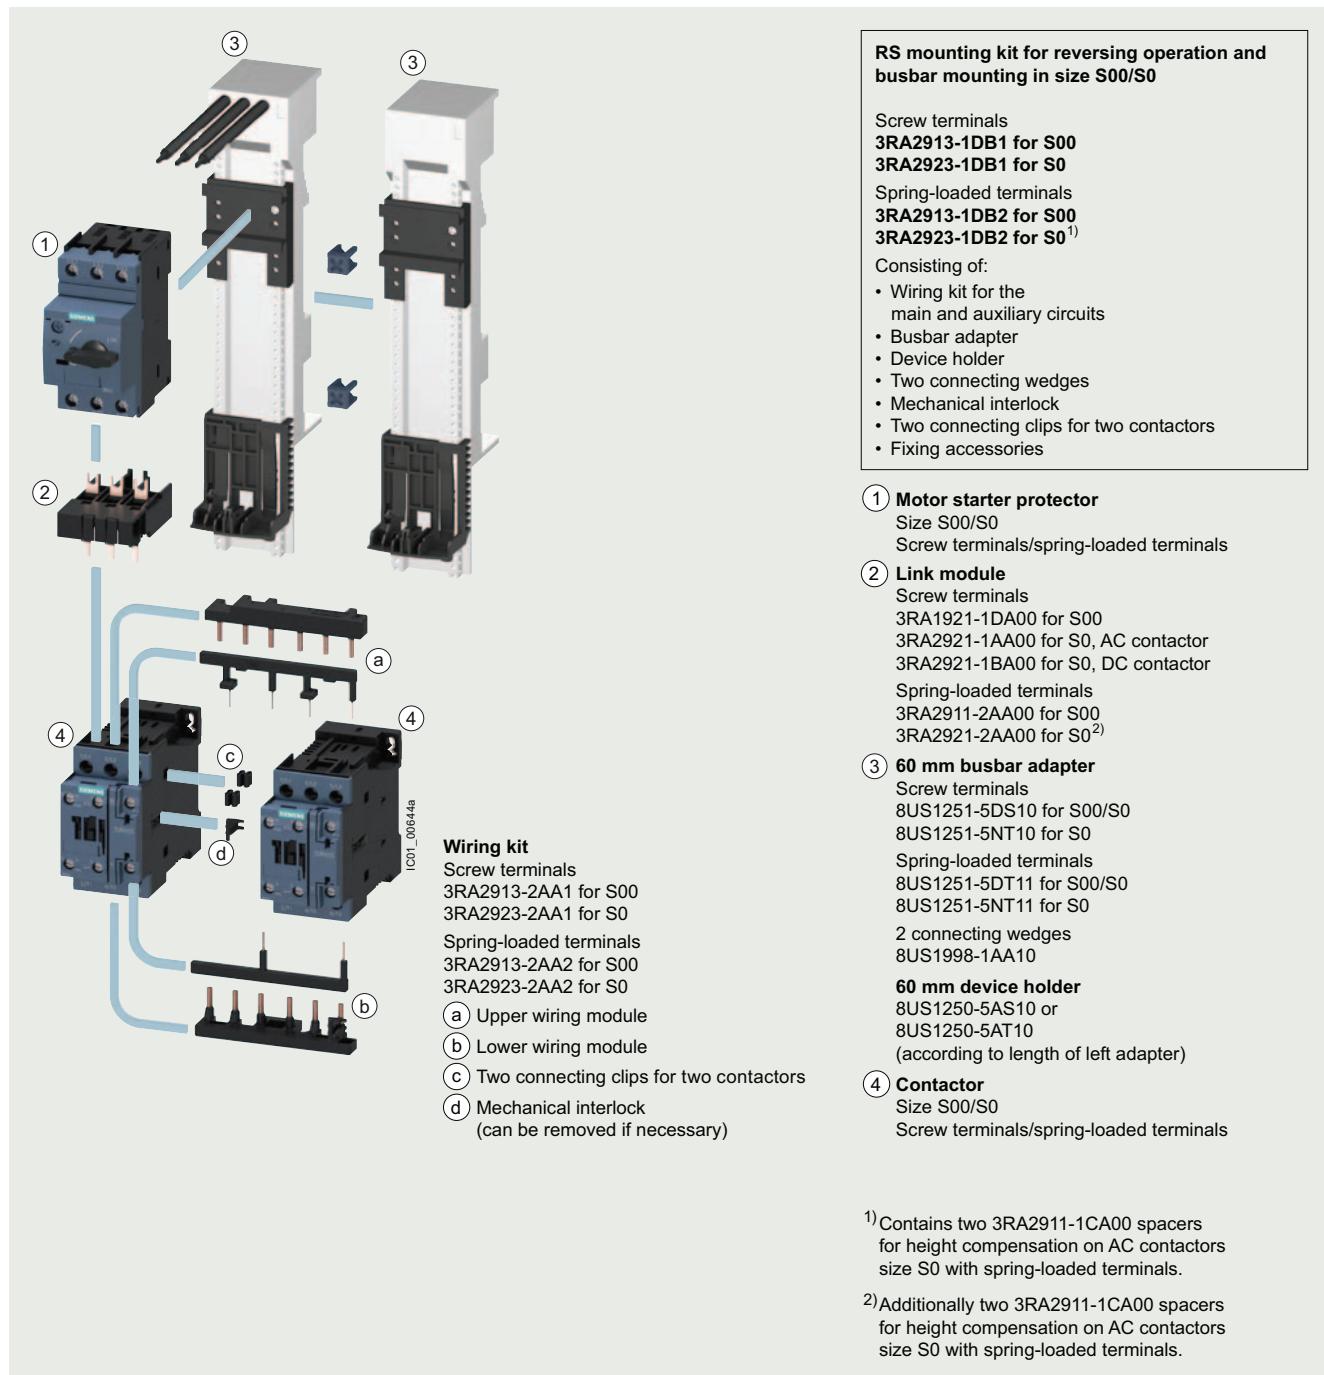

3RA22 load feeder for reversing operation and 60 mm busbar
(the version with screw terminals is shown in the illustration)


RS mounting kits for reversing operation and busbar mounting in size S00/S0, [see page 8/56](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Reversing operation • For 60 mm busbar systems • Size S2

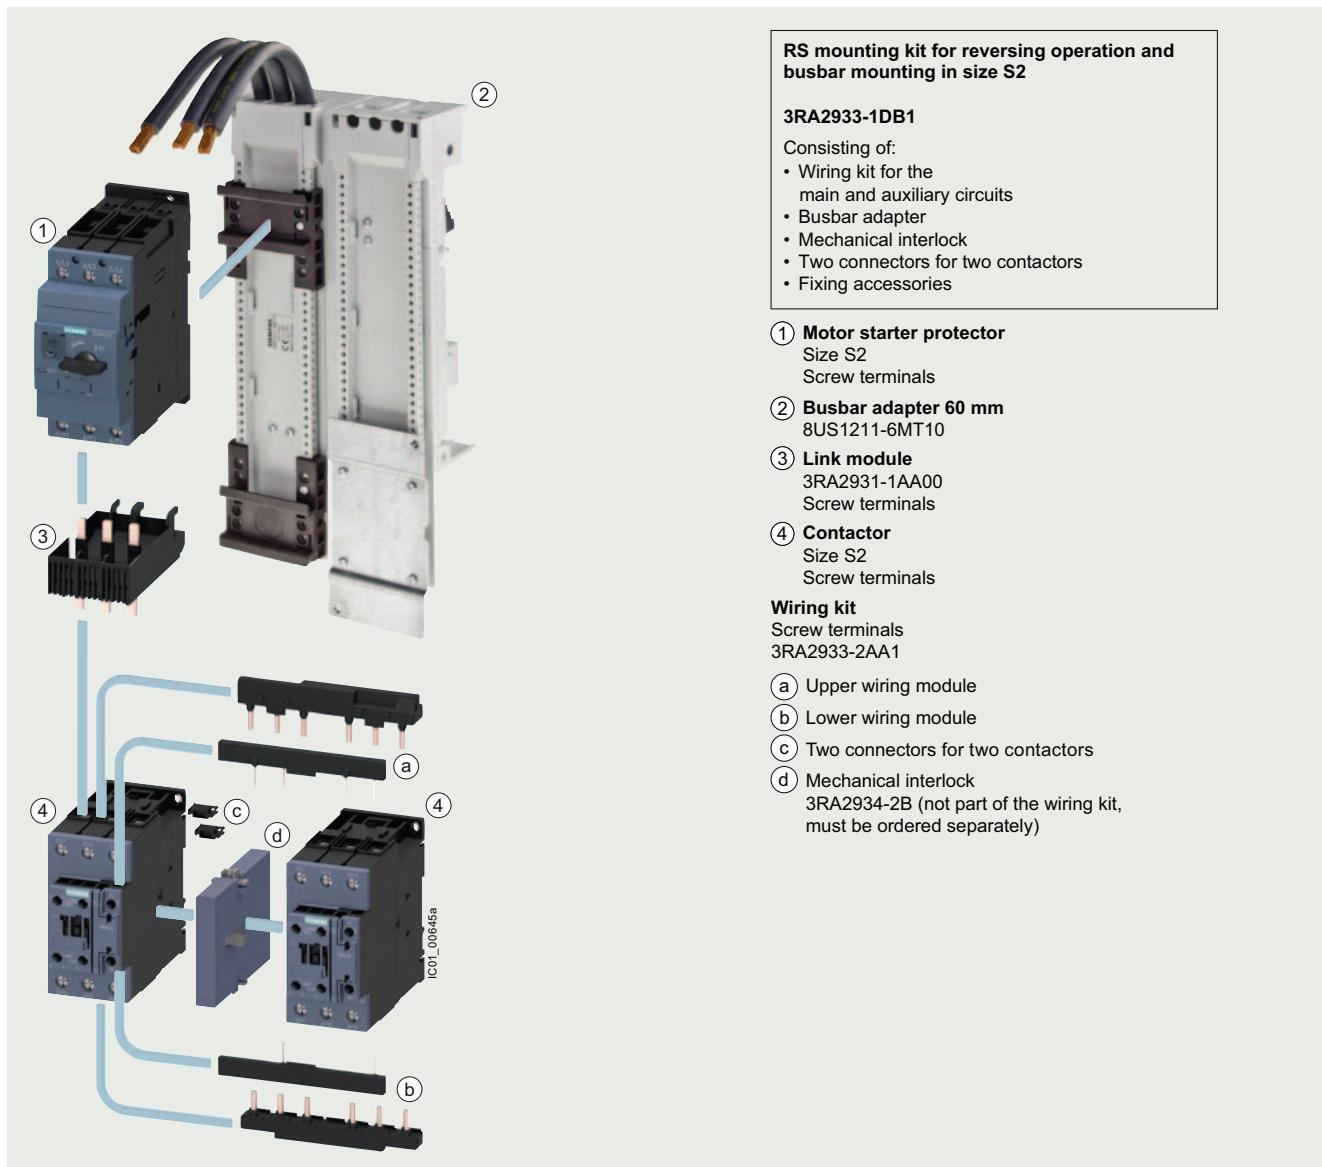

3RA22 load feeder for reversing operation and 60 mm busbar in size S2
(the version with screw terminals is shown in the illustration)

RS mounting kits for reversing operation and busbar mounting in size S2, see page 8/56.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Article number scheme

Product versions		Article number							
SIRIUS load feeders		3RA2 <input type="checkbox"/> 0 - <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> - <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>							
Product function	Direct-on-line starter Reversing starter	1 2							for motor standard output 0.06 ... 45 kW for motor standard output 0.06 ... 45 kW
Size	S00 S0 e.g. 3 = S2 e.g. 5 = S2	1 2 <input type="checkbox"/> <input type="checkbox"/>							at $I_q = 100 \text{ kA}$ at 400 V at $I_q = 150 \text{ kA}$ at 400 V
Setting range of the overload release	e.g. 0B = 0.14 ... 0.2 A		<input type="checkbox"/>	<input type="checkbox"/>					
Assembly, assembly type, connection method	e.g. A = S00, S0, S2		<input type="checkbox"/>						Direct mounting, screw terminals
Contactor size, rated power at 400 V AC	e.g. 15 = S00/3 kW		<input type="checkbox"/>	<input type="checkbox"/>					
Version of auxiliary switches on contactor	e.g. 0 = S0, S2 e.g. 1 = S00 e.g. 2 = S00		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				1 NO + 1 NC integrated in contactor 1 NO integrated in contactor 1 NC integrated in contactor
Solenoid coil operating range (contactor)	e.g. A = S00, S0, S2		<input type="checkbox"/>						AC $0.8 \times U_{s \min} \dots 1.1 \times U_{s \max}$, standard coil without RC circuit
Rated control supply voltage (contactor)	230 V AC 24 V DC			P 0	B 4				50/60 Hz AC for S00, 50 Hz AC for S0 ... S3
Example		3RA2 1 1 0 - 0 B A 1 5 - 1 A P 0							

Note:

The article number scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders, please use the article numbers quoted in the selection and ordering data.

Benefits


- Minimum planning and assembly work and far less wiring with the preassembled complete units (only one article number 3RA2)
- Plug-in connectors available from the motor starter protector to all types of SIRIUS controls, for quicker and error-free assembly of feeders with screw and spring-loaded terminals
- High planning reliability through consistent combination tests for fuseless and fused configuration according to IEC and UL/CSA
- Comprehensive approvals for use world-wide on request, see page 16/9 onwards.
- High operational reliability through short-circuit breaking capacity of 150 kA with type of coordination "1" and "2"
- Uniform accessories for sizes S00, S0, S2 and S3
- Spring-loaded terminals possible throughout: Enhanced operational reliability (vibration-resistant wiring) and less wiring work thanks to plug-in connections (S00 and S0 only)
- Power loss 5 to 10% smaller than for comparable devices, hence lower energy consumption
- Connection of feeders to the control system through standardized system connection (IO-Link and AS-i), for fast integration in TIA and less wiring work

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data**Technical specifications****More information**SiePortal, see www.siemens.com/product?3RA2Equipment Manual, see
<https://support.industry.siemens.com/cs/ww/en/view/60284351>Digital Configuration Manual for load feeders, see
<https://imp.siemens.com/digital-engineering-manual/dem>Configuration Manual for load feeders, see
<https://support.industry.siemens.com/cs/ww/en/view/39714188>FAQs, see <https://support.industry.siemens.com/cs/ww/en/ps/16289/faq>

Direct-on-line starters/ reversing starters	Size	Connection method	Mounting	Control voltage	Width W	Height H	Depth D
					mm	mm	mm
Mounting dimensions							
Direct-on-line starters 3RA21. (Size S3 or larger only available for customer assembly)	S00 3RA211.	Screw terminals Spring-loaded terminals	DIN rails Busbar adapters DIN rails Busbar adapters	AC/DC AC/DC AC/DC AC/DC	45 45 45 45	167 200 198 260	97 155 97 155
	S0 3RA212.	Screw terminals Spring-loaded terminals	DIN rails Busbar adapters DIN rails Busbar adapters	AC DC AC DC AC/DC AC/DC	45 45 45 45 45 45	193 193 260 260 243 260	97 107 155 165 107 165
	S2 3RA213./3RA215.	Screw terminals	DIN rails Busbar adapters	AC/DC AC/DC	55 55	274 350	150 208
	S3 (customer assembly only)	Screw terminals	DIN-rail adapters	AC/DC	70	333	198
Reversing starters 3RA22. (Size S2 or larger only available for customer assembly)	S00 3RA221.	Screw terminals Spring-loaded terminals	DIN rails Busbar adapters DIN rails Busbar adapters	AC/DC AC/DC AC/DC AC/DC	90 90 90 90	170 200 204 260	97 155 97 155
	S0 3RA222.	Screw terminals Spring-loaded terminals	DIN-rail adapters Busbar adapters DIN-rail adapters Busbar adapters	AC DC AC DC AC/DC AC/DC	90 90 90 90 90 90	265 265 260 260 270 260	120.3 130 155 165 131 165
	S2 (customer assembly only)	Screw terminals	DIN rails Busbar adapters	AC/DC AC/DC	120 120	295 361	175 208
	S3 (customer assembly only)	Screw terminals	DIN-rail adapters	AC/DC	150	333	198

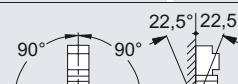Type	3RA2.1	3RA2.2	3RA213, 3RA215	For customer assembly
Size	S00	S0	S2	S3
Mechanics and environment				
Permissible ambient temperature				
• During operation	°C	-20 ... +60		
• During storage and transport	°C	-55 ... +80		
Weight	kg	0.6 ... 1.5	0.8 ... 2.3	2.2 ... 2.5
Permissible mounting position				
				
			Important: According to DIN 43602, start command "I" at the right or top	
Shock resistance	IEC 60068-2-27	g/ms	6/11 (sine pulse)	On request
Degree of protection IP on the front	According to IEC 60529		IP20	
Touch protection on the front	According to IEC 60529		Finger-safe for vertical touching from the front	

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

General data

Type	3RA2.1	3RA2.2	3RA213, 3RA215	For customer assembly	
Size Number of poles	S00 3	S0 3	S2 3	S3 3	
Electrical specifications	Standards <ul style="list-style-type: none"> IEC 60947-1, EN 60947-1 (VDE 0660 Part 100) IEC 60947-2, EN 60947-2 (VDE 0660 Part 101) IEC 60947-4-1, EN 60947-4-1 (VDE 0660 Part 102) 				
Max. rated current $I_{n\max}$ (= max. rated operational current I_e)	A	16	32	65	100
Rated operational voltage U_e	V	690			
Rated frequency	Hz	50/60			
Rated insulation voltage U_i (pollution degree 3)	V	690			
Rated impulse withstand voltage U_{imp}	kV	6			
Trip class (CLASS)	According to IEC 60947-4-1, EN 60947-4-1 (VDE 0660 Part 102)	10			
Rated short-circuit current I_q At 50/60 Hz 400 V AC	According to IEC 60947-4-1, EN 60947-4-1 (VDE 0660 Part 102)	kA	150	3RA213: 100 3RA215: 150	With 3RV2041: 100 With 3RV2042: 150
Types of coordination	According to IEC 60947-4-1, EN 60947-4-1 (VDE 0660 Part 102)		See Selection and ordering data, page 8/24 onwards		
Power loss P_v of all main conducting paths Dependent on rated current I_n (upper setting range)			See technical specifications of the individual devices: <ul style="list-style-type: none"> Switching devices – Contactors and contactor assemblies, page 3/25 onwards Protection equipment → Motor starter protectors/circuit breakers, page 7/17 onwards 		
Power consumption of the solenoid coils with contactors			See technical specifications of the contactor, page 3/25 onwards		
Solenoid coil operating range with contactors					
Endurance of the motor starter protector					
• Mechanical endurance	Operating cycles	100 000	Up to 52 A: 50 000	25 000	
• Electrical endurance	Operating cycles	100 000	From 59 A: 20 000	25 000	
• Max. switching frequency per hour (motor starts)	1/h	15			
Endurance of contactor					
• Mechanical endurance	Operating cycles	30 million	10 million		
• Electrical endurance	Operating cycles		See endurance characteristic curves of the contactors, page 3/26 onwards		
Phase failure sensitivity of the motor starter protector	According to IEC 60947-1, EN 60947-1 (VDE 0660 Part 102)	✓			
Isolating features of the motor starter protector	According to IEC 60947-2, EN 60947-2 (VDE 0660 Part 101)	✓			
Main and EMERGENCY-STOP switch features of the motor starter protector and accessories	According to IEC 60204-1, EN 60204-1 (VDE 0113 Part 1)	✓	(With overvoltage releases of category "1" under conditions of proper use)		
Protective separation between main and auxiliary circuits	According to EN 60947-1, Appendix N	V	Up to 400		
Mirror contacts for contactors Integrated auxiliary switches		✓	According to IEC 60947-4-1, Annex F		

✓ Function available

Load feeders and motor starters for use in the control cabinet


SIRIUS 3RA2 load feeders

3RA21 direct-on-line starters > for DIN-rail mounting or screw fixing IE3/IE4 ready AC-3e

Selection and ordering data



Direct-on-line starting

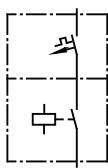

Rated control supply voltage

50/60 Hz 230 V AC for S00, 50 Hz 230 V AC for S0, S2 and S3

With screw terminals

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module,
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor size S00: 1 NO,
Contactor sizes S0, S2 and S3: 1 NO + 1 NC

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾		Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG				
	Standard output P	Motor current I (guide value)	Adjustable current response value of the inverse-time delayed overload release	Motor starter protector	+ Contactor								
	KW	A	A										
Type of coordination "2" at $I_q = 150 \text{ kA}$ at 400 V (also compatible with type of coordination "1")													

	3RV20	3RT20	3RA	Toc 2
S00	0.06	0.2	0.14 ... 0.2	11-0BA10
	0.06	0.2	0.18 ... 0.25	15-1AP01
	0.09	0.3	0.22 ... 0.32	1921-1DA00
	0.09	0.3	0.28 ... 0.4	3RA2110-0EA15-1AP0
	0.12	0.4	0.35 ... 0.5	3RA2110-0FA15-1AP0
	0.18	0.6	0.45 ... 0.63	3RA2110-0GA15-1AP0
	0.18	0.6	0.55 ... 0.8	3RA2110-0HA15-1AP0
	0.25	0.85	0.7 ... 1	3RA2110-0JA15-1AP0
	0.37	1.1	0.9 ... 1.25	3RA2110-0KA15-1AP0
	0.55	1.5	1.1 ... 1.6	3RA2110-1AA15-1AP0
	0.75	1.9	1.4 ... 2	3RA2110-1BA15-1AP0
	0.75	1.9	1.8 ... 2.5	3RA2110-1CA15-1AP0
	1.1	2.7	2.2 ... 3.2	3RA2110-1DA15-1AP0
	1.5	3.6	2.8 ... 4	3RA2110-1EA15-1AP0
S0	1.5	3.6	3.5 ... 5	3RA2120-1FA24-0AP0
	2.2	4.9	4.5 ... 6.3	3RA2120-1GA24-0AP0
	3	6.5	5.5 ... 8	3RA2120-1HA24-0AP0
	4	8.5	7 ... 10	3RA2120-1JA24-0AP0
	5.5	11.5	9 ... 12.5	3RA2120-1KA24-0AP0
	7.5	15.5	10 ... 16	3RA2120-4AA26-0AP0
	7.5	15.5	13 ... 20	3RA2120-4BA27-0AP0
	11	22	16 ... 22	3RA2120-4CA27-0AP0
	11	22	18 ... 25	3RA2120-4DA27-0AP0
	15	28	23 ... 28	3RA2120-4NA27-0AP0
	15	29 ⁴⁾	27 ... 32	3RA2120-4EA27-0AP0
S2	15	29	22 ... 32	3RA2150-4EA35-0AP0
	18.5	35	28 ... 36	3RA2150-4PA35-0AP0
	18.5	35	32 ... 40	3RA2150-4UA35-0AP0
	22	41	35 ... 45	3RA2150-4VA36-0AP0
	22	41	42 ... 50	3RA2150-4WA36-0AP0
	30	55	49 ... 59	3RA2150-4XA37-0AP0
	30	55	54 ... 65	3RA2150-4JA37-0AP0
	37 ⁵⁾	66	62 ... 75	3RA2150-4KA38-0AP0
S3	Size S3 available on request			
	Size S3 is only available for customer assembly			

1) Push-in lugs, see [Accessories](#), page 8/54.

2) Auxiliary switches, see [Accessories](#), page 8/47.

3) The actual starting and rated data of the motor to be protected must be considered when selecting the units.

4) Suitable for use with IE3 and IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using size S2.


5) Maximum permissible current setting at motor starter protector 65 A, as the maximum permissible current of the 3RA2931-1AA00 link module is 65 A.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

AC-3e IE3/IE4 ready 3RA21 direct-on-line starters > for DIN-rail mounting or screw fixing

3RA2110

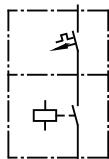Direct-on-line starting**Rated control supply voltage**

50/60 Hz 230 V AC for S00

With screw terminals

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor size S00: 1 NO

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾	Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)	Motor starter protector	+ Contactor	+ Link module				
	kW	A	A			Article No.	Basic price per PU		

Type of coordination "1" at $I_q = 150 \text{ kA}$ at 400 V
(motor starter protector is compatible with type of coordination "2")

3RV20 3RT20 3RA

TCC
1

S00	Feeders for lower outputs, see table for type of coordination "2" on the previous page.								
1.5	3.6	3.5 ... 5	11-1FA10	15-1AP01	1921-1DA00	3RA2110-1FA15-1AP0	1	1 unit	41D
2.2	4.9	4.5 ... 6.3	11-1GA10			3RA2110-1GA15-1AP0	1	1 unit	41D
3	6.5	5.5 ... 8	11-1HA10			3RA2110-1HA15-1AP0	1	1 unit	41D
4	8.5	7 ... 10	11-1JA10	16-1AP01		3RA2110-1JA16-1AP0	1	1 unit	41D
5.5	11.5	9 ... 12.5	11-1KA10	17-1AP01		3RA2110-1KA17-1AP0	1	1 unit	41D
7.5	15.5	10 ... 16	11-4AA10	18-1AP01		3RA2110-4AA18-1AP0	1	1 unit	41D

1) Push-in lugs, see **Accessories**, page 8/54.2) Auxiliary switches, see **Accessories**, page 8/47.

3) The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet


SIRIUS 3RA2 load feeders

3RA21 direct-on-line starters > for DIN-rail mounting or screw fixing **IE3/IE4 ready** **AC-3e**



3RA2130

Direct-on-line starting

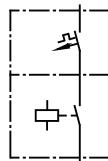

**Rated control supply voltage
50 Hz 230 V AC for S2 and S3
With screw terminals**

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor sizes S2 and S3: 1 NO + 1 NC

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾		Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)		Motor starter protector	+ Contactor	+ Link module				
KW	A	A					Article No.	Basic price per PU		

Type of coordination "2" at $I_q = 100 \text{ kA}$ at 400 V (motor starter protector is compatible with type of coordination "2")

	3RV20	3RT20	3RA	T _{oC} Z			
S2	15 29 22 ... 32 31-4EA10 35-1AP00 2931-1AA00	3RA2130-4EA35-0AP0	1	1 unit	41D		
	18.5 35 28 ... 36 31-4PA10	3RA2130-4PA35-0AP0	1	1 unit	41D		
	18.5 35 32 ... 40 31-4UA10	3RA2130-4UA35-0AP0	1	1 unit	41D		
	22 41 35 ... 45 31-4VA10 36-1AP00	3RA2130-4VA36-0AP0	1	1 unit	41D		
	22 41 42 ... 50 31-4WA10	3RA2130-4WA36-0AP0	1	1 unit	41D		
	30 55 49 ... 59 31-4XA10 37-1AP00	3RA2130-4XA37-0AP0	1	1 unit	41D		
	30 55 54 ... 65 31-4JA10	3RA2130-4JA37-0AP0	1	1 unit	41D		
	37 ⁴⁾ 66 62 ... 73 31-4KA10 38-1AP00	3RA2130-4KA38-0AP0	1	1 unit	41D		
S3	Size S3 available on request	Size S3 is only available for customer assembly					

¹⁾ Push-in lugs, see [Accessories](#), page 8/54.

²⁾ Auxiliary switches, see [Accessories](#), page 8/47.

³⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

⁴⁾ Maximum permissible current setting at motor starter protector 65 A, as the maximum permissible current of the 3RA2931-1AA00 link module is 65 A.


Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

AC-3e IE3/IE4 ready 3RA21 direct-on-line starters > for DIN-rail mounting or screw fixing



3RA2110

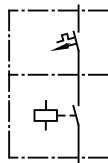Direct-on-line starting**Rated control supply voltage 24 V DC
With screw terminals**

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor size S00: 1 NO

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾	Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)	Motor starter protector	+ Contactor	+ Link module	Screw terminals			
KW	A	A				Article No.	Basic price per PU		

Type of coordination "1" at $I_q = 150 \text{ kA}$ at 400 V
(motor starter protector is compatible with type of coordination "2")

3RV20 3RT20 3RA

ToC
1

S00	Feeders for lower outputs, see table for type of coordination "2" on the previous page.	3RA2110-1FA15-1BB4	1	1 unit	41D
1.5	3.6	3.5 ... 5	11-1FA10	15-1BB41	1921-1DA00
2.2	4.9	4.5 ... 6.3	11-1GA10		
3	6.5	5.5 ... 8	11-1HA10		
4	8.5	7 ... 10	11-1JA10	16-1BB41	
5.5	11.5	9 ... 12.5	11-1KA10	17-1BB41	
7.5	15.5	10 ... 16	11-4AA10	18-1BB41	
			3RA2110-1JA16-1BB4		1
			3RA2110-1KA17-1BB4		1
			3RA2110-4AA18-1BB4		1

1) Push-in lugs, see [Accessories](#), page 8/54.

2) Auxiliary switches, see [Accessories](#), page 8/47.

3) The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet


SIRIUS 3RA2 load feeders

3RA21 direct-on-line starters > for DIN-rail mounting or screw fixing **IE3/IE4 ready** **AC-3e**



3RA2130

Direct-on-line starting

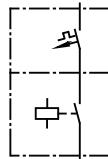

Rated control supply voltage 24 V DC With screw terminals

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor sizes S2 and S3: 1 NO + 1 NC

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾	Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)	Motor starter protector	+ Contactor	+ Link module	Screw terminals			
						Article No.	Basic price per PU		
	KW	A	A						

Type of coordination "2" at $I_q = 100 \text{ kA}$ at 400 V
(motor starter protector is compatible with type of coordination "2")

		3RV20	3RT20	3RA	ToC 2				
S2	15	29	22 ... 32	31-4EA10	35-1NB30	2931-1AA00	3RA2130-4EA35-0NB3	1	1 unit 41D
	18.5	35	28 ... 36	31-4PA10			3RA2130-4PA35-0NB3	1	1 unit 41D
	18.5	35	32 ... 40	31-4UA10			3RA2130-4UA35-0NB3	1	1 unit 41D
	22	41	35 ... 45	31-4VA10	36-1NB30		3RA2130-4VA36-0NB3	1	1 unit 41D
	22	41	42 ... 50	31-4WA10			3RA2130-4WA36-0NB3	1	1 unit 41D
	30	55	49 ... 59	31-4XA10	37-1NB30		3RA2130-4XA37-0NB3	1	1 unit 41D
	30	55	54 ... 65	31-4JA10			3RA2130-4JA37-0NB3	1	1 unit 41D
	37 ⁴⁾	66	62 ... 73	31-4KA10	38-1NB30		3RA2130-4KA38-0NB3	1	1 unit 41D
S3	Size S3 available on request				Size S3 is only available for customer assembly				

1) Push-in lugs, see Accessories, page 8/54.

2) Auxiliary switches, see Accessories, page 8/47.

3) The actual starting and rated data of the motor to be protected must be considered when selecting the units.


4) Maximum permissible current setting at motor starter protector 65 A, as the maximum permissible current of the 3RA2931-1AA00 link module is 65 A.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

3RA21 direct-on-line starters > for 60 mm busbars **IE3/IE4 ready** **AC-3e**

Selection and ordering data

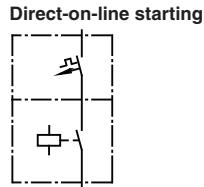

Rated control supply voltage
50/60 Hz 230 V AC for S00, 50 Hz 230 V AC for S0 and S2
With screw terminals

- With busbar adapter
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches¹⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor size S00: 1 NO,
Contactor sizes S0 and S2: 1 NO + 1 NC

Size	Standard three-phase motor 4-pole at 400 V AC ²⁾		Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)		Motor starter protector	+ Contactor	+ Link module + Busbar adapter				
	KW	A	A				Article No.	Basic price per PU		
Type of coordination "2" at $I_q = 150 \text{ kA}$ at 400 V (also compatible with type of coordination "1")										

	3RV20	3RT20	3RA	Toc 2	
S00	0.06 0.2 0.14 ... 0.2	11-0BA10 15-1AP01	1921-1DA00 + 8US1251-5DS10	3RA2110-0BD15-1AP0 3RA2110-0CD15-1AP0 3RA2110-0DD15-1AP0 3RA2110-0ED15-1AP0 3RA2110-0FD15-1AP0 3RA2110-0GD15-1AP0 3RA2110-0HD15-1AP0 3RA2110-0JD15-1AP0 3RA2110-0KD15-1AP0 3RA2110-1AD15-1AP0 3RA2110-1BD15-1AP0 3RA2110-1CD15-1AP0 3RA2110-1DD15-1AP0 3RA2110-1ED15-1AP0	1 1 unit 41D 1 1 unit 41D
S0	1.5 3.6 3.5 ... 5 2.2 4.9 4.5 ... 6.3 3 6.5 5.5 ... 8 4 8.5 7 ... 10 5.5 11.5 9 ... 12.5 7.5 15.5 10 ... 16 7.5 15.5 13 ... 20 11 22 16 ... 22 11 22 18 ... 25 15 28 23 ... 28 15 29 ³⁾ 27 ... 32	11-1FA10 24-1AP00 11-1GA10 24-1AP00 11-1HA10 24-1AP00 11-1JA10 24-1AP00 11-1KA10 24-1AP00 21-4AA10 26-1AP00 21-4BA10 27-1AP00 21-4CA10 27-1AP00 21-4DA10 27-1AP00 21-4NA10 27-1AP00 21-4EA10 27-1AP00	2921-1AA00 + 8US1251-5DT10 2921-1AA00 + 8US1251-5NT10	3RA2120-1FD24-0AP0 3RA2120-1GD24-0AP0 3RA2120-1HD24-0AP0 3RA2120-1JD24-0AP0 3RA2120-1KD24-0AP0 3RA2120-4AD26-0AP0 3RA2120-4BD27-0AP0 3RA2120-4CD27-0AP0 3RA2120-4DD27-0AP0 3RA2120-4ND27-0AP0 3RA2120-4ED27-0AP0	1 1 unit 41D 1 1 unit 41D
S2	15 29 22 ... 32 18.5 35 28 ... 36 18.5 35 32 ... 40 22 41 35 ... 45 22 41 42 ... 50 30 55 49 ... 59 30 55 54 ... 65 37 ⁴⁾ 66 62 ... 73	32-4EA10 35-1AP00 32-4PA10 35-1AP00 32-4UA10 35-1AP00 32-4VA10 36-1AP00 32-4WA10 36-1AP00 32-4XA10 37-1AP00 32-4JA10 38-1AP00 32-4KA10 38-1AP00	2931-1AA00 + 8US1261-6MT10	Size S2 is only available for customer assembly.	

	3RA2110-1FD15-1AP0	3RA2110-1GD15-1AP0	3RA2110-1HD15-1AP0	3RA2110-1JD16-1AP0	3RA2110-1KD17-1AP0	3RA2110-4AD18-1AP0	Toc 1
S00	Feeders for lower outputs, see table for type of coordination "2".						
1.5 3.6 3.5 ... 5 2.2 4.9 4.5 ... 6.3 3 6.5 5.5 ... 8 4 8.5 7 ... 10 5.5 11.5 9 ... 12.5 7.5 15.5 10 ... 16	11-1FA10 15-1AP01 11-1GA10 15-1AP01 11-1HA10 15-1AP01 11-1JA10 16-1AP01 11-1KA10 17-1AP01 11-4AA10 18-1AP01	1921-1DA00 + 8US1251-5DS10					

¹⁾ Auxiliary switches, see [Accessories, page 8/47](#).



²⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

³⁾ Suitable for use with IE3 and IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using size S2.

⁴⁾ Maximum permissible current setting at motor starter protector 65 A, as the maximum permissible current of the 3RA2931-1AA00 link module is 65 A.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

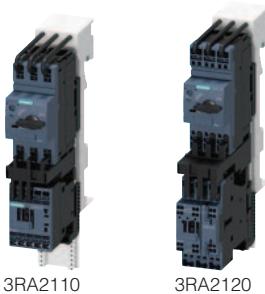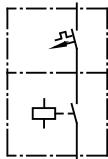AC-3e IE3/IE4 ready 3RA21 direct-on-line starters > for 60 mm busbars**Direct-on-line starting****Rated control supply voltage**50/60 Hz 230 V AC for S00, 50 Hz 230 V AC for S0
With spring-loaded terminals

- With busbar adapter
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches¹⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- Integrated auxiliary switches:
Contactor size S00: 1 NO,
Contactor size S0: 1 NO + 1 NC

Size	Standard three-phase motor 4-pole at 400 V AC ²⁾	Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)	Motor starter protector	+ Contactor	+ Link module + Busbar adapter	Spring-loaded terminals			
	kW	A	A			Article No.	Basic price per PU		

**Type of coordination "2" at $I_q = 150 \text{ kA}$ at 400 V
(also compatible with type of coordination "1")**

	3RV20	3RT20	3RA29	TcC 2
S00	0.06	0.2	0.14 ... 0.2	3RA2110-0BH15-1AP0
	0.06	0.2	0.18 ... 0.25	3RA2110-0CH15-1AP0
	0.09	0.3	0.22 ... 0.32	3RA2110-0DH15-1AP0
	0.09	0.3	0.28 ... 0.4	3RA2110-0EH15-1AP0
	0.12	0.4	0.35 ... 0.5	3RA2110-0FH15-1AP0
	0.18	0.6	0.45 ... 0.63	3RA2110-0GH15-1AP0
	0.18	0.6	0.55 ... 0.8	3RA2110-0HH15-1AP0
	0.25	0.85	0.7 ... 1	3RA2110-0JH15-1AP0
	0.37	1.1	0.9 ... 1.25	3RA2110-0KH15-1AP0
	0.55	1.5	1.1 ... 1.6	3RA2110-1AH15-1AP0
	0.75	1.9	1.4 ... 2	3RA2110-1BH15-1AP0
	0.75	1.9	1.8 ... 2.5	3RA2110-1CH15-1AP0
	1.1	2.7	2.2 ... 3.2	3RA2110-1DH15-1AP0
	1.5	3.6	2.8 ... 4	3RA2110-1EH15-1AP0
S0	1.5	3.6	3.5 ... 5	3RA2120-1FH24-0AP0
	2.2	4.9	4.5 ... 6.3	3RA2120-1GH24-0AP0
	3	6.5	5.5 ... 8	3RA2120-1HH24-0AP0
	4	8.5	7 ... 10	3RA2120-1JH24-0AP0
	5.5	11.5	9 ... 12.5	3RA2120-1KH24-0AP0
	7.5	15.5	10 ... 16	3RA2120-4AH26-0AP0
	7.5	15.5	13 ... 20	3RA2120-4BH27-0AP0
	11	22	16 ... 22	3RA2120-4CH27-0AP0
	11	22	18 ... 25	3RA2120-4DH27-0AP0
	15	28	23 ... 28	3RA2120-4NH27-0AP0
	15	29 ⁴⁾	27 ... 32	3RA2120-4EH27-0AP0

**Type of coordination "1" at $I_q = 150 \text{ kA}$ at 400 V
(motor starter protector is compatible with type of coordination "2")**

S00	Feeders for lower outputs, see table for type of coordination "2".				TcC 1
1.5	3.6	3.5 ... 5	11-1FA20	15-2AP01	3RA2110-1FH15-1AP0
2.2	4.9	4.5 ... 6.3	11-1GA20	+ 8US1251-5DT11	3RA2110-1GH15-1AP0
3	6.5	5.5 ... 8	11-1HA20		3RA2110-1HH15-1AP0
4	8.5	7 ... 10	11-1JA20		3RA2110-1JH16-1AP0
5.5	11.5	9 ... 12.5	11-1KA20	17-2AP01	3RA2110-1KH17-1AP0
7.5	15.5	10 ... 16	11-4AA20	18-2AP01	3RA2110-4AH18-1AP0

¹⁾ Auxiliary switches, see [Accessories, page 8/47](#).²⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.³⁾ A 3RA2911-1CA00 spacer for height compensation on AC contactors size S0 with spring-loaded terminals is included in the scope of supply.⁴⁾ Suitable for use with IE3 and IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using size S2.


Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

AC-3e IE3/IE4 ready 3RA22 reversing starters > for DIN-rail mounting or screw fixing



3RA2210

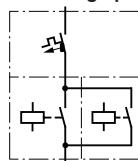Reversing operation**Rated control supply voltage**

**50/60 Hz 230 V AC for S00, 50 Hz 230 V AC for S0
With screw terminals**

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- Without DIN-rail adapter for size S00
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾		Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)		Motor starter protector	+ 2 contactors	+ Link module + RH mounting kit ⁴⁾ /Wiring kit				
	KW	A	A				Article No.	Basic price per PU		
Type of coordination "1" at $I_q = 150 \text{ kA}$ at 400 V (motor starter protector is compatible with type of coordination "2")										
				3RV20	3RT20	3RA			Toc 1	
S00	Feeders for lower outputs, see table for type of coordination "2" on the previous page.									
1.5	3.6	3.5 ... 5		11-1FA10	15-1AP02	1921-1DA00	3RA2210-1FA15-2AP0	1	1 unit	41D
2.2	4.9	4.5 ... 6.3		11-1GA10		+ 2913-2AA1	3RA2210-1GA15-2AP0	1	1 unit	41D
3	6.5	5.5 ... 8		11-1HA10			3RA2210-1HA15-2AP0	1	1 unit	41D
4	8.5	7 ... 10		11-1JA10	16-1AP02		3RA2210-1JA16-2AP0	1	1 unit	41D
5.5	11.5	9 ... 12.5		11-1KA10	17-1AP02		3RA2210-1KA17-2AP0	1	1 unit	41D
7.5	15.5	10 ... 16		11-4AA10	18-1AP02		3RA2210-4AA18-2AP0	1	1 unit	41D

¹⁾ Push-in lugs, see **Accessories**, page 8/54.

²⁾ Auxiliary switches, see **Accessories**, page 8/47.

³⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

⁴⁾ RH = Mounting kit for reversing operation and DIN-rail mounting in sizes S0 and S2.

Load feeders and motor starters for use in the control cabinet


SIRIUS 3RA2 load feeders

3RA22 reversing starters > for DIN-rail mounting or screw fixing **IE3/IE4 ready AC-3e**



3RA2210

Reversing operation

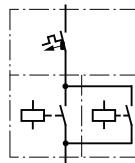

Rated control supply voltage 24 V DC With screw terminals

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- Without DIN-rail adapter for size S00
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module,
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾		Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)		Motor starter protector	+ 2 contactors	+ Link module + Wiring kit				
	kW	A	A							



Type of coordination "1" at $I_q = 150 \text{ kA}$ at 400 V
(motor starter protector is compatible with type of coordination "2")

3RV20 3RT20 3RA

ToC
1

S00	Feeders for lower outputs, see table for type of coordination "2" on the previous page.									
1.5	3.6	3.5 ... 5	11-1FA10	15-1BB42	1921-1DA00	3RA2210-1FA15-2BB4		1	1 unit	41D
2.2	4.9	4.5 ... 6.3	11-1GA10		+ 2913-2AA1	3RA2210-1GA15-2BB4		1	1 unit	41D
3	6.5	5.5 ... 8	11-1HA10			3RA2210-1HA15-2BB4		1	1 unit	41D
4	8.5	7 ... 10	11-1JA10	16-1BB42		3RA2210-1JA16-2BB4		1	1 unit	41D
5.5	11.5	9 ... 12.5	11-1KA10	17-1BB42		3RA2210-1KA17-2BB4		1	1 unit	41D
7.5	15.5	10 ... 16	11-4AA10	18-1BB42		3RA2210-4AA18-2BB4		1	1 unit	41D

¹⁾ Push-in lugs, see [Accessories](#), page 8/54.


²⁾ Auxiliary switches, see [Accessories](#), page 8/47.

³⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet


SIRIUS 3RA2 load feeders

AC-3e IE3/IE4 ready 3RA22 reversing starters > for DIN-rail mounting or screw fixing

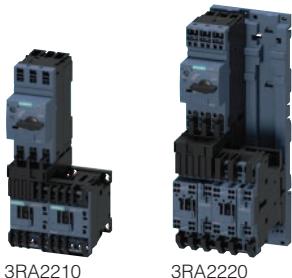

3RA2210 3RA2220

Reversing operation

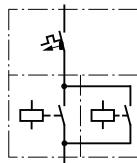

Rated control supply voltage 24 V DC With spring-loaded terminals

- Screw fixing with two push-in lugs per load feeder possible¹⁾
- Without DIN-rail adapter for size S00
- With two DIN-rail adapters for size S0 for mechanical reinforcement (included in the scope of supply)
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches²⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- With the contactor S0, an integrated NO contact is still available for free use.

Size	Standard three-phase motor 4-pole at 400 V AC ³⁾		Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)		Motor starter protector	+ 2 contactors	+ Link module + RH mounting kit ⁴⁾ /Wiring kit				
	kW	A	A				Article No.	Basic price per PU		
Type of coordination "2" at $I_g = 150 \text{ kA}$ at 400 V (also compatible with type of coordination "1")										

	3RV20	3RT20	3RA29	ToC 2
S00	0.06 0.2 0.14 ... 0.2 11-0BA20 15-2BB42 11-2AA00 + 2913-2AA2	3RA2210-0BE15-2BB4		1
	0.06 0.2 0.18 ... 0.25 11-OCA20	3RA2210-0CE15-2BB4		1
	0.09 0.3 0.22 ... 0.32 11-ODA20	3RA2210-0DE15-2BB4		1
	0.09 0.3 0.28 ... 0.4 11-OEA20	3RA2210-0EE15-2BB4		1
	0.12 0.4 0.35 ... 0.5 11-OFA20	3RA2210-0FE15-2BB4		1
	0.18 0.6 0.45 ... 0.63 11-OGA20	3RA2210-0GE15-2BB4		1
	0.18 0.6 0.55 ... 0.8 11-OHA20	3RA2210-0HE15-2BB4		1
	0.25 0.85 0.7 ... 1 11-OJA20	3RA2210-0JE15-2BB4		1
	0.37 1.1 0.9 ... 1.25 11-OKA20	3RA2210-0KE15-2BB4		1
	0.55 1.5 1.1 ... 1.6 11-1AA20	3RA2210-1AE15-2BB4		1
	0.75 1.9 1.4 ... 2 11-1BA20	3RA2210-1BE15-2BB4		1
	0.75 1.9 1.8 ... 2.5 11-1CA20	3RA2210-1CE15-2BB4		1
	1.1 2.7 2.2 ... 3.2 11-1DA20	3RA2210-1DE15-2BB4		1
	1.5 3.6 2.8 ... 4 11-1EA20	3RA2210-1EE15-2BB4		1
S0	1.5 3.6 3.5 ... 5 21-1FA20 24-2BB40 21-2AA00 + 2923-1BB2	3RA2220-1FF24-0BB4		1
	2.2 4.9 4.5 ... 6.3 21-1GA20	3RA2220-1GF24-0BB4		1
	3 6.5 5.5 ... 8 21-1HA20	3RA2220-1HF24-0BB4		1
	4 8.5 7 ... 10 21-1JA20	3RA2220-1JF24-0BB4		1
	5.5 11.5 9 ... 12.5 21-1KA20	3RA2220-1KF24-0BB4		1
	7.5 15.5 10 ... 16 21-4AA20 26-2BB40	3RA2220-4AF26-0BB4		1
	7.5 15.5 13 ... 20 21-4BA20 27-2BB40	3RA2220-4BF27-0BB4		1
	11 22 16 ... 22 21-4CA20	3RA2220-4CF27-0BB4		1
	11 22 18 ... 25 21-4DA20	3RA2220-4DF27-0BB4		1
	15 28 23 ... 28 21-4NA20	3RA2220-4NF27-0BB4		1
	15 29 ⁵⁾ 27 ... 32 21-4EA20	3RA2220-4EF27-0BB4		1

Type of coordination "1" at $I_g = 150 \text{ kA}$ at 400 V (motor starter protector is compatible with type of coordination "2")				
---	--	--	--	--

	ToC 1
S00	Feeders for lower outputs, see table for type of coordination "2".
1.5 3.6 3.5 ... 5 11-1FA20 15-2BB42 11-2AA00 + 2913-2AA2	3RA2210-1FE15-2BB4
2.2 4.9 4.5 ... 6.3 11-1GA20	3RA2210-1GE15-2BB4
3 6.5 5.5 ... 8 11-1HA20	3RA2210-1HE15-2BB4
4 8.5 7 ... 10 11-1JA20 16-2BB42	3RA2210-1JE16-2BB4
5.5 11.5 9 ... 12.5 11-1KA20 17-2BB42	3RA2210-1KE17-2BB4
7.5 15.5 10 ... 16 11-4AA20 18-2BB42	3RA2210-4AE18-2BB4

1) Push-in lugs, see **Accessories**, page 8/54.

2) Auxiliary switches, see **Accessories**, page 8/47.

3) The actual starting and rated data of the motor to be protected must be considered when selecting the units.

4) RH = Mounting kit for reversing operation and DIN-rail mounting in size S0.


5) Suitable for use with IE3 and IE4 motors up to a starting current of 256 A.
For higher starting currents we recommend using size S2.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

3RA22 reversing starters > for 60 mm busbars **IE3/IE4 ready** **AC-3e**


Selection and ordering data

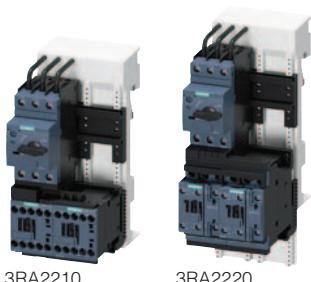

3RA2210

3RA2220

Reversing operation

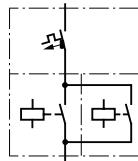

Rated control supply voltage

50/60 Hz 230 V AC for S00, 50 Hz 230 V AC for S0 and S2

With screw terminals

- With busbar adapter and device holder (included in the scope of supply)
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches¹⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.
- With contactor sizes S0 and S2, an integrated NO contact is still available for free use.

Size	Standard three-phase motor 4-pole at 400 V AC ²⁾		Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)		Motor starter protector	+ 2 contactors	+ Link module + RS mounting kit ³⁾ /Wiring kit				
	kW	A	A				Article No.	Basic price per PU		

Type of coordination "2" at $I_q = 150 \text{ kA}$ at 400 V
(also compatible with type of coordination "1")

	3RV20	3RT20	3RA	ToC 2
S00	0.06 0.2 0.14 ... 0.2 11-0BA10 15-1AP02 1921-1DA00 + 2913-1DB1	3RA2210-0BD15-2AP0		1 1 unit 41D
	0.06 0.2 0.18 ... 0.25 11-0CA10	3RA2210-0CD15-2AP0		1 1 unit 41D
	0.09 0.3 0.22 ... 0.32 11-0DA10	3RA2210-0DD15-2AP0		1 1 unit 41D
	0.09 0.3 0.28 ... 0.4 11-0EA10	3RA2210-0ED15-2AP0		1 1 unit 41D
	0.12 0.4 0.35 ... 0.5 11-0FA10	3RA2210-0FD15-2AP0		1 1 unit 41D
	0.18 0.6 0.45 ... 0.63 11-0GA10	3RA2210-0GD15-2AP0		1 1 unit 41D
	0.18 0.6 0.55 ... 0.8 11-0HA10	3RA2210-0HD15-2AP0		1 1 unit 41D
	0.25 0.85 0.7 ... 1 11-0JA10	3RA2210-0JD15-2AP0		1 1 unit 41D
	0.37 1.1 0.9 ... 1.25 11-0KA10	3RA2210-0KD15-2AP0		1 1 unit 41D
	0.55 1.5 1.1 ... 1.6 11-1AA10	3RA2210-1AD15-2AP0		1 1 unit 41D
	0.75 1.9 1.4 ... 2 11-1BA10	3RA2210-1BD15-2AP0		1 1 unit 41D
	0.75 1.9 1.8 ... 2.5 11-1CA10	3RA2210-1CD15-2AP0		1 1 unit 41D
	1.1 2.7 2.2 ... 3.2 11-1DA10	3RA2210-1DD15-2AP0		1 1 unit 41D
	1.5 3.6 2.8 ... 4 11-1EA10	3RA2210-1ED15-2AP0		1 1 unit 41D
S0	1.5 3.6 3.5 ... 5 11-1FA10 24-1AP00 2921-1AA00 + 2923-1DB1	3RA2220-1FD24-0AP0		1 1 unit 41D
	2.2 4.9 4.5 ... 6.3 11-1GA10	3RA2220-1GD24-0AP0		1 1 unit 41D
	3 6.5 5.5 ... 8 11-1HA10	3RA2220-1HD24-0AP0		1 1 unit 41D
	4 8.5 7 ... 10 11-1JA10	3RA2220-1JD24-0AP0		1 1 unit 41D
	5.5 11.5 9 ... 12.5 11-1KA10	3RA2220-1KD24-0AP0		1 1 unit 41D
	7.5 15.5 10 ... 16 21-4AA10 26-1AP00	3RA2220-4AD26-0AP0		1 1 unit 41D
	7.5 15.5 13 ... 20 21-4BA10 27-1AP00	3RA2220-4BD27-0AP0		1 1 unit 41D
	11 22 16 ... 22 21-4CA10	3RA2220-4CD27-0AP0		1 1 unit 41D
	11 22 18 ... 25 21-4DA10	3RA2220-4DD27-0AP0		1 1 unit 41D
	15 28 23 ... 28 21-4NA10	3RA2220-4ND27-0AP0		1 1 unit 41D
	15 29 ⁴⁾ 27 ... 32 21-4EA10	3RA2220-4ED27-0AP0		1 1 unit 41D

Size S2 is only available for customer assembly.

¹⁾ Auxiliary switches, see Accessories, page 8/47.

²⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

³⁾ RS = Mounting kit for reversing operation and busbar mounting.

⁴⁾ Suitable for use with IE3 and IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using size S2.

⁵⁾ Maximum permissible current setting at motor starter protector 65 A, as the maximum permissible current of the 3RA2931-1AA00 link module is 65 A.


Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

AC-3e IE3/IE4 ready 3RA22 reversing starters > for 60 mm busbars



3RA2210

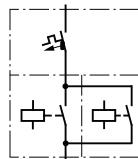Reversing operation

**Rated control supply voltage
50/60 Hz 230 V AC for S00
With screw terminals**

- With busbar adapter and device holder (included in the scope of supply)
- The motor starter protector and contactor are mechanically and electrically connected by means of the link module.
- Auxiliary switches¹⁾ can easily be fitted on the motor starter protector and the contactor thanks to the modular system.

Size	Standard three-phase motor 4-pole at 400 V AC ²⁾	Adjustable current response value of the inverse-time delayed overload release	Comprising the following single devices			Fuseless load feeder	PU (UNIT, SET, M)	PS*	PG
	Standard output P	Motor current I (guide value)	Motor starter protector	+ 2 contactors	+ Link module + RS mounting kit ³⁾ /Wiring kit	Screw terminals			
kW	A	A				Article No.	Basic price per PU		

Type of coordination "1" at $I_q = 150 \text{ kA}$ at 400 V
(motor starter protector is compatible with type of coordination "2")

3RV20 3RT20 3RA

ToC
1

S00	Feeders for lower outputs, see table for type of coordination "2" on the previous page.								
1.5	3.6	3.5 ... 5	11-1FA10	15-1AP02	1921-1DA00	3RA2210-1FD15-2AP0	1	1 unit	41D
2.2	4.9	4.5 ... 6.3	11-1GA10		+ 2913-1DB1	3RA2210-1GD15-2AP0	1	1 unit	41D
3	6.5	5.5 ... 8	11-1HA10			3RA2210-1HD15-2AP0	1	1 unit	41D
4	8.5	7 ... 10	11-1JA10	16-1AP02		3RA2210-1JD16-2AP0	1	1 unit	41D
5.5	11.5	9 ... 12.5	11-1KA10	17-1AP02		3RA2210-1KD17-2AP0	1	1 unit	41D
7.5	15.5	10 ... 16	11-4AA10	18-1AP02		3RA2210-4AD18-2AP0	1	1 unit	41D

¹⁾ Auxiliary switches, see [Accessories, page 8/47](#).

²⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

³⁾ RS = Mounting kit for reversing operation and busbar mounting.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

Overview

The accessories listed here are parts and add-ons for the 3RA2 direct-on-line and reversing starters as well as

components for the customer assembly of fuseless load feeders.

Selection and ordering data

Accessories for motor starter protectors

				PU (UNIT, SET, M) = 1 PS* = 1 unit PG = 41E
Auxiliary switches¹⁾				
Transverse auxiliary switches				
For mounting on the front				
1 CO		S00 ... S3		3RV2901-1D
1 NO + 1 NC				3RV2901-1E
2 NO				3RV2901-1F
Lateral auxiliary switches				
For mounting on the left				
1 NO + 1 NC		S00 ... S3		3RV2901-1A
1) Each motor starter protector can be fitted with one transverse and one lateral auxiliary switch. The lateral auxiliary switch with 2 NO + 2 NC is used without a transverse auxiliary switch.				

				PU (UNIT, SET, M) = 1 PS* = 1 unit PG = 41E
Auxiliary releases for motor starter protectors³⁾				
Undervoltage releases				
230	240	--	--	S00 ... S3
3RV2902-1AP0				3RV2902-2AP0
Shunt releases				
--	--	210 ... 240	190 ... 330	S00 ... S3
3RV2902-1DP0				3RV2902-2DP0

- 1) The voltage range is valid for 100% (infinite) ON period.
The response voltage lies at 0.9 of the lower limit of the voltage range.
- 2) The voltage range is valid for 5 s ON period at 50/60 Hz AC and DC.
The response voltage lies at 0.85 of the lower limit of the voltage range.
- 3) One auxiliary release can be mounted on the right per motor starter protector (does not apply to 3RV21 motor starter protectors with overload relay function).


For the complete range of accessories for the motor starter protectors, [see page 7/46 onwards](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

Accessories for contactors

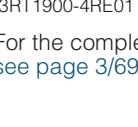For contactors	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Size						
Auxiliary switches for snapping onto the front of contactors						
	Cable entry from below S00 ... S3 - 1 NO - 1 NC	Screw terminals 	3RH2911-1BA10 3RH2911-1BA01	1 1	1 unit 1 unit	41B 41B
	S00 ... S3 - 1 NO + 1 NC - 2 NO	3RH2911-1MA11 3RH2911-1MA20		1 1	1 unit 1 unit	41B 41B
Auxiliary switches for contactors, for lateral mounting						
	S00 S00 S00 S0/S3 S0/S3 S0/S3 2 NC 1 NO + 1 NC 2 NO 2 NC 1 NO + 1 NC 2 NO	Screw terminals  3RH2911-1DA02 3RH2911-1DA11 3RH2911-1DA20 3RH2921-1DA02 3RH2921-1DA11 3RH2921-1DA20		1 1 1 1 1 1	1 unit 1 unit 1 unit 1 unit 1 unit 1 unit	41B 41B 41B 41B 41B 41B
	S00 S00 S00 S0/S3 S0/S3 S0/S3 2 NC 1 NO + 1 NC 2 NO 2 NC 1 NO + 1 NC 2 NO	Spring-loaded terminals  3RH2911-2DA02 3RH2911-2DA11 3RH2911-2DA20 3RH2921-2DA02 3RH2921-2DA11 3RH2921-2DA20		1 1 1 1 1 1	1 unit 1 unit 1 unit 1 unit 1 unit 1 unit	41B 41B 41B 41B 41B 41B
Connection modules (adapter and plugs) for contactors with screw terminals (can only be used for direct-on-line starters)						
	The connection module comprises an adapter and a motor feeder connector.	Screw terminals 				
	Adapters Ambient temperature $t_{\text{u}} \text{ max.} = 60^{\circ}\text{C}$ S00 Rated operational current I_{e} at AC-3 and AC-3e/400 V: 20 A	3RT1916-4RD01	1	1 unit	41B	
	S0 Rated operational current I_{e} at AC-3 and AC-3e/400 V: 25 A	3RT1926-4RD01	1	1 unit	41B	
Motor feeder connector						
	S00, S0 --	3RT1900-4RE01	1	1 unit	41B	

For the complete range of accessories for the 3RT contactors,
see page 3/69 onwards.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

For contactors	Version	Rated control supply voltage U_s ¹⁾	Article No. ²⁾	Price per PU	PU (UNIT, SET, M)	PS*	PG
Type	V AC	V DC					
Surge suppressors without LED for contactors (also for spring-loaded terminals)							
Size S00							
 3RT2916-1B.00							
For plugging onto the front side of the contactors (with or without auxiliary switches)							
3RT2.1	Varistors	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2916-1BB00 3RT2916-1BD00	1 1	1 unit 1 unit	41B 41B
3RT2.1	RC elements	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2916-1CB00 3RT2916-1CD00	1 1	1 unit 1 unit	41B 41B
3RT2.1	Interference suppression diode	--	12 ... 250	3RT2916-1DG00	1	1 unit	41B
3RT2.1	Diode assemblies (diode and Zener diode) for DC operation	--	12 ... 250	3RT2916-1EH00	1	1 unit	41B
Size S0							
 3RT2926-1E.00							
For plugging into the front side of the contactors (before installing the auxiliary switch)							
3RT2.2	Varistors²⁾	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2926-1BB00 3RT2926-1BD00	1 1	1 unit 1 unit	41B 41B
3RT2.2	RC elements	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2926-1CB00 3RT2926-1CD00	1 1	1 unit 1 unit	41B 41B
3RT2.2	Diode assemblies for DC operation	-- --	24 30 ... 250	3RT2926-1ER00 3RT2926-1ES00	1 1	1 unit 1 unit	41B 41B
Size S2							
 3RT2936-1B.00							
For plugging into the front side of the contactors (before installing the auxiliary switch)							
3RT2.3	Varistors²⁾	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2936-1BB00 3RT2936-1BD00	1 1	1 unit 1 unit	41B 41B
3RT2.3	RC elements	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2936-1CB00 3RT2936-1CD00	1 1	1 unit 1 unit	41B 41B
3RT2.3	Diode assemblies for DC operation	-- --	24 30 ... 250	3RT2936-1ER00 3RT2936-1ES00	1 1	1 unit 1 unit	41B 41B
Size S3							
 3RT2936-1B.00							
For plugging into the two recesses on the left of the connection block for auxiliary switches and coils A1 and A2. The connecting cables are wired to A1 and A2, see also page 3/11.							
3RT2.4	Varistors²⁾	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2936-1BB00 3RT2936-1BD00	1 1	1 unit 1 unit	41B 41B
3RT2.4	Diode assemblies for DC operation	-- --	24 30 ... 250	3RT2936-1ER00 3RT2936-1ES00	1 1	1 unit 1 unit	41B 41B
 3RT2946-1C.00							
For plugging into the two recesses on the left of the connection block for auxiliary switches and coils A1 and A2. The connecting cables are wired to A1 and A2, see also page 3/11.							
3RT2.4	RC elements	24 ... 48 127 ... 240	24 ... 70 150 ... 250	3RT2946-1CB00 3RT2946-1CD00	1 1	1 unit 1 unit	41B 41B

¹⁾ Can be used for AC operation for 50/60 Hz.
Other voltages on request.



²⁾ The varistor is already integrated on the DC and AC/DC contactors.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

Accessories for the customer assembly of fuseless load feeders

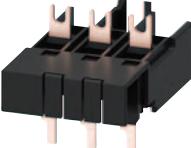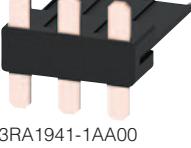	For motor starter protectors	For contactors	Actuating voltage of contactor	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	Size	Size						
Link modules from motor starter protector to contactor¹⁾								
			Connection between motor starter protector and contactor with screw terminals	Screw terminals				
3RA2921-1AA00			Single-unit packaging					
	S00/S0	S00	AC, DC	3RA1921-1DA00	1	1 unit	41B	
	S00/S0	S0	AC	3RA2921-1AA00	1	1 unit	41B	
	S00/S0	S0	DC, AC/DC	3RA2921-1BA00	1	1 unit	41B	
	S2	S2	AC, DC, AC/DC	3RA2931-1AA00	1	1 unit	41B	
	S3	S3	AC, DC, AC/DC	3RA1941-1AA00	1	1 unit	41B	
								
3RA2931-1AA00			Multi-unit packaging					
	S00/S0	S00	AC, DC	3RA1921-1D	1	10 units	41B	
	S00/S0	S0	AC	3RA2921-1A	1	10 units	41B	
	S00/S0	S0	DC, AC/DC	3RA2921-1B	1	10 units	41B	
	S2	S2	AC, DC, AC/DC	3RA2931-1A	1	5 units	41B	
	S3	S3	AC, DC, AC/DC	3RA1941-1A	1	5 units	41B	
								
3RA1941-1AA00			Connection between motor starter protector and contactor with spring-loaded terminals	Spring-loaded terminals				
			Single-unit packaging					
3RA2911-2AA00				3RA2911-2AA00	1	1 unit	41B	
	S00	S00	AC, DC	3RA2921-2AA00	1	1 unit	41B	
	S0	S0	AC ²⁾ , DC, AC/DC					
Multi-unit packaging				3RA2911-2A	1	10 units	41B	
	S00	S00	AC/DC	3RA2921-2A	1	10 units	41B	
	S0	S0	AC ²⁾ , DC, AC/DC					
Hybrid link modules from motor starter protector to contactor³⁾								
			Connection between motor starter protector with screw terminals and contactor with spring-loaded terminals					
3RA2911-2FA00			Single-unit packaging					
	S00	S00	AC, DC	3RA2911-2FA00	1	1 unit	41B	
	S0	S0	AC ²⁾ , DC, AC/DC	3RA2921-2FA00	1	1 unit	41B	
			Multi-unit packaging					
3RA2921-2FA00				3RA2911-2F	1	10 units	41B	
	S00	S00	AC, DC	3RA2921-2F	1	10 units	41B	
	S0	S0	AC ²⁾ , DC, AC/DC					

¹⁾ The link modules from motor starter protector to contactor cannot be used for the 3RV1011, 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27 and 3RV28 motor starter protectors/circuit breakers.

²⁾ A spacer for height compensation on AC contactors, size S0, is optionally available, see page 8/56.

³⁾ The hybrid link modules for motor starter protector to contactor cannot be used for the 3RV1011, 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV27 and 3RV28 motor starter protectors/circuit breakers. They are only suitable for assembling direct-on-line starters.

Note:

Link modules can be used in

- Size S00 up to max. 16 A
- Size S0 up to max. 32 A
- Size S2 up to max. 65 A


Hybrid link modules can be used in

- Size S00 up to max. 16 A
- Size S0 up to max. 32 A

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

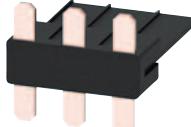For motor starter protectors	For 3RW30, 3RW40 soft starters; 3RF34 solid-state contactors	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Link modules for motor starter protector to soft starter¹⁾ and motor starter protector to solid-state contactor¹⁾						
Size	Size					
	Connection between motor starter protector and soft starter/solid-state contactor with screw terminals	Screw terminals				
Single-unit packaging						
S00/S0	S00/S0	3RA2921-1BA00		1	1 unit	41B
S2 ²⁾	S2	3RA2931-1AA00		1	1 unit	41B
S3 ³⁾	S3	3RA1941-1AA00		1	1 unit	41B
Multi-unit packaging						
S00/S0	S00/S0	3RA2921-1B		1	10 units	41B
S2 ²⁾	S2 ²⁾	3RA2931-1A		1	5 units	41B
S3 ³⁾	S3 ³⁾	3RA1941-1A		1	5 units	41B
	Connection between motor starter protector and soft starter with spring-loaded terminals	Spring-loaded terminals				
Single-unit packaging						
S00	S00	3RA2911-2GA00		1	1 unit	41B
S0	S0	3RA2921-2GA00		1	1 unit	41B
						
						
3RA2921-1BA00						
3RA2931-1AA00						
3RA1941-1AA00						
3RA2921-2GA00						

¹⁾ The link modules from motor starter protector to soft starter and motor starter protector to solid-state contactor cannot be used for the 3RV1011, 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27 and 3RV28 motor starter protectors/circuit breakers.

- ²⁾ To assemble the feeder between a motor starter protector and a soft starter in size S2, the 3RA2932-1CA00 DIN-rail adapter must be used.
³⁾ It is only permitted to assemble the feeder between the motor starter protector and the soft starter in size S3 on a mounting plate.

Note:

Link modules can be used in

- Size S00 up to max. 16 A
- Size S0 up to max. 32 A
- Size S2 up to max. 65 A

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

PU (UNIT, SET, M)= 1
 PS* = 1 unit (unless otherwise specified)
 PG = 41B




3RA2913-2AA1



3RA2923-2AA1



3RA2933-2AA1

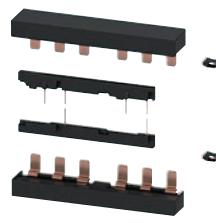

3RA2943-2AA1

For contactors	Size	Version	Screw terminals		Spring-loaded terminals	
Type			Article No.	Price per PU	Article No.	Price per PU
Assembly kits for reversing contactor assemblies for making 3-pole contactor assemblies						
3RT201	S00-S00	The assembly kit contains: Mechanical interlock, two connecting clips for two contactors, wiring modules on the top and bottom • For main, auxiliary and control circuits	3RA2913-2AA1		3RA2913-2AA2	
3RT202	S0-S0	The assembly kit contains: Mechanical interlock, two connecting clips for two contactors, wiring modules on the top and bottom • For main, auxiliary and control circuits ¹⁾ • Only for main circuit ²⁾	3RA2923-2AA1	--	3RA2923-2AA2	--
3RT203	S2-S2	The assembly kit contains: Two connectors for two contactors, wiring modules on the top and bottom (3RA2934-2B mechanical interlock must be ordered separately, <i>see page 3/111</i>) • For main and auxiliary circuits • Only for main circuit ³⁾	3RA2933-2AA1	--	3RA2933-2AA2	--
3RT204	S3-S3	The assembly kit contains: Two connectors for two contactors, wiring modules on the top and bottom (3RA2934-2B mechanical interlock must be ordered separately, <i>see page 3/111</i>) • For main and auxiliary circuits • Only for main circuit ³⁾	3RA2943-2AA1	--	3RA2943-2AA2	--

¹⁾ Use of the 3RA2923-2AA1 assembly kit in conjunction with the 3RT202.-....-3MA0 contactors is limited because the auxiliary switches in the basic unit are not allowed to be used on account of the permanently mounted auxiliary switch.

²⁾ Version in size S0 with spring-loaded terminals:
Only the wiring modules for the main circuit are included.
No connecting clips are included for the auxiliary and control circuit.

³⁾ Version in sizes S2 and S3 with spring-loaded terminals in the auxiliary and control circuits: Only the wiring modules for the main circuit are included.
A cable set is included for the auxiliary circuit.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

For contactors	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG	
Size							
Safety main circuit connectors for two contactors			Screw terminals				
	S00 S0 S2	3RA2916-1A					
For switching two contactors in series		3RA2926-1A	1	1 unit	41B		
		3RA2936-1A	1	1 unit	41B		
			1	1 unit	41B		
Mounting rails for mounting contactors for the customer assembly of 3RA21 load feeders with busbar adapters for 60 mm systems							
	--	S0	For the discrete configuration of direct-on-line starters a further mounting rail is needed for the contactor in addition to the mounting rail for the motor starter protector existing on the busbar adapter. For pushing onto the device adapter, including fixing screws	8US1998-7CB45	1	10 units	140
DIN-rail adapters							
	S00, S00	S00, S00	For mechanical fixing of motor starter protector and contactor; for snapping onto DIN rail or for screw fixing	3RA2922-1BA00	1	1 unit	41B
	S00, S00	S00, S00	Short, single-unit packaging	3RA2922-1B	1	5 units	41B
	S00, S0	S00, S0	Short, multi-unit packaging	3RA2922-1AA00	1	1 unit	41B
	S00, S0	S00, S0	Single-unit packaging	3RA2922-1A	1	5 units	41B
	S2	S2	Multi-unit packaging	3RA2932-1AA00	1	1 unit	41B
	S2	S2	Single-unit packaging	3RA2932-1A	1	5 units	41B
	S3	S3	Multi-unit packaging	3RA2942-1AA00	1	1 unit	41B
	S3	S3	Single-unit packaging	3RA2942-1A	1	5 units	41B
	S2	S2	For mechanical fixing of motor starter protector and soft starter; for snapping onto DIN rail or for screw fixing	3RA2932-1CA00	1	1 unit	41B
Side modules for DIN-rail adapters							
	S00 ... S3	S00 ... S3	For DIN-rail adapters 10 mm wide, 96 mm long, for widening DIN-rail adapters when using lateral auxiliary switches, 2 units required	3RA2902-1B	1	10 units	41B
Connecting wedges							
	For mechanical linking of DIN-rail adapters (2 units required for mounting)	8US1998-1AA00	100	100 units	140		

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

	For motor starter protectors	For con- tactors	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
RH mounting kits for reversing operation and DIN-rail mounting								
RH mounting kits for screw terminals								
	S0	S0	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Two DIN-rail adapters• Two connecting wedges• Mechanical interlock• Two connecting clips for two contactors• Fixing accessories Link modules must be ordered separately.	Screw terminals  3RA2923-1BB1	1	1 unit	41B	
	S2	S2	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Two DIN-rail adapters• Two side modules• Four connecting wedges• Mechanical interlock• Two connectors for two contactors• Fixing accessories Link modules must be ordered separately.	3RA2933-1BB1	1	1 unit	41B	
	S3	S3	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Two DIN-rail adapters• Three side modules• Six connecting wedges• Mechanical interlock• Two connectors for two contactors• Fixing accessories Link modules must be ordered separately.	3RA2943-1BB1	1	1 unit	41B	
RH mounting kits for spring-loaded terminals								
	S0	S0	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Two DIN-rail adapters• Two connecting wedges• Mechanical interlock• Two connecting clips for two contactors• Two spacers• Fixing accessories Link modules must be ordered separately.	Spring-loaded terminals  3RA2923-1BB2	1	1 unit	41B	
Push-in lugs for screw fixing								
	S00, S0	--	For screw fixing on mounting plates - 2 units are required for each circuit breaker - 1 unit is required for load feeders	3RV2928-0B	100	10 units	41E	

Graphic overviews for RH mounting kits,
see page 8/15 onwards.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

Busbar adapters



For load feeders	Rated current	Connecting cable	Adapter length	Adapter width	Rated voltage	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Size	A	AWG	mm	mm	V					
Busbar adapters for 60 mm systems										
For copper busbars according to DIN 46433 Width: 12 mm and 30 mm Thickness: 5 mm and 10 mm and for T and double-T special profiles										
• For load feeders with plug-in connectors										
S00, S0	32	--	200	45	690	8US1216-5AS80				
S00, S0	32	--	260	45	690	8US1216-5AT80				
• For load feeders with screw terminals						Screw terminals				
S00/S0	25	12	200	45	690	8US1251-5DS10				
S00 (motor starter protector)/S0 (contactor)	25	12	260	45	690	8US1251-5DT10				
S0	32	10	200	45	690	8US1251-5NS10				
S0	32	10	260	45	690	8US1251-5NT10				
S2	80	4	260	55	690	8US1261-6MT10				
S2 ¹⁾	80	4	260	118	690	8US1211-6MT10				
• For load feeders with spring-loaded terminals						Spring-loaded terminals				
S00	25	12	200	45	690	8US1251-5DS11				
S00/S0	25	12	260	45	690	8US1251-5DT11				
S0	32	10	200	45	690	8US1251-5NS11				
S0	32	10	260	45	690	8US1251-5NT11				
Accessories²⁾										
Plug-in connectors										
To make contact with the 3RV2 motor starter protectors										
• Single-unit packaging						Screw terminals				
S00 ³⁾⁽⁴⁾	--	--	--	--	--	3RV2917-5CA00				
S0 ⁵⁾⁽⁶⁾	--	--	--	--	--	3RV1927-5AA00				
• Multi-unit packaging						3RV2917-5C				
S00 ³⁾⁽⁴⁾	--	--	--	--	--	3RV1927-5A				
S0 ⁵⁾⁽⁶⁾	--	--	--	--	--	Spring-loaded terminals				
• Single-unit packaging						3RV2917-5AA00				
S00 ³⁾	--	--	--	--	--	3RV2927-5AA00				
S0 ⁵⁾	--	--	--	--	--	3RV2917-5A				
• Multi-unit packaging						3RV2927-5A				
S00 ³⁾	--	--	--	--	--	Device holders				
S0 ⁵⁾	--	--	--	--	--	8US1250-5AS10				
Device holders										
For lateral attachment to busbar adapters										
Side modules										
For widening busbar adapters										
Vibration and shock kit										
For high vibration and shock loads										
S2	--	--	200	9	--	8US1998-2BJ10				
						8US1998-1DA10				

¹⁾ For the assembly of feeders for reversing starters comprising a motor starter protector and two contactors.

²⁾ Additional mounting rails for busbar adapters, see page 8/53.

³⁾ $I > 14$ A, please note derating.

⁴⁾ The plug-in connector cannot be used for the 3RV2711 and 3RV2811 circuit breakers in size S00.


⁵⁾ $I > 16$ A, please note derating.

⁶⁾ The plug-in connector can be used for the 3RV2711, 3RV2811 (size S00) and 3RV2721, 3RV2821 (size S0) circuit breakers.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

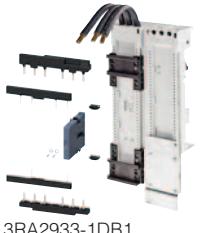For motor starter protectors	For contac- tors	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Size	Size						
RS mounting kits for reversing operation and 60 mm busbar systems							
RS mounting kits for screw terminals							
	S00, S0	S00	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Busbar adapters• Device holders• Two connecting wedges• Mechanical interlock• Two connecting clips for two contactors• Fixing accessories Link modules must be ordered separately.	3RA2913-1DB1 3RA2923-1DB1 3RA2923-1EB1	1 1 1	1 unit 1 unit 1 unit	41B 41B 41B
	S2	S2	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Busbar adapters• Mechanical interlock• Two connectors for two contactors• Fixing accessories Link modules must be ordered separately.	3RA2933-1DB1	1	1 unit	41B
	S00	S00	Comprising: <ul style="list-style-type: none">• Wiring kit for main and auxiliary circuit• Busbar adapters• Device holders• Two connecting wedges• Mechanical interlock• Two connectors for two contactors• Two spacers (for size S0 only)• Fixing accessories Link modules must be ordered separately.	3RA2913-1DB2 3RA2923-1DB2	1 1	1 unit 1 unit	41B 41B


Graphic overviews for RS mounting kits,
see page 8/18 onwards.

For motor starter protectors	For contac- tors	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Size	Size						
Connecting wedges							
	For mechanical linking of busbar adapters and device holders			8US1998-1AA10	1	50 units	14O
	S0	S0	For height compensation on AC contactors size S0 with spring-loaded terminals	3RA2911-1CA00 3RA2911-1C	1 1	1 unit 5 units	41B 41B
Spacers							

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

Accessories

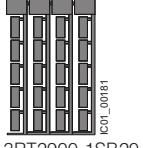Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Tools for opening spring-loaded terminals					
 3RA2908-1A	Screwdrivers For all SIRIUS devices with spring-loaded terminals Length approx. 200 mm, 3.0 mm x 0.5 mm, titanium gray/black, partially insulated	Spring-loaded terminals  3RA2908-1A	1	1 unit	41B
Blank labels					
 3RT2900-1SB20	Unit labeling plates¹⁾ For SIRIUS devices, 20 mm x 7 mm, titanium gray	3RT2900-1SB20	100	340 units	41B
Manuals					
	Digital Configuration Manual for load feeders see https://imp.siemens.com/digital-engineering-manual/dem				
	Configuration Manual for load feeders see https://support.industry.siemens.com/cs/ww/en/view/39714188 .				

- ¹⁾ PC labeling system for individual inscription of unit labeling plates available from:
murrplastik Systemtechnik GmbH
(see page 16/18).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA2 load feeders

3RV29 infeed system for load feeders

Overview

Types of infeed for 3RA2 fuseless load feeders

On the whole four different incoming power supply possibilities are available:


- Parallel wiring
- Use of 3-phase busbars (combination with SIRIUS motor starter protectors and contactors possible)
- 8US busbar adapters
- SIRIUS 3RV29 infeed systems

Insulated 3-phase busbar system

3-phase busbar systems provide an easy, time-saving and clearly arranged means of feeding 3RA2 load feeders with screw terminals. Different versions are available for sizes S00 and S0 and can also be used for the various different types of motor starter protectors.

The busbars are suitable for between two and five feeders. However, any kind of extension is possible by clamping the connection tags of an additional busbar (rotated 180°) underneath the terminals of the respective last motor starter protector.

A combination of feeders of different sizes is possible with sizes S00 and S0. Connecting pieces are available for this purpose. The motor starter protectors are supplied by appropriate infeed terminals.

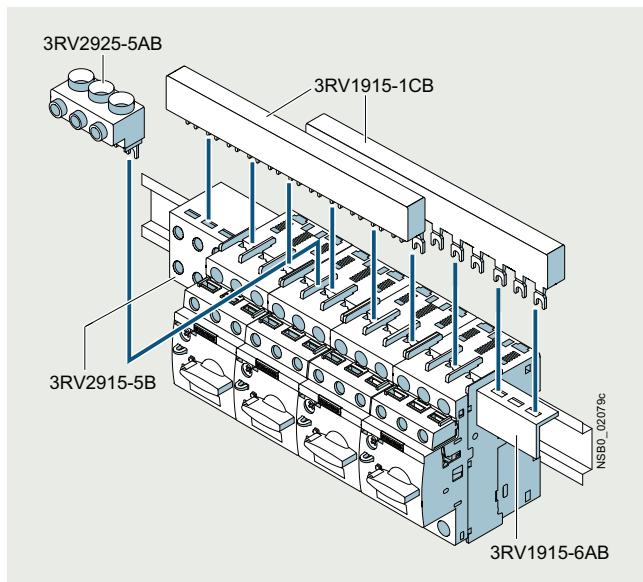

SIRIUS 3-phase busbar system size S00/S0

The 3-phase busbar systems are finger-safe. They are designed for any short-circuit stress which can occur at the output side of connected motor starter protectors.

The 3-phase busbar systems can also be used for the assembly of "Starters (Type E)" of size S0 or S2 according to UL/CSA. However, special infeed terminals, 3RV2925-5EB for sizes S00/S0 and 3RV2935-5E for size S2, must be used for this purpose, see page 7/51.

8US busbar adapters for 60 mm systems


The load feeders are mounted directly with the aid of busbar adapters on busbar systems with 60 mm center-to-center clearance in order to save space and to reduce infeed times and costs.

The busbar adapters for busbar systems with 60 mm center-to-center clearance are suitable for copper busbars with a width of 12 to 30 mm. The busbars can be 4 to 5 mm or 10 mm thick.

The feeders are snapped onto the adapter and connected on the input side, either with wires or with the plug-in connectors of the SIRIUS infeed system (see page 8/55). This prepared unit is then plugged directly onto the busbar system, and is thus connected both mechanically and electrically at the same time.

For the setup of UL feeders (Type E and F), Type E terminal blocks or phase barriers must be fitted to the infeed module on the load feeder (see page 7/59).

For selection and ordering data, see page 8/55.

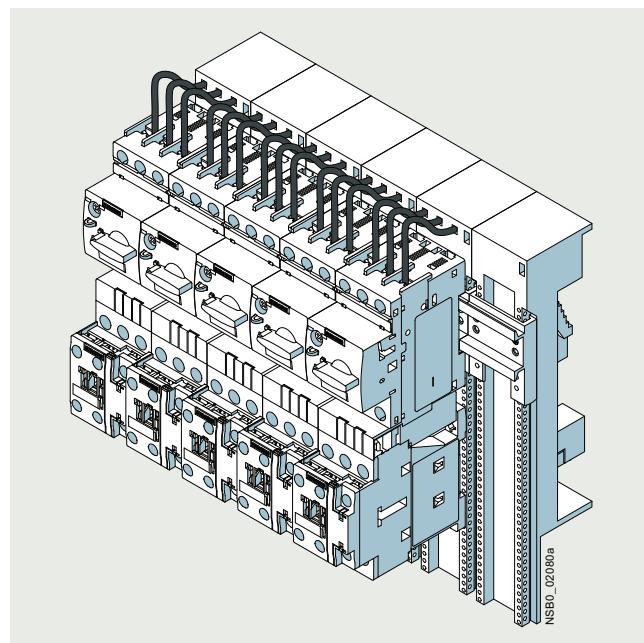

SIRIUS load feeders with busbar adapters snapped onto busbars

SIRIUS 3RV29 infeed system

The 3RV29 infeed system is a convenient means of incoming power supply and distribution for a group of several motor starter protectors or complete load feeders with screw or spring-loaded terminals up to size S0.

The system is based on a basic module complete with a lateral incoming unit (3-phase busbar with infeed) which has two slots.

Expansion modules are available for extending the system (3-phase busbars for system expansion).

3RV29 infeed system, see page 7/68 onwards.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Overview

3RA6 fuseless compact starters and infeed system for 3RA6



3RA62 reversing starter

Integrated functionality

The SIRIUS 3RA6 compact starters are a generation of special load feeders with the integrated functionality of a motor starter protector, contactor and electronic overload relay. In addition, various functions of optional mountable accessories (e.g. auxiliary switches, surge suppressors) are already integrated in the SIRIUS compact starter.



3RA6 compact starters with the integrated functionality of a motor starter protector, contactor and electronic overload relay

Applications

SIRIUS compact starters can be used wherever standard three-phase motors or resistive loads up to 32 A (approx. 15 kW/400 V) are directly started or switched.

The compact starters are not suitable for the protection of DC loads.

Approvals according to IEC, UL, CSA and CCC standards have been issued for the compact starters.

More information

Homepage, see www.siemens.com/sirius-compact-starters
SiePortal, see www.siemens.com/product?3RA6

Very high operational reliability

The high short-circuit breaking capacity and defined shutdown when the end of service life is reached mean that the SIRIUS compact starter achieves a very high level of operational reliability that would otherwise have only been possible with considerable additional outlay. This sets it apart from devices with similar functionality.

Safe disconnection

The auxiliary switches (NC contacts) of the 3RA6 compact starters are designed as mirror contacts. This enables their use for safe disconnection, e.g. EMERGENCY STOP up to SIL 1 (IEC 62061) or PL c (ISO 13849-1) or, if used in conjunction with an additional infeed contactor, up to SIL 3 (IEC 62061) or PL e (ISO 13849-1).

Communication link through AS-Interface

To enable the communication link through AS-Interface, an AS-i add-on module is available in several versions for mounting on the SIRIUS compact starter instead of the control circuit terminals.

The design of the AS-i add-on module permits a group of up to 62 feeders with a total of four cables to be connected to the control system. This reduces wiring work considerably compared to the parallel wiring method.

Note:

The 3RA8 intelligent load feeders are suitable for establishing a communication link with the ET 200SP distributed I/Os (see also page 8/84).

Permanent wiring/easy replacement

Using the SIRIUS infeed system for 3RA6 (see page 8/77), it is possible to carry out the wiring in advance without a compact starter having to be connected.

A compact starter is very easily replaced simply by pulling it out of the device without disconnecting the wiring.

Even with screw fixing or mounting on a DIN rail there is no need to disconnect any wiring (on account of the removable main and control circuit terminals) in order to replace a compact starter.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Consistent solution from the infeed to the motor feeder

The SIRIUS infeed system for 3RA6 with integrated PE bar offers a user-friendly system for feeding in summation currents up to 100 A with a maximum conductor cross-section of 70 mm² and for connecting the motor cable directly without additional intermediate terminals.

Screw and spring-loaded terminals

The SIRIUS compact starters and the infeed system for 3RA6 are available with screw and spring-loaded terminals.



Screw terminals



Spring-loaded terminals

The connection method is indicated in the corresponding tables by the symbols shown on orange backgrounds.

Use of load feeders in conjunction with IE3 and IE4 motors

Note:

For the use of SIRIUS 3RA6 compact starters in conjunction with highly efficient IE3 and IE4 motors, please observe the information on dimensioning and configuring, [see System Manual](#).

For more information, [see page 1/8](#).

Types of infeed for the 3RA6 fuseless compact starters

On the whole four different infeed possibilities are available:

- Parallel wiring
- Use of 3-phase busbars (combination with SIRIUS motor starter protectors and SIRIUS contactors possible)
- 8US busbar adapters
- SIRIUS infeed system for 3RA6 ([see page 8/77 onwards](#))

To comply with the clearance and creepage distances demanded according to UL 508 there are the following infeed possibilities:

Type of infeed	Infeed terminal (according to UL 508, Type E)	Type
Parallel wiring	Terminal block for "Self-Protected Combination Motor Controller (Type E)"	3RV2928-1H
3-phase busbars	3-phase infeed terminal for the assembly of "Starters (Type E)", UL 508	3RV2925-5EB
Infeed system for 3RA6	Infeed left, 50/70 mm ² , screw terminal with three slots, outgoing terminal with screw/spring-loaded terminal, including PE bar	3RA6813-8AB (screw terminals), 3RA6813-8AC (spring-loaded terminals)

SIRIUS 3RA6 compact starters

SIRIUS 3RA6 compact starters are universal motor feeders according to IEC 60947-6-2. As control and protective switching devices (CPS) they can connect, convey and disconnect the thermal, dynamic and electrical loads from short-circuit currents up to $I_{\text{q}} = 53$ kA, i.e. they are practically weld-free. They combine the functions of a motor starter protector, a contactor and an electronic overload relay in one enclosure. The versions available are the 45-mm-wide direct-on-line starters and the 90-mm-wide reversing starters.

The reversing starter version comes with not only an internal electrical interlock but also with a mechanical interlock to prevent simultaneous actuation of both directions of rotation.

The compact starters have isolating features according to IEC 60947-2 and can be used as disconnector units (main control switch according to EN 60204 or VDE 0113). Isolation is effected by moving the handle into the "OFF" position; disconnection by means of the control contacts is not enough.

3RA6 fuseless compact starters are available in five current setting ranges and two control voltage ranges (AC/DC):

Current setting range	At 400 V AC for three-phase motors		Rated control supply voltage for 3RA61, 3RA62 compact starters
	Standard output P	kW	
A	0.09	24	V AC/DC
0.1 ... 0.4	0.37	110 ... 240	
0.32 ... 1.25	1.5		
1 ... 4	5.5		
3 ... 12	15		
8 ... 32			

Notes:

The 3RA2 load feeders can be used for fuseless load feeders > 32 A up to 65 A. Load feeders in size S3 up to 100 A are available for customer assembly ([see also page 8/6](#)).

The SENTRON 3VL circuit breakers and the SIRIUS 3RT contactors can be used for fuseless load feeders > 100 A.

Operating conditions

The SIRIUS 3RA6 compact starters are suitable for use in any climate. They are intended for use in enclosed rooms in which no harsh operating conditions (such as dust, caustic vapors, hazardous gases) prevail. Suitable covers must be provided for installation in dusty and damp locations.

The permissible ambient temperature during operation is -20 to +60 °C. The rated short-circuit current I_{CS} according to IEC 60947-6-2 is 53 kA at 400 V.

Note:

The maximum permissible short-circuit currents of the device versions for the various line system configurations and voltages are available upon request from Technical Support: www.siemens.com/support-request

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Overload tripping times

The tripping time in the event of overload can be set on the device to normal starting conditions (CLASS 10) and to heavy starting conditions (CLASS 20). As the breaker mechanism still remains closed after an overload, resetting is possible by either local manual RESET or automatic RESET¹⁾ after three minutes cooling time.

With automatic RESET, there is no need to open the control cabinet.

Diagnostics options

The compact starter provides the following on-site diagnostics options:

- With LEDs
 - Connection to the control voltage
 - Position of the main contacts
- With mechanical display
 - Tripping due to overload
 - Tripping due to short circuit
 - Tripping due to malfunction (end of service life reached because of worn switching contacts or a worn switching mechanism or faults in the control electronics)

These states can also be evaluated in the higher-level control system:

- With parallel wiring using the integrated auxiliary and signaling switches of the compact starter
- With AS-Interface or IO-Link in even greater detail using the respective communications interface

Four equipment versions for 3RA61 and 3RA62 compact starters

- For DIN-rail mounting or screw fixing:
basic version including one pair of main circuit terminals and one pair of control circuit terminals
- For DIN-rail mounting or screw fixing when using the AS-i add-on module:
without control circuit terminals because the AS-i add-on module is plugged on instead
- For use with the infeed system for 3RA6:
without main circuit terminals because they are supplied with the infeed system and the expansion modules
- For use with the infeed system for 3RA6 and the AS-i add-on module: without terminal complement
(also for reordering when replacing the compact starter)

¹⁾ The automatic RESET function is not available for versions 3RA6120-B/C and 3RA6250-B/-C with a rated current of 1.25 A and 4 A. The reset can be alternatively carried out by disconnecting the supply voltage A1/A2 via the NC contacts 95/96 (overload signaling contact). The automatic RESET function is provided with this circuitry.

More components of the 3RA6

Apart from the control supply voltage, "Overload" (1 CO) and "Short circuit/Function fault" (1 NO) signaling contacts are already integrated into the 3RA61/3RA62 – and lockable via two 6-pole removable control circuit terminals. The 3RA61 has two auxiliary contacts (1 NO + 1 NC) for displaying the position of the main contacts. Unlike the 3RA61 direct-on-line starter, the 3RA62 reversing starter has one auxiliary contact (1 NO) per direction of rotation per main contact.

A slot for an optional auxiliary switch (either 2 NO, 2 NC or 1 NO + 1 NC) is available for the 3RA61 direct-on-line starters. For the 3RA62 reversing starters, two slots are available (auxiliary switches, see [Accessories, page 8/72](#)).

Force-guided operation of the auxiliary contacts

Force-guided operation between individual auxiliary circuits exists for the compact starter in the version as a direct-on-line starter for parallel wiring (3RA61) between the auxiliary circuits of the NC contacts (NC 21-22) and the NO contacts (NO 13-14) in the basic unit. In addition, the optional auxiliary switch offers force-guided contacts in the 3RA6913-1A version, each with one normally closed contact and one normally open contact.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Article number scheme

Product versions		Article number				
Compact starters		3RA6 □ □ □ - □ □ □ □ □				
Product function	Direct-on-line starter Reversing starter Infeed system Accessories	1 2 0 2 5 0 8 □ □				For motor standard output 0.09 ... 15 kW ¹⁾ For motor standard output 0.09 ... 15 kW ¹⁾
	• Auxiliary switch • Terminals • Fixing elements • Control kit	9 1 □ 9 2 □ 9 4 □ 9 5 □				
Connection methods	No terminals Screw terminals Spring-loaded terminals	0 1 2				
Setting range	0.1 ... 0.4 A 0.32 ... 1.25 A 1 ... 4 A 3 ... 12 A 8 ... 32 A		A B C D E			
Rated control supply voltage	24 V AC/DC 110 ... 240 V AC/DC		B 3 P 3			For direct-on-line/reversing starters For direct-on-line/reversing starters
Terminal equipment versions	None 1/1 0/1 1/0		0 2 3 4			Without main and control circuit terminals With 1 pair of main circuit and 1 pair of control circuit terminals Without main circuit terminals, with 1 pair of control circuit terminals With 1 pair of main circuit terminals, without control circuit terminals
Example	3RA6 1 2 0 - 0 A B 3 0					

¹⁾ Standard three-phase motor, basis 4-pole at 400 V AC; the actual starting and rated data of the motor to be protected must be considered when selecting the units.

Note:

The article number scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders, please use the article numbers quoted in the selection and ordering data.

Benefits

Product advantages

The SIRIUS 3RA6 compact starters offer a number of benefits:

- Compact design saves space in the control cabinet
- Little planning and assembly work and far less wiring thanks to a single complete unit with one article number
- Low variance and therefore low stock levels, with two wide voltage ranges and five wide setting ranges for the rated current
- High plant availability through integrated functionalities such as prevention of main contact welding and disconnection at end of service life
- Enhanced productivity through automatic device RESET¹⁾ in case of overload and differentiated detection of overload and short circuit
- Easy checking of the wiring and testing of the motor direction prior to startup thanks to optional control kits

¹⁾ The automatic RESET function is not available for versions 3RA6120-B/C and 3RA6250-B/-C with a rated current of 1.25 A and 4 A. The reset can be alternatively carried out by disconnecting the supply voltage A1/A2 via the NC contacts 95/96 (overload signaling contact). The automatic RESET function is provided with this circuitry.

- Quick replacement of devices thanks to removable terminals with spring-loaded and screw terminals in the main and control circuit
- Efficient power distribution through the related SIRIUS infeed system for 3RA6
- Direct connection of the motor feeder cable to the SIRIUS infeed system for 3RA6 thanks to integrated PE bar
- Connecting and looping through of incoming feeders up to a cross-section of 70 mm²
- When using the infeed system for 3RA6, possibility of directly connecting the motor cable without intermediate terminals
- Optional link to AS-Interface enables integration in Totally Integrated Automation

The SIRIUS 3RA6 compact starters create the basis for high-availability and future-proof machine concepts.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Technical specifications

More information

SiePortal, see www.siemens.com/product?3RA6



System Manual, see
<http://support.industry.siemens.com/cs/ww/en/view/27865747>

FAQs, see <https://support.industry.siemens.com/cs/ww/en/ps/16301/faq>

Notes on security:

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial cybersecurity concept. Siemens products and solutions represent one component of such a concept.

For more information on industrial cybersecurity, see
www.siemens.com/cybersecurity-industry.

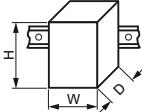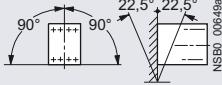Type	3RA61	3RA62	
Mechanics and environment			
Mounting dimensions (W x H x D)			
• Screw terminals • Spring-loaded terminals	mm mm	45 x 170 x 165 45 x 191 x 165	
		90 x 170 x 165 90 x 191 x 165	
Depth from DIN rail	mm	160	
Permissible ambient temperature			
• During operation (permissible operational current see Electrical specifications)	°C	-20 ... +70, restriction as from 60 depending on design	
• During storage	°C	-55 ... +80	
• During transport	°C	-55 ... +80	
Permissible mounting position			
Shock resistance (sine-wave pulse)	$a = 60 \text{ m/s}^2 = 6 \text{ g}$ with 10 ms; for every 3 shocks in all axes		
Vibratory load	$f = 4 \dots 5.8 \text{ Hz}; d = 15 \text{ mm}; f = 5.8 \dots 500 \text{ Hz}; a = 20 \text{ m/s}^2; 10 \text{ cycles}$		
Degree of protection IP on the front	According to IEC 60529		
Touch protection on the front	IP20		
Touch protection on the front	Finger-safe for vertical touching from the front		
Installation altitude	m	Up to 2 000 above sea level without restriction	
Relative air humidity	%	10 ... 90	
Pollution degree		3	
Electrical specifications			
Device standard	IEC 60947-6-2		
Maximum rated operational voltage U_e	V V	690 400 for 3RA6250-E... (reversing starter 32 A versions)	
Rated frequency	Hz	50/60	
Rated insulation voltage U_i (pollution degree 3)	V	690	
Rated impulse withstand voltage U_{imp}	kV	6	
Rated current $I_e^{(1)}$ and setting range of overload release	0.1 ... 0.4 A 0.32 ... 1.25 A 1 ... 4 A 3 ... 12 A 8 ... 32 A	A A A A A	0.4 1.25 4 12 32
Permissible operational current of the compact starter⁽²⁾			
When several compact starters are mounted side-by-side in the 3RA6 infeed system (for more details on the various design versions, see System Manual)			
• For a control cabinet inside temperature of	+40 °C	%	100
• For a control cabinet inside temperature of	+60 °C	%	80
• For a control cabinet inside temperature of	+70 °C	%	60
Trip class (CLASS)	According to IEC 60947-4-1, EN 60947-4-1 (VDE 0660 Part 102)		
Overload function	10/20		
Ratio of lower to upper current mark	1:4		
Rated service short-circuit breaking capacity I_{cs} at 50/60 Hz, 400 V AC	kA	53	
Rated service short-circuit breaking capacity I_{csIT} at 50/60 Hz 400/690 V AC in IT systems	kA	1.5	

⁽¹⁾ For the use of 3RA6 compact starters in conjunction with highly energy-efficient IE3 and IE4 motors, please observe the information on dimensioning and configuring, see System Manual.
 More information, see page 1/8.

⁽²⁾ Details about installation conditions and the use of the compact starters, and particularly about the derating of the rated current, can be found in the System Manual.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Type		3RA61	3RA62
Electrical specifications (continued)			
Power loss $P_v \text{ max}$ of all main conducting paths	0.4 A Dependent on rated current I_e (upper setting range)	mW mW W W W	10 100 1 1.8 5.4
Max. switching frequency	AC-41 AC-43 AC-44	1/h 1/h 1/h	750 250 15
No-load switching frequency		1/h	3 600
Isolating features of the compact starter	According to IEC 60947-3	✓	Isolation is assured only by moving the handle into the "OFF" position.
Main and EMERGENCY-OFF switch features of the compact starter and accessories	According to IEC 60204	✓	
Protective separation	According to IEC 60947-2		
Control circuit to auxiliary circuit			
• Horizontal DIN rail		V	Up to 400
• Other mounting position		V	Up to 250
Auxiliary circuit to auxiliary circuit			
• Horizontal DIN rail		V	Up to 400
• Other mounting position		V	Up to 250
Main circuit to auxiliary circuit			
• Any mounting position		V	Up to 400
EMC interference immunity	According to IEC 60947-1		Corresponds to test level 3
Conducted interference	BURST according to IEC 61000-4-4	kV kV	4 3
Conducted interference	SURGE according to IEC 61000-4-5	kV kV	4 2
Auxiliary switches			
• Integrated		1 NO + 1 NC 1 CO/1 NO	
- Position of the main contacts			2 NO
- Overload/short circuit and malfunction signal			
• Expandable		2 NO, 2 NC, 1 NO + 1 NC	
- Position of the main contacts			
Surge suppressors	Integrated (varistor)		
Electromagnetic operating mechanisms			
Control voltage	V V	24 AC/DC 110 ... 240 AC/DC	
Frequency	At AC	Hz	50/60 ($\pm 5\%$)
Operating range			0.7 ... 1.25 U_s
No-load switching frequency		1/h	3 600
Line protection	At 10 kA At 50 kA	mm ² mm ²	2.5 4
Shock resistance		g g	25 15
Functional switching			
Making capacity			$12 \times I_n$
Breaking capacity			$10 \times I_n$
Switching capacity dependent on rated current	Up to 12 A Up to 32 A	kW kW	5.5 15
Endurance in operating cycles	• Electrical endurance	At $I_e = 0.9 \times I_n$ and 400 V	3 ... 10 000 000
✓ Function available			2 x 3 ... 10 000 000

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Type	3RA6120-.□B3., 3RA6250-.□B3. □ = A, B, C or D Rated operational current ≤ 12 A				3RA6120-.EB3., 3RA6250-.EB3. Rated operational current 32 A		
Rated control supply voltage	V	24 AC	24 DC		24 AC	24 DC	
Inrush peak current	A	0.59	0.47		0.59	0.47	
Holding current	A	0.13	0.12		0.17	0.14	
Closed	W	2.8	2.9		3.5	3.1	
Operating times, typical							
• On	ms	< 160	< 140		< 160	< 140	
• Off	ms	< 35	< 35		< 30	< 30	
Type	3RA6120-.□P3., 3RA6250-.□P3. □ = A, B, C or D Rated operational current ≤ 12 A				3RA6120-.EP3., 3RA6250-.EP3. Rated operational current 32 A		
Rated control supply voltage	V	110 AC	240 AC	110 DC	240 DC	110 AC	240 AC
Inrush peak current	A	0.24	0.40	0.17	0.29	0.24	0.40
Holding current	A	0.06	0.08	0.03	0.02	0.06	0.07
Closed	W	3.8	6	3.1	5.1	3.7	5.2
Operating times, typical							
• On	ms	< 160	< 140	< 150	< 140	< 160	< 150
• Off	ms	< 50	< 80	< 50	< 70	< 40	< 60

Type	3RA6			
Control circuit				
Rated operational voltage				
• External auxiliary switch	V	400/690		
• Internal auxiliary switch	V	400/690		
• Short-circuit signaling switch	V	400		
• Overload signaling switch	V	400		
Switching capacity				
• External auxiliary switch	AC-15			
	• Up to $U_e = 230\text{ V}$	A	6	
	• Up to $U_e = 400\text{ V}$	A	3	
	• Up to $U_e = 289/500\text{ V}$	A	2	
	• Up to $U_e = 400/690\text{ V}$	A	1	
	DC-13			
	• Up to $U_e = 24\text{ V}$	A	6	
	• Up to $U_e = 60\text{ V}$	A	0.9	
	• Up to $U_e = 125\text{ V}$	A	0.55	
	• Up to $U_e = 250\text{ V}$	A	0.27	
	AC-15			
	• Up to $U_e = 230\text{ V}$	A	6	
	• Up to $U_e = 400\text{ V}$	A	3	
	• Up to $U_e = 289/500\text{ V}$	A	2	
	• Up to $U_e = 400/690\text{ V}$	A	1	
	DC-13			
	• Up to $U_e = 24\text{ V}$	A	10	
	• Up to $U_e = 60\text{ V}$	A	2	
	• Up to $U_e = 125\text{ V}$	A	1	
	• Up to $U_e = 250\text{ V}$	A	0.27	
	• Up to $U_e = 480\text{ V}$	A	0.1	
	AC-15			
	• Up to $U_e = 230\text{ V}$	A	3	
	• Up to $U_e = 400\text{ V}$	A	1	
	DC-13			
	• Up to $U_e = 24\text{ V}$	A	2	
	• Up to $U_e = 250\text{ V}$	A	0.11	

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

General data

Type	3RA61, 3RA62		
External auxiliary switches, internal auxiliary switches			
Endurance in operating cycles			
• Mechanical endurance		10 000 000	
• Electrical endurance		200 000	
	AC-15, 230 V	500 000	
	• Up to 6 A	2 000 000	
	• Up to 3 A	10 000 000	
	• Up to 1 A		
	• Up to 0.3 A		
	DC-13, 24 V		
	• Up to 6 A	30 000	
	• Up to 3 A	100 000	
	• Up to 0.5 A	2 000 000	
	• Up to 0.2 A	10 000 000	
	DC-13, 110 V		
	• Up to 1 A	40 000	
	• Up to 0.55 A	100 000	
	• Up to 0.3 A	300 000	
	• Up to 0.1 A	2 000 000	
	• Up to 0.04 A	10 000 000	
	DC-13, 220 V		
	• Up to 0.3 A	110 000	
	• Up to 0.1 A	650 000	
	• Up to 0.05 A	2 000 000	
	• Up to 0.018 A	10 000 000	
Contact reliability	At 17 V and 5 mA	Oper- ating cycles	1 faulty switching operation per 100 000 000
Short-circuit protection			
• Short-circuit current $I_K \leq 1.1 \text{ kA}$	Fuse links, operational class gG - NEOZED type 5SE - DIAZED type 5SB - LV HRC type 3NA	A	10
• Short-circuit current $I_K < 400 \text{ A}$	Miniature circuit breaker up to 230 V with C characteristic	A	10
Signaling switches			
Endurance in operating cycles			
• Mechanical endurance		20 000	
• Electrical endurance AC-15	At 230 V and 3 A	6 050	
Contact reliability	At 17 V and 5 mA	Oper- ating cycles	1 faulty switching operation per 100 000 000
Short-circuit protection			
• Short-circuit current $I_K \leq 1.1 \text{ kA}$	Fuse links, operational class gG - NEOZED type 5SE - DIAZED type 5SB - LV HRC type 3NA	A	6
• Short-circuit current $I_K < 400 \text{ A}$	Miniature circuit breaker up to 230 V with C characteristic	A	6
Overload (short-circuit current $I_K \leq 1.1 \text{ kA}$)	Fuse links, operational class gG - NEOZED type 5SE - DIAZED type 5SB - LV HRC type 3NA	A	4

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

IE3/IE4 ready 3RA61, 3RA62 compact starters > 3RA61 direct-on-line starters

Selection and ordering data




3RA6120-1CB32



3RA6120-2EB32

Direct-on-line starting

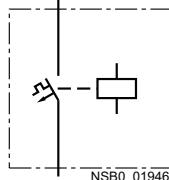

Rated control supply voltage 24 V AC/DC

Width 45 mm

Rated short-circuit current $I_{CS} = 53 \text{ kA}$ at 400 V

A set of 3RA6940-0A adapters is required for screw fixing.

PU (UNIT, SET, M) = 1
PS* = 1 unit
PG = 42F

			Article No.	Price per PU	Article No.	Price per PU	
kW	A	A					
For use in the infeed system for 3RA6 and with the AS-i add-on module or as a replacement device without main and control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6120-0AB30	--	3RA6120-2AB32	--	
0.37	0.32 ... 1.25	56	3RA6120-0BB30	--	3RA6120-2BB32	--	
1.5	1 ... 4	56	3RA6120-0CB30	--	3RA6120-2CB32	--	
5.5	3 ... 12	168	3RA6120-0DB30	--	3RA6120-2DB32	--	
15	8 ... 32	448	3RA6120-0EB30	--	3RA6120-2EB32	--	
			Screw terminals		Spring-loaded terminals		
For DIN-rail mounting or screw fixing with 1 pair of main circuit terminals and 1 pair of control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6120-1AB32	3RA6120-2AB32	3RA6120-2AB32	3RA6120-2AB32	
0.37	0.32 ... 1.25	56	3RA6120-1BB32	3RA6120-2BB32	3RA6120-2BB32	3RA6120-2BB32	
1.5	1 ... 4	56	3RA6120-1CB32	3RA6120-2CB32	3RA6120-2CB32	3RA6120-2CB32	
5.5	3 ... 12	168	3RA6120-1DB32	3RA6120-2DB32	3RA6120-2DB32	3RA6120-2DB32	
15	8 ... 32	448	3RA6120-1EB32	3RA6120-2EB32	3RA6120-2EB32	3RA6120-2EB32	
For use in the infeed system for 3RA6 without main circuit terminals, with 1 pair of control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6120-1AB33	3RA6120-2AB33	3RA6120-2AB33	3RA6120-2AB33	
0.37	0.32 ... 1.25	56	3RA6120-1BB33	3RA6120-2BB33	3RA6120-2BB33	3RA6120-2BB33	
1.5	1 ... 4	56	3RA6120-1CB33	3RA6120-2CB33	3RA6120-2CB33	3RA6120-2CB33	
5.5	3 ... 12	168	3RA6120-1DB33	3RA6120-2DB33	3RA6120-2DB33	3RA6120-2DB33	
15	8 ... 32	448	3RA6120-1EB33	3RA6120-2EB33	3RA6120-2EB33	3RA6120-2EB33	
For DIN-rail mounting or screw fixing for use with AS-i add-on module with 1 pair of main circuit terminals, without control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6120-1AB34	--	3RA6120-2AB34	--	
0.37	0.32 ... 1.25	56	3RA6120-1BB34	3RA6120-2BB34	3RA6120-2BB34	3RA6120-2BB34	
1.5	1 ... 4	56	3RA6120-1CB34	3RA6120-2CB34	3RA6120-2CB34	3RA6120-2CB34	
5.5	3 ... 12	168	3RA6120-1DB34	3RA6120-2DB34	3RA6120-2DB34	3RA6120-2DB34	
15	8 ... 32	448	3RA6120-1EB34	3RA6120-2EB34	3RA6120-2EB34	3RA6120-2EB34	

¹⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

3RA61, 3RA62 compact starters > 3RA61 direct-on-line starters **IE3/IE4 ready**




3RA6120-1CP32



3RA6120-2EP32

Direct-on-line starting

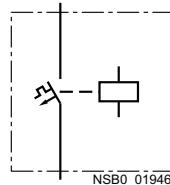

Rated control supply voltage 110 ... 240 V AC/DC

Width 45 mm

Rated short-circuit current $I_{CS} = 53 \text{ kA}$ at 400 V

A set of 3RA6940-0A adapters is required for screw fixing.

PU (UNIT, SET, M) = 1

PS* = 1 unit

PG = 42F

Standard three-phase motor 4-pole at 400 V AC ¹⁾ Standard output P	Setting range of the electronic overload release 	Instantaneous electronic release 	Article No.	Price per PU	Article No.	Price per PU
kW	A	A				
For use in the infeed system for 3RA6 and with the AS-i add-on module or as a replacement device without main and control circuit terminals						
0.37	0.32 ... 1.25	56	3RA6120-0BP30	--		
1.5	1 ... 4	56	3RA6120-0CP30	--		
15	8 ... 32	448	3RA6120-0EP30	--		
			Screw terminals	Spring-loaded terminals		
For DIN-rail mounting or screw fixing with 1 pair of main circuit terminals and 1 pair of control circuit terminals						
0.09	0.1 ... 0.4	56	3RA6120-1AP32	3RA6120-2AP32		
0.37	0.32 ... 1.25	56	3RA6120-1BP32	3RA6120-2BP32		
1.5	1 ... 4	56	3RA6120-1CP32	3RA6120-2CP32		
5.5	3 ... 12	168	3RA6120-1DP32	3RA6120-2DP32		
15	8 ... 32	448	3RA6120-1EP32	3RA6120-2EP32		
For use in the infeed system for 3RA6 without main circuit terminals, with 1 pair of control circuit terminals						
0.37	0.32 ... 1.25	56	3RA6120-1BP33	3RA6120-2BP33		
1.5	1 ... 4	56	3RA6120-1CP33	3RA6120-2CP33		
5.5	3 ... 12	168	3RA6120-1DP33	3RA6120-2DP33		
15	8 ... 32	448	3RA6120-1EP33	3RA6120-2EP33		


¹⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

IE3/IE4 ready 3RA61, 3RA62 compact starters > 3RA62 reversing starters

Selection and ordering data

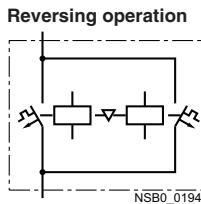
Rated control supply voltage 24 V AC/DC

Width 90 mm

 Rated short-circuit current $I_{CS} = 53 \text{ kA}$ at 400 V

Two sets of 3RA6940-0A adapters are required for screw fixing.

PU (UNIT, SET, M) = 1
 PS* = 1 unit
 PG = 42F

3RA6250-1CB32	3RA6250-2DB32						
Standard three-phase motor 4-pole at 400 V AC ¹⁾ Standard output P	Setting range of the electronic overload release	Instantaneous electronic release		Article No.	Price per PU	Article No.	Price per PU
	 $I >$	A	A				
For use in the infeed system for 3RA6 and with the AS-i add-on module or as a replacement device without main and control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6250-0AB30		--		
0.37	0.32 ... 1.25	56	3RA6250-0BB30		--		
1.5	1 ... 4	56	3RA6250-0CB30		--		
5.5	3 ... 12	168	3RA6250-0DB30		--		
15	8 ... 32	448	3RA6250-0EB30		--		
			Screw terminals		Spring-loaded terminals		
For DIN-rail mounting or screw fixing with 1 pair of main circuit terminals and 1 pair of control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6250-1AB32		3RA6250-2AB32		
0.37	0.32 ... 1.25	56	3RA6250-1BB32		3RA6250-2BB32		
1.5	1 ... 4	56	3RA6250-1CB32		3RA6250-2CB32		
5.5	3 ... 12	168	3RA6250-1DB32		3RA6250-2DB32		
15	8 ... 32	448	3RA6250-1EB32		3RA6250-2EB32		
For use in the infeed system for 3RA6 without main circuit terminals, with 1 pair of control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6250-1AB33		3RA6250-2AB33		
0.37	0.32 ... 1.25	56	3RA6250-1BB33		3RA6250-2BB33		
1.5	1 ... 4	56	3RA6250-1CB33		3RA6250-2CB33		
5.5	3 ... 12	168	3RA6250-1DB33		3RA6250-2DB33		
15	8 ... 32	448	3RA6250-1EB33		3RA6250-2EB33		
For DIN-rail mounting or screw fixing for use with AS-i add-on module with 1 pair of main circuit terminals, without control circuit terminals							
0.09	0.1 ... 0.4	56	3RA6250-1AB34		--		
0.37	0.32 ... 1.25	56	3RA6250-1BB34		--		
1.5	1 ... 4	56	3RA6250-1CB34		3RA6250-2CB34		
5.5	3 ... 12	168	3RA6250-1DB34		3RA6250-2DB34		
15	8 ... 32	448	3RA6250-1EB34		3RA6250-2EB34		

¹⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet


SIRIUS 3RA6 compact starters

3RA61, 3RA62 compact starters > 3RA62 reversing starters

IE3/IE4 ready



Reversing operation

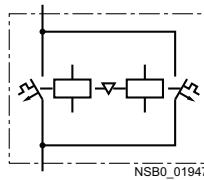

Rated control supply voltage 110 ... 240 V AC/DC

Width 90 mm

Rated short-circuit current $I_{CS} = 53$ kA at 400 V

Two sets of 3RA6940-0A adapters are required for screw fixing.

PU (UNIT, SET, M) = 1
PS* = 1 unit
PG = 42F

3RA6250-1CP32

3RA6250-2DP32

Standard three-phase motor 4-pole at 400 V AC¹⁾
Standard output P

Setting range of the electronic overload release

Instantaneous electronic release

kW



A

A

Article No.

Price per PU

Article No.

Price per PU

For use in the infeed system for 3RA6 and with the AS-i add-on module or as a replacement device without main and control circuit terminals

0.37 0.32 ... 1.25 56

3RA6250-0BP30

--

15 8 ... 32 448

3RA6250-0EP30

--

Screw terminals



Spring-loaded terminals



For DIN-rail mounting or screw fixing

with 1 pair of main circuit terminals and 1 pair of control circuit terminals

0.09 0.1 ... 0.4 56

--

3RA6250-2AP32

0.37 0.32 ... 1.25 56

3RA6250-1BP32

3RA6250-2BP32

1.5 1 ... 4 56

3RA6250-1CP32

3RA6250-2CP32

5.5 3 ... 12 168

3RA6250-1DP32

3RA6250-2DP32

15 8 ... 32 448

3RA6250-1EP32

3RA6250-2EP32

For use in the infeed system for 3RA6

without main circuit terminals, with 1 pair of control circuit terminals

1.5 1 ... 4 56

3RA6250-1CP33

--

5.5 3 ... 12 168

3RA6250-1DP33

--

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Accessories

Overview

Accessories for SIRIUS 3RA6 compact starters

The following accessories are available specially for the 3RA6 compact starters:

- Infeed system for 3RA6, see page 8/77 onwards
- AS-i add-on modules, see [Add-on modules for AS-Interface, page 8/75 onwards](#)
- External auxiliary switches: Snap-on auxiliary switch as versions 2 NO, 2 NC and 1 NO + 1 NC with screw or spring-loaded terminals; the contacts of the auxiliary switch open and close jointly with the main contacts of the compact starter. The NC contacts are designed as mirror contacts.
- Control kit: Aid for manually closing the main contacts in order to check the wiring and motor direction under conditions of short-circuit protection
- Adapter for screw fixing of the compact starter including push-in lugs
- Main circuit terminal: Available with screw and spring-loaded terminals
- Main circuit terminals mixed connection method:
With the main circuit terminals mixed connection method it is also possible in the main circuit to switch from screw terminals on the input side to spring-loaded terminals on the outgoing side.
This enables, for example, the side-by-side mounting of several compact starters and their cost-efficient connection using 3-phase busbars on the infeed side. The motors are then connected directly by the quick and reliably contacting spring-loaded terminals.

Accessories for UL applications

The terminal block for "Self-Protected Combination Motor Controller (Type E)" is available for complying with the clearance and creepage distances required according to UL 508.

Accessories for infeed using 3-phase busbar systems

The 3RV1915-1.B 3-phase busbars can be used as an easy, time-saving and clearly arranged means of feeding SIRIUS 3RA6 compact starters with screw terminals. Motor starter protector sizes S00 and S0 can also be integrated.

The busbars are suitable for between two and five devices. However, any kind of extension up to a maximum summation current of 63 A is possible by clamping the connection tags of an additional busbar (rotated 180°) underneath the terminals of the respective last motor starter protector.

Motor starter protectors S00 and S0 of the 3RV2 series can be combined in any way. The motor starter protectors are supplied by appropriate infeed terminals. Special infeed terminals are required for assembling "Starters (Type E)" according to UL/CSA.

The 3-phase busbar systems have touch protection but empty connection tags must be fitted with covers. They are designed for any short-circuit stress which can occur at the output side of connected SIRIUS 3RA6 compact starters or motor starter protectors.

Busbar adapters for 60 mm systems

The compact starters are mounted directly with the aid of busbar adapters on busbar systems with 60 mm center-to-center clearance in order to save space and to reduce infeed times and costs. These compact starters are suitable for copper busbars with a width from 12 to 30 mm. The busbars can be 4 to 5 mm or 10 mm thick.

The 8US busbar system can be loaded with a maximum summation current of 630 A.

The "reversing starter" version requires a device holder alongside the busbar adapter for lateral mounting.

The compact starters are snapped onto the adapter and connected on the input side. This prepared unit is then plugged directly onto the busbar system, and is thus connected both mechanically and electrically at the same time.


For further accessories, such as incoming and outgoing terminals, flat copper profiles etc., see [Catalog LV 10](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Accessories

Selection and ordering data

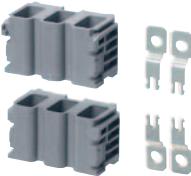	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Accessories specially for 3RA6 compact starters						
	Control kit For mechanical actuation of the compact starter	3RA6950-0A		1	1 unit	42F
3RA6950-0A						
	Adapter for screw fixing the compact starter (set including push-in lugs) Direct-on-line starters require one set, reversing starters two sets.	3RA6940-0A		1	1 unit	42F
3RA6940-0A						
	Auxiliary switches for compact starters <ul style="list-style-type: none">• 2 NO• 2 NC• 1 NO + 1 NC (these auxiliary contacts are force-guided)	Screw terminals 	3RA6911-1A 3RA6912-1A 3RA6913-1A	1 1 1	1 unit 1 unit 1 unit	42F 42F 42F
3RA6911-1A						
	Main circuit terminals input and output side (1 set comprising 2 terminals)	3RA6920-1A		1	1 unit	42F
3RA6920-1A						
	Control circuit terminals (1 set comprising 2 terminals) <ul style="list-style-type: none">• For 3RA61• For 3RA62	3RA6920-1B 3RA6920-1C		1 1	1 unit 1 unit	42F 42F
3RA6920-1B						
	Auxiliary switches for compact starters <ul style="list-style-type: none">• 2 NO• 2 NC• 1 NO + 1 NC (these auxiliary contacts are force-guided)	Spring-loaded terminals 	3RA6911-2A 3RA6912-2A 3RA6913-2A	1 1 1	1 unit 1 unit 1 unit	42F 42F 42F
3RA6911-2A						
	Main circuit terminals input and output side (1 set comprising 2 terminals)	3RA6920-2A		1	1 unit	42F
3RA6920-2A						
	Control circuit terminals (1 set comprising 2 terminals) <ul style="list-style-type: none">• For 3RA61• For 3RA62	3RA6920-2B 3RA6920-2C		1 1	1 unit 1 unit	42F 42F
3RA6920-2B						
	Main circuit terminals, mixed connection method 1 set comprises: <ul style="list-style-type: none">• 1 joint block on the input side with screw terminals• 1 joint block on the output side with spring-loaded terminals	3RA6920-3A		1	1 unit	42F
3RA6920-3A						

* You can order this quantity or a multiple thereof.
Illustrations are approximate

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Accessories


Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Terminals for "Self-Protected Combination Motor Controllers (Type E)" according to UL 508 for infeed through parallel wiring with compact starters					
 3RV2928-1H	Terminal block Type E For extended clearance and creepage distances (1 and 2 inch) Note: UL 508 demands 1-inch clearance and 2-inch creepage distance on the input side for "Combination motor controller (Type E)". Terminal blocks are not required for use according to CSA. These terminal blocks cannot be used in combination with 3RV19.5 3-phase busbars.	3RV2928-1H	1	1 unit	41E
3-phase busbars for infeed with 3RA6					
 3RV1915-1AB	For feeding several compact starters and/or motor starter protectors with screw terminals, mounted side-by-side on DIN rails, insulated, with touch protection.	3RV1915-1AB	1	1 unit	41E
 3RV1915-1BB	2 45 63 S00, S0	3RV1915-1BB	1	1 unit	41E
 3RV1915-1CB	3 45 63 S00, S0	3RV1915-1CB	1	1 unit	41E
 3RV1915-1DB	4 45 63 S00, S0	3RV1915-1DB	1	1 unit	41E
Covers for connection tags of the 3-phase busbars					
 3RV1915-6AB cover mounted on 3RV1915-1CB busbar	Touch protection for empty positions -- S00, S0	3RV1915-6AB	1	10 units	41E
3-phase infeed terminals for 3-phase busbars according to IEC and for assembling "Starters (Type E)" according to UL 508					
 3RV2925-5EB	Connection from top 2.5 ... 25 2.5 ... 16 10 ... 4 3 ... 4 S00, S0	3RV2925-5EB	1	1 unit	41E
3-phase infeed terminals for 3-phase busbars					
 3RV2915-5B	Connection from below ¹⁾ 2.5 ... 25 2.5 ... 16 10 ... 4 Input: 4; Output: 2 ... 2.5 S00, S0	3RV2915-5B	1	1 unit	41E

¹⁾ This terminal is connected in place of a compact starter, please take the space requirement (45 mm) into account.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Accessories

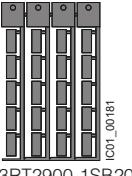Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Busbar adapters for 60 mm systems					
 8US1211-1NS10	For copper busbars according to DIN 46433 Width: 12 ... 30 mm Thickness: 4 ... 5 mm or 10 mm	8US1211-1NS10		1	1 unit 140
Device holders for lateral mounting alongside the busbar adapter for 60 mm systems					
 8US1250-1AA10	Required in addition to the busbar adapter for mounting a reversing starter	8US1250-1AA10		1	1 unit 140
Tools for opening spring-loaded terminals					
 3RA2908-1A	Screwdriver For all SIRIUS devices with spring-loaded terminals Length approx. 200 mm, 3.0 mm x 0.5 mm, titanium gray/black, partially insulated	Spring-loaded terminals  3RA2908-1A		1	1 unit 41B
Blank labels					
 3RT2900-1SB20	Unit labeling plates¹⁾ For SIRIUS devices, 20 mm x 7 mm, titanium gray	3RT2900-1SB20	100	340 units	41B
Manuals					
	System Manual for 3RA6 compact starter and infeed system for the 3RA6, see https://support.industry.siemens.com/cs/ww/en/view/27865747				

¹⁾ PC labeling system for individual inscription of unit labeling plates available from:
muroplastik Systemtechnik GmbH
(see page 16/18).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Add-on modules for AS-Interface

Overview

Various AS-i add-on modules are available for communication of the 3RA6 compact starter with the control system through AS-Interface:

- Standard version
- With two local inputs
- With two free external inputs
- With one free external input and one free external output
- With two free external outputs
- For local control

The AS-i add-on modules can be combined only in connection with compact starters with a rated control supply voltage of 24 V AC/DC.

AS-i add-on module for local control

With this new module it is also possible for the connected compact starter to be operated directly using simple switches, i.e. without recourse to AS-i communication, if required.

"Automatic" mode

NC contacts can be connected to the inputs Y2 and Y4 through the local terminals on the AS-i add-on module. If the "+" terminals are connected simultaneously to both local inputs, the AS-i add-on module will be in "Automatic" mode, i.e. it will communicate with the control system through AS-Interface.

Local control


Opening the two inputs Y2 and Y4 will result in the direct disconnection of the compact starter. Operation through AS-i communication is finished and the compact starter can now be switched on and off directly using NO contacts (one NO contact per direction of rotation on the reversing starter).

"LED AUX Power" must light up green, the 24 V DC supply must be ensured and the AS-i supply voltage must no longer be applied.


Resetting to "Automatic" mode

If a "1" signal is simultaneously applied at the local inputs, the availability bit DI 0 is switched to a "1" signal.

If AS-i communication is reset, the motor is first switched off and then on again when requested by the control system.

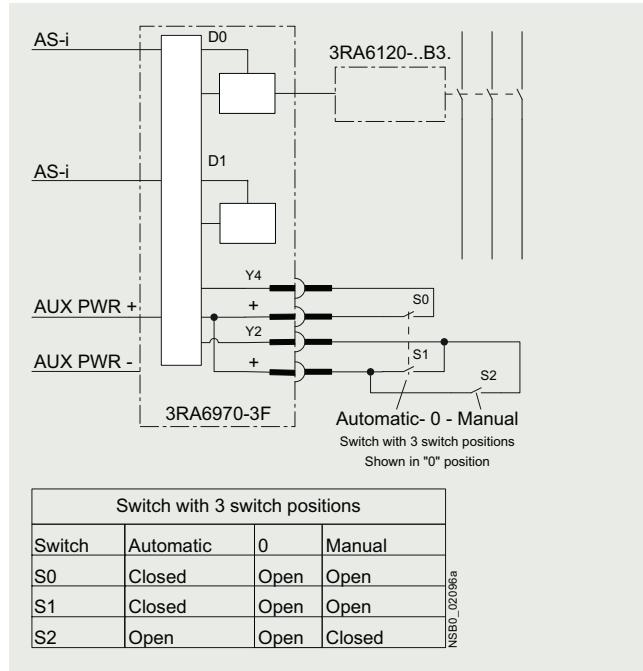

Circuit diagram example for controlling a 3RA6120 direct-on-line starter using an AS-i add-on module for local control

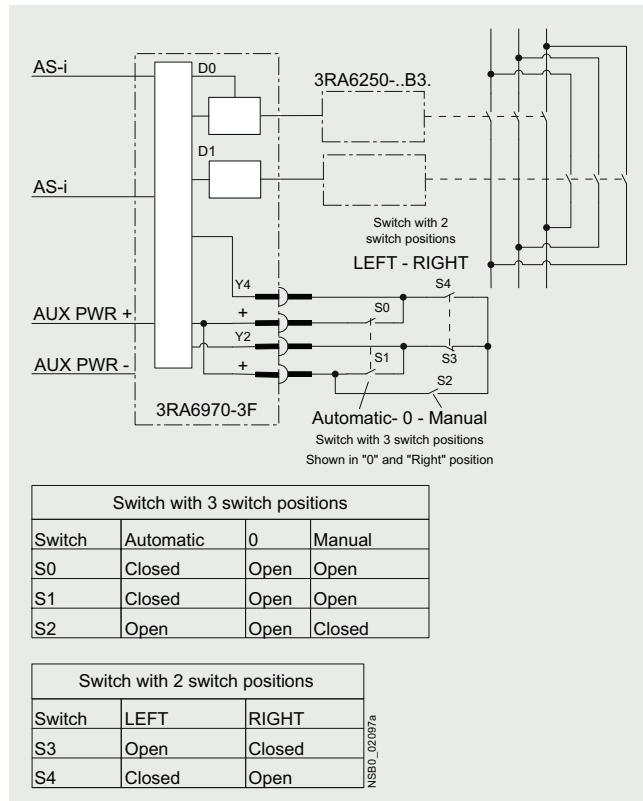

Circuit diagram example for controlling a 3RA6250 reversing starter using an AS-i add-on module for local control

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Add-on modules for AS-Interface

Selection and ordering data

	Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
AS-i add-on modules						
 3RA6970-3A	Standard version For communication of the compact starter with the control system through AS-Interface	3RA6970-3A		1	1 unit	42F
 3RA6970-3B to -3F	With two local inputs For safe disconnection through local safety relays, e.g. cable-operated switches	3RA6970-3B		1	1 unit	42F
	With two free external inputs Replaces the digital standard inputs "Motor On" and "Group warning"	3RA6970-3C		1	1 unit	42F
	With one free external input and one free external output Replaces the digital standard input "Group warning"	3RA6970-3D		1	1 unit	42F
	With two free external outputs Only for direct-on-line starters, replaces the digital standard output "Motor CCW"	3RA6970-3E		1	1 unit	42F
	For local control Control of the compact starter optionally using AS-Interface or local switches	3RA6970-3F		1	1 unit	42F
Spare parts for AS-i add-on modules						
 3RK1901-0NA00, 3RK1901-0PA00	Connection plugs for data and auxiliary supply cable With 2 insulation displacement terminations for standard stranded wires 2 x 0.5 ... 0.75 mm ² <ul style="list-style-type: none"> • Flat, yellow, extender • Flat, black, extender 	3RK1901-0NA00 3RK1901-0PA00		1	5 units	42C
 3RK1904-2AB02	AS-Interface addressing unit V3.0 <ul style="list-style-type: none"> • For AS-Interface modules and sensors and actuators with integrated AS-Interface according to AS-i specification V3.0 • For setting the AS-i address of standard slaves, and slaves with extended addressing mode (A/B devices) • With input/output test function and many other commissioning functions • Battery operation with four type AA batteries (IEC LR6, NEDA 15) • Scope of supply: <ul style="list-style-type: none"> - Addressing unit with four batteries - Addressing cable, with M12 plug to addressing plug (hollow plug), length 1.5 m 	3RK1904-2AB02		1	1 unit	42C

For matching AS-Interface masters, routers and power supply units, [see pages 2/29, 2/41 and 2/67 onwards](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

Overview

More information


Homepage, see www.siemens.com/sirius-infeed-system

SiePortal, see www.siemens.com/product?3RA68

Online configurator, see www.siemens.com/sirius/configurators

The infeed system for 3RA6 compact starters enables far less wiring in the main circuit and, thanks to the easy exchangeability of the compact starters, reduces the usual downtimes for maintenance work during the plant's operating phase. The infeed system provides the possibility of completely prewiring

the main circuit without a compact starter needing to be connected at the same time. As the result of the removable terminals in the main circuit, compact starters can be integrated in an infeed system in easy manner (without the use of tools).

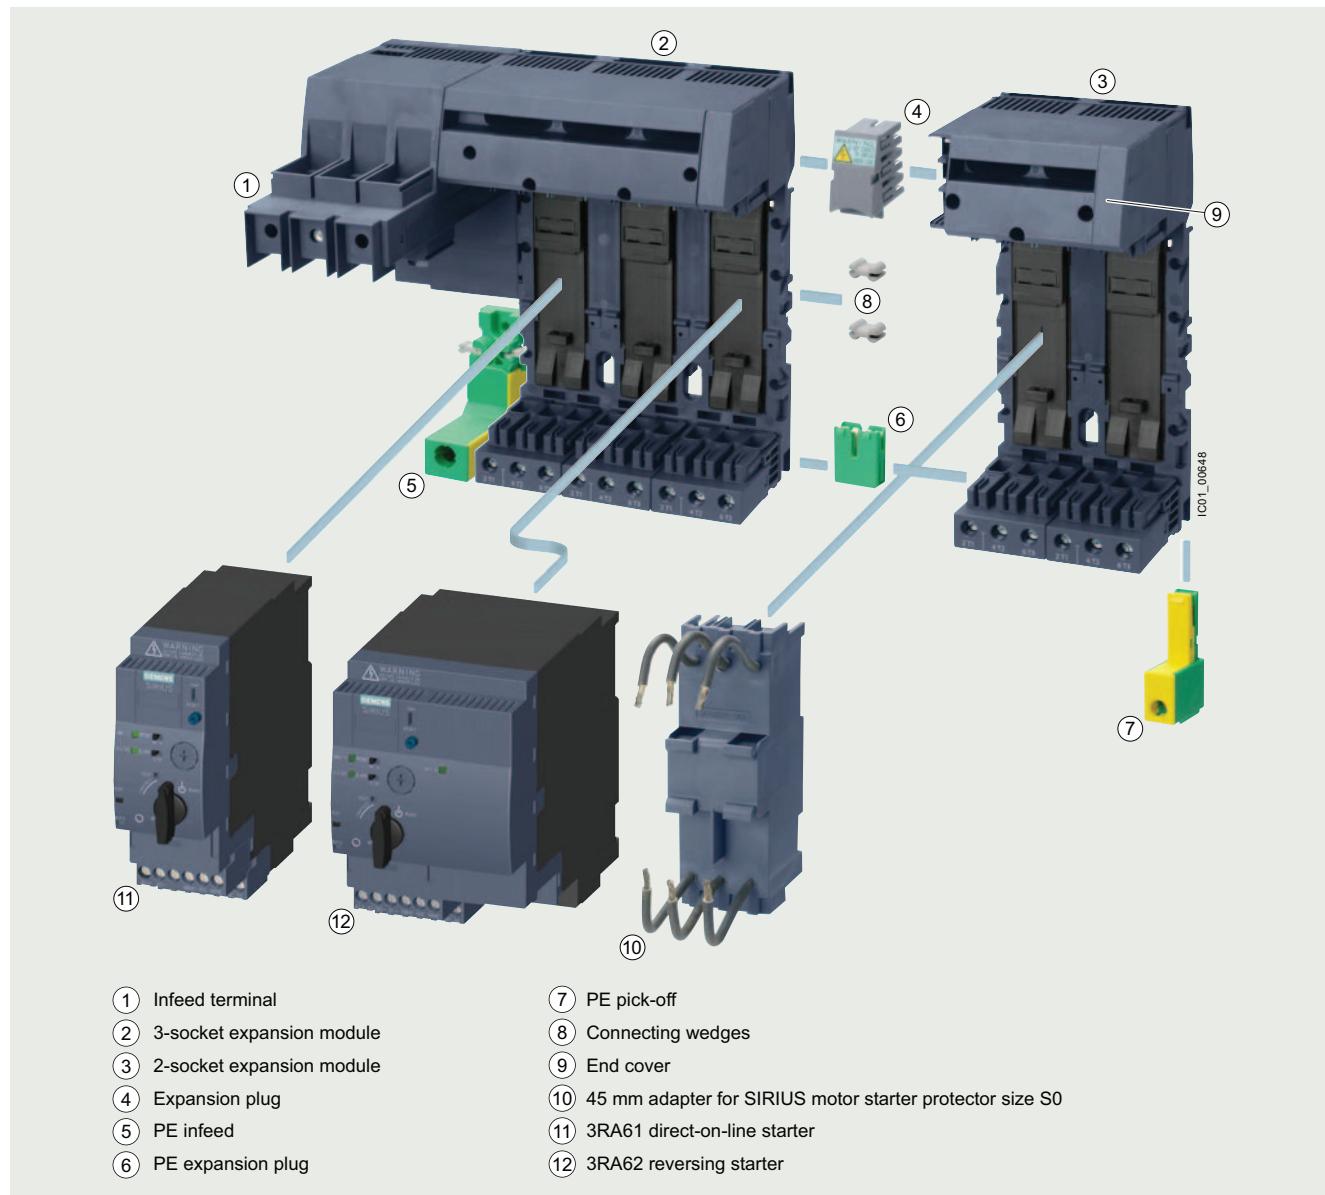

Infeed system for 3RA6 compact starters

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

In addition, the integrated PE bar means it is optionally possible to connect the motor cable directly to the infeed system without additional intermediate terminals. The infeed system for 3RA6 compact starters is designed for summation currents up to 100 A with a maximum conductor cross-section of up to 70 mm² on the infeed terminal block.

The infeed system can be mounted on a DIN rail or flat surfaces.

① Infeed

The 3-phase infeed is available as an infeed with screw terminal (25/35 mm² up to 63 A or 50/70 mm² up to 100 A) and as an infeed with spring-loaded terminal (25/35 mm² up to 63 A).

The infeed with spring-loaded terminal can be fitted on the left as well as on the right of an expansion module.

The infeed with screw terminal is supplied only with a 3-socket expansion module and permanently fitted on the left side.

The infeeds with screw terminal enable connection of the main conductors (L1, L2, L3) either from above or from below.

The infeed with screw terminal is supplied complete with one end cover, the infeed with spring-loaded terminal complete with two end covers.

② 3-socket expansion module

The expansion module with three sockets for compact starters is available with screw terminals and with spring-loaded terminals.

Expansion modules enable the infeed system to be expanded and can be fitted to each other in any number.

Two expansion modules are held together with the help of two connecting wedges and one extension connector. These assembly parts are included in the scope of supply of the respective expansion module.

When the infeed system for 3RA6 compact starters is used, the compact starters (plug-in modules) are easily assembled and disassembled even when live.

Optional possibilities:

- PE connection on motor output side
- Outfeed for external additional devices
- Connection to 3RV29 infeed system
- Integration of SIRIUS 3RV2 motor starter protectors size S0 up to 25 A (using 3RA6890-0BA adapter)

③ 2-socket expansion module

If only two instead of three additional sockets are required, then the 2-socket expansion module is the right choice. It has the same functionality as the 3-socket expansion module.

④ Extension connector

Two expansion modules can be connected together using the extension connector. Flexible expansion of the infeed system is thus possible.

⑤ PE infeed

This module enables a PE cable to be connected.

The PE infeed can be ordered with screw terminals and spring-loaded terminals (35 mm²) and can be fitted on the right or left of the expansion block.

⑥ PE expansion plug

The PE expansion plug is inserted from below and enables two PE bars to be connected.

⑦ PE pick-off

The PE pick-off is available with screw terminals and spring-loaded terminals (6/10 mm²). It is snapped into the infeed system from below.

⑧ Connecting wedges

Two connecting wedges are used to hold together two expansion modules.

⑨ End covers

On the last expansion module of a row, the socket provided for the extension connector can be covered by inserting the end cover.

⑩ 45 mm adapter for SIRIUS motor starter protectors size S0

SIRIUS 3RV2 motor starter protectors size S0 with screw terminals can be fitted to the adapter, enabling them to be plugged into the infeed system.


Terminal covers for increasing finger protection on the front

Universally configured terminal covers are available for the 25/35 mm² and 50/70 mm² 3-phase infeeds with screw terminal:

- 3RA6880-2AB terminal covers for infeeds with screw terminal 25/35 mm² (3RA6812-8AB/-8AC)
- 3RA6880-3AB terminal covers for infeeds with screw terminal 50/70 mm² (3RA6813-8AB/-8AC)

The terminal covers can be used in two ways on the infeed terminals of the infeeds with screw terminal 25/35 mm² and 50/70 mm² (see illustration):

- If the terminals are connected, the cables are also covered:
 - by approx. 14 mm with the 3RA6880-2AB
 - by approx. 18 mm with the 3RA6880-3AB
- On clamping points without connected cables, the covers can be turned once and then pushed over the clamping points for finger-safe covering of the metal parts.

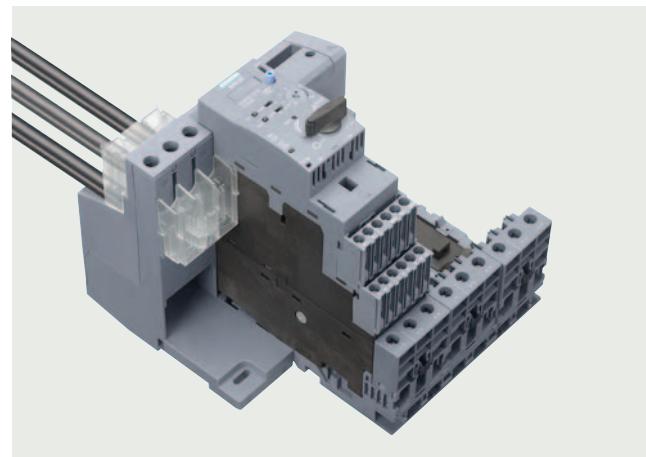

Use of the 3RA6880-2AB terminal cover on the infeed with screw terminal 25/35 mm² (3RA6812-8AB/-8AC). The upper cover increases finger protection for the connected conductors. The identical lower cover is turned for use and prevents touching of the voltage-carrying metal parts of the infeed terminal. For better recognition, the covers are shown as transparent in this illustration and not in their original color.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

Terminal blocks

Using the terminal block the three phases can be fed out of the system; this means that 1-phase, 2-phase and 3-phase components can also be integrated in the system.

After the end cover is pulled out, the terminal block can be plugged onto an expansion module.

Extension connector for SIRIUS 3RV29 infeed systems

After the end cover is pulled out, the extension connector for the SIRIUS 3RV29 infeed system can be plugged onto an expansion module. It connects the infeed system for 3RA6 compact starters with the SIRIUS 3RV29 infeed system.

Maximum rated operational current

The following maximum rated operational currents apply for the components of the infeed system for 3RA6:

Component	Maximum rated operational current A
Infeed with screw terminal 50/70 mm ²	100
Infeed with screw terminal 25/35 mm ²	63
Infeed with spring-loaded terminal 25/35 mm ²	63
Extension connector	63

With side-by-side mounting of several expansion modules, the maximum rated operational current from the second expansion module to the end of the row is 63 A.

Proposal for upstream short-circuit protection devices

The following short-circuit data apply for the components of the infeed system for 3RA6 compact starters:

Conductor cross-section mm ²	Maximum let-through current $I_{d,max}$ and current integral I^2t	Proposal for upstream short-circuit protection device	Maximum prospective I_{short} circuit kA
Short-circuit protection for 3RA681-8A. infeed with screw terminal (25/35 mm² and 50/70 mm²)			
2.5 ... 35	$I_{d,max} < 21 \text{ kA}, I^2t = 530 \text{ kA}^2\text{s}$	3RV2041-4MA10 (LV HRC gG 3NA3; 315 A)	50
2.5 ... 70			
Short-circuit protection for infeed with spring-loaded terminal 25/35 mm², 3RA6830-5AC			
4	$I_{d,max} < 9.5 \text{ kA}, I^2t = 85 \text{ kA}^2\text{s}$	3RV2021-4DA10	40
6	$I_{d,max} < 12.5 \text{ kA}, I^2t = 140 \text{ kA}^2\text{s}$	3RV2031-4EA10	30
10	$I_{d,max} < 15 \text{ kA}, I^2t = 180 \text{ kA}^2\text{s}$	3RV2031-4WA10	25
16/25	$I_{d,max} < 19 \text{ kA}, I^2t = 440 \text{ kA}^2\text{s}$	3RV2031-4JA10	65
35	$I_{d,max} < 21 \text{ kA}, I^2t = 530 \text{ kA}^2\text{s}$	3RV2041-4JA10 (LV HRC gG 3NA3; 315 A)	65
Short-circuit protection for terminal block, 3RV2917-5D			
1.5	$I_{d,max} < 7.5 \text{ kA}$	5SY...	
2.5	$I_{d,max} < 9.5 \text{ kA}$	1)	
4	$I_{d,max} < 9.5 \text{ kA}$		
6	$I_{d,max} < 12.5 \text{ kA}$		


¹⁾ To prevent the possibility of short circuits, the cables on the terminal block must be installed so that they are short-circuit-proof.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

Selection and ordering data

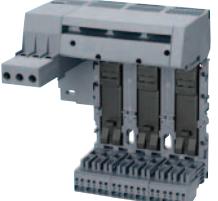Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
3-phase infeeds and expansion modules					
	Infeeds with screw terminal 25/35 mm² on the left				
3RA6812-8AB	Infeed with screw terminal on the input side with a permanently fitted 3-socket expansion module with screw or spring-loaded terminals on the output side and integrated PE bar				
	Expansion module with 3 sockets for 3 direct-on-line starters or 1 direct-on-line starter and 1 reversing starter				
	<ul style="list-style-type: none"> • Screw terminals on the output side • Spring-loaded terminals on the output side 	Screw terminals		3RA6812-8AB	1 1 unit 42F
		Spring-loaded terminals		3RA6812-8AC	1 1 unit 42F
	Infeeds with screw terminal 50/70 mm² on the left				
3RA6813-8AB	Infeed with screw terminal on the input side with a permanently fitted 3-socket expansion module with screw or spring-loaded terminals on the output side and integrated PE bar				
	Expansion module with 3 sockets for 3 direct-on-line starters or 1 direct-on-line starter and 1 reversing starter, suitable for UL operation according to UL 508 Type E				
	<ul style="list-style-type: none"> • Screw terminals on the output side • Spring-loaded terminals on the output side 	Screw terminals		3RA6813-8AB	1 1 unit 42F
		Spring-loaded terminals		3RA6813-8AC	1 1 unit 42F
	Infeed with spring-loaded terminal 25/35 mm² on the left or right				
3RA6830-5AC	Up to 63 A	Spring-loaded terminals		3RA6830-5AC	1 1 unit 42F

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Expansion modules					
	2-socket expansion modules With screw or spring-loaded terminals and integrated PE bar With 2 sockets for 2 direct-on-line starters or 1 reversing starter Extension connector and 2 connecting wedges are included in the scope of supply.	Screw terminals  3RA6822-0AB	1	1 unit	42F
	• Version with screw terminals • Version with spring-loaded terminals	Spring-loaded terminals  3RA6822-0AC	1	1 unit	42F
3-socket expansion modules With screw or spring-loaded terminals and integrated PE bar With 3 sockets for 3 direct-on-line starters or 1 direct-on-line starter and 1 reversing starter Extension connector and 2 connecting wedges are included in the scope of supply.					
	• Version with screw terminals • Version with spring-loaded terminals	Screw terminals  3RA6823-0AB	1	1 unit	42F
		Spring-loaded terminals  3RA6823-0AC	1	1 unit	42F

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Accessories for infeed systems for 3RA6					
<i>PE infeeds, 25/35 mm²</i>					
	• Version with screw terminals	Screw terminals  3RA6860-6AB	1	1 unit	42F
	• Version with spring-loaded terminals	Spring-loaded terminals  3RA6860-5AC	1	1 unit	42F
<i>PE pick-offs 6/10 mm²</i>					
	• Version with screw terminals	Screw terminals  3RA6870-4AB	1	1 unit	42F
	• Version with spring-loaded terminals	Spring-loaded terminals  3RA6870-3AC	1	1 unit	42F
<i>Extension connectors</i>					
	PE expansion plug	3RA6890-0EA	1	1 unit	42F
	Extension connector Between 2 expansion modules Included in the scope of supply of the expansion modules	3RA6890-1AB	1	1 unit	42F
	Extension connector for SIRIUS 3RV29 infeed system Connects infeed system for 3RA6 to 3RV29 infeed system	3RA6890-1AA	1	1 unit	42F

* You can order this quantity or a multiple thereof.
Illustrations are approximate

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA6 compact starters

Infeed system for 3RA6

Version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Accessories for infeed systems for 3RA6 (continued)					
45 mm adapter  3RA6890-0BA	For SIRIUS 3RV2.2 motor starter protectors size S0 up to 25 A • Screw terminals (conductor cross-section AWG 10)	Screw terminals  3RA6890-0BA		1	1 unit 42F
Terminal covers for infeeds with screw terminals					
 3RA6880-2AB	IP20 terminal cover for infeeds with screw terminal 25/35 mm ² (3RA6812-8AB/-8AC) (2 units per pack)	3RA6880-2AB		1	1 unit 42F
 3RA6880-3AB	IP20 terminal cover for infeeds with screw terminal 50/70 mm ² (3RA6813-8AB/-8AC) (2 units per pack)	3RA6880-3AB		1	1 unit 42F
Terminal block					
 3RV2917-5D	For integration of 1-phase, 2-phase and 3-phase external components • Spring-loaded terminals	Spring-loaded terminals  3RV2917-5D		1	1 unit 41E
Tools for opening spring-loaded terminals					
Screwdriver  3RA2908-1A	For all SIRIUS devices with spring-loaded terminals Length approx. 200 mm, 3.0 mm x 0.5 mm, titanium gray/black, partially insulated	Spring-loaded terminals  3RA2908-1A		1	1 unit 41B
Manuals					
	System Manual for 3RA6 compact starter and infeed system for the 3RA6, see https://support.industry.siemens.com/cs/ww/en/view/27865747				

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA8 intelligent load feeders **NEW**

Overview



SIRIUS 3RA8 intelligent load feeder


More information

Homepage, see www.siemens.com/sirius-ilm
 SiePortal, see www.siemens.com/product?3RA8
 Further components in the ET 200SP I/O system:
 • Catalog ST 70
 • Homepage, see www.siemens.com/et200sp

The 3RA8 intelligent load feeders consist of the 3RV23 motor starter protector and the 3RT2 electromechanical contactor. These are electrically and mechanically connected to each other with the 3RC7 intelligent link module.

The 3RA8 intelligent load feeders are connected to the SIMATIC ET 200SP via the flexible station extension (ET connection) using the BA-Send BusAdapter.

Configuration, parameterization, and diagnostics of the feeder can be performed directly in STEP 7 (TIA Portal). The BA-Send BusAdapter supports up to 16 intelligent load feeders.

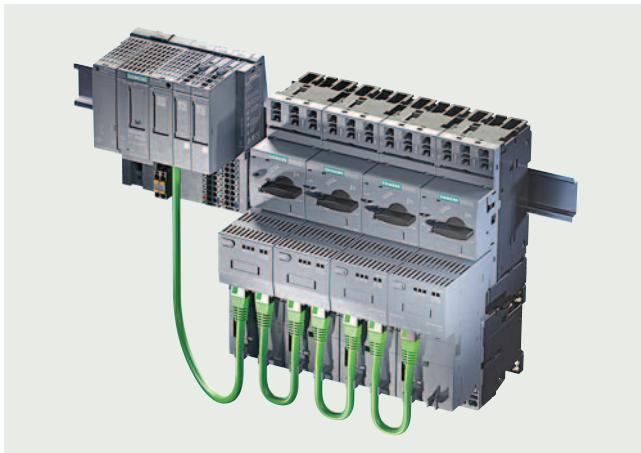

Part of the SIMATIC ET 200SP automation system

12 preassembled 3RA8 combinations can be ordered for direct-on-line and reversing starting of standard three-phase motors up to 32 A.

The feeders are equipped with either the Standard or the High Feature version of the 3RC7 intelligent link module, see also the function overview of the 3RC7 intelligent link modules on page 8/91.

In the 3RA8 intelligent load feeder, the 3RV23 motor starter protector provides short-circuit protection. Overload protection is provided by the 3RC7 intelligent link module. The intelligent load feeders are available with setting ranges from 0.4 to 32 A in sizes S00 and S0.

The table below lists the maximum power of the three-phase motor for pre-assembled 3RA8 intelligent load feeders based on the type of coordination at a voltage of 400 V AC:

Size	Type of coordination	Type	Adjustable current response value of the inverse-time delayed overload release	Power of three-phase motor
			A	kW
S00	"2"	3RA8.12-1EE.0	0.4 ... 4	0.12 ... 1.5
	"1"	3RA8.11-1KE.0	1.2 ... 12	0.55 ... 5.5
S0	"2"	3RA8.22-4EE.0	3.5 ... 32	1.5 ... 15

Operating conditions

The 3RA8 intelligent load feeders are climate-proof. They are intended for use in enclosed rooms in which no harsh operating conditions (such as dust, caustic vapors, hazardous gases) prevail. Suitable covers must be provided for installation in dusty and damp locations.

Behavior in the event of short circuit

EN 60947-4-1 (VDE 0660 Part 102) and IEC 60947-4-1 make a distinction between two different types of coordination, which are referred to as type of coordination "1" and type of coordination "2". Any short circuits that occur are cleared safely by both types of coordination. The only differences concern the extent of the damage caused to the device by a short circuit.

Type of coordination "1"

The load feeder may be non-operational after a short-circuit trip. Damage to the contactor or to the overload release is permissible.

Type of coordination "2"

There must be no damage to the overload release or to any other components after a short-circuit trip. The load feeder can resume operation without needing to be renewed. At most, welding of the contactor contacts is permissible if they can be disconnected easily without any significant deformation.

Voltage data

The data for 3-phase power systems according to IEC 60947-4-1 are valid for the following line system configurations:

Voltage U_e	Line system configuration Three-phase four-wire systems
V	V
230	--
400	230/400
440	260/440
500	--
690	400/690
--	-- Not specified

Load feeders and motor starters for use in the control cabinet

NEW SIRIUS 3RA8 intelligent load feeders

Tripping times

In the 3RA8 intelligent load feeder, thermal motor protection is ensured by the 3RC7 intelligent link module. The trip class (CLASS 10E or 20E) can be configured via STEP 7 (TIA Portal).

Connection methods

The 3RA8 intelligent load feeders are all provided with spring-loaded terminals.



Spring-loaded terminals


The connection method is indicated in the corresponding tables by the symbols shown on orange backgrounds.

Mounting

The 3RA8 intelligent load feeders are suitable for the following types of mounting:

- For mounting on TH 35-15 DIN rail according to IEC 60715
- For mounting on busbar adapters (busbar center-to-center clearance 60 mm, busbar thickness 5 to 10 mm with beveled edges), [see page 8/55](#)
- For screw fixing with 3RV2928-0B push-in lug, [see page 8/54](#)
- For installation with the 3RV29 infeed system, [see 3RA2 load feeders, page 8/58](#). For the 3RV29 infeed system, see [page 7/68](#).

Direct-on-line starter • Sizes S00 and S0

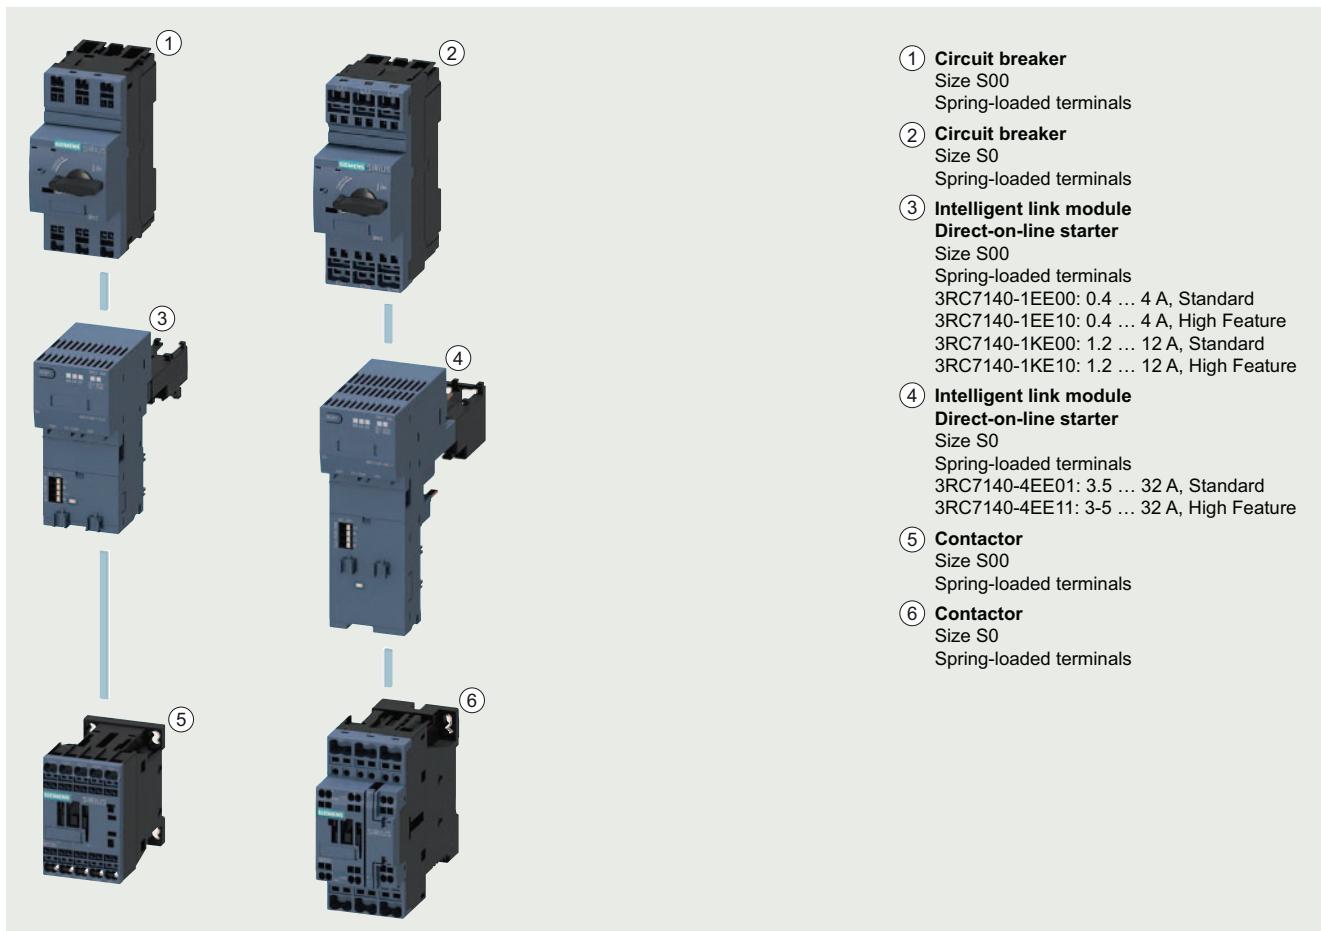


Left: 3RA8 intelligent load feeder for direct-on-line starting with spring-loaded terminals, size S00
Right: 3RA8 intelligent load feeder for direct-on-line starting with spring-loaded terminals, size S0

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA8 intelligent load feeders **NEW**

Reversing starter • Sizes S00 and S0

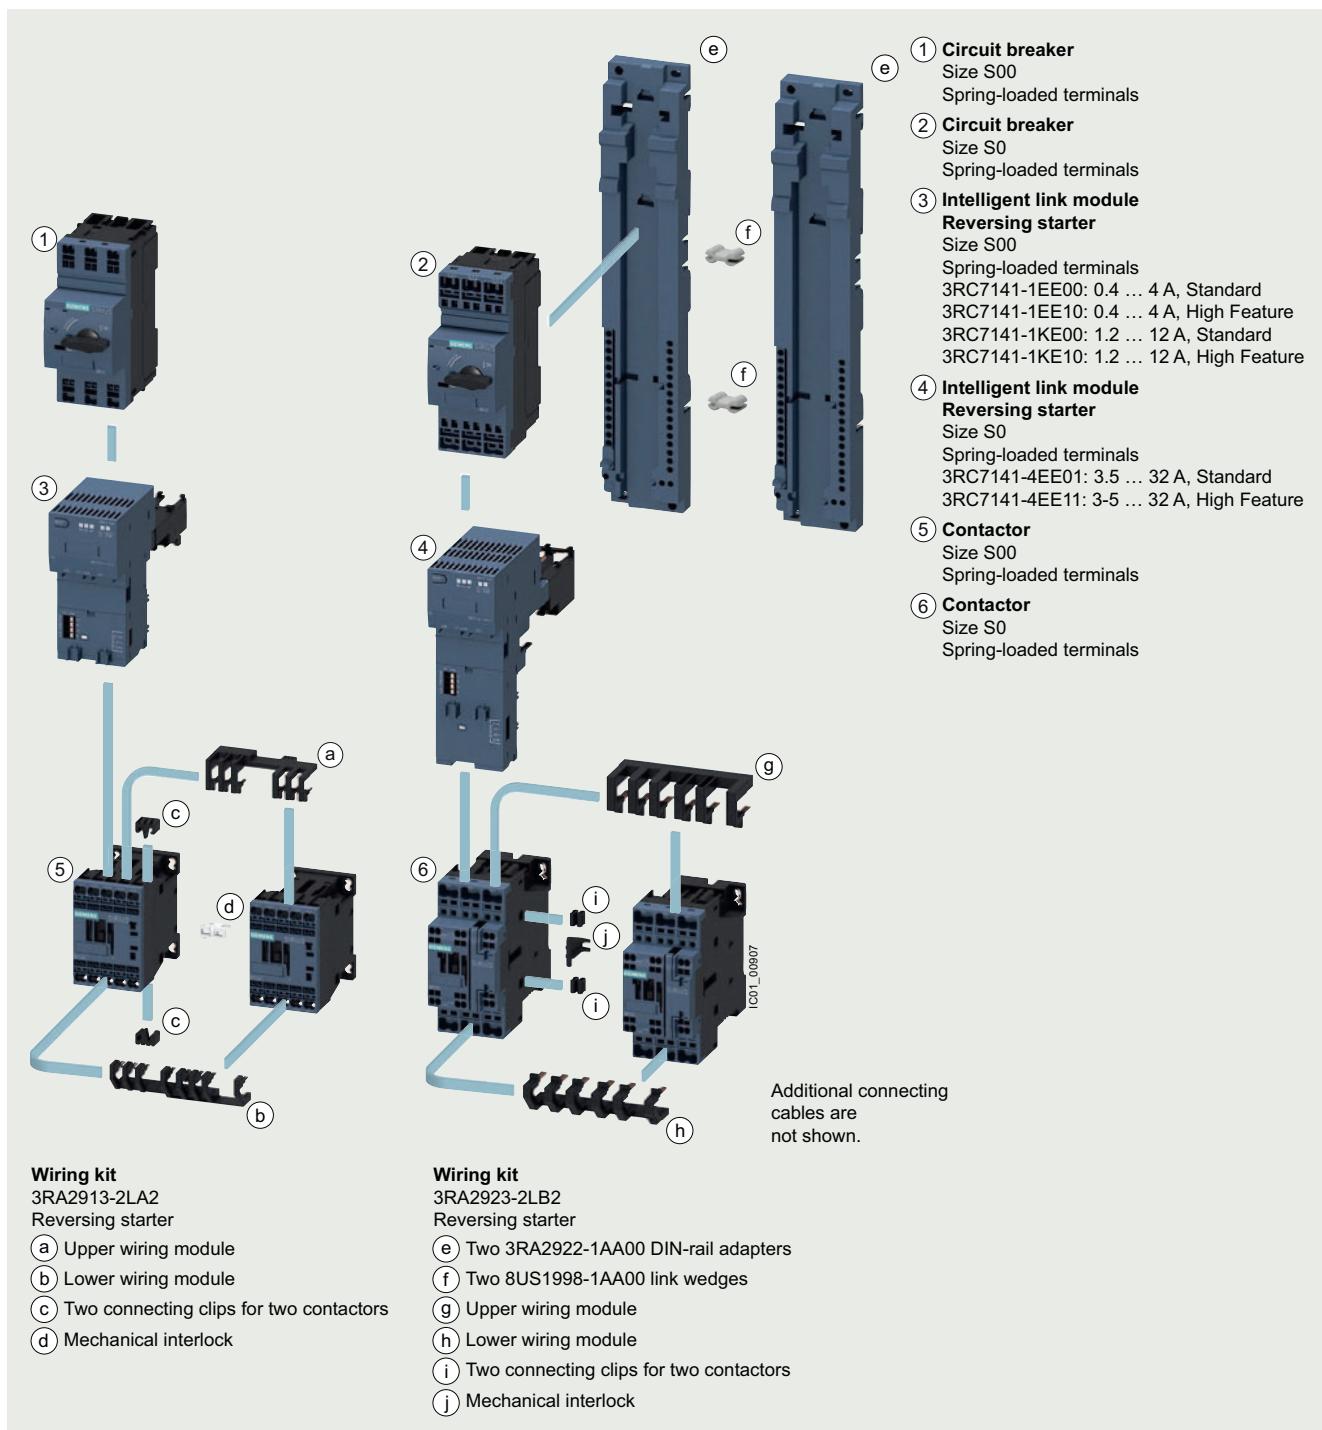

Left: 3RA8 intelligent load feeder for reversing starting in size S00
Right: 3RA8 intelligent load feeder for reversing starting and DIN-rail mounting in size S0

Load feeders and motor starters for use in the control cabinet

NEW SIRIUS 3RA8 intelligent load feeders

Article number scheme

Product versions		Article number						
SIRIUS intelligent load feeders		3RA8 □ □ □ - □ □ □ □ 0						
Product function	Direct-on-line starters Reversing starters	4 5						
Size	S00 S0		1 2					
Type of coordination	"1" "2"			1 2				
Current range	0.4 ... 4 A 1.2 ... 12 A 3.5 ... 32 A				1 E 1 K 4 E			
Connection methods	Spring-loaded terminals				E			
Version	Standard High Feature				0 1			
Example		3RA8	4	1	2	-	1	E E 0 0

Note:

The article number scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders, please use the article numbers quoted in the selection and ordering data.

Benefits

Part of the SIMATIC automation system

- One engineering tool for the entire automation system
- Configuration and parameterization in STEP 7 (TIA Portal)
- Easy reading of status and current values
- Error and maintenance demands with stored plain text messages through integrated system diagnostics in the SIMATIC environment

Transparency down to the field level

- Measurement of current, voltage, and power (including power factor)
- Load diagnostics (1 or 3-phase)

Proactive protection

- Extended wide setting range of the overload protection function
- Preventive maintenance by detecting faults and discrepancies

Minimal effort

- Reduced wiring costs
- Standardized design due to fewer versions
- Extensive accessories

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RA8 intelligent load feeders **NEW**

Technical specifications

More information

SiePortal, see www.siemens.com/product?3RA8

Equipment Manual, see
<https://support.industry.siemens.com/cs/ww/en/view/109823514>

Article number	3RA8412-1EE.0	3RA8512-1EE.0	3RA8411-1KE.0	3RA8511-1KE.0	3RA8422-4EE.0	3RA8522-4EE.0	
General technical specifications							
Width x height x depth	mm	45 x 198 x 131	90 x 204 x 131	45 x 198 x 131	90 x 204 x 131	45 x 243 x 150	90 x 269 x 174
Installation altitude at height above sea level, maximum	m	2 000					
Ambient temperature	°C	-20 ... +60					
• During operation	°C	-40 ... +80					
• During storage	°C	-40 ... +80					
• During transport	°C	-40 ... +80					
Vibration resistance		5 ... 8.4 Hz, 3.5 mm; 8.4 ... 150 Hz, 1 g; 10 cycles/10 ... 60 Hz, 0.35 mm; 60 ... 500 Hz, 5 g; 10 cycles					
Shock resistance	According to IEC 60068-2-27	6 g/11.0 ms (3 shocks); 10 g/6.0 ms (1 000 shocks)					
Degree of protection IP on the front		IP20					
Touch protection on the front	According to IEC 60529	Finger-safe					
Electrical specifications							
Adjustable current response value of the inverse-time delayed overload release	A	0.4 ... 4	1.2 ... 12	3.5 ... 32			
Operational voltage at AC-3, rated value, maximum	V	690					
Operating frequency	Hz	50 ... 60					
Impulse withstand voltage	kV	6					
Conditional short-circuit current (I_q) at 400 V	According to IEC 60947-4-1	A	150 000				
Power loss (W) at rated current at AC in the warm operating state per pole	W	2.6	3.6	6.7			
Trip class		CLASS 10E/CLASS 20E					
Type of coordination	"2"	"1"	"2"				
Conductor cross-sections							
Connection of the electrical connection for the main circuit		Spring-loaded terminals					
Type of connectable conductor cross-sections							
• For main contacts							
- Solid		2 x (0.5 ... 4 mm ²)					
- Stranded		2 x (0.5 ... 4 mm ²)					
- Finely stranded with end sleeve		2 x (0.5 ... 2.5 mm ²)					
- For AWG cables		2 x 20 ... 12					
2 x (1 ... 10 mm ²)							
2 x (1 ... 10 mm ²)							
2 x (1 ... 6 mm ²)							
2 x 18 ... 8							
Type of electrical connection for infeed of the supply voltage		Spring-loaded terminals (push-in)					
Type of connectable conductor cross-sections							
• At the inputs for supply voltage							
- Solid		0.2 ... 1.5 mm ²					
- Finely stranded without end sleeve		0.2 ... 1.5 mm ²					
- Finely stranded with end sleeve		0.2 ... 1.0 mm ²					
- Solid for AWG cables		24 ... 16					

Load feeders and motor starters for use in the control cabinet

NEW AC-3e IE3/IE4 ready SIRIUS 3RA8 intelligent load feeders**Selection and ordering data**

Size of the load feeder	Adjustable current response value of the inverse-time delayed overload release	Type of coordination	Spring-loaded terminals		PU (UNIT, SET, M)	PS*	PG
A			Article No.		Price per PU		

Intelligent load feeders

Direct-on-line starters		
Standard		
S00	0.4 ... 4	"2"
	1.2 ... 12	"1"
S0	3.5 ... 32	"2"
High Feature		
S00	0.4 ... 4	"2"
	1.2 ... 12	"1"
S0	3.5 ... 32	"2"
Reversing starters		
Standard		
S00	0.4 ... 4	"2"
	1.2 ... 12	"1"
S0	3.5 ... 32	"2"
High Feature		
S00	0.4 ... 4	"2"
	1.2 ... 12	"1"
S0	3.5 ... 32	"2"



3RA8412-1EE00



3RA8412-4EE10



3RA8512-1EE00



3RA8522-4EE10

Notes:

Individual components of the 3RA8 intelligent load feeders,
see [table on page 8/92](#).

Accessories, see [page 8/96 onwards](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RC7 intelligent link modules **NEW**

Overview



SIRIUS 3RC7 intelligent link module

More information

Homepage, see www.siemens.com/sirius-ilm
 SiePortal, see www.siemens.com/product?3RC7
 Further components in the ET 200SP I/O system:
 • Catalog ST 70
 • Homepage, see www.siemens.com/et200sp

The SIRIUS 3RC7 intelligent link module is the perfect connection between the Siemens SIRIUS and SIMATIC product families. The 3RC7 intelligent link module turns conventional load feeders into digital load feeders. The SIRIUS modular system becomes a communication-capable and configurable system with SIMATIC.




Video: SIRIUS Modular System goes digital

Part of the SIRIUS modular system

The 3RC7 intelligent link module connects the 3RV2 motor starter protectors/circuit breakers and the 3RT2 contactors to form an intelligent load feeder. Intelligent load feeders can also be ordered as a 3RA8 complete unit, [see page 8/89](#).

Control, protection, and monitoring of all AC load types are possible up to a rated current of 32 A. 1- or 3-phase loads can be operated.

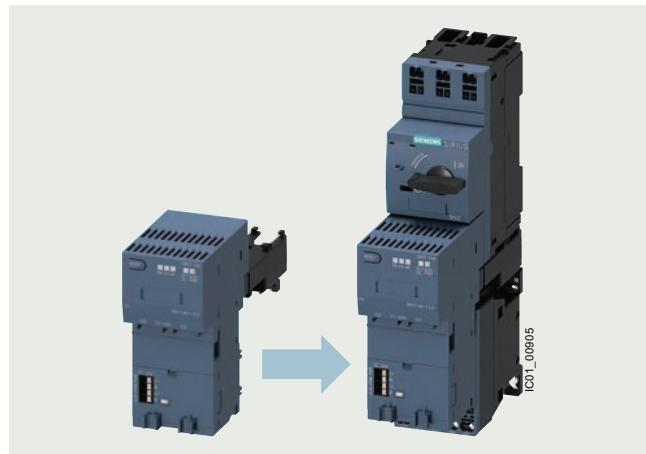

SIRIUS 3RC7 intelligent link module combined with the 3RV2 motor starter protector/circuit breaker and 3RT2 contactor

The 3RC7 intelligent link module is available for direct-on-line and reversing starters (Standard or High Feature):

- Size S00: Current ranges 0.4 to 4 A and 1.2 to 12 A
- Size S0: Current range 3.5 to 32 A

The intelligent link modules are offered with spring-loaded terminals and permit very fast mounting of the load feeders and a vibration-resistant design.

Mounting

Load feeders with 3RC7 intelligent link modules are suitable for the following types of mounting:

- For 1- or 2-row mounting on TH 35-15 DIN rail according to IEC 60715 (adapter for stand-alone installation, [see page 8/96](#))
- For mounting on busbar adapters (busbar center-to-center clearance 60 mm, busbar thickness 5 to 10 mm with beveled edges), [see page 8/55](#)
- For screw fixing with 3RV2928-0B push-in lug, [see page 8/54](#)
- For installation with the 3RV29 infeed system, [see 3RA2 load feeders, page 8/58](#). 3RV29 infeed system, [see page 7/68 onwards](#).

Load feeders and motor starters for use in the control cabinet

NEW SIRIUS 3RC7 intelligent link modules

Overview of functions

The 3RC7 intelligent link module controls the 3RT2 contactor, following the commands of the controller. In the event of a fault, e.g. overload, undervoltage, or phase asymmetry, the intelligent link module switches off the 3RT2 contactor.

With the help of current and voltage measurement, detailed diagnostics of the load can be performed.

Function	3RC7 ILM Standard	3RC7 ILM High Feature
Control (contact block)	✓	✓
Electronic motor overload protection	CLASS 10E/ CLASS 20E ¹⁾	CLASS 10E/ CLASS 20E ¹⁾
RESET	✓	✓
Current measurement and monitoring	✓	✓
Current phase asymmetry	✓	✓
Line voltage detection	✓	✓
Line voltage measurement and monitoring	--	✓
Supply voltage monitoring for electronics (PWR)	✓	✓
Supply voltage monitoring for contact block (AUX-PWR)	✓	✓
Starting time monitoring	✓	✓
Power measurement	--	✓
EMERGENCY START	✓	✓
Operating temperature measurement and monitoring	✓	✓
Group diagnostics	✓	✓
Cold start	✓	✓

✓ Available

-- Not available

¹⁾ CLASS 20E to 20 A.

The intelligent link module in the standard version detects the voltage at its input side.

The High Feature version can also be used to measure the phase voltage and the power (including power factor) of the connected load.

With the help of the 3RC7 intelligent link module, the operating hours of the load feeder as well as of the load can be recorded. Moreover, fault-induced shutdowns can be documented.

Part of the SIMATIC ET 200SP automation system

The 3RC7 intelligent link modules are connected to the SIMATIC ET 200SP via the flexible station extension (ET connection) using the BA-Send BusAdapter.

Configuration, parameterization, and diagnostics of the intelligent load feeder can be performed directly in STEP 7 (TIA Portal).



Video: Configuration and parameterization in STEP 7 (TIA Portal)

The ET 200SP BA-Send BusAdapter supports up to 16 intelligent load feeders. The distance between the BA-Send BusAdapter and the first 3RC7 intelligent link module can be up to 10 m.

Distances of up to two meters are possible between the individual intelligent load feeders.

The following devices are required for integration of the 3RC7 intelligent link module into the SIMATIC ET 200SP automation system:

- SIMATIC ET 200SP interface modules and CPUs
- BA-Send BusAdapter (6ES7193-6AS00-0AA0)
- BU-Send BaseUnit (6ES7193-6BN00-0NE0)

For more information on SIMATIC ET 200SP, see www.siemens.com/et200sp.




Part of the SIMATIC ET 200SP automation system


The 3RC7 intelligent link modules enable a high level of data transparency down to the field level and connect the operational technology (OT) with the overarching information technology (IT). By exchanging and using real-time data, operating processes can be optimized (condition monitoring, preventive maintenance) and the operational efficiency of the plant can be increased in a targeted manner.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RC7 intelligent link modules **NEW**

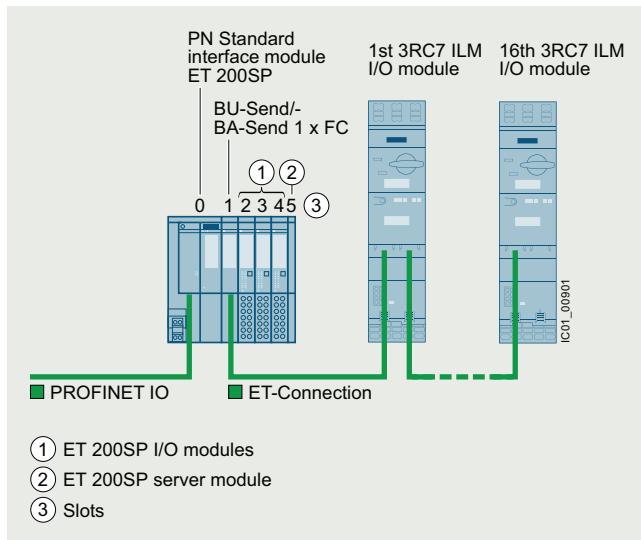

System overview using the example of PROFINET IO

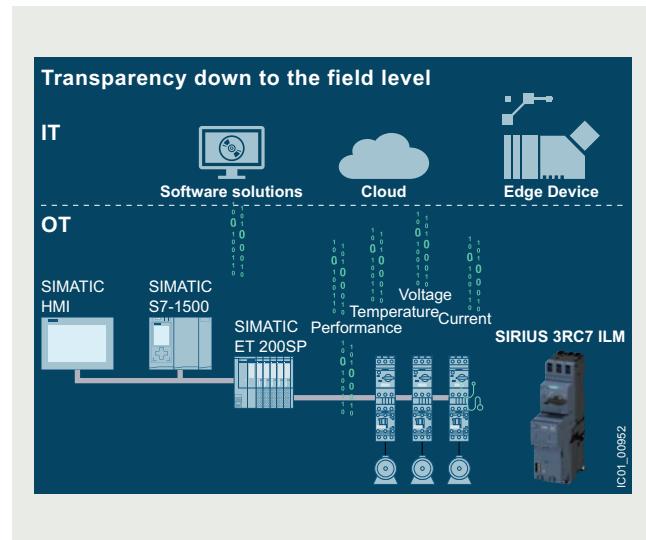

Connectivity and transparency in the manufacturing environment

Building intelligent load feeders from individual components

Recommended combinations

Size	Type of coordination	Consisting of the following individual components, which are to be ordered separately	Contactor see pages 3/52 and 3/56	3RC7 intelligent link module I_{e} in A see page 8/95	Mounting kit see page 8/97	Corresponds to the following 3RA8 load feeder see page 8/89
Intelligent load feeder for direct-on-line starting						
S00	"2"	3RV2311-1EC20	3RT2017-2BB42	0.4 ... 4	3RC714.-1EE.0 ¹⁾	--
	"1"	3RV2311-1KC20		1.2 ... 12	3RC714.-1KE.0 ¹⁾	--
S0	"2"	3RV2321-4EC20	3RT2027-2BB40	3.5 ... 32	3RC714.-4EE.1 ¹⁾	--
Intelligent load feeder for reversing starting						
S00	"2"	3RV2311-1EC20	3RT2017-2BB42 (2 x)	0.4 ... 4	3RC714.-1EE.0 ¹⁾	3RA2913-2LA2
	"1"	3RV2311-1KC20		1.2 ... 12	3RC714.-1KE.0 ¹⁾	3RA8511-1KE.0
S0	"2"	3RV2321-4EC20	3RT2027-2BB40 (2 x)	3.5 ... 32	3RC714.-4EE.1 ¹⁾	3RA2923-2LB2 ²⁾ / 3RA2923-2MB2 ³⁾
						3RA8522-4EE.0

¹⁾ 3RC7 ILM can be used as a Standard or High Feature version.

²⁾ To build an intelligent load feeder for reversing starting of size S0, the 3RA2923-2LB2 assembly kit must be used. The DIN-rail adapters included in the assembly kit are essential for DIN-rail mounting.

³⁾ To build an intelligent load feeder for reversing starting of size S0 in the 3RV29 infeed system or on the 8US busbar adapter, the 3RA2923-2MB2 assembly kit must be used.

Note:

For graphic overviews of the recommended 3RA8 load feeders, see pages 8/85 and 8/86.

Load feeders and motor starters for use in the control cabinet

NEW SIRIUS 3RC7 intelligent link modules

Possible combinations for 400 V AC, CLASS 10E

Size	Type of coordination	Conditional short-circuit current I_d in kA	Rated current I_n in A	Consisting of the following individual components, which are to be ordered separately		
				Motor starter protector (without overload) see page 7/36 onwards	Contactor see pages 3/52 and 3/56	3RC7 intelligent link module see page 8/95 I_e in A
S00	"2"	150	0.5	3RV2311-0FC20	3RT2015-2BB42	0.4 ... 4
			0.63	3RV2311-0GC20		
			0.8	3RV2311-0HC20		
			1	3RV2311-0JC20		
			1.25	3RV2311-0KC20		
			1.6	3RV2311-1AC20		
			2	3RV2311-1BC20		
			2.5	3RV2311-1CC20		
			3.2	3RV2311-1DC20		
			4	3RV2311-1EC20		
S0	"1"	150	1.6	3RV2311-1AC20	3RT2015-2BB42	1.2 ... 12
			2	3RV2311-1BC20		
			2.5	3RV2311-1CC20		
			3.2	3RV2311-1DC20		
			4	3RV2311-1EC20		
			5	3RV2311-1FC20		
			6.3	3RV2311-1GC20		
			8	3RV2311-1HC20		
			10	3RV2311-1JC20		
			12.5	3RV2311-1KC20		

Note:

For possible combinations with ATEX approval, see [Equipment Manual](#).

Article number scheme

Product versions		Article number					
SIRIUS intelligent link modules		3RC7 1 4 □ - □ □ □ □ □					
Communication	ET 200SP ET connection	1 4					
Product function		0					
Reversing starters		1					
Current range		0.4 ... 4 A					
1.2 ... 12 A		1 K					
3.5 ... 32 A		4 E					
Connection methods	Spring-loaded terminals	E					
Version		0					
High Feature		1					
Size		0					
S00		1					
S0		0					
Example		3RC7 1 4 1 - 4 E E 1 1					

Note:

The article number scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders, please use the article numbers quoted in the selection and ordering data.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RC7 intelligent link modules **NEW**

Benefits

Part of the SIMATIC automation system

- One engineering tool for the entire automation system
- Configuration and parameterization in STEP 7 (TIA Portal)
- Easy reading of status and current values
- Error and maintenance demands with stored plain text messages through integrated system diagnostics in the SIMATIC environment

Transparency down to the field level

- Measurement of current, voltage, and power (including power factor)
- Load diagnostics (1- or 3-phase)

Proactive protection

- Extended wide setting range of the overload protection function
- Preventive maintenance by detecting faults and discrepancies

Minimal effort

- Reduced wiring costs
- Standardized design due to fewer versions
- Extensive accessories

Technical specifications

More information

SiePortal, see www.siemens.com/product?3RC7

Equipment Manual, see
<https://support.industry.siemens.com/cs/ww/en/view/109823514>

Article number	3RC7140-1EE.0, 3RC7141-1EE.0	3RC7140-1KE.0, 3RC7141-1KE.0	3RC7140-4EE.1, 3RC7141-4EE.1
General data			
Installation altitude at height above sea level, maximum	m	2 000	
Ambient temperature	°C	-20 ... +60	
• During operation	°C	-40 ... +80	
• During storage	°C	-40 ... +80	
• During transport			
Vibration resistance		5 ... 8.4 Hz, 3.5 mm; 8.4 ... 150 Hz, 1 g; 10 cycles/10 ... 60 Hz, 0.35 mm; 60 ... 500 Hz, 5 g; 10 cycles	
Shock resistance	According to IEC 60068-2-27	6 g/1.0 ms (3 shocks); 10 g/6.0 ms (1 000 shocks)	
Degree of protection IP		IP20	
Touch protection on the front	According to IEC 60529	Finger-safe	
EMC interference immunity	According to IEC 60947-1	Environment A	
Conducted interference due to burst	According to IEC 61000-4-4	kV	2
Frequency of operation, maximum	1/h	3 600	
Main circuit			
Adjustable current response value of the inverse-time delayed overload release	A	0.4 ... 4	1.2 ... 12
			3.5 ... 32
Operational voltage at AC-3e, rated value, maximum	V	690	
Type of current for monitoring		AC	
Operating frequency, rated value	Hz	50 ... 60	
Impulse withstand voltage	kV	6	
Trip class		CLASS 10E/CLASS 20E	
Auxiliary circuit			
Supply voltage at DC	V	24	
Auxiliary voltage at DC	V	24	
Connections			
Type of electrical connection for infeed of the supply voltage		 Spring-loaded terminals (push-in)	
Type of connectable conductor cross-sections on the inputs for supply voltage		0.2 ... 1.5 mm ² 0.2 ... 1.0 mm ² 24 ... 16	
• Solid			
• Finely stranded with end sleeve			
• Solid for AWG cables			

Load feeders and motor starters for use in the control cabinet**NEW SIRIUS 3RC7 intelligent link modules****Selection and ordering data**

Size	Adjustable current response value of the inverse-time delayed overload release	Spring-loaded terminals (push-in)		PU (UNIT, SET, M)	PS*	PG
A		Article No.		Price per PU		
3RC7 intelligent link modules						
Direct-on-line starters						
Standard						
S00	0.4 ... 4	3RC7140-1EE00		1	1 unit	42L
	1.2 ... 12	3RC7140-1KE00		1	1 unit	42L
S0	3.5 ... 32	3RC7140-4EE01		1	1 unit	42L
High Feature						
S00	0.4 ... 4	3RC7140-1EE10		1	1 unit	42L
	1.2 ... 12	3RC7140-1KE10		1	1 unit	42L
S0	3.5 ... 32	3RC7140-4EE11		1	1 unit	42L
Reversing starters						
Standard						
S00	0.4 ... 4	3RC7141-1EE00		1	1 unit	42L
	1.2 ... 12	3RC7141-1KE00		1	1 unit	42L
S0	3.5 ... 32	3RC7141-4EE01		1	1 unit	42L
High Feature						
S00	0.4 ... 4	3RC7141-1EE10		1	1 unit	42L
	1.2 ... 12	3RC7141-1KE10		1	1 unit	42L
S0	3.5 ... 32	3RC7141-4EE11		1	1 unit	42L



3RC7140-1EE00



3RC7140-4EE11



3RC7141-1EE00



3RC7141-4EE11

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RC7 intelligent link modules **NEW**

Product version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Accessories					
	Spring-loaded terminals				
	Adapter for stand-alone installation				
• For 3RC7 with contactor size S00	3RC7940-2TE00	1	1 unit	42L	
• For 3RC7 with contactor size S0	3RC7940-2TE01	1	1 unit	42L	
	Communication cable between ET 200SP BusAdapter and 3RC7 ILM				
• Length 0.5 m	3RC7940-0TE10	1	1 unit	42L	
• Length 2 m	3RC7940-0TE20	1	1 unit	42L	
• Length 5 m	3RC7940-0TE30	1	1 unit	42L	
• Length 10 m	3RC7940-0TE40	1	1 unit	42L	
	From 3RC7 ILM to 3RC7 ILM				
• For direct-on-line starters (side-by-side mounting)	3RC7940-0TE01	1	1 unit	42L	
• For reversing starters (side-by-side mounting)	3RC7940-0TE02	1	1 unit	42L	
• Length 0.75 m	3RC7940-0TE03	1	1 unit	42L	
• Length 1.5 m	3RC7940-0TE04	1	1 unit	42L	
• Length 2 m	3RC7940-0TE05	1	1 unit	42L	
	Power Cable				
• For direct-on-line starters	3RC7940-1TE01	1	1 unit	42L	
• For reversing starters	3RC7940-1TE02	1	1 unit	42L	

Load feeders and motor starters for use in the control cabinet

NEW SIRIUS 3RC7 intelligent link modules

For contactor	Product version	Spring-loaded terminals	PU (UNIT, SET, M)	PS*	PG
Size		Article No.	Price per PU		
Wiring kits for reversing starters					
	S00	RH mounting kit for spring-loaded terminals Mounting on a DIN rail, 60 mm 8US busbar system or 3RV29 infeed system	3RA2913-2LA2	1	1 unit 41B
	S0	Mounting on DIN rail	3RA2923-2LB2	1	1 unit 41B
		Mounting on 60 mm 8US busbar system or 3RV29 infeed system	3RA2923-2MB2	1	1 unit 41B


Further accessories

- DIN-rail adapters, see page 8/53
- Push-in lugs for screw fixing, see page 8/54
- Busbar adapters, see page 8/55
- Miscellaneous accessories, see page 8/56


Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

Overview

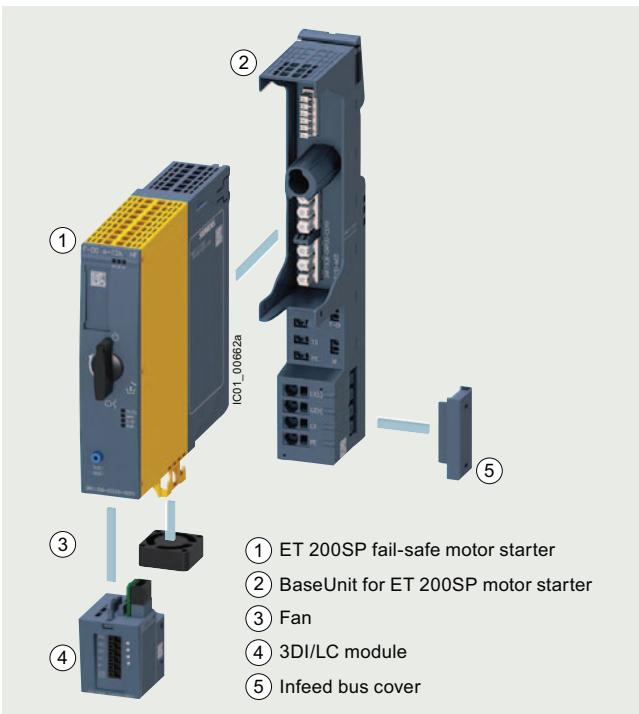

Motor starter, BaseUnit, fan and 3DI/LC control module

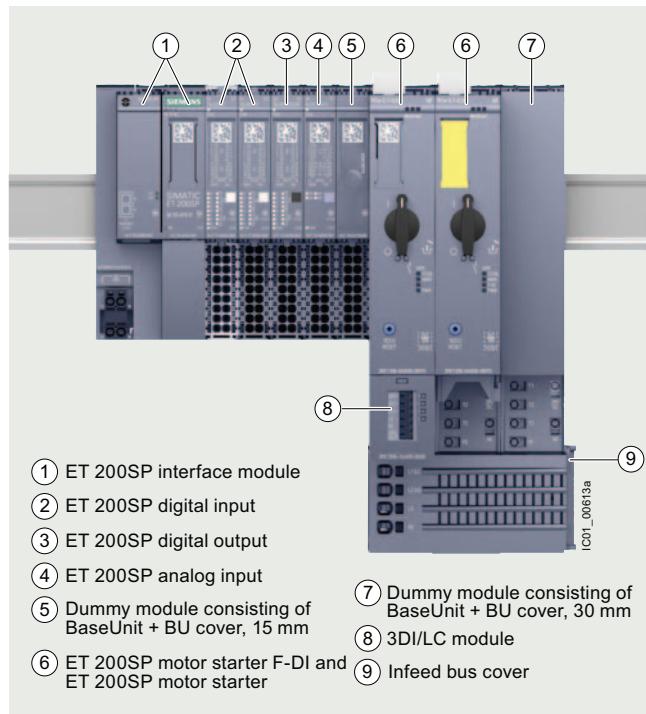

3RK1308 motor starter in the ET 200SP I/O system

More information

Homepage, see www.siemens.com/sirius-motor-starter-et200sp

SiePortal, see www.siemens.com/product?3RK1308

TIA Selection Tool, see www.siemens.com/TST

Decision support for motor start – Starting and operating three-phase asynchronous motors efficiently, see www.siemens.com/motorstart-guide

SiePortal topic page with information on the planning and operating phase, see <https://support.industry.siemens.com/cs/ww/en/view/109792664>

Further components in the ET 200SP I/O system:

- Catalog ST 70
- Homepage, see www.siemens.com/et200sp

ET 200SP motor starters

ET 200SP is a scalable and extremely flexible modular I/O system with degree of protection IP20.

As I/O modules, the ET 200SP motor starters are an integral part of this I/O system. They are switching and protection devices for 1- and 3-phase loads and are available as direct-on-line or reversing starters.



Video: SIMATIC ET 200SP motor starter – Flexible, powerful, space-saving

Basic functionality

All versions of the ET 200SP motor starter feature the following functionality:

- Fully pre-wired motor starters for switching and protecting any three-phase loads up to 5.5 kW from 48 V AC to 500 V AC
- Disconnection possible via fail-safe motor starters up to SIL 3 and PL e Cat. 4
- With self-assembling 32 A power bus, i.e. the load voltage is only fed in once for a group of motor starters

- All supply voltages connected only once, i.e. when modules are added, they are automatically connected to the next module
- Hot swapping is permissible
- Digital inputs can optionally be used via a 3DI/LC module.
- Control of the motor starter from the control system and of the diagnostics status via the cyclic process image
- Diagnostics-capable for active monitoring of the switching and protection functions
- The signal states in the process image of the motor starter provide information about protective devices (short circuit or overload), the switching states of the motor starter, and system faults.

Starter kit

The 3RK1908-1SK00 starter kit is a favorably priced complete package for switching and monitoring motors in the ET 200SP system, see page 8/106.

It contains:

- A 3RK1308-0BC00-0CP0 reversing starter (0.9 to 3 A)
- A 3RK1908-0AP00-0AP0 BaseUnit with 500 V and 24 V AC/DC infeed
- An EMC distance module (comprising 6ES7193-6BP00-0BA0 BaseUnit plus 6ES7133-6CV15-1AM0 BU cover 15 mm)

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

Use of fan

For motor starters with a 12 A rated current, the 3RW4928-8VB00 fan is included in the scope of supply.

This fan can also be ordered as an option for motor starters with lower rated currents, if the boundary conditions demand this. For information on the ambient conditions for the use of motor starters, see chapter [Product features in the Equipment Manual](#).

Designing interference-free motor starters

For interference-free operation of the ET 200SP station in accordance with IEC 60947-4-2 standard, use a dummy module before the first motor starter. The dummy module consists of the 6ES7193-6BP00-0BA0 or 6ES7193-6BP00-0DA0 BaseUnit and the 6ES7133-6CV15-1AM0 15 mm BU cover.

The 15 mm BU cover protects the plug contacts of the BaseUnit against dirt.

Electromechanical switching devices in series with hybrid motor starters

Switching an inductive load – in particular of motors <1 kW with high inductance – with an electromechanical switching device (e.g. contactor) can cause high and steep voltage edges.

The resulting faults/damage can be prevented by first disconnecting with the hybrid motor starter or by using EMC suppression modules:

- 3RT2916-1P.. EMC suppression modules for direct mounting on the contactor, see page [3/116](#)
- For motor suppression modules that are fitted in the main circuit, see page [8/106](#)

Note:

For more information, see
<https://support.industry.siemens.com/cs/ww/en/view/109758696>.

3DI/LC control module




3DI/LC control module

This is a digital input module with three inputs for local motor starter functions such as "manual local operation", "implementation of fast inputs" or "end position disconnection". For a list of all the functions permitted by the 3DI/LC module, see chapter [Functions in the Equipment Manual](#).

The module is plugged into the front of the motor starter from which it is supplied with an operational voltage of 24 V DC.

BaseUnits for motor starters

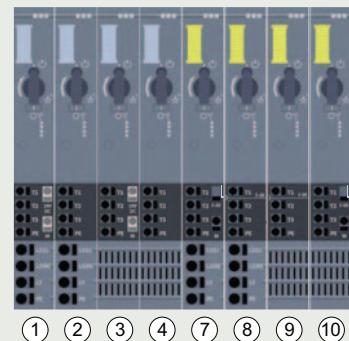

① 24 V and 500 V DC
 ② 500 V AC
 ③ 24 V DC
 ④ without infeed
 ⑤ 3RK1908-0AP00-0EP0
 (not shown here)
 ⑥ 3RK1908-0AP00-0FP0
 (not shown here)
 ⑦ 500 V AC
 with F-DI infeed
 ⑧ 500 V AC
 with F-DI loop-through
 ⑨ without infeed
 with F-DI loop-through
 ⑩ without infeed
 with F-DI infeed

View of the BaseUnit infeeds for the motor starters

BaseUnits are components used for mounting the ET 200SP I/O modules.

The self-assembling voltage buses integrated into the BaseUnits reduce wiring outlay to the single infeed (both of auxiliary and load voltage).

All modules following on the right are automatically supplied upon plugging the BaseUnits together, if BaseUnits are inserted with a loop-through.

The rugged design and positively driven connection technology enables use in harsh industrial conditions.

The BaseUnits are available with various infeeds for the motor starters.

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

Article number schemes

Product versions		Article number		
Motor starters		3RK1308 – 0 □ □ 0 0 – 0 C P 0		
Product function	Direct-on-line starters	A		For motor standard output 0.09 ... 5.5 kW ¹⁾
	Reversing starters	B		For motor standard output 0.09 ... 5.5 kW ¹⁾
	Fail-safe direct-on-line starters	C		For motor standard output 0.09 ... 5.5 kW ¹⁾
	Fail-safe reversing starters	D		For motor standard output 0.09 ... 5.5 kW ¹⁾
Current range	0.1 ... 0.4 A	A		Maximum current-carrying capacity when starting 4 A
	0.3 ... 1 A	B		Maximum current-carrying capacity when starting 10 A
	0.9 ... 3 A	C		Maximum current-carrying capacity when starting 30 A
	2.8 ... 9 A	D		Maximum current-carrying capacity when starting 90 A
	4 ... 12 A	E		Including fan (3RW4928-8VB00), maximum current-carrying capacity when starting 120 A

Example

3RK1308 – 0 A D 0 0 – 0 C P 0

- ¹⁾ For standard motors: Three-phase asynchronous motors, 1-phase or 3-phase; 1-phase AC motors; 1-phase asynchronous motors, at 400 V AC and 500 V AC; the actual starting and rated data of the motor to be protected must be considered when selecting the units.

Product versions		Article number		
BaseUnit		3RK1908 – 0 A P 0 0 – 0 □ P 0		
BU infeed	24 V DC and 500 V AC	A		
	24 V DC	B		
	500 V AC	C		
	Without infeed	D		
	500 V AC	G		With F-DI infeed
	500 V AC	H		With F-DI loop-through
	Without infeed	J		With F-DI loop-through
Example	Without infeed	K		With F-DI infeed

Note:

The article number schemes show an overview of product versions for better understanding of the logic behind the article numbers.

For your orders, please use the article numbers quoted in the selection and ordering data.

Benefits

The ET 200SP motor starters offer a number of advantages:

- Fully integrated into the ET 200SP I/O system (including TIA Selection Tool and TIA Portal)
- High degree of flexibility when it comes to safety applications via SIMATIC F-CPU or 3SK safety relays up to SIL 3 and PL e Cat. 4.
- Simple, integrated current value transmission
- Extensive parameterization by means of TIA Portal
- Increase of plant availability through fast replacement of units (easy mounting and plug-in technology)
- Greater endurance and reduced heat losses thanks to hybrid technology
- Less space required in the control cabinet (20 to 80%) thanks to high functional density (direct-on-line and reversing starters in same width)
- Extensive diagnostics and information for preventive maintenance
- Configurable inputs via 3DI/LC control module
- Less wiring and testing required as a result of integrating several functions into a single device
- Lower overheads for stock-keeping and configuration as a result of the wide setting range of the electronic overload release (up to 1:3)
- Technology has lower inherent power losses than speed-controlled drive systems, so that less cooling (and smaller footprint) are possible

Standards and approvals

- IEC/EN 60947-4-2
- UL 60947-4-2
- CSA
- ATEX
- IEC 62061: SIL 3
- ISO 13849-1: PL e
- CCC approval for China

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

Application

The ET 200SP motor starters are suitable for the following applications:

- Switching and monitoring of
 - 3-phase motors with overload and short-circuit protection (e.g. 400 V asynchronous motors for secondary drives in conveyor systems)
 - 1-phase motors with overload and short-circuit protection (e.g. 230 V motors for pump applications)
 - Resistive loads by means of current value and diagnostics via the maintenance function (e.g. for heaters)
- Plant monitoring and energy management in conveyor systems:
Drive belt monitoring and blocking monitoring are possible by means of the phase asymmetry and residual current detection during current measurement, for example.

- Track switching and lifting table control in conveyor systems: Track switches can be implemented by means of the quick stop function and lifting table controls by means of the "immediate end position disconnection" function without any laborious programming.

- Safe isolation of the drive from main power supply: The isolating functions according to IEC 60947-1 offer protection against inadvertent activation during plant maintenance.

Motor starters in the process industry

For the ET 200SP motor starters, special 3RK1908-0AP00-0.H0 BaseUnits are available that enable the devices to also be used in the ET 200SP HA I/O system. This is typically used in process engineering applications.

For more information, see <https://mall.industry.siemens.com/mall/en/ww/Catalog/Products/10398144?tree=CatalogTree>.

Technical specifications

More information

SiePortal, see www.siemens.com/product?3RK1308

Equipment Manual, see
<https://support.industry.siemens.com/cs/ww/en/view/109479973>

FAQs, see <https://support.industry.siemens.com/cs/ww/en/ps/21800/faq>

ET 200SP motor starters

Article number	3RK1308-0A.00-0CP0	3RK1308-0C.00-0CP0	3RK1308-0B.00-0CP0	3RK1308-0D.00-0CP0
Product category				
General technical specifications				
Width x height x depth	mm	30 x 142 x 150		
Design of the switching contact	Hybrid			
Design of the motor protection	Electronic			
Installation altitude at height above sea level, maximum	m	4 000, derating, see Equipment Manual		
Mounting position		Vertical, horizontal (observe derating)		
Type of mounting		Can be plugged into BaseUnit		
Ambient temperature				
• During operation	°C	-25 ... +60		
• During transport	°C	-40 ... +70		
• During storage	°C	-40 ... +70		
Relative humidity during operation	%	10 ... 95		
Vibration resistance		15 mm up to 6 Hz; 2 g up to 500 Hz		
Shock resistance		6 g/11 ms		
Degree of protection IP on the front according to IEC 60529		IP20		
Touch protection on the front according to IEC 60529		Finger-safe		
Performance Level (PL) according to ISO 13849-1	--	e		
Safety Integrity Level (SIL) according to IEC 62061	--	3		
Type of coordination		1		

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

Article number	3RK1308-0.A00-0CP0	3RK1308-0.B00-0CP0	3RK1308-0.C00-0CP0	3RK1308-0.D00-0CP0	3RK1308-0.E00-0CP0	
Product category	Motor starters					
Electrical specifications						
Supply voltage at DC rated value	V	24				
Operating power for AC-53a at 400 V rated value	kW	0.12	0.25	1.1	4	
Operating frequency, rated value	Hz	50 ... 60				
Ultimate short-circuit current breaking capacity (I_{cu})						
• at 400 V rated value	kA	55				
• at 500 V rated value	kA	55				
Adjustable current response value of the inverse-time delayed overload release	A	0.1 ... 0.4	0.3 ... 1	0.9 ... 3	2.8 ... 9	
Max. current-carrying capacity on starting	A	4	10	30	90	
Max. permissible voltage for protective separation between main and auxiliary circuit	V	500				
Insulation voltage, rated value	V	500				
Trip class		CLASS OFF/5/10 can be set				


BaseUnits for motor starters

Article number	3RK1908-0AP00-0AP0	3RK1908-0AP00-0BP0	3RK1908-0AP00-0CP0 3RK1908-0AP00-0GP0 3RK1908-0AP00-0HP0	3RK1908-0AP00-0DP0 3RK1908-0AP00-0JP0 3RK1908-0AP00-0KP0
Product designation	BaseUnit			
General technical specifications				
Width x height x depth	mm	30 x 215 x 75		
Ambient temperature				
• During operation	°C	-25 ... +60		
• During transport	°C	-40 ... +70		
• During storage	°C	-40 ... +70		
Degree of protection IP on the front according to IEC 60529		IP20		
Touch protection on the front according to IEC 60529		Finger-safe		
Connections/terminals				
Type of connectable conductor cross-sections				
• At the inputs for supply voltage				
- Solid	1 x 0.5 ... 2.5 mm ²	--	--	--
- Finely stranded with end sleeve	1 x 0.5 ... 2.5 mm ²	--	--	--
- Finely stranded without end sleeve	1 x 0.5 ... 2.5 mm ²	--	--	--
- Solid for AWG cables	1 x 20 ... 12	--	--	--
• For infeed				
- Solid	1 x 1 ... 6 mm ²	--	1 x 1 ... 6 mm ²	--
- Finely stranded with end sleeve	1 x 1 ... 6 mm ²	--	1 x 1 ... 6 mm ²	--
- Finely stranded without end sleeve	1 x 1 ... 6 mm ²	--	1 x 1 ... 6 mm ²	--
- For AWG cables	1 x 18 ... 10	--	1 x 18 ... 10	--
• For load-side outgoing feeder				
- Solid	1 x 0.5 ... 2.5 mm ²	--	1 x 1 ... 6 mm ²	--
- Finely stranded with end sleeve	1 x 0.5 ... 2.5 mm ²	--	1 x 1 ... 6 mm ²	--
- Finely stranded without end sleeve	1 x 0.5 ... 2.5 mm ²	--	1 x 1 ... 6 mm ²	--
- For AWG cables	1 x 20 ... 12	--	1 x 18 ... 10	--
Type of electrical connection for auxiliary and control circuits	Spring-loaded terminals (push-in)			
Miscellaneous				
Type of screwdriver tip	Slotted			
Size of screwdriver tip	Standard screwdriver 0.6 mm x 3.5 mm			

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

3DI/LC control module

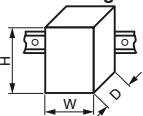Article number	3RK1908-1AA00-0BP0	
Product designation	3DI/LC control module	
General technical specifications		
Width x height x depth	mm	30 x 54.5 x 42.3
		
Product version	Accessories	
Number of digital inputs	4	
Installation altitude at height above sea level, maximum	m	2 000
Mounting position	Vertical, horizontal, flat	
Type of mounting	Can be plugged onto motor starter	
Ambient temperature		
• During operation	°C	-25 ... +60
• During transport	°C	-40 ... +70
• During storage	°C	-40 ... +70
Connections/terminals		
Connectable conductor cross-section for auxiliary contacts		
• Solid or stranded	mm ²	0.2 ... 1.5
• Finely stranded with end sleeve	mm ²	0.25 ... 1.5
• Finely stranded without end sleeve	mm ²	0.2 ... 1.5
AWG number as coded connectable conductor cross-section for auxiliary contacts	24 ... 16	
Type of electrical connection for auxiliary and control circuits	Spring-loaded terminals (push-in)	
Electrical specifications		
Type of voltage of the control supply voltage	DC	
Control supply voltage at DC rated value	V	20.4 ... 28.8
Miscellaneous		
Type of screwdriver tip	Slotted	
Size of screwdriver tip	Standard screwdriver 0.6 mm x 3.5 mm	

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters | IE3/IE4 ready

Selection and ordering data

Adjustable current response value of the inverse-time delayed overload release	Max. current-carrying capacity on starting	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
A	A					
Motor starters						
Direct-on-line starters						
0.1 ... 0.4	4	3RK1308-0AA00-0CPO	1	1 unit	42D	
0.3 ... 1	10	3RK1308-0AB00-0CPO	1	1 unit	42D	
0.9 ... 3	30	3RK1308-0AC00-0CPO	1	1 unit	42D	
2.8 ... 9	90	3RK1308-0AD00-0CPO	1	1 unit	42D	
4 ... 12	120	3RK1308-0AE00-0CPO	1	1 unit	42D	
						
3RK1308-0AB00-0CPO						
Reversing starters						
0.1 ... 0.4	4	3RK1308-0BA00-0CPO	1	1 unit	42D	
0.3 ... 1	10	3RK1308-0BB00-0CPO	1	1 unit	42D	
0.9 ... 3	30	3RK1308-0BC00-0CPO	1	1 unit	42D	
2.8 ... 9	90	3RK1308-0BD00-0CPO	1	1 unit	42D	
4 ... 12	120	3RK1308-0BE00-0CPO	1	1 unit	42D	
						
3RK1308-0BB00-0CPO						
Fail-safe direct-on-line starters						
0.1 ... 0.4	4	3RK1308-0CA00-0CPO	1	1 unit	42D	
0.3 ... 1	10	3RK1308-0CB00-0CPO	1	1 unit	42D	
0.9 ... 3	30	3RK1308-0CC00-0CPO	1	1 unit	42D	
2.8 ... 9	90	3RK1308-0CD00-0CPO	1	1 unit	42D	
4 ... 12	120	3RK1308-0CE00-0CPO	1	1 unit	42D	
						
3RK1308-0CE00-0CPO						
Fail-safe reversing starters						
0.1 ... 0.4	4	3RK1308-0DA00-0CPO	1	1 unit	42D	
0.3 ... 1	10	3RK1308-0DB00-0CPO	1	1 unit	42D	
0.9 ... 3	30	3RK1308-0DC00-0CPO	1	1 unit	42D	
2.8 ... 9	90	3RK1308-0DD00-0CPO	1	1 unit	42D	
4 ... 12	120	3RK1308-0DE00-0CPO	1	1 unit	42D	
						
3RK1308-0DE00-0CPO						

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters

BaseUnits ¹⁾		Product version		Operational voltage of the AC infeed	Supply voltage of the DC infeed	Push-in terminals	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		V	V	V	V						
For motor starters											
3RK1908-0AP00-OAP0		• With AC/DC infeed	500	24		3RK1908-0AP00-OAP0			1	1 unit	42D
		• With DC infeed	--	24		3RK1908-0AP00-OBP0			1	1 unit	42D
		• With AC infeed	500	--		3RK1908-0AP00-OCP0			1	1 unit	42D
		• Without infeed	--	--		3RK1908-0AP00-ODP0			1	1 unit	42D
For fail-safe motor starters											
		• With AC infeed, with F-DI infeed	500	--		3RK1908-0AP00-0GP0			1	1 unit	42D
		• With AC infeed, with F-DI loop-through	500	--		3RK1908-0AP00-0HP0			1	1 unit	42D
		• Without AC/DC infeed, with F-DI loop-through	--	--		3RK1908-0AP00-0JP0			1	1 unit	42D
		• Without AC/DC infeed, with F-DI infeed	--	--		3RK1908-0AP00-0KP0			1	1 unit	42D

¹⁾ The voltage is looped-through from BaseUnits with infeed to subsequent BaseUnits without infeed.

BaseUnits		Product version		Supply voltage at DC rated value	Loop through the potential group from the left	Push-in terminals	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		V	V								
For dummy modules											
6ES7193-6BP00-0BA0		• Dark, looping through the potential group	24	Yes		6ES7193-6BP00-0BA0			1	1 unit	255
		• Light, opening a new potential group	24	No		6ES7193-6BP00-0DA0			1	1 unit	255

3DI/LC control module		Control supply voltage at DC rated value		Product function		Push-in terminals	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		V	V	local operation	digital inputs configurable						
3RK1908-1AA00-0BP0											
3RK1908-1AA00-0BP0		20.4 ... 28.8		Yes	Yes		3RK1908-1AA00-0BP0		1	1 unit	42D

Load feeders and motor starters for use in the control cabinet

ET 200SP motor starters


	Product designation	Product version	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Accessories							
	BU covers 15 mm	For BaseUnits Type A0 or A1	6ES7133-6CV15-1AM0		1	5 units	255
6ES7133-6CV15-1AM0							
	BU cover 30 mm	For protection of empty slots, 30 mm	3RK1908-1CA00-0BP0		1	1 unit	42D
3RK1908-1CA00-0BP0							
	Infeed bus cover (1 bag containing 10 covers)	For ET 200SP	3RK1908-1DA00-2BP0		1	1 unit	42D
3RK1908-1DA00-2BP0							
	Additional mounting base unit	Mechanical, for ET 200SP	3RK1908-1EA00-1BP0		1	1 unit	42D
3RK1908-1EA00-1BP0							
	Fan	Can be used for 3RK1308	3RW4928-8VB00		1	1 unit	42G
3RW4928-8VB00							
Motor suppression modules							
	• Square		3RK1911-6EA00		1	1 unit	42D
3RK1911-6EA00							
	• Round		3RK1911-6EB00		1	1 unit	42D
3RK1911-6EB00							
	Starter kit	Consists of 3RK1308-OBC00-0CPO reversing starter (0.9 ... 3 A), 3RK1908-0AP00-0AP0 BaseUnit with 500 V and 24 V AC/DC infeed, and EMC distance module (consisting of 6ES7193-6BP00-0BA0 BaseUnit plus 6ES7133-6CV15-1AM0 BU cover 15 mm)	3RK1908-1SK00		1	1 unit	42D
3RK1908-1SK00							

* You can order this quantity or a multiple thereof.
Illustrations are approximate

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Overview

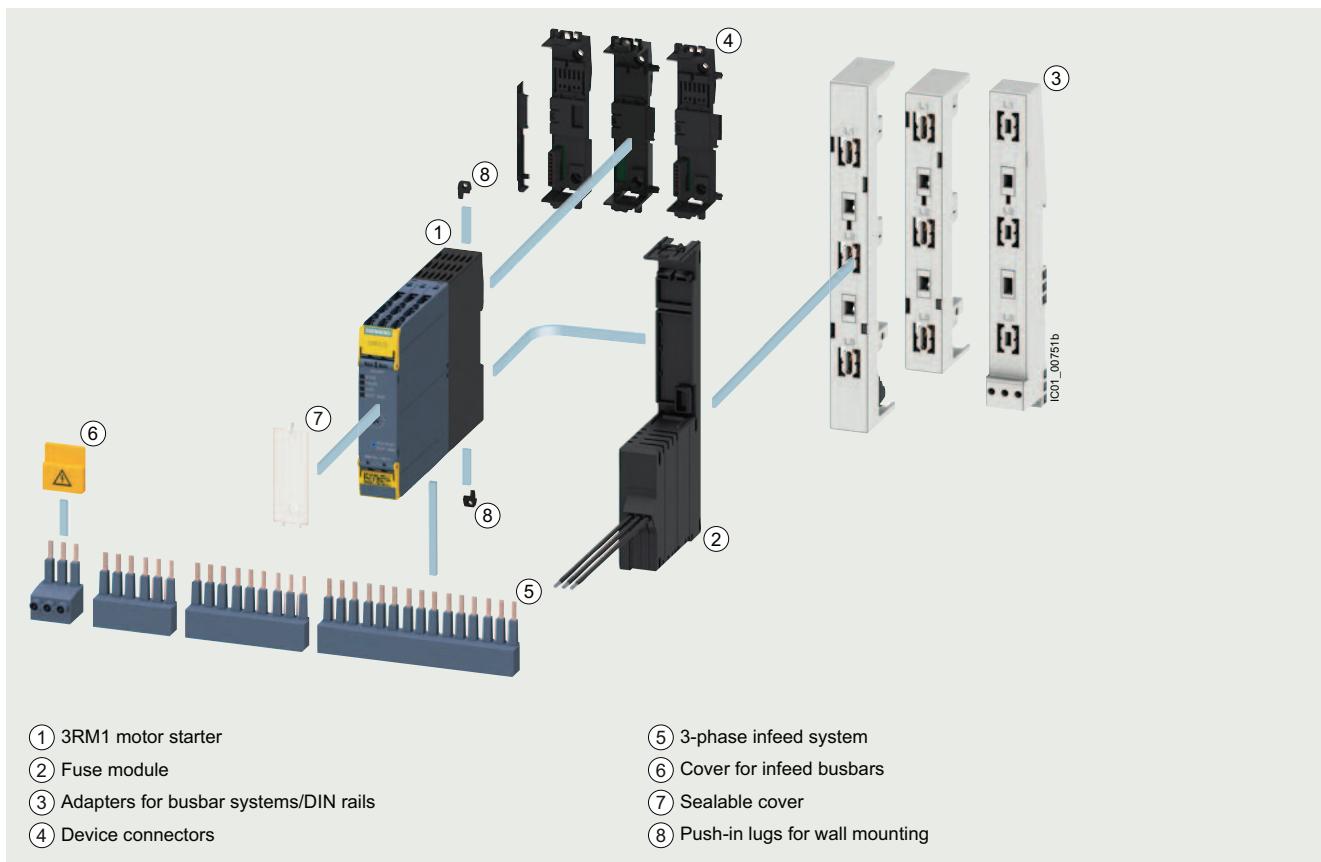

SIRIUS 3RM1 motor starters with accessories

More information

3RM1 motor starters:

- Homepage, see www.siemens.com/sirius-motor-starter-3RM1
- SiePortal, see www.siemens.com/product?3RM1
- Online configurator, see www.siemens.com/sirius/configurators

3SK safety relays for protecting the 3RM1 motor starters:

- Homepage, see www.siemens.com/sirius-safety-relays
- SiePortal, see www.siemens.com/product?3SK

TIA Selection Tool Cloud (TST Cloud), see

www.siemens.com/tstcloud/?node=MotorStarter3RM1

Decision support for motor start – Starting and operating three-phase asynchronous motors efficiently, see www.siemens.com/motorstart-guide

SiePortal topic page with information on the planning and operating phase, see <https://support.industry.siemens.com/cs/ww/en/view/109792664>

SIRIUS 3RM1 motor starters are compact devices, 22.5 mm wide, combining a large number of functions in a single enclosure. They consist of combinations of relay contacts, power semiconductors (hybrid technology), and an electronic overload relay for operational switching of three-phase motors up to 3 kW (at 400 V) and resistive loads up to 10 A at AC voltages up to 500 V.

The 3RM1 motor starters with overload protection with wide setting range are available as direct-on-line starters and reversing starters and as versions with safety-related shutdown up to SIL 3 and PL e.




Video: SIRIUS 3RM1 motor starter – Compact, economical, simple

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Seamlessly integrated safety right through to the main circuit

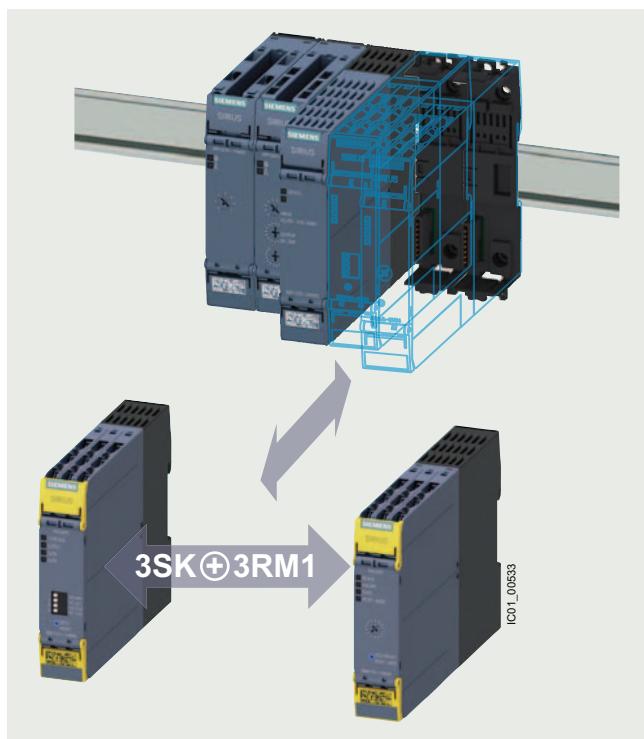

Problem-free integration of functional safety into the main circuit through the simple combination of 3RM1 and 3SK devices

Functional safety in the main circuit needs to be both simple and flexible.

The unique compatibility of hybrid 3RM1 fail-safe motor starters and 3SK safety relays means that integrated functional safety right through to the main circuit is no longer a problem.

Their compact design allows the motor starters to be installed to the right of the safety relay in a simple manner, just like an output expansion. The wiring of the safety-related signals to the relay can be performed simply, quickly and in an error-free manner using the device connector.

The ergonomically designed enclosure with removable terminals and terminal labeling in the hinged cover allows for the cables to be conveniently diagonally mounted from the front. Either screw or spring-loaded terminals with push-in technology are available.

Highlights

- Fail-safe disconnection of motors up to 3 kW
- Problem-free combination of fail-safe motor starters and safety relays
- End-to-end system, simple setup using device connectors
- Ergonomic enclosure

Note:

SIRIUS 3SK safety relays, [see page 11/13 onwards](#).

Online configurator



Online configurator

An online configurator with numerous functions is available for SIRIUS 3RM1 motor starters ([see \[www.siemens.com/sirius/configurators\]\(http://www.siemens.com/sirius/configurators\)](http://www.siemens.com/sirius/configurators))

- Create individual motor starters or a complex motor starter group
- Individual selection options, such as direct or reversing starting, spring-loaded or screw terminals, as well as motor current and control voltage
- Graphic representation of the design during configuration
- Automatic calculation of the matching motor starter protector/circuit breaker (for group configuration)

Ordering notes for multi-unit packaging

SIRIUS 3RM1 motor starters can also be ordered in practical, environment-friendly multi-unit packaging on request.

Multi-unit packaging with order code X90

When ordering products in multi-unit packaging, "**-Z**" must be added to the article number of the product concerned and the order code "**X90**" must be specified in addition.

Ordering example:

3RM1201-2AA04-Z X90;

Order quantity 12 units → Delivery of one pack containing 12 units

For more information, [see page 16/7](#).

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Article number scheme

Product versions		Article number			
Product function	Direct-on-line starters	3RM100	<input type="checkbox"/>	AA	4
	Failsafe direct-on-line starters	3RM110	<input type="checkbox"/>	AA	4
	Reversing starters	3RM120	<input type="checkbox"/>	AA	4
	Failsafe reversing starters	3RM130	<input type="checkbox"/>	AA	4
Wide setting range for electronic overload release	0.1 ... 0.5 A	1	With ATEX certification and safety-related shutdown		
	0.4 ... 2.0 A	2	With ATEX certification and safety-related shutdown		
	1.6 ... 7.0 A (10 A) ¹⁾	7	For motor standard output 0 ... 0.12 kW ²⁾		
Connection methods	Screw terminals	1	For motor standard output 0.09 ... 0.75 kW ²⁾		
	Spring-loaded terminals (push-in)	2	For motor standard output 0.55 ... 3 kW ²⁾		
	Mixed connection method	3	Spring-loaded terminals (push-in)		
Rated control supply voltage U_s	24 V DC	0			
	110 ... 230 V AC, 110 V DC	1			
Example	3RM130 1 – 2 AA 0 4				

¹⁾ Operation of resistive loads with up to 10 A.

²⁾ Standard three-phase motor, basis 4-pole at 400 V AC; the actual starting and rated data of the motor to be protected must be considered when selecting the units.

Note:

The article number scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders, please use the article numbers quoted in the selection and ordering data.

Benefits

- Less space required in the control cabinet (20 to 80%) thanks to high functional density, which also means reduced wiring and testing
- Greater endurance and reduced heat losses thanks to hybrid technology
- Lower costs for stock-keeping and configuration as a result of the wide setting range of the electronic overload release (up to 1:5)
- Fast wiring without tools for rigid conductors or conductors equipped with end sleeves thanks to spring-loaded terminals (push-in)
- Safety-related shutdown according to SIL 3 and PL e by shutting down the control supply voltage without additional devices in the main circuit
- The motor starters can be ideally combined with 3SK safety relays for safety-related shutdown (see page 11/13 onwards)
- Motor status feedback to the higher-level control system in the case of 3RM10 and 3RM12 motor starters in the 24 V DC version

- Virtually error-free wiring on the mains connection side and reduction in short-circuit protective devices by means of 3RM19 infeed system
- ATEX certification of the overload protection of the 3RM1 Failsafe motor starters: "Increased safety" type of protection EEx e according to ATEX Directive 2014/34/EU

Standards and approvals

- IEC/EN 60947-4-2
- UL 60947-4-2
- CSA C22.2 No. 60947-4-2
- ATEX
- IEC 61508: SIL 3
- IEC 62061: SIL 3
- ISO 13849-1: PL e
- CCC approval for China

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters


Technical specifications

More information

SiePortal, see www.siemens.com/product?3RM1

Equipment Manual, see
<https://support.industry.siemens.com/cs/ww/en/view/66295730>

FAQs, see <https://support.industry.siemens.com/cs/ww/en/ps/16311/faq>

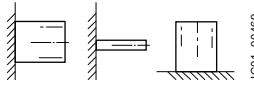Article number	3RM1		
General technical specifications			
Dimensions (W x H x D)	mm	22.5 x 100 x 141.6	
Ambient temperature	°C	-25 ... +60	
• During operation	°C	-40 ... +70	
• During storage	°C	-40 ... +70	
• During transport			
Installation altitude at height above sea level, maximum	m	4 000 (derating, see Equipment Manual)	
Shock resistance		6 g/11 ms	
Vibration resistance		1 ... 6 Hz, 15 mm; 20 m/s ² , 500 Hz	
Degree of protection IP on the front		IP20	
Touch protection on the front		Finger-safe for vertical touching from the front	
Performance Level (PL)		e	
Safety Integrity Level (SIL)		3	
Mounting position		Vertical, horizontal, standing (consider derating)	
			

Article number	3RM1.01	3RM1.02	3RM1.07
Main circuit			
Operational voltage, rated value, maximum	V	500	
Operating frequency	Hz	50/60	
Operational current at AC-53a at 400 V at an ambient temperature of 40 °C	A	0.5	2
Minimum load [%]	%	20	7
Adjustable current response value of the inverse-time delayed overload release	A	0.1 ... 0.5	0.4 ... 2
			1.6 ... 7

Article number	3RM1.0.-AA04	3RM1.0.-AA14
Control circuit		
Type of voltage of the control supply voltage	DC	AC/DC
Control supply voltage		
• At DC	V	24
• At AC at 50 Hz	V	--
		110 110 ... 230
Frequency of the control supply voltage	Hz	--
		50/60

Article number	3RM1.0.-1AA.4	3RM1.0.-3AA.4	3RM1.0.-2AA.4
Connections/terminals			
Type of electrical connection for main circuit (1 or 2 conductors can be connected)	 Screw terminals  Spring-loaded terminals (push-in)		
Connectable conductor cross-section for main contacts			
• Solid	1 x (0.5 ... 4 mm ²), 2 x (0.5 ... 2.5 mm ²)	1 x (0.5 ... 4 mm ²)	
• Finely stranded	1 x (0.5 ... 4 mm ²), 2 x (0.5 ... 1.5 mm ²)	1 x (0.5 ... 2.5 mm ²)	
- With end sleeve	--	1 x (0.5 ... 4 mm ²)	
- Without end sleeve			
Type of electrical connection for auxiliary and control circuits (1 or 2 conductors can be connected)	 Screw terminals	 Spring-loaded terminals (push-in)	
Type of connectable conductor cross-sections for auxiliary contacts			
• Solid	1 x (0.5 ... 2.5 mm ²), 2 x (1.0 ... 1.5 mm ²)	1 x (0.5 ... 1.5 mm ²), 2 x (0.5 ... 1.5 mm ²)	
• Finely stranded	1 x (0.5 ... 2.5 mm ²), 2 x (0.5 ... 1 mm ²)	1 x (0.5 ... 1.0 mm ²), 2 x (0.5 ... 1.0 mm ²)	
- With end sleeve	--	1 x (0.5 ... 1.5 mm ²), 2 x (0.5 ... 1.5 mm ²)	
- Without end sleeve			
Type of connectable conductor cross-sections for AWG cables			
• For main contacts	1 x (20 ... 12), 2 x (20 ... 14)	1 x (20 ... 12)	
• For auxiliary contacts	1 x (20 ... 14), 2 x (18 ... 16)	1 x (20 ... 16), 2 x (20 ... 16)	

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Accessories

More information

Equipment Manual, see
<https://support.industry.siemens.com/cs/ww/en/view/66295730>


3-phase infeed system (3RM19 3-phase busbar system)

The system permits an easy, time-saving and safe means of feeding two or more 3RM1 motor starters. It can be used only with motor starters with screw terminals and in combination with 8US1716-0RK00 adapters for mounting rails in the main circuit.

The maximum summation current must not exceed 25 A.
 The primary infeed is connected via a 3-phase infeed terminal.

The busbars are available in three lengths, for two, three or five motor starters. More than five devices can be connected by clamping the connection tags of a second busbar underneath, rotated 180°.

The 3-phase busbars have touch protection but empty connection tags must be fitted with covers.

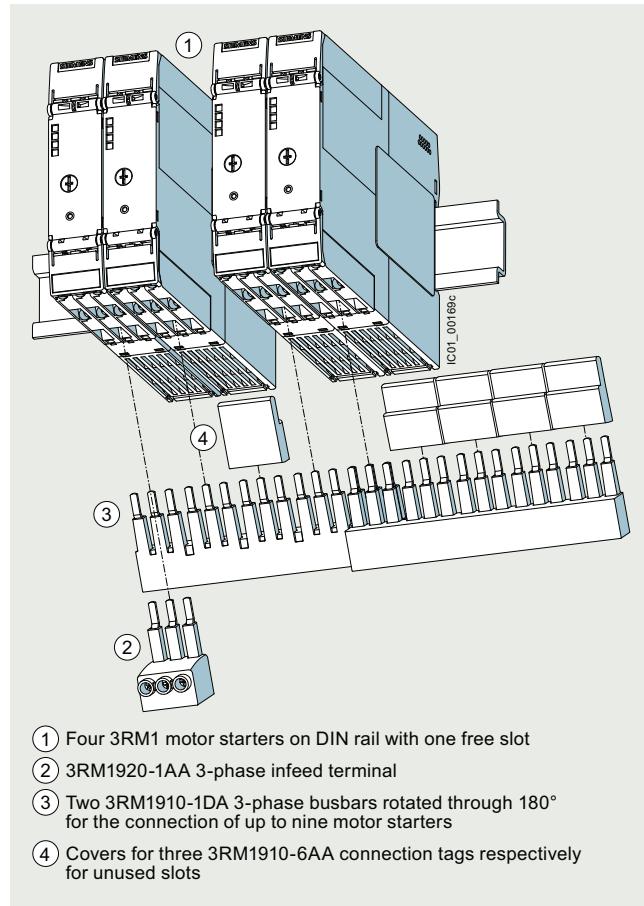

3RM19 infeed system with 3-phase infeed terminal: In the above example, two 3-phase busbars (5-pole busbars) rotated 180° allow up to nine 3RM1 motor starters to be connected. Contact with the unused connection tags in free slots is prevented safely by the covers.


Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Fuse module for the use of 3RM1 motor starters on 8US busbar systems and mounting rails

The fuse module permits the very compact construction of a load feeder with a maximum width of 22.5 mm. The 3RM1 motor starter in combination with the integrated fuses for short-circuit protection can therefore be used on 8US busbar systems. Thanks to the range of different adapters, the fuse module can be used in all 60 mm busbar systems and also in compact busbar systems and on mounting rails. The interface to the adapter also permits a simple and secure replacement of the load feeder.

The fuse module can be combined with all 3RM1 motor starters. The easily replaceable fuses protect the motor starter, the connected motor and the cables.

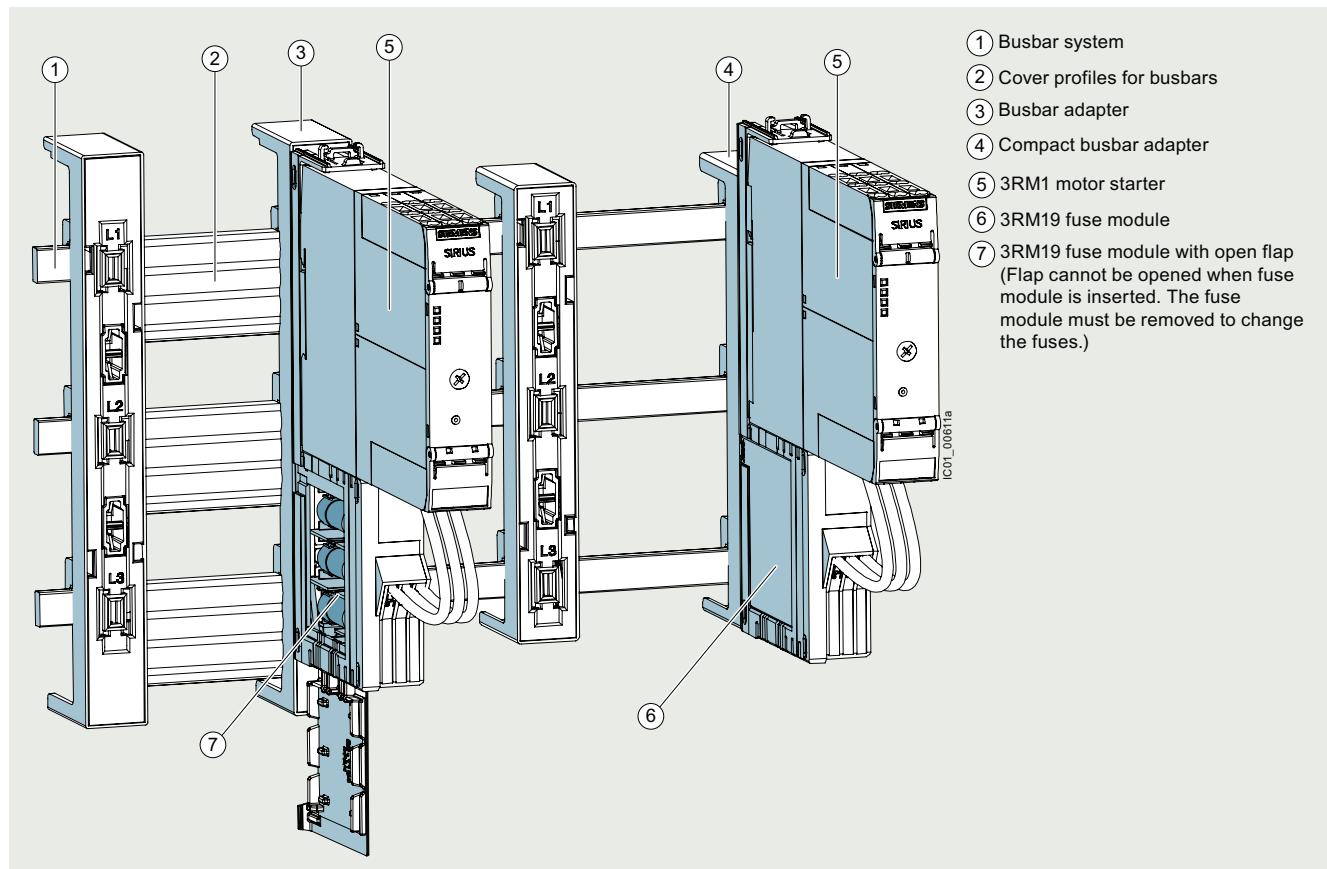


By means of the fuse module, 3RM1 motor starters can be used in busbar systems and 8US compact busbar systems, as well as on mounting rails

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Device connectors for the control circuit

The device connectors for 3RM1 motor starters (24 V DC control supply voltage only) reduce the outlay for cabling by looping through the control supply voltage. The device connectors can be snapped onto a DIN rail or fixed to a level mounting panel using screws.

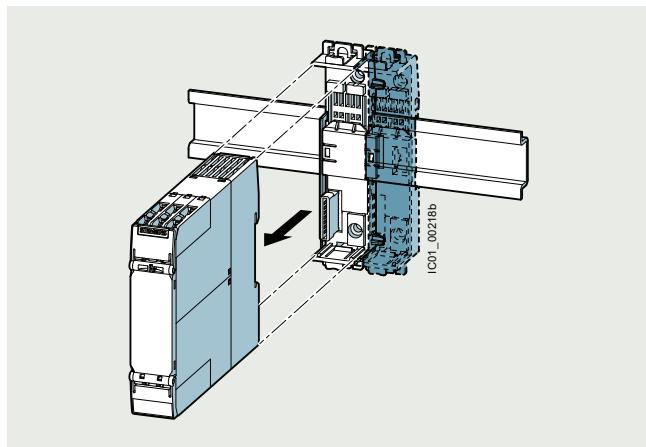

Device connector with 3RM1 motor starter

Using the device connectors exclusively for feeding in the control supply voltage


By using device connectors, a maximum of five motor starters can be supplied with 24 V DC control supply voltage. This requires the control supply voltage to be applied to the A1 and A2 terminals of only one motor starter.

Device daisy chain connectors can be used for gaps between two motor starters. Device termination connectors terminate a group.

Using the device connectors for safe group shutdown

In combination with the 3RM11 and 3RM13 fail-safe motor starters, the device connector can also be used for safety-related shutdown. For this application, groups of no more than five fail-safe motor starters can be connected using a device connector, and the group must be terminated with a termination connector. Removing the control voltage supply from the first motor starter will safely shut down the whole group.

Safe group shutdown can be implemented particularly easily in conjunction with 3SK safety relays. In this case, up to five motor starters can be directly connected to 3SK safety relays via the device connector and then safely shut down ([see page 11/13 onwards](#)).

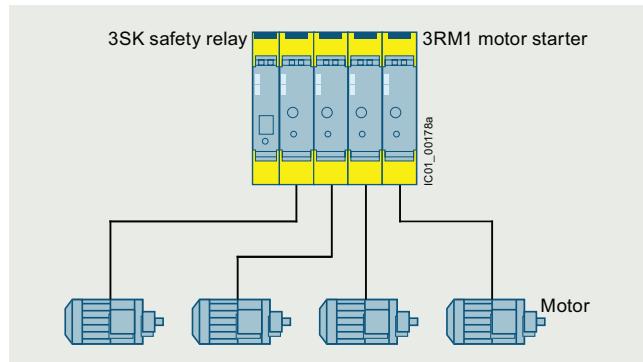

Ideal connection: Combination of four SIRIUS 3RM1 Failsafe motor starters with SIRIUS 3SK safety relays

Electromechanical switching devices in series with hybrid motor starters

Switching an inductive load - in particular of motors < 1 kW with high inductance - with an electromechanical switching device (e.g. contactor) can cause high and steep voltage edges.

The resulting faults/damage can be prevented by first disconnecting with the hybrid motor starter or by using EMC suppression modules:

- 3RT2916-1P.. EMC suppression modules for direct mounting on the contactor, [see page 3/116](#)
- For motor suppression modules that are fitted in the main circuit, [see page 8/118](#)

Note:

For more information, see

<https://support.industry.siemens.com/cs/ww/en/view/109758696>

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters IE3/IE4 ready

Selection and ordering data

More information

SiePortal, see www.siemens.com/product?3RM1

PU (UNIT, SET, M) = 1
PS* = 1 unit
PG = 41D

**Multi-unit packaging,
see page 16/7.**

	Operating power for three-phase motor at 400 V ¹⁾	Adjustable current response value of the inverse-time delayed overload release	Control supply voltage	Screw terminals		Article No.	Price per PU	Spring-loaded terminals (push-in)		Article No.	Price per PU
				at DC	at AC at 50 Hz			For main circuit and control circuit	For main circuit and control circuit		
Direct-on-line starters											
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1001-1AA04			3RM1001-2AA04			
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1002-1AA04			3RM1002-2AA04			
	0.55 ... 3	1.6 ... 7	24	--	3RM1007-1AA04			3RM1007-2AA04			
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1001-1AA14			3RM1001-2AA14			
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1002-1AA14			3RM1002-2AA14			
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1007-1AA14			3RM1007-2AA14			
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1201-1AA04			3RM1201-2AA04			
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1202-1AA04			3RM1202-2AA04			
	0.55 ... 3	1.6 ... 7	24	--	3RM1207-1AA04			3RM1207-2AA04			
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1201-1AA14			3RM1201-2AA14			
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1202-1AA14			3RM1202-2AA14			
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1207-1AA14			3RM1207-2AA14			
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1101-1AA04			3RM1101-2AA04			
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1102-1AA04			3RM1102-2AA04			
	0.55 ... 3	1.6 ... 7	24	--	3RM1107-1AA04			3RM1107-2AA04			
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1101-1AA14			3RM1101-2AA14			
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1102-1AA14			3RM1102-2AA14			
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1107-1AA14			3RM1107-2AA14			
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1301-1AA04			3RM1301-2AA04			
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1302-1AA04			3RM1302-2AA04			
	0.55 ... 3	1.6 ... 7	24	--	3RM1307-1AA04			3RM1307-2AA04			
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1301-1AA14			3RM1301-2AA14			
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1302-1AA14			3RM1302-2AA14			
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1307-1AA14			3RM1307-2AA14			

¹⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet


IE3/IE4 ready SIRIUS 3RM1 motor starters

Multi-unit packaging, see page 16/7.	Operating power for three-phase motor at 400 V ¹⁾	Adjustable current response value of the inverse-time delayed overload release	Control supply voltage		Screw terminals for main circuit, spring-loaded terminals (push-in) for control circuit	Article No.	Price per PU	 PU (UNIT, SET, M)	PS*	PG
			kW	A						
Direct-on-line starters										
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1001-3AA04		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1002-3AA04		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	24	--	3RM1007-3AA04		1	1 unit	41D	
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1001-3AA14		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1002-3AA14		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1007-3AA14		1	1 unit	41D	
3RM1001-3AA04										
Reversing starters										
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1201-3AA04		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1202-3AA04		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	24	--	3RM1207-3AA04		1	1 unit	41D	
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1201-3AA14		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1202-3AA14		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1207-3AA14		1	1 unit	41D	
3RM1201-3AA04										
Failsafe direct-on-line starters										
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1101-3AA04		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1102-3AA04		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	24	--	3RM1107-3AA04		1	1 unit	41D	
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1101-3AA14		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1102-3AA14		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1107-3AA14		1	1 unit	41D	
3RM1101-3AA04										
Failsafe reversing starters										
	0 ... 0.12	0.1 ... 0.5	24	--	3RM1301-3AA04		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	24	--	3RM1302-3AA04		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	24	--	3RM1307-3AA04		1	1 unit	41D	
	0 ... 0.12	0.1 ... 0.5	110	110 ... 230	3RM1301-3AA14		1	1 unit	41D	
	0.09 ... 0.75	0.4 ... 2	110	110 ... 230	3RM1302-3AA14		1	1 unit	41D	
	0.55 ... 3	1.6 ... 7	110	110 ... 230	3RM1307-3AA14		1	1 unit	41D	
3RM1301-3AA04										

¹⁾ The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

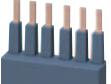Product designation	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
3-phase infeed systems for 3RM1 with screw terminals					
 3RM1920-1AA	3-phase infeed terminal • For 3-phase busbars	3RM1920-1AA		1	1 unit 41D
 3RM1910-1AA	3-phase busbars • For two motor starters	3RM1910-1AA		1	1 unit 41D
 3RM1910-1BA	• For three motor starters	3RM1910-1BA		1	1 unit 41D
 3RM1910-1DA	• For five motor starters	3RM1910-1DA		1	1 unit 41D
 3RM1910-6AA	Covers For three connection tags of the 3-phase busbars	3RM1910-6AA		10 units	41D
Fuse modules for 3RM1 for use on busbars or mounting rails					
 3RM1932-1AB	Fuse module with 3NW6007-1 fuse	3RM1932-1AB		1	1 unit 41D
	Fuse module without fuse¹⁾	3RM1930-1AA		1	1 unit 41D
Adapters					
 8US1216-0AS00	Adapter for 60 mm busbar systems 22.5 mm x 200 mm x 41.5 mm Note: The adapter can be used on busbars with a width of 12 mm, 15 mm, 20 mm, 25 mm or 30 mm and a thickness of 5 mm or 10 mm.	8US1216-0AS00		1	1 unit 14O
 8US1616-0AK02	Adapter for 60 mm compact busbar systems 22.5 mm x 160 mm x 41.5 mm Note: The adapter can be used on busbars with a width of 12 mm and a thickness of 5 mm or 10 mm.	8US1616-0AK02		1	1 unit 14O

¹⁾ For details of alternative fuses, see Equipment Manual.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Product designation	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Adapters					
 8US1716-0RK00	Adapter for 35 mm DIN mounting rails 22.5 mm x 185 mm x 23.5 mm	8US1716-0RK00	1	1 unit	14O
Cover profiles¹⁾²⁾					
 8US1922-2CA00	Cover profiles for busbars 12 mm x 5 mm x 1 000 mm 40 or 60 mm center-to-center busbar clearance depending on busbar system	8US1922-2CA00	1	10 units	14O
 8US1922-2AA00	15 mm x 5 mm x 1 000 mm 20 mm x 5 mm x 1 000 mm 25 mm x 5 mm x 1 000 mm 30 mm x 5 mm x 1 000 mm 40 or 60 mm center-to-center busbar clearance depending on busbar system	8US1922-2AA00	1	10 units	14O
 8US1922-2BA00	12 mm x 10 mm x 1 000 mm 15 mm x 10 mm x 1 000 mm 20 mm x 10 mm x 1 000 mm 25 mm x 10 mm x 1 000 mm 30 mm x 10 mm x 1 000 mm 60 mm center-to-center busbar clearance	8US1922-2BA00	1	10 units	14O
Device connectors					
 3ZY1212-2EA00	Device connector For 3RM1 motor starters, 24 V DC, 22.5 mm	3ZY1212-2EA00	1	1 unit	41L
 3ZY1212-2AB00	Device daisy chain connector For 3RM1 motor starters 24 V DC, 22.5 mm For gaps without motor starters in assemblies	3ZY1212-2AB00	1	1 unit	41L
 3ZY1212-2FA00	Device termination connector For 3RM1 motor starters, 24 V DC, 22.5 mm	3ZY1212-2FA00	1	1 unit	41L

¹⁾ The cover profiles for busbars can be used for maintaining minimum spacing between the load feeders.

²⁾ For further accessories for the configuration of a busbar system, see Catalog LV 10.

Load feeders and motor starters for use in the control cabinet

SIRIUS 3RM1 motor starters

Product designation	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Removable terminals					
	Screw terminals				
	Spring-loaded terminals (push-in)				
Terminals for main circuit, 2-pole, without labeling					
	3ZY1122-1BA00	1	6 units	41L	
	3ZY1122-2BA00	1	6 units	41L	
Terminals for control circuit, 3-pole, without labeling					
	3ZY1131-1BA00	1	6 units	41L	
	3ZY1131-2BA00	1	6 units	41L	
Further accessories					
	Push-in lugs for wall mounting (2 lugs per device are required)	3ZY1311-0AA00	1	10 units	41L
	Sealable covers, 22.5 mm For simple protection against unauthorized access	3ZY1321-2AA00	1	5 units	41L
	Coding pins for removable terminals For mechanical coding of the terminals	3ZY1440-1AA00	1	12 units	41L
	Hinged covers Replacement cover, without terminal labeling, 22.5 mm wide <ul style="list-style-type: none"> Titanium gray Yellow 	3ZY1450-1AB00 3ZY1450-1BB00	1	5 units	41L
	Motor suppression modules <ul style="list-style-type: none"> Square Round 	3RK1911-6EA00 3RK1911-6EB00	1	1 unit	42D
	Screwdrivers For all SIRIUS devices with spring-loaded terminals Length approx. 200 mm, 3.0 mm x 0.5 mm, titanium gray/black, partially insulated	Spring-loaded terminals 3RA2908-1A	1	1 unit	41B