









Back













3200W AC/DC High Reliable Industrial Enclosed Type Power Supply











### Features

- 90~264Vac input with PFC
- Output voltage 50~125% programmable
- Built-in CANBus protocol
- -20~+70°C wide range operation temperature
- · Built-in constant current limiting circuit
- High efficiency up to 94.5%
- · Built-in remote ON-OFF control / Remote Sense / 12Vaux power / DC OK signal / OTP alarm signal
- · Built-in intelligent fan speed control
- Protections: Short circuit / Overload / Over voltage / Over temperature
- · Design refer to SEMI F47 at 200Vac
- 5 years warranty

# Applications

- · Factory control or automation apparatus
- Test and measurement instrument
- · Laser related machine
- · Aging facility
- · Digital broadcasting
- · Constant current source


# GTIN CODE

MW Search: https://www.meanwell.com/serviceGTIN.aspx

# Description

NSP-3200 is a 3.2KW single output enclosed type AC/DC power supply with 1U low profile and a high power density up to 37W/inch3. This series operates for 90~264Vac input voltage and offers the models with the DC output mostly demanded by the industry. Each model is cooled by the thermostatically controlled fan. Moreover, NSP-3200 provides vast design flexibility by equipping various built-in functions such as output programming, remote ON-OFF control, auxiliary power, and etc.

# ■ Model Encoding

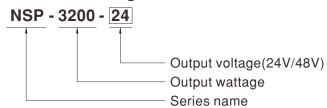



#### **SPECIFICATION**

| MODEL      |  | NSP-3200-24   |  | ISP-3200-48   |  |  |
|------------|--|---|--|---|--|--|
|            | DC VOLTAGE   | 24V   | 4  | 8V  |  |  |
|            | RATED CURRENT  | 133A  | 6  | 7A  |  |  |
|            | CURRENT RANGE  | 0 ~ 133A  | 0  | ~ 67A   |  |  |
|            | RATED POWER  | 3192W   | 3  | 216W  |  |  |
|            | RIPPLE & NOISE (max.) Note.2,3   | 300mVp-p  | 4  | 480mVp-p  |  |  |
| UTPUT      | VOLTAGE ADJ. RANGE   | 23.5 ~ 30V  | 4  | 7.5 ~ 58.8V   |  |  |
|            | VOLTAGE TOLERANCE Note.4   | ±1.0%   | =  | ±1.0%   |  |  |
|            | LINE REGULATION  | ±0.5%   | =  | ±0.5%   |  |  |
|            | LOAD REGULATION  | ±0.5% ±0.5%   |  |   |  |  |
|            | SETUP, RISE TIME   | 1500ms, 60ms/230Vac at full load  |  |   |  |  |
|            | HOLD UP TIME (Typ.)  | 16ms / 230Vac at 70% load 8ms / 230Vac at full load   |  |   |  |  |
|            | VOLTAGE RANGE Note.5   | 90 ~ 264Vac 127 ~ 400Vdc  |  |   |  |  |
|            | FREQUENCY RANGE  | 47 ~ 63Hz   |  |   |  |  |
|            | POWER FACTOR (Typ.)  | 0.97/230Vac at full load  |  |   |  |  |
| IPUT       | EFFICIENCY (Typ.) Note.6   | 93.5%   | 9  | 4.5%  |  |  |
|            | AC CURRENT (Typ.) Note.5   | 17A/230Vac  |  |   |  |  |
|            | INRUSH CURRENT (Typ.)  | COLD START 55A/230Vac   |  |   |  |  |
|            | LEAKAGE CURRENT  | <2mA / 230Vac   |  |   |  |  |
|            |  | 105 ~ 115% rated output power   |  |   |  |  |
|            | OVERLOAD   | Protection type : Constant current limi   | iting, shut down O/P voltage 5                               | sec. after O/P voltage is down low, re-power on to recover  |  |  |
| ROTECTION  |  | 31.5 ~ 37.5V  | 6  | 3 ~ 75V   |  |  |
|            | OVER VOLTAGE   | Protection type : Shut down o/p voltag  | ge, re-power on to recover                                   |   |  |  |
|            | OVER TEMPERATURE   | Shut down o/p voltage, recovers autor   | matically after temperature go                               | es down   |  |  |
|            | OUTPUT VOLTAGE   | Adjustment of output voltage is allow   | vable to 50 ~ 125% of nomina                                 | Il output voltage   |  |  |
|            | PROGRAMMABLE(PV)   | Please refer to the Function Manual   |  |   |  |  |
|            | REMOTE CONTROL   |   |  | open. Please refer to the Function Manual in following page:  |  |  |
| UNCTION    | REMOTE SENSE   | Compensate voltage drop on the load wiring up to 0.5Vdc. Please refer to the Function Manual in following pages             |  |   |  |  |
| ONOTION    | AUXILIARY POWER  | 12Vaux @ 0.8A, tolerance ±10%   |  |   |  |  |
|            | ALARM SIGNAL   | Isolated TTL signal output for T-Alarm and DC-OK. Please refer to the Function Manual in following pages                    |  |   |  |  |
|            | CANBus INTERFACE   | Communication provides functions such as control, setting and monitoring  |  |   |  |  |
|            | FAN SPEED CONTROL  | Built-in intelligent fan speed control detect by PSU'S internal temperature   |  |   |  |  |
|            | WORKING TEMP.  | -20 ~ +70 °C (Refer to "Derating Curve")  |  |   |  |  |
|            | WORKING HUMIDITY   | 20 ~ 90% RH non-condensing  |  |   |  |  |
| NVIRONMENT | STORAGE TEMP., HUMIDITY  | $-40 \sim +85^{\circ}\text{C}$ , $10 \sim 95\%$ RH non-condensing   |  |   |  |  |
|            | TEMP. COEFFICIENT  | ±0.03%/°C (0~50°C)  |  |   |  |  |
|            | VIBRATION  | 10 ~ 500Hz, 2G 10min./1cycle, 60min   | 10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes |   |  |  |
|            | SAFETY STANDARDS   | UL62368-1, CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, BIS IS 13252(Part 1):2010/ IEC 60950-1: 2005, EAC TP TC 004 approved |  |   |  |  |
|            | WITHSTAND VOLTAGE  | I/P-O/P:3KVac I/P-FG:2KVac O/P-FG:1.5KVac   |  |   |  |  |
|            | ISOLATION RESISTANCE   | I/P-O/P, I/P-FG, O/P-FG:100M Ohms   | / 500Vdc / 25°C / 70% RH                                     |   |  |  |
|            |  | Parameter   | Standard   | Test Level / Note   |  |  |
|            |  | Conducted   | BS EN/EN55032 (CISP  | R32) Class B  |  |  |
|            | EMC EMISSION   | Radiated  | BS EN/EN55032 (CISP  | ,   |  |  |
|            |  | Harmonic Current  | BS EN/EN61000-3-2  | Class A   |  |  |
| AFETY &    |  | Voltage Flicker   | BS EN/EN61000-3-3  |   |  |  |
| мс         |  | BS EN/EN55024, BS EN/EN61000-6-   | 2, design refer to SEMI F47 at                               | 200Vac  |  |  |
| lote 8)    |  | Parameter   | Standard   | Test Level / Note   |  |  |
|            |  | ESD   | BS EN/EN61000-4-2  | Level 3, 8KV air ; Level 2, 4KV contact   |  |  |
|            |  | Radiated  | BS EN/EN61000-4-3  | Level 3   |  |  |
|            | EMC IMMUNITY   | EFT / Burst   | BS EN/EN61000-4-4  | Level 3   |  |  |
|            | EMC IMMUNITY   | Surge   | BS EN/EN61000-4-5  | 2KV/Line-Line 4KV/Line-Earth  |  |  |
|            |  | Conducted   | BS EN/EN61000-4-6  | Level 3   |  |  |
|            |  | Magnetic Field  | BS EN/EN61000-4-8  | Level 4   |  |  |
|            |  | Voltage Dips and Interruptions  | BS EN/EN61000-4-11   | >95% dip 0.5 periods, 30% dip 25 period   |  |  |
|            | MTBF   |   | (Bellcore); 63.7K hrs min.                                   | >95% interruptions 250 periods MIL-HDBK-217F (25°C)   |  |  |
| THERS      | DIMENSION  | 325.8*107*41mm (L*W*H)  | ,  | . , ,   |  |  |
|            | PACKING  | 2.24Kg;4pcs/10Kg/1.09CUFT   |  |   |  |  |
|            | Ripple & noise are measure     Under variable load applications ripple level once the output | ion or parallel operation ripple of the o   | 12" twisted pair-wire terminate output voltage may be higher | of ambient temperature.<br>ed with a 0.1uf & 47uf parallel capacitor.<br>than the SPEC at light load condition. It will go back to norm |  |  |

3200W AC/DC High Reliable Industrial Enclosed Type Power Supply

NOTE


- 5. Derating may be needed under low input voltages. Please check the derating curve for more details.

- 6. The efficiency is measured at 75% load.


  7. If use PV signal to adjust Vo, under certain operating conditions, ripple noise of Vo might slightly go over rating defined in this specification.

  8. The power supply is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 600mm\*990mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on https://www.meanwell.com//Upload/PDF/EMI\_statement\_en.pdf)
- 9. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).
- ※ Product Liability Disclaimer: For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx

# 3200W AC/DC High Reliable Industrial Enclosed Type Power Supply

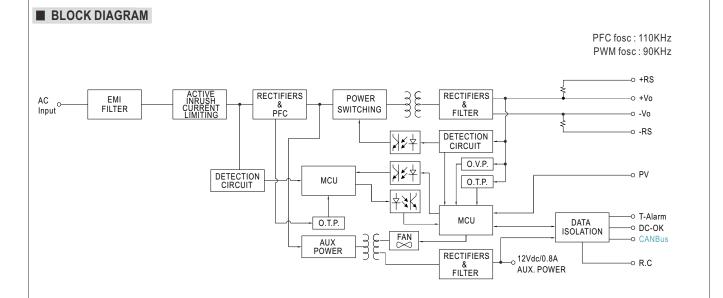


#### **■ STATIC CHARACTERISTICS**

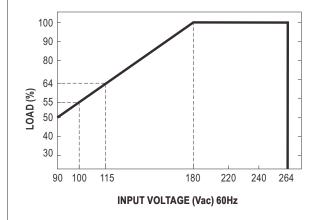


#### **■ DERATING LOADs vs INPUT VOLTAGE**

| INPUT MODEL | 24V   | 48V   |
|-------------|-------|-------|
| 180~264Vac  | 3192W | 3216W |
| 100~204 Vac | 133A  | 67A   |
| 90Vac       | 1596W | 1608W |
| 90 vac      | 66.5A | 33.5A |

# ■ DERATING CURVE

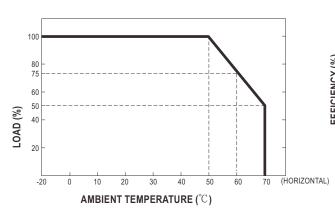

# **■** EFFICIENCY vs LOAD (48V MODEL)

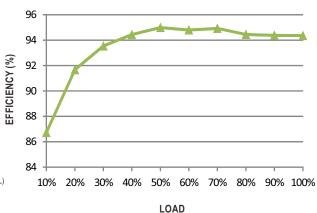

The curve above is measured at 230Vac.




### **■ FUNCTION MANUAL**


#### 1. Output Voltage Programming (P.V)


※ In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed to 50~125% of the nominal voltage by applying External Voltage.

3200W AC/DC High Reliable Industrial Enclosed Type Power Supply

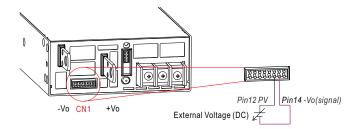

© For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.

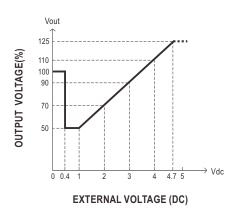


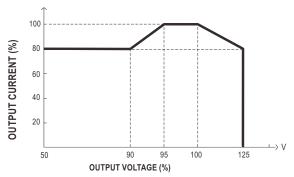

- The rated current should change with the Output Voltage Programming accordingly.
- O For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.

#### 2. Remote Control

X The power supply can be turned ON/OFF individually or along with other units by using the "Remote Control" function.

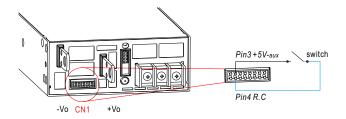


| PSU Vo Status | Between +5V-aux(Pin 3) and R.C(Pin 4) |  |
|---------------|---------------------------------------|--|
| Power ON      | Switch Short                          |  |
| Power OFF     | Switch Open                           |  |

# 3. Voltage Drop Compensation

#### 3.1 Remote Sense


※ The Remote Sense compensates voltage drop on the load wiring up to 0.5Vdc

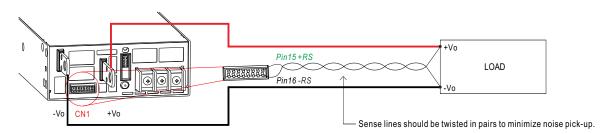

3200W AC/DC High Reliable Industrial Enclosed Type Power Supply


The +RS signal should be connected to the positive terminal of the load whereas -RS signal to the negative terminal.

#### 3.2 Local Sense

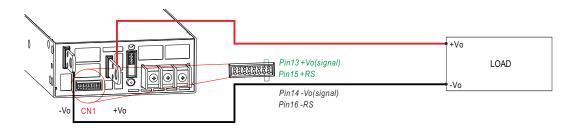

#### 4. Alarm Signal Output

X There are 2 alarm signals, DC OK and T-ALARM, in TTL signal form, on CN1. These signals are isolated from output. The maximum sink current is 10mA.

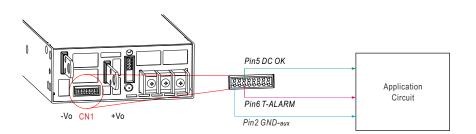


| DC OK Fail signal | Power Supply Status |
|-------------------|---------------------|
| "High" > 3.5~5.5V | Vout ≦ 77%±5%       |
| "Low" < -0.5~0.5V | Vout ≧ 80%±5%       |

| T-ALARM           | Power Supply Status  |
|-------------------|----------------------|
| "High" > 3.5~5.5V | OFF(OTP or Fan Fail) |
| "Low" < -0.5~0.5V | ON(Normal Work)      |

#### **5.CANBus Communication Interface**

NSP-3200 supports CAN 2.0B with maximum 250KHz bus speed, allowing information reading, status monitoring, output trimming, etc. For details, please refer to the User's Manual.

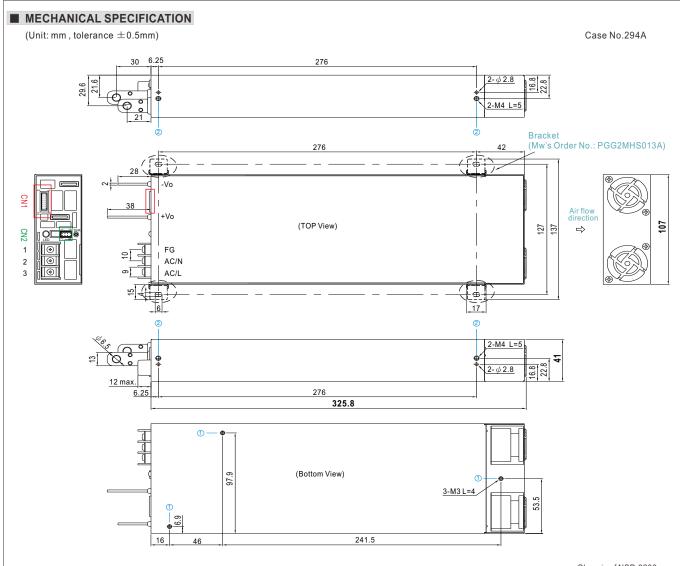

3200W AC/DC High Reliable Industrial Enclosed Type Power Supply

※ Mounting Instruction

| Hole No. | Recommended Screw Size | MAX. Penetration Depth L | Recommended mounting torque |  |
|----------|------------------------|--------------------------|-----------------------------|--|
| 1        | M3                     | 4mm                      | 6~8Kgf-cm                   |  |
| 2        | M4                     | 5mm                      | 7~10Kgf-cm                  |  |

Chassis of NSP-3200 Mounting Surface Mounting Screw

#### ※ Control Pin No. Assignment(CN1): HRS DF11-16DP-2DS or equivalent



| Mating Housing | HRS DF11-16DS or equivalent |
|----------------|-----------------------------|
| Terminal       | HRS DF11-**SC or equivalent |
|                |                             |

| Pin No. | Function    | Description  |  |
|---------|-------------|--|--|
| 1       | +12V-aux    | Auxiliary voltage output, 10.6~13.2Vdc, referenced to GND-aux (pin2). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF".  |  |
| 2       | GND-aux     | Auxiliary voltage output GND. The signal return is isolated from the output terminals (+Vo & -Vo).   |  |
| 3       | +5V-aux     | This pin is use for remote ON-OFF usage only.  |  |
| 4       | R.C         | The unit can turn the output ON/OFF by electrical signal or dry contact between $Remote\ ON/OFF\ $ and $+5V-aux$ . (Note.2) Short $(4.5\sim5.5Vdc)$ : Power ON; Open $(-0.5\sim0.5Vdc)$ : Power OFF; The maximum input voltage is $5.5Vdc$ .   |  |
| 5       | DC-OK       | $\begin{aligned} & \text{High } (3.5 \sim 5.5 \text{Vdc}) : \text{When the Vout} \leq & 77\% \pm 5\%. \\ & \text{Low } (-0.5 \sim 0.5 \text{Vdc}) : \text{When Vout} \geq & 80\% \pm 5\%. \\ & \text{The maximum sourcing current is } & 10\text{mA and only for output.} \ (\text{Note.2}) \end{aligned}$ |  |
| 6       | T-ALARM     | High (3.5 ~ 5.5Vdc): When the internal temperature exceeds the limit of temperature alarm, or when Fan fails.  Low (-0.5 ~ 0.5Vdc): When the internal temperature is normal, and when Fan works normally.  The maximum sourcing current is 10mA and only for output(Note.2)                                |  |
| 7,8,9   | A0,A1,A2    | CANBus interface address lines. (Note.1)   |  |
| 10,11   | NC          | Retain for future use.   |  |
| 12      | PV          | Connection for output voltage programming. (Note.1)  |  |
| 13      | +Vo(Signal) | Positive output voltage signal. It is for local sense; it cannot be connected directly to the load.  |  |
| 14      | -Vo(Signal) | Negative output voltage signal. It is for local sense and certain function reference; it cannot be connected directly to the load.   |  |
| 15      | +RS         | Positive sensing for remote sense.   |  |
| 16      | -RS         | Negative sensing for remote sense.   |  |

Note1: Non-isolated signal, referenced to [-Vo(signal)].

Note2: Isolated signal, referenced to [GND-aux].



#### ※ LED Status Indicators

| LED   | Description  |
|---|--|
| Green The power supply functions normally.  |  |
| <ul> <li>Red The LED will present a constant red light when the abnormal status (OTP, OLP, fan fail) arises.</li> </ul> |  |
| Red (Flashing)  | The LED will flash with the red light when the internal temperature reaches 60°C; under this condition, the unit still operates normally without entering OTP. (In the meantime, an alarm signal will be sent out through the CANBus interface.) |

# $\ensuremath{\mathbb{X}}$ AC Input Terminal Pin No. Assignment

|   | Pin No. | Assignment | Diagram   | Screw thread | Maximum mounting torque |
|---|---------|------------|-----------|--------------|-------------------------|
| ĺ | 1       | FG ±       | . 1 2 3 . |              |                         |
| ĺ | 2       | AC/N       |           | M3.5         | 8Kgf-cm                 |
|   | 3       | AC/L       |           |              |                         |

# $\frak{\%}$ Control Pin No. Assignment(CN2) : HRS DF11-8DP-2DS or equivalent



| Mating Housing | HRS DF11-8DS or equivalent  |
|----------------|-----------------------------|
| Terminal       | HRS DF11-**SC or equivalent |


| Pin No. | Function     | Description  |
|---------|--------------|--|
| 1,2,3,4 | NC           | For standard model: Retain for future use.   |
| 5,6     | -Vo (Signal) | Negative output voltage signal. It is for local sense and certain function reference; it cannot be connected directly to the load. |
| 7       | CANH         | For CANBus model: Data line used in CANBus interface. (Note)   |
| 8       | CANL         | For CANBus model: Data line used in CANBus interface. (Note)   |

Note: Isolated signal, referenced to [GND-aux].

# ■ Accessory List

| No. | Item   |   | Quantity   |
|-----|--|---|--|
| 1   | Control function interface(CN1) mating wire along with NSP-3200 (standard accessory)   | 15 16 15 UL1007 26AWG 2 1 HRS DF11-16DS or equivalent | 1pcs/per model   |
| 2   | Bracket  Mw's Order No.: PGG2MHS013A  (By request accesory, should ordered seperately) |   | 4pcs/per model<br>(Please refer to Installation Diagram) |

# ■ Installation Diagram

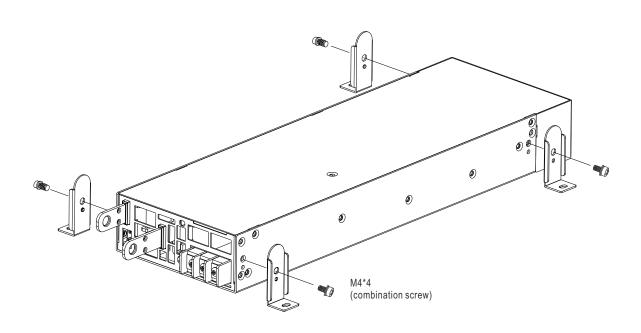

3200W AC/DC High Reliable Industrial Enclosed Type Power Supply

# ■ Installation Manual

Please refer to : http://www.meanwell.com/manual.html