#### Data sheet

# Three-phase monitoring relays CM-PAS CM-PAS.31 and CM-PAS.41

The three-phase monitoring relays CM-PAS.x1 monitor the phase parameters phase sequence, phase failure as well as phase unbalance. All devices are available with two different terminal versions. You can choose between the proven screw connection technology (double-chamber cage connection terminals) and the completely tool-free Easy Connect Technology (push-in terminals).



#### **Characteristics**

- Monitoring of three-phase mains for phase sequence, phase failure, phase unbalance
- TRMS measuring principle
- Threshold value for phase unbalance is adjustable as absolute value
- Tripping delay  $T_v$  adjustable or switched off by means of a logarithmic scale (0 s; 0,1-30 s)
- ON-delayed tripping delay
- Powered by the measuring circuit
- Precise adjustment by front-face operating controls
- Screw connection technology or
  Easy Connect Technology available
- Housing material for highest fire protection classification UL 94 V-0
- Tool-free mounting on DIN rail as well as demounting
- 2 c/o (SPDT) contacts
- 22.5 mm (0.89 in) width
- 3 LEDs for the indication of operational states

## Approvals

- . UL 508, CAN/CSA C22.2 No.14
- 🖲 GL
- C GOST
- CB CB scheme
- 222 **>>>**
- 🕑 RMRS

## Marks

CE CE C-Tick



pending

## Order data

## Three-phase monitoring relays

Туре	Rated control supply voltage = measuring voltage	Connection technology	Order code
CM-PAS.31P	3 x 160-300 V AC	Push-in terminals	1SVR 740 774 R1300
CM-PAS.31S		Screw terminals	1SVR 730 774 R1300
	3 x 300-500 V AC	Push-in terminals	1SVR 740 774 R3300
CM-PAS.41S		Screw terminals	1SVR 730 774 R3300


#### Accessories

Туре	Description	Order code
ADP.01	Adapter for screw mounting	1SVR 430 029 R0100
MAR.01	Marker label for devices without DIP switches	1SVR 366 017 R0100
COV.11	Sealable transparent cover	1SVR 730 005 R0100

## **Connection technology**

# Maintenance free Easy Connect Technology with push-in terminals

Type designation CM-xxS.yyP

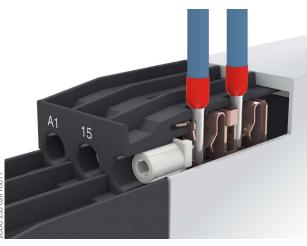


#### Push-in terminals

- Tool-free connection of rigid and flexible wires with wire end ferrule according to DIN 46228-1-A, DIN 46228-4-E
  - Wire size: 2 x 0.5-1.5 mm², (2 x 20 16 AWG)
- Easy connection of flexible wires without wire end ferrule by opening the terminals
- No retightening necessary
- One operation lever for opening both connection terminals
- For triggering the lever and disconnecting of wires you can use the same tool (Screwdriver according to DIN ISO 2380-1 Form A 0.8 x 4 mm (0.0315 x 0.157 in), DIN ISO 8764-1 PZ1 ø 4.5 mm (0.177 in))
- Constant spring force on terminal point independent of the applied wire type, wire size or ambient conditions (e. g. vibrations or temperature changes)
- Opening for testing the electrical contacting
- Gas-tight

Approved screw connection technology with double-chamber cage connection terminals

Type designation CM-xxS.yyS

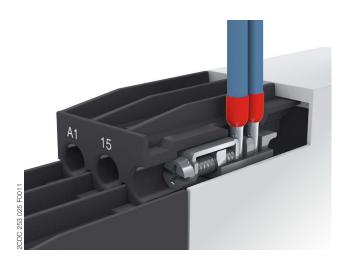


## Double-chamber cage connection terminals

- Terminal spaces for different wire sizes: fine-strand with/without wire end ferrule: 1 x 0.5-2.5 mm<sup>2</sup> (2 x 20 - 14 AWG), 2 x 0.5-1.5 mm<sup>2</sup> (2 x 20 - 16 AWG) rigid: 1 x 0.5-4 mm<sup>2</sup> (1 x 20 - 12 AWG), 2 x 0.5-2.5 mm<sup>2</sup> (2 x 20 - 14 AWG)
- One screw for opening and closing of both cages
- Pozidrive screws for pan- or crosshead screwdrivers according to DIN ISO 2380-1 Form A 0.8 x 4 mm (0.0315 x 0.157 in), DIN ISO 8764-1 PZ1 Ø 4.5 mm (0.177 in)

Both the Easy Connect Technology with push-in terminals and screw connection technology with double-chamber cage connection terminals have the same connection geometry as well as terminal position.

#### **Functions**

#### Operating controls

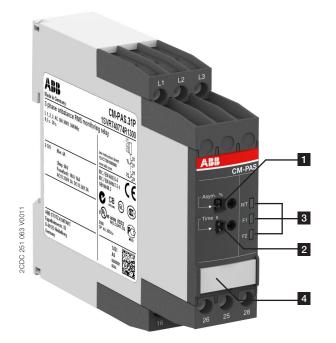

- 1 Adjustment of the threshold value Asym. for phase unbalace
- 2 Adjustment of the tripping delay  $T_v$

Indication of operational states
 R/T: red LED – Relay status / timing
 F1: yellow LED – Fault message
 F2: yellow LED – Fault message

4 Marker label

#### Application

The three-phase monitoring relays CM-PAS.x1 are designed for use in three-phase mains for monitoring the phase parameters phase sequence, phase failure as well as phase unbalance.

The CM-PAS.x1 provide an adjustable ON-delay and work according to the closed-circuit principle.

#### Operating mode

The CM-PAS.x1 have 2 c/o (SPDT) contacts and are available for 3-wire AC systems. The units are adjusted with frontface operating controls. Potentiometers, with direct reading scale, allow the adjustment of the threshold value for phase unbalance (Asym %) and the tripping delay  $T_v$ . The tripping delay  $T_v$  is adjustable over a range of instantaneous to a 30 s delay. Timing is displayed by a flashing yellow LED labelled R/T.

#### Adjustment potentiometer

#### Threshold values

By means of three separate potentiometers with direct reading scales, the threshold values for over- and undervoltage as well as for phase unbalance can be adjusted within the measuring range.

	Measuring range for phase unbalance
CM-PAS.31 CM-PAS.41	2-25 % of average of phase voltages

#### Tripping delay $T_v$

The tripping delay  $T_v$  can be adjusted within a range of 0.1 to 30 s by means of a potentiometer with logarithmic scale. By turning to the left stop, the tripping delay can be switched off.

#### Indication of operational states

#### LEDs, status information and fault messages

Operational state	R/T: LED yellow	F1: LED red	F2: LED red
Control supply voltage applied, output relay energized	<u>г</u>	-	-
Tripping delay $T_v$ active	ЛЛ	-	-
Phase failure	-		ЛЛ
Phase sequence	-	лл_ а	Iternating
Phase unbalance	-		

#### Function descriptions / diagrams

#### Phase sequence and phase failure monitoring


Applying control supply voltage begins the fixed start-up delay  $T_s$ . When  $T_s$  is complete and all phases are present with correct voltage, the output relays energize and the yellow LED R/T is on.

#### Phase sequence monitoring:

The output relays de-energize as soon as a phase sequence error occurs. The fault is displayed by alternated flashing of the LEDs F1 and F2. The output relays re-energize automatically as soon as the phase sequence is correct again.

#### Phase failure monitoring:

The output relays de-energize instantaneously if a phase failure occurs. The fault is indicated by lightning of LED F1 and flashing of LED F2. The output relays re-energize automatically as soon as the voltage returns to the tolerance range.

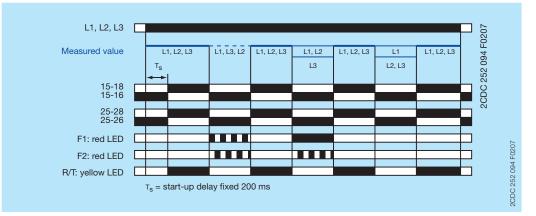


#### Phase unbalance monitoring


Applying control supply voltage begins the fixed start-up delay  $T_s$ . When  $T_s$  is complete and all phases are present with correct voltage and with correct phase sequence, the output relays energize and the yellow LED R/T is on.

If the voltage to be monitored exceeds or falls below the set phase unbalance threshold value, the output relays de-energize after the set tripping delay  $T_v$  is complete. The LED R/T flashes during timing and turns off as soon as the output relays de-energize.

The output relays re-energize automatically as soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 20 %. The LED R/T is on.

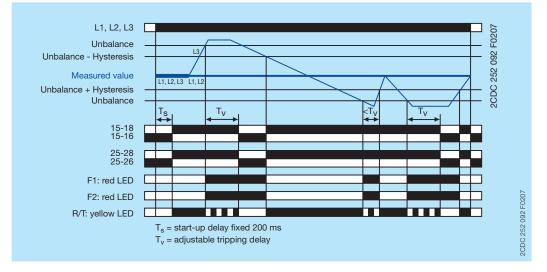

#### **Electrical connection**

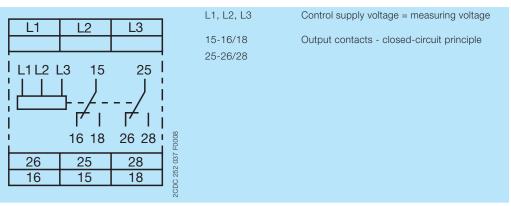

Connection diagram CM-PAS.31 and CM-PAS.41

## **Technical data**

Data at  $T_a = 25$  °C and rated values, unless otherwise indicated

## Input circuit

Туре		CM-PAS.31	CM-PAS.41
Supply circuit = measuring circuit		L1, L2, L3	
Rated control supply volta	ge U <sub>s</sub> = measuring voltage	3 x 160-300 V AC	3 x 300-500 V AC
Rated control supply volta	ge U <sub>s</sub> tolerance	-15+10 %	
Rated frequency		50/60 Hz	
Frequency range		45-65 Hz	
Typical current / power co	nsumption	25 mA / 10 VA (230 V AC)	25 mA / 18 VA (400 V AC)
Measuring circuit			L1, L2, L3
Monitoring functions	Phase failure	•	•
	Phase sequence	•	-
	Phase unbalance	•	-
Measuring range	Phase unbalance	2-25 % of average of phase volt	ages
Thresholds	Phase unbalance (switch-off value)	adjustable within measuring rang	ge
Hysteresis related to the threshold value	Phase unbalance	fixed 20 %	
Rated frequency of the measuring signal		50/60 Hz	
Frequency range of the me		45-65 Hz	
Maximum measuring cycle	e time	100 ms	
Accuracy within the rated	control supply voltage tolerance	$\Delta U \leq 0.5 ~\%$	
Accuracy within the temperat		$\Delta U \leq 0.06 \% / °C$	
Measuring method		True RMS	
Timing circuit			
Start-up delay T <sub>s</sub>		fixed 200 ms	
Tripping delay $T_{v}$		ON-delay	
		0 s; 0.1-30 s adjustable	
Repeat accuracy (constant parameters)		< ±0.2 %	
Accuracy within the rated	control supply voltage tolerance	$\Delta t \leq 0.5 \%$	
Accuracy within the temperature range		$\Delta t \leq 0.06 \% / °C$	

## User interface

Indication of operational states		
Relay status / timing	R/T	yellow LED
Fault message	F1	red LED
Fault message		red LED

Details see table ,LEDs, status information and fault messages' on page 5 and ,Function descriptions / diagrams' on page 5.

## Output circuits

Kind of output			
Kind of output	15-16/18	relay, 1st c/o (SPDT) contact	
	25-26/28	relay, 2nd c/o (SPDT) contact	
		1 x 2 (SPDT) contacts	
Operating principle		closed-circuit principle 1)	
Contact material		AgNi alloy, Cd free	
Rated operational voltage U	l <sub>e</sub> (IEC/EN 60947-1)	250 V	
Minimum switching voltage	/ Minimum switching current	24 V / 10 mA	
Maximum switching voltage	/ Maximum switching current	see load limit curves	
Rated operational current Ie	AC12 (resistive) at 230 V	4 A	
(IEC/EN 60947-5-1)	AC15 (inductive) at 230 V	3 A	
	DC12 (resistive) at 24 V	4 A	
	DC13 (inductive) at 24 V	2 A	
AC rating (UL 508)	Utilization category	B 300	
	(Control Circuit Rating Code)	B 300	
	max. rated operational voltage	300 V AC	
m	nax. continuous thermal current at B 300	5 A	
	max. making/breaking apparent power		
	at B 300	3600/360 VA	
Mechanical lifetime		30 x 10 <sup>6</sup> switching cycles	
Electrical lifetime	AC12, 230 V, 4 A	0.1 x 10 <sup>6</sup> switching cycles	
Maximum fuse rating to ach	ieve n/c contact	6 A fast-acting	
short-circuit protection	n/o contact	10 A fast-acting	

## General data

MTBF		on request		
Duty time		100 %		
Dimensions (W x H x D)	pr	oduct dimensions	22.5 x 85.6 x 103.7 mm (0.89 x 3.3	37 x 4.08 in)
	pack	aging dimensions	97 x 109 x 30 mm (3.82 x 4.29 x 1.18 in)	
Weight		•	Screw connection technology	Easy Connect Technology (push-in)
	net weight	CM-PAS.31	0.133 kg (0.293 lb)	0.124 kg (0.273 lb)
		CM-PAS.41	0.132 kg (0.291 lb)	0.123 kg (0.271 lb)
	gross weight	CM-PAS.31	0.158 kg (0.348 lb)	0.149 kg (0.328 lb)
		CM-PAS.41	0.157 kg (0.346 lb)	0.148 kg (0.326 lb)
Mounting		DIN rail (IEC/EN 60715), snap-on m	nounting without any tool	
Mounting position		any		
	••••••		CM-PAS.31	CM-PAS.41
Minimum distance to other	units	horizontal	10 mm (0.39 in) in case of continuc	ous voltage of
			> 220 V	> 400 V
Material of housing		UL 94 V-0		
		IP50		
		IP20		

1) Closed-circuit principle: Output relay(s) de-energize(s) if measured value exceeds or falls below the adjusted threshold value.

## Electrical connection

		Screw connection technology	Easy Connect Technology (push-in)
Wire size	fine-strand with(out)	1 x 0.5-2.5 mm <sup>2</sup>	2 x 0.5-1.5 mm <sup>2</sup>
	wire end ferrule	(1 x 20-14 AWG)	(2 x 20-16 AWG)
		2 x 0.5-1.5 mm <sup>2</sup>	
		(2 x 20-16 AWG)	
	rigid	1 x 0.5-4 mm <sup>2</sup>	2 x 0.5-1.5 mm <sup>2</sup>
		(1 x 20-12 AWG)	(2 x 20-16 AWG)
		2 x 0.5-2.5 mm <sup>2</sup>	
		(2 x 20-14 AWG)	
Stripping length		8 mm (0.32 in)	
Tightening torque		0.6 - 0.8 Nm	-
		(5.31 - 7.08 lb.in)	

### Environmental data

Ambient temperature ranges	operation	-25+60 °C
	storage	-40+85 °C
Damp heat, cyclic (IEC/EN 60068-2-30)		55 °C, 6 cycles
Climatic category		3K3
Vibration, sinusoidal (IEC/EN 60255-21-1)		Class 2
Shock (IEC/EN 60255-21-2)		Class 2

## Isolation data

Туре		
Rated insulation	input circuit / output circuit	
voltage U <sub>i</sub> ou	Itput circuit 1 / output circuit 2	300 V
Rated impulse withstand voltage U <sub>imp</sub> input circuit		6 kV, 1.2/50 μs
(IEC/EN 60664)		4 kV, 1.2/50 μs
Test voltage between all isolated circuits (routine test)		2.5 kV, 50 Hz, 1 s
Basic insulation	input circuit / output circuit	600 V
Protective separation	input circuit /	
(IEC/EN 61140, EN 50178)	output circuit	-
Pollution degree (IEC/EN 60664, IEC/EN 60255-5)		3
Overvoltage category (IEC/EN 60664, IEC/EN 60255-5)		III

#### Standards


Product standard	IEC/EN 60255-6, EN 50178
Low Voltage Directive	2006/95/EC
EMC directive	2004/108/EC
RoHS directive	2002/95/EC

## Electromagnetic compatibility


Туре		
Interference immunity to		IEC/EN 61000-6-1, IEC/EN 61000-6-2
electrostatic discharge	IEC/EN 61000-4-2	Level 3 (6 kV / 8 kV)
radiated, radio-frequency, electromagnetic field	IEC/EN 61000-4-3	Level 3 (10 V/m)
electrical fast transient / burst	IEC/EN 61000-4-4	Level 3 (2 kV / 2 kHz)
surge	IEC/EN 61000-4-5	Level 4 (2 kV L-L)
conducted disturbances, induced by radio-frequency fields	IEC/EN 61000-4-6	
harmonics and interharmonics	IEC/EN 61000-4-13	
Interference emission		IEC/EN 61000-6-3, IEC/EN 61000-6-4
high-frequency radiated	IEC/CISPR 22, EN 55022	
high-frequency conducted	IEC/CISPR 22, EN 55022	Class B

## **Technical diagrams**


## Load limit curves

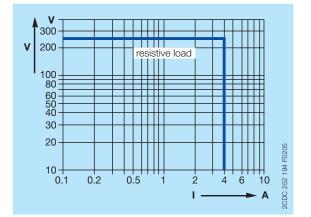


AC load (resistive)

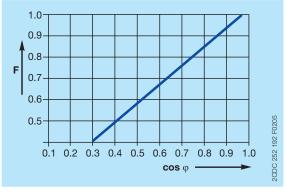

Derating factor F for inductive AC load

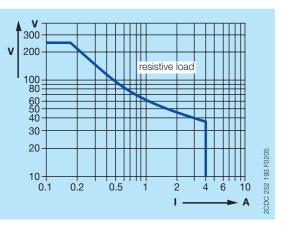


DC load (resistive)

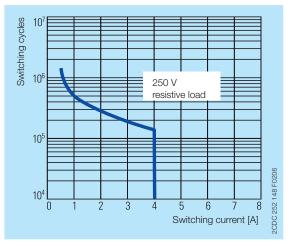

Contact lifetime


## Dimensions

## in **mm** and *inches*

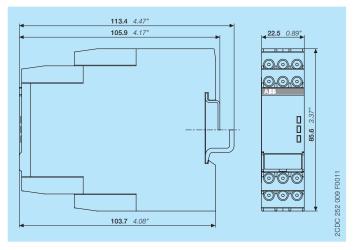


#### Accessories


in **mm** and *inches* 

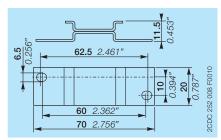

ADP.01 - Adapter for screw mounting

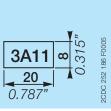

MAR.01 - Marker label for devices without DIP switches

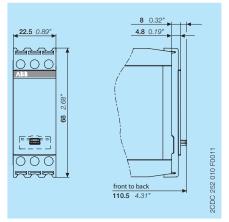

COV.11 - Sealable transparent cover

#### Further documentation

Document title	Document type	Document number
Electronic products and relays	Technical catalogue	2CDC 110 004 C020x
CM-PAS, CM-PFS, CM-PSS, CM-PVS	Instruction manual	1SVC 730 510 M0000

You can find the documentation on the internet at www.abb.com/lowvoltage -> Control Products -> Electronic Relays and Controls -> Three Phase Monitors.

## Contact us

ABB STOTZ-KONTAKT GmbH

P. O. Box 10 16 80 69006 Heidelberg, Germany Phone: +49 (0) 6221 7 01-0 Fax: +49 (0) 6221 7 01-13 25 E-mail: info.desto@de.abb.com

You can find the address of your local sales organisation on the ABB home page http://www.abb.com/contacts -> Low Voltage Products and Systems

#### Note:

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright© 2012 ABB All rights reserved